

## EtherCAT I/O MODULE

(NPN transistor output, 32 points, e-CON connector)

MODEL R7I4DECT-1-DC32A

### BEFORE USE ....

Thank you for choosing M-System. Before use, please check contents of the package you received as outlined below. If you have any problems or questions with the product, please contact M-System's Sales Office or representatives.

#### ■ PACKAGE INCLUDES:

Discrete Output module.....(1)  
Surface mounter slider .....(2)

#### ■ MODEL NO.

Confirm Model No. marking on the product to be exactly what you ordered.

#### ■ INSTRUCTION MANUAL

This manual describes necessary points of caution when you use this product, including installation, connection and basic maintenance procedures.

#### ■ ESI FILES

ESI files are downloadable at M-System's website (<http://www.m-system.co.jp/>).

### POINTS OF CAUTION

#### ■ CONFORMITY WITH EU DIRECTIVE

- The equipment must be mounted inside the instrument panel of a metal enclosure.
- The actual installation environments such as panel configurations, connected devices, connected wires, may affect the protection level of this unit when it is integrated in a panel system. The user may have to review the CE requirements in regard to the whole system and employ additional protective measures to ensure the CE conformity.

#### ■ POWER INPUT RATING & OPERATIONAL RANGE

- Locate the power input rating marked on the product and confirm its operational range as indicated below:  
24V DC rating: 24V  $\pm$ 10%, approx. 55mA

#### ■ GENERAL PRECAUTIONS

- Before you remove the unit or mount it, turn off the power supply, input signal, and output signal for safety.

#### ■ ENVIRONMENT

- Indoor use.
- When heavy dust or metal particles are present in the air, install the unit inside proper housing with sufficient ventilation.
- Do not install the unit where it is subjected to continuous vibration. Do not subject the unit to physical impact.
- Environmental temperature must be within -10 to +55°C (14 to 131°F) with relative humidity within 30 to 90% RH in order to ensure adequate life span and operation.

#### ■ WIRING

- Do not install cables close to noise sources (relay drive cable, high frequency line, etc.).
- Do not bind these cables together with those in which noises are present. Do not install them in the same duct.

#### ■ AND ....

- The unit is designed to function as soon as power is supplied, however, a warm up for 10 minutes is required for satisfying complete performance described in the data sheet.



EtherCAT® is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.


**MSYSTEM**  
M-SYSTEM CO., LTD.

5-2-55, Minamitsumori, Nishinari-ku, Osaka 557-0063 JAPAN  
Phone: +81(6)6659-8201 Fax: +81(6)6659-8510 E-mail: [info@m-system.co.jp](mailto:info@m-system.co.jp)

EM-7779-J P. 1 / 12

# COMPONENT IDENTIFICATION

## FRONT VIEW

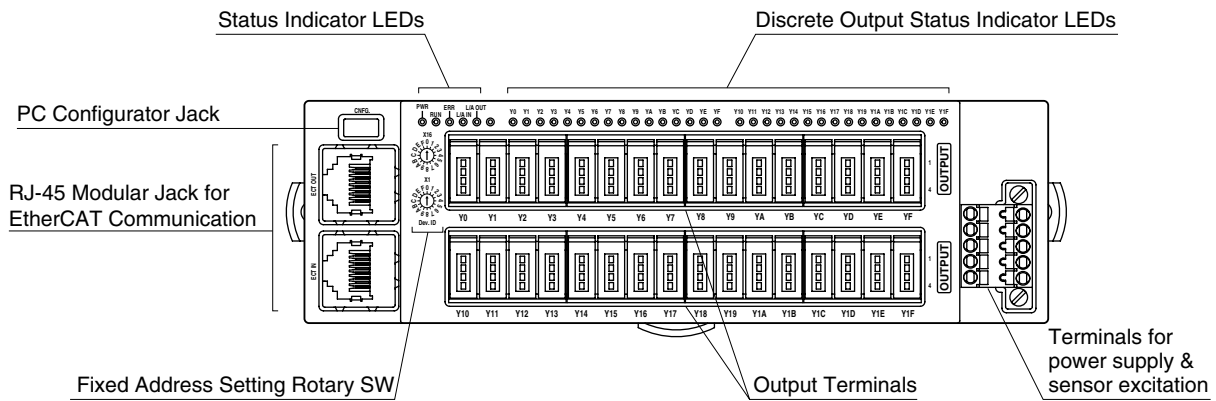

## STATUS INDICATOR LED

ID	FUNCTION	COLOR	STATUS	
Power	Internal power	Green	Off	Error
			On	Normal
RUN	Device state	Green	Off	INIT
			Blinking	PRE-OPERATIONAL
			Single Flash	SAFE-OPERATIONAL
			On	OPERATIONAL
			ERR	Error
ERR	Error	Red	Blinking	Invalid Configuration
			Single Flash	Local error
			Double Flash	Process data watchdog timeout/ EtherCAT watchdog timeout
			On	Application controller failure
L/A IN	IN port status	Green	Off	No Link
			Flickering	Link and activity
			On	Link without activity
L/A OUT	OUT port status	Green	Off	No Link
			Flickering	Link and activity
			On	Link without activity

Blinking	200ms-On, 200ms-Off
Single flash	200ms-On, 1000ms-Off
Double flash	200ms-On, 200ms-Off, 200ms-On, 1000ms-Off
Flickering	50ms-On, 50ms-Off

## FIXED ADDRESS SETTING ROTARY SW (ID selector)

Fixed address 1 to 255 can be set using the two rotary switches each marked 0 to F in combination.

When fixed address is not used, set the switches to 0.

Settable range: 0 to 255

Factory default: 0



Fixed Address Setting (x16)



Fixed Address Setting (x1)

## ■ POWER SUPPLY AND SENSOR EXCITATION

**Cable connector:** TFMC1,5 / 5-STF-3,5

 
(Phoenix Contact) (comes with the unit)

**Applicable wire size:** 0.2 – 1.5 mm<sup>2</sup>

**Stripped length:** 10 mm

### Recommended solderless terminal

- AI0,25–10YE 0.25 mm<sup>2</sup> (Phoenix Contact)
- AI0,34–10TQ 0.34 mm<sup>2</sup> (Phoenix Contact)
- AI0,5–10WH 0.5 mm<sup>2</sup> (Phoenix Contact)
- AI0,75–10GY 0.75 mm<sup>2</sup> (Phoenix Contact)
- A1–10 1.0 mm<sup>2</sup> (Phoenix Contact)
- A1,5–10 1.5 mm<sup>2</sup> (Phoenix Contact)



PIN No.	ID	FUNCTION
1	PWR+	Power Supply
2	PWR-	Power Supply
3	FE	Functional earth
4	SNSR.EXC+	Sensor excitation
5	SNSR.EXC-	Sensor excitation

Note: The number marked on the connector is irrelevant to the pin number of the unit.


Perform wiring according to this instruction manual.

■ OUTPUT TERMINAL ASSIGNMENTS

• e-CON connector

Recommended cable connector: 37104-( )-000FL (3M Company) (does not come with the unit)

(Specify wire size instead of ( )); refer to manufacturer's specifications for details.)

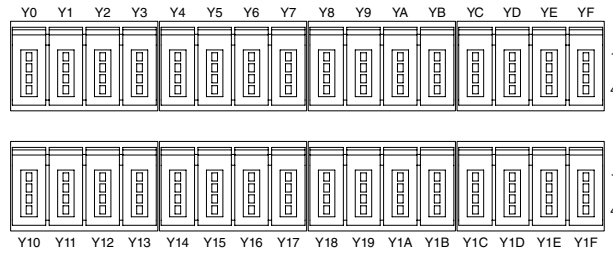

PIN No.	ID	FUNCTION	PIN No.	ID	FUNCTION
Y0	1	+24V 24V DC	Y8	1	+24V 24V DC
	2	NC Unused		2	NC Unused
	3	NC Unused		3	NC Unused
	4	Y0 Input 0		4	Y8 Input 8
Y1	1	+24V 24V DC	Y9	1	+24V 24V DC
	2	NC Unused		2	NC Unused
	3	NC Unused		3	NC Unused
	4	Y1 Input 1		4	Y9 Input 9
Y2	1	+24V 24V DC	YA	1	+24V 24V DC
	2	NC Unused		2	NC Unused
	3	NC Unused		3	NC Unused
	4	Y2 Input 2		4	YA Input 10
Y3	1	+24V 24V DC	YB	1	+24V 24V DC
	2	NC Unused		2	NC Unused
	3	NC Unused		3	NC Unused
	4	Y3 Input 3		4	YB Input 11
Y4	1	+24V 24V DC	YC	1	+24V 24V DC
	2	NC Unused		2	NC Unused
	3	NC Unused		3	NC Unused
	4	Y4 Input 4		4	YC Input 12
Y5	1	+24V 24V DC	YD	1	+24V 24V DC
	2	NC Unused		2	NC Unused
	3	NC Unused		3	NC Unused
	4	Y5 Input 5		4	YD Input 13
Y6	1	+24V 24V DC	YE	1	+24V 24V DC
	2	NC Unused		2	NC Unused
	3	NC Unused		3	NC Unused
	4	Y6 Input 6		4	YE Input 14
Y7	1	+24V 24V DC	YF	1	+24V 24V DC
	2	NC Unused		2	NC Unused
	3	NC Unused		3	NC Unused
	4	Y7 Input 7		4	YF Input 15

PIN No.	ID	FUNCTION	PIN No.	ID	FUNCTION
Y10	1	+24V 24V DC	Y18	1	+24V 24V DC
	2	NC Unused		2	NC Unused
	3	NC Unused		3	NC Unused
	4	Y10 Output 16		4	Y18 Output 24
Y11	1	+24V 24V DC	Y19	1	+24V 24V DC
	2	NC Unused		2	NC Unused
	3	NC Unused		3	NC Unused
	4	Y11 Output 17		4	Y19 Output 25
Y12	1	+24V 24V DC	Y1A	1	+24V 24V DC
	2	NC Unused		2	NC Unused
	3	NC Unused		3	NC Unused
	4	Y12 Output 18		4	Y1A Output 26
Y13	1	+24V 24V DC	Y1B	1	+24V 24V DC
	2	NC Unused		2	NC Unused
	3	NC Unused		3	NC Unused
	4	Y13 Output 19		4	Y1B Output 27
Y14	1	+24V 24V DC	Y1C	1	+24V 24V DC
	2	NC Unused		2	NC Unused
	3	NC Unused		3	NC Unused
	4	Y14 Output 20		4	Y1C Output 28
Y15	1	+24V 24V DC	Y1D	1	+24V 24V DC
	2	NC Unused		2	NC Unused
	3	NC Unused		3	NC Unused
	4	Y15 Output 21		4	Y1D Output 29
Y16	1	+24V 24V DC	Y1E	1	+24V 24V DC
	2	NC Unused		2	NC Unused
	3	NC Unused		3	NC Unused
	4	Y16 Output 22		4	Y1E Output 30
Y17	1	+24V 24V DC	Y1F	1	+24V 24V DC
	2	NC Unused		2	NC Unused
	3	NC Unused		3	NC Unused
	4	Y17 Output 23		4	Y1F Output 31

## PC CONFIGURATOR

The following parameter items can be configured with the PC configurator software (model: R7CFG). Refer to the users manual of the software for detailed operations.

### ■ CHANNEL INDIVIDUAL SETTING

PARAMETER	SETTING RANGE	DEFAULT
Unused setting	CH enabled CH disabled	CH enabled

### ■ CHANNEL BATCH SETTING


PARAMETER	SETTING RANGE	DEFAULT
Output at communication error	Output hold Output clear	Output hold

## MOUNTING INSTRUCTIONS

### ■ DIN RAIL MOUNTING (PARALLEL)


#### • Mounting the unit

- 1) Hook the upper hook at the rear side of the base onto the DIN rail.
- 2) Push the lower part of the unit in the direction of the arrow until the base is firmly fixed to the DIN rail.

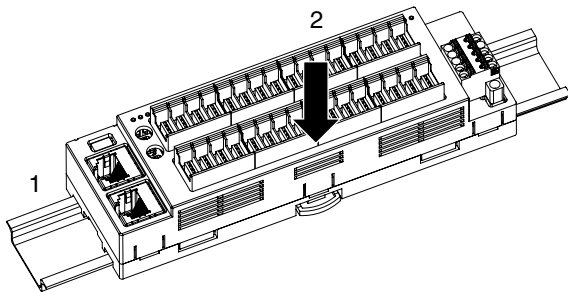


#### • Removing the unit

- 1) Push down the slider using a minus screwdriver.
- 2) Pull out the lower part of the unit.
- 3) Remove the upper part of the unit from the DIN rail.

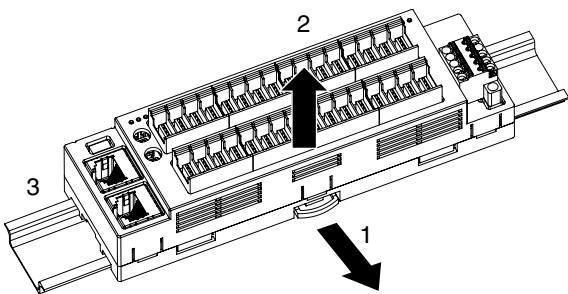


### ■ WALL MOUNTING

- 1) Insert the two DIN rail mounter sliders until they click once, as shown below.

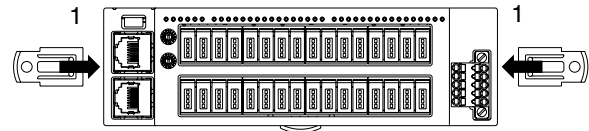


- 2) Mount the unit with M4 screws referring to the "MOUNTING REQUIREMENTS unit: mm (inch)" on page 7. (Torque: 1.4 N·m)

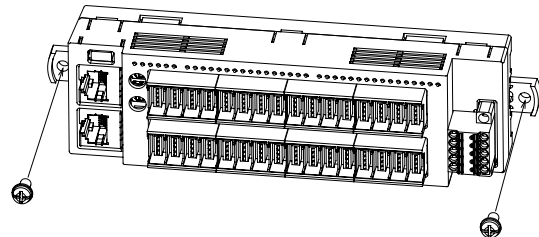

# TERMINAL CONNECTIONS


Connect the unit as in the diagram below.

## EXTERNAL DIMENSIONS unit: mm (inch)

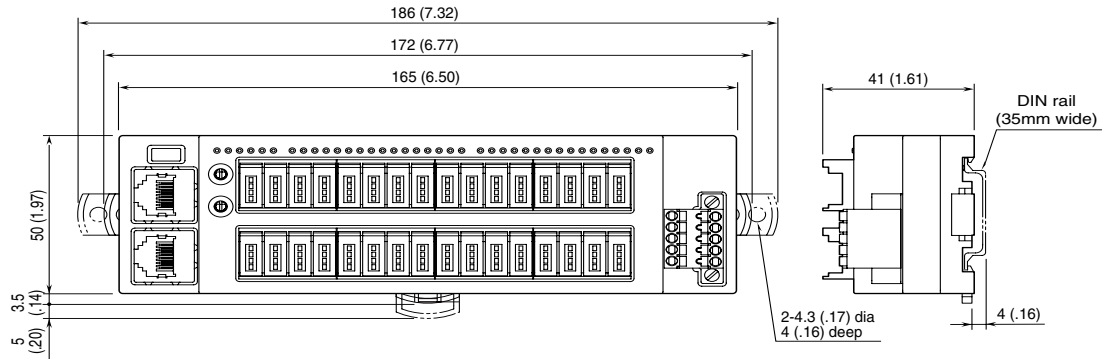


## CONNECTION DIAGRAM

Note: In order to improve EMC performance, bond the FE terminal to ground.  
 Caution: FE terminal is NOT a protective conductor terminal.

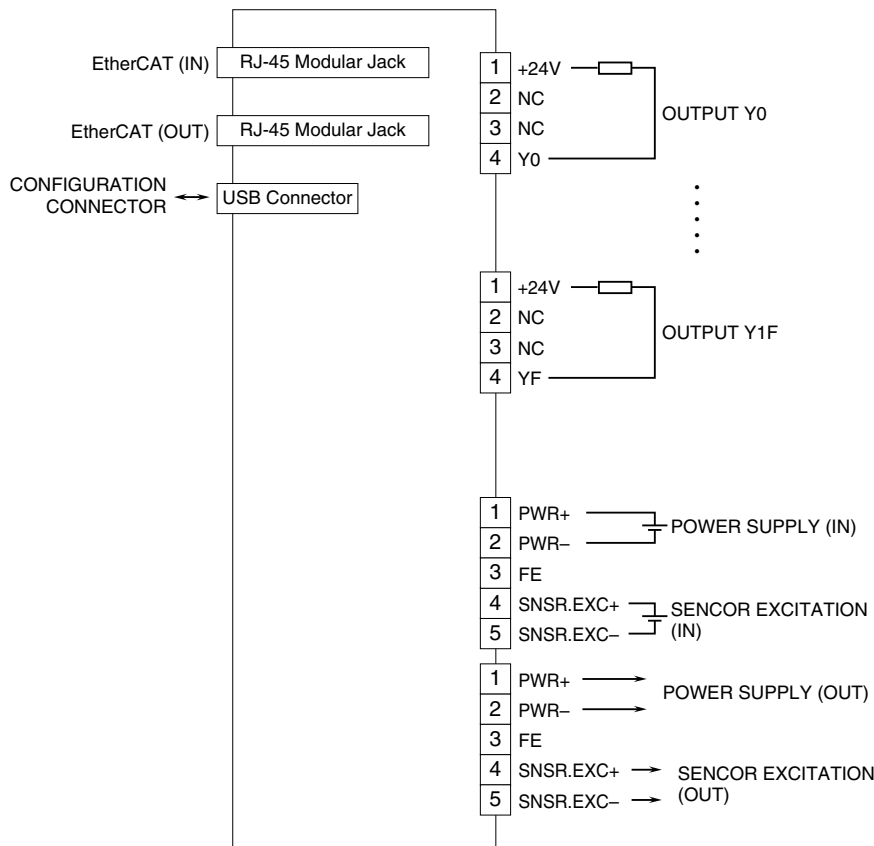

## MOUNTING REQUIREMENTS unit: mm (inch)

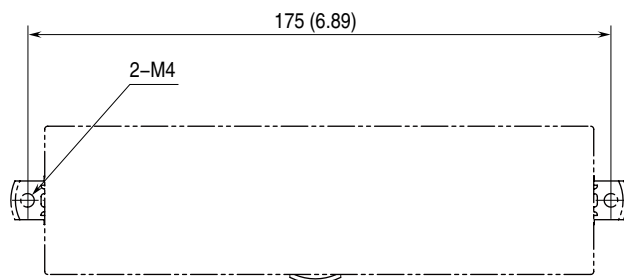

## EtherCAT SPECIFICATIONS

### ■ Modular Device Profile

R7I4DECT-1-DC32A complies with the Modular Device Profile (MDP) standard, ETG.5001.1 of the EtherCAT standard. Be sure that the master supports the MDP standard.

### ■ Fixed address

R7I4DECT supports Explicit Device Identification by allowing setting of fixed address using the fixed address setting rotary switches (ID selector).

The fixed address can be set to be 1 to 255.

When fixed address is not used, set the ID selector to 0.

When the power is turned on with the ID selector set to other than 0, the designated address is written in the resistor 0x0012 of ESC (EtherCAT Slave Controller) when R7I4DECT starts up.

### ■ Initialization

At the start up, objects of the process data mapping (RxPDO, TxPDO) corresponding to the I/O data of the device, and the other objects are created in the object dictionary.

After initialization, the master unit is available to require to the slave unit (R7I4DECT-1-DC32A) to switch the status from INIT to PREOP.

If the initialization is not completed due to any error with the module, switching requirement is rejected with AL status code at switching from INIT to PREOP.

### ■ Data Configuration

Data are configured in accordance with the EtherCAT Modular Device Profile (MDP) specifications as shown below.

**Table 1: Data Configuration**

OBJECT	ADDRESS	CONTENT
Input Area Objects	0x6001	Input data, Output status data
Output Area Objects	0x7000	Output data
PDO Mapping Objects (TxPDO)	0x1A00	Input data list
PDO Mapping Objects (RxPDO)	0x1600	Output data list
PDO Assign (IN)	0x1C13	Input data transmission order
PDO Assign (OUT)	0x1C12	Output data transmission order
Sync Manager Type	0x1C00	Sync manager type
Sync Manager Parameter Objects	0x1C32, 0x1C33	Sync mode
Device Type	0x1000	Device type
Manufacturer Device Name	0x1008	Device name
Manufacturer Hardware Version	0x1009	Hardware version
Manufacturer Software Version	0x100A	Software version
Identity Objects	0x1018	Vendor information

### ■ EtherCAT State

EtherCAT defines four states of slave: INIT, PREOP, SAFEOP, and OP.

TxPDO (input configuration data) is updated only in the SAFEOP or OP state, and RxPDO (output configuration data) is updated only in the OP state.

The RUN LED turns on only in the OP state and input and output data are updated.

## ■ EtherCAT Diagnostics

### • AL Status Code

When the slave (R7I4DECT) fails to receive a request from the master or when there is a problem with the slave during normal communication, an error code is set to registers 0x0134 and 0x0135 (AL Status Code) of ESC.

The error codes that R7I4DECT uses are as shown below.

**Table 2: Error Codes of AL Status Code**

CODE	ERROR
0x0000	No error
0x0011	Invalid requested state change
0x0012	Unknown requested state
0x0013	BOOT state not supported
0x0016	Invalid MailBox configuration (PREOP)
0x0017	Invalid SyncManager configuration
0x001B	SyncManager Watchdog Timeout
0x001D	Invalid Output Configuration
0x001E	Invalid Input Configuration
0x001F	Invalid Watchdog Configuration
0x0029	FreeRun needs 3 Buffer mode

### • SDO Abort Code

When the master attempts to access the object dictionary via SDO, if the slave (R7I4DECT) fails to receive SDO messages for any reason, R7I4DECT sends an error code (SDO Abort Code) to the master and denies its access.

The following error codes are used.

**Table 3: Error Codes of SDO Abort Code**

CODE	ERROR
0x05030000	Toggle bit not changed
0x05040001	Client/Server command specifier not valid or unknown
0x05040005	Out of memory
0x06010000	Unsupported access to an object
0x06010002	Attempt to a read-only object
0x06020000	The object does not exist in the object directory
0x06070010	Data type does not match, length of service parameter does not match
0x06090011	Sub-index does not exist
0x08000020	Data cannot be transferred or stored to the application
0x08000022	Data cannot be transferred or stored to the application because of the present device state



## OBJECT DICTIONARY (DATA DESCRIPTION)

### ■ Input Area Objects (Input Data Area: 0x6001)

Output status data is allocated to object 0x6001. (Refer to “I/O DATA DESCRIPTIONS” on page 11)  
Sub-Indexes correspond to channel numbers.

### ■ Output Area Objects (Output Data Area: 0x7000)

Output data is allocated to object 0x7000.  
Same data is allocated to object 0x7000 and 0x7100, while only the data type is different.  
Sub-Indexes correspond to channel numbers.

**Table 4: Sub-Index Configuration By Module Type**

MODULE TYPE	INDEX	SUB-INDEX	DATA TYPE	BIT	ACCESS	VALUE	CONTENT
Discrete output status	0x6001	0	UINT8	8	RO	1	Number of items
		1	UINT16	16	RO	0x0000	Output status data (0th to 16th points)
		2	UINT16	16	RO	0x0000	Output status data (17th to 32nd points)
Discrete output, 32 points	0x7000	0	UINT8	8	RO	16	Number of items
		1	BOOL	1	RW	TRUE/FALSE	First point output data
		2	BOOL	1	RW	TRUE/FALSE	Second point output data
		:	:	:	:	:	:
		32	BOOL	1	RW	TRUE/FALSE	32th point output data
Discrete output, 32 points	0x7100	0	UINT8	8	RO	2	Number of items
		1	UINT16	16	RW	0x0000	Output data (0 to 16 points)
		2	UINT16	18	RW	0x0000	Output data (17 to 32 points)

### ■ PDO Mapping Objects (Data List: 0x1600, 0x1A00)

#### • Objects 0x1600, 0x1A00

Output data list (RxPDO) and Input data list (TxPDO) are allocated to 0x1600 and 0x1A00, respectively.

In the data of RxPDO and TxPDO, index, sub-index, and the number of bit of each object which is referred to, are stored.  
For input data, each object with the address starting with 0x6000 is referred to.  
For output data, each object with the address starting with 0x7000 is referred to.

**Table 5: Object Configuration For Output Data List And Input Data List**

INDEX	SUB-INDEX	DATA TYPE	BIT	ACCESS	VALUE	CONTENT
0x1600 (RxPDO)	0	UINT8	8	RO	16	Number of items
	1	UINT32	32	RO	0xaaaabbcc	aaaa: Index for referenced object bb: Sub-Index for referenced object cc: Number of bits for referenced object
	2	UINT32	32	RO		
	:	:	:	:		
	16	UINT32	32	RO		
0x1A00 (TxPDO)	0	UINT8	8	RO		
	1	UINT32	32	RO	0xaaaabbcc	aaaa: Index for referenced object bb: Sub-Index for referenced object cc: Number of bits for referenced object

### ■ PDO Assign Objects (Data Transmission Order, Output: 0x1C12, Input: 0x1C13)

An allocation list for RxPDO and an allocation list for TxPDO are allocated to 0x1C12 and 0x1C13, respectively.  
The indexes stored in 0x1C12 and 0x1C13 are placed in the order they are actually transmitted via PDO.

**Table 6: Object Configuration For PDO Allocation Lists**

INDEX	SUB-INDEX	DATA TYPE	BIT	ACCESS	VALUE	CONTENT
0x1C12	0	UINT8	8	RO	2	Number of items
	1	UINT16	16	RO	0x1600	Output data
0x1C13	0	UINT8	8	RO	3	Number of items
	1	UINT16	16	RO	0x1A00	Input data, Status data

### ■ Sync Manager Type (0x1C00)

Sync Manager Type is allocated to object 0x1C00 based on the EtherCAT specification.

**Table 7: Object Configuration For Sync Manager Type**

INDEX	SUB-INDEX	DATA TYPE	BIT	ACCESS	VALUE	CONTENT
0x1C00	0	UINT8	8	RO	4	Number of items
	1	UINT8	8	RO	1	Mailbox Write
	2	UINT8	8	RO	2	Mailbox Read
	3	UINT8	8	RO	3	Process Output Data
	4	UINT8	8	RO	4	Process Input Data

### ■ Sync Manager Parameter Objects (0x1C32, 0x1C33)

In R7I4DECT, objects 0x1C32 and 0x1C33 do not exist, as the value of Sync Manager Parameter is fixed.

R7I4DECT supports Free Run mode only as the Sync mode.

Note that Distributed Clock (DC) mode is not supported.

### ■ Device Type (0x1000)

The device type of this unit is allocated to object 0x1000. The device type is 5001.

**Table 8: Object Configuration For Device Type**

INDEX	DATA TYPE	BIT	ACCESS	VALUE	CONTENT
0x1000	UINT32	32	RO	5001	Device type

### ■ Error Register (0x1001)

R7I4DECT does not use Object 0x1001.

### ■ Manufacturer Device Name (0x1008)

The device name is allocated to object 0x1008 in String form.

**Table 9: Object Configuration For Device Name**

INDEX	DATA TYPE	BIT	ACCESS	VALUE	CONTENT
0x1008	STRING	32	RO	R7I4DECT-1-DC32A	Model number

### ■ Manufacturer Hardware Version (0x1009)

The hardware device version of this unit is allocated to object 0x1009 in String form.

The format of version is “n.nn.”

**Table 10: Object Configuration For Hardware Version**

INDEX	DATA TYPE	BIT	ACCESS	VALUE	CONTENT
0x1009	STRING	32	RO	n.nn	Hardware version

### ■ Manufacturer Software Version (0x100A)

The software version of this unit is allocated to object 0x100A in String form.

The format of version is “n.nn.”

**Table 11: Object Configuration For Software Version**

INDEX	DATA TYPE	BIT	ACCESS	VALUE	CONTENT
0x100A	STRING	32	RO	n.nn	Software version

**Identity Object (Vendor information: 0x1018)**

Vendor information is allocated to object 0x1018.

While the vendor ID and product code are fixed, the revision number is incremented by one at each major version up of the software.

A unique serial number is allocated to each product.

A serial number consists of 8 digits, starting with two alpha-numeral characters followed by six numeral characters.

The serial number is expressed as 32-bit data divided into 6-bit, 6-bit, and 20-bit groups, with the first two characters converted into 6-bit values.

6 BITS	6 BITS	20 BITS
1st digit	2nd digit	3rd to 8th digits (000000 to 999999)



CHARACTER	VALUE
0	0
1	1
:	:
9	9
A	10
B	11
:	:
Z	35

**Table 12: Object Configuration For Vendor Information**


INDEX	SUB-INDEX	DATA TYPE	BIT	ACCESS	VALUE	CONTENT
0x1018	0	UINT8	8	RO	4	Number of items
	1	UINT32	32	RO	0x0000060C	Vendor ID
	2	UINT32	32	RO	0x52370007	Product code
	3	UINT32	32	RO	n	Revision number
	4	UINT32	32	RO	0 to n	Serial number

**I/O DATA DESCRIPTIONS**

**DISCRETE I/O DATA**


**DESCRETE OUTPUT MODEULE**

- Output Area Objects

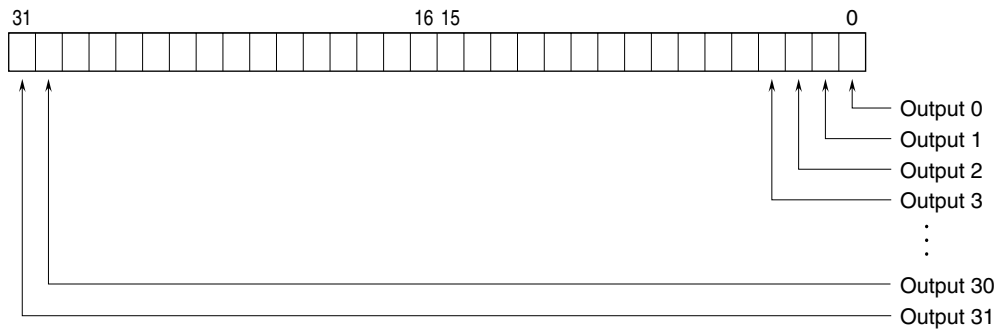

0: OFF 1: ON

## ■ STATUS (Input Area Object)

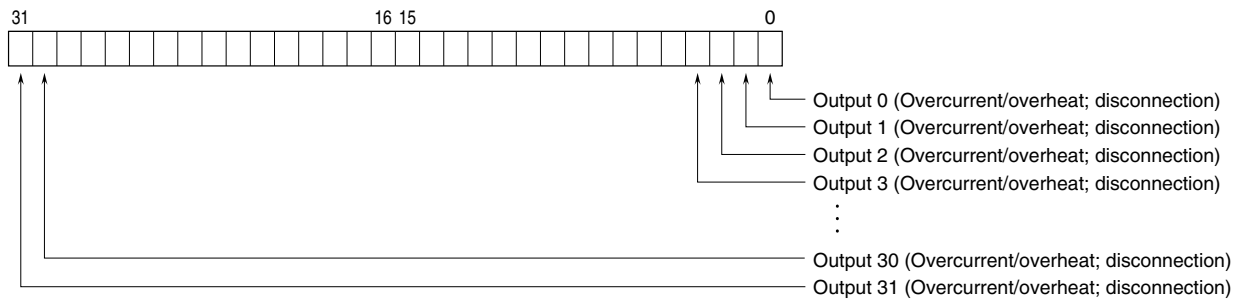

0: Normal

1: Detected the overcurrent/overheat and disconnection

When overcurrent or overheat is detected on each channel of discrete output while the output is ON, the status bit corresponding to the output turns “1” and is latched\*. Then the discrete output is also latched to OFF.

To reset the latched bit and discrete output, set this output to OFF from the host PC/PLC or turn off and on the power supply to the unit.

When disconnection (open load) is detected while output is OFF, the corresponding status bit turns “1” but is not latched.

\* The status bit turns “0” if the load is opened in the state overcurrent or overheat is detected. However, the discrete output of the unit remains latched. Be sure to remove the cause of error and reset the latched output by setting the output to OFF or turning off/on the power supply.