

DC INPUT DIGITAL PANEL METER
(4 1/2 digit, LED display type)MODEL **47LYV****BEFORE USE**

Thank you for choosing M-System. Before use, please check contents of the package you received as outlined below.

If you have any problems or questions with the product, please contact M-System's Sales Office or representatives.

■ PACKAGE INCLUDES:

- Digital panel meter (1)
- Instruction manual..... (1)
- Engineering unit sticker label sheet (1)

■ MODEL NO.

Confirm Model No. marking on the product to be exactly what you ordered.

■ INSTRUCTION MANUAL

This manual describes necessary points of caution when you use this product, including installation, connection and basic maintenance procedures.

POINTS OF CAUTION**■ CONFORMITY WITH EC DIRECTIVES**

- This equipment is suitable for use in a Pollution Degree 2 environment and in Installation Category II, with the maximum operating voltage of 300V. Reinforced insulation is maintained between signal input and power input. Prior to installation, check that the insulation class of this unit satisfies the system requirements.
- Altitude up to 2000 meters
- The equipment must be installed such that appropriate clearance and creepage distances are maintained to conform to CE requirements. Failure to observe these requirements may invalidate the CE conformance.
- In order to enable the operator to turn off the power input immediately, install a switch or a circuit breaker according to the relevant requirements in IEC 60947-1 and IEC 60947-3 and properly indicate it.

■ POWER INPUT RATING & OPERATIONAL RANGE

Locate the power input rating marked on the product and confirm its operational range as indicated below:

- 100 – 240V AC rating: 85 – 264V, 50/60 Hz, approx. 4VA
- 24V DC rating: 24V ±10%, approx. 2W
- 110V DC rating: 85 – 150V, approx. 2W

■ GENERAL PRECAUTIONS

- Before you remove the unit or mount it, turn off the power supply and input signal for safety.
- Be sure to put the terminal cover on while the power is supplied.

■ ENVIRONMENT

- Indoor use
- When heavy dust or metal particles are present in the air, install the unit inside proper housing with sufficient ventilation.
- Do not install the unit where it is subjected to continuous vibration. Do not subject the unit to physical impact.
- Environmental temperature must be within -10 to +55°C (14 to 131°F) with relative humidity within 30 to 90% RH in order to ensure adequate life span and operation.
- Be sure that the ventilation slits are not covered with cables, etc.

■ REQUIREMENTS TO ENSURE IP66

- Observe the designated panel cutout size (W92 × H45 mm).
- The watertight packing included in the product package must be placed behind the front cover.
- Both mounting brackets must be fastened tightly until they hit the panel.
- Confirm visually that the packing is not contorted or excessively run off the edge after installation.

■ WIRING


- Make sure for safety that only qualified personnel perform the wiring.
- Do not install cables (power supply, input and output) close to noise sources (high frequency line, etc.).
- Do not bind these cables together with those in which noises are present. Do not install them in the same duct.

■ AND


The unit is designed to function as soon as power is supplied, however, a warm up for 10 minutes is required for satisfying complete performance described in the data sheet.

COMPONENT IDENTIFICATION


■ TOP VIEW

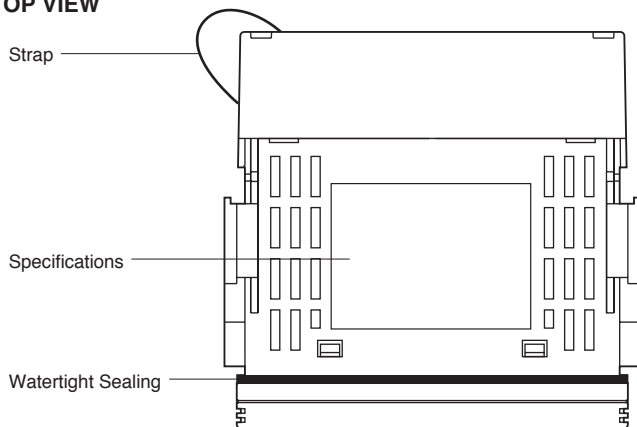

■ FRONT VIEW

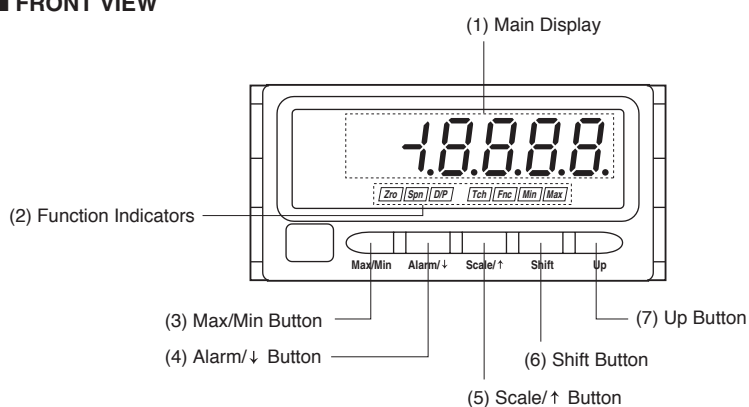

■ SIDE VIEW

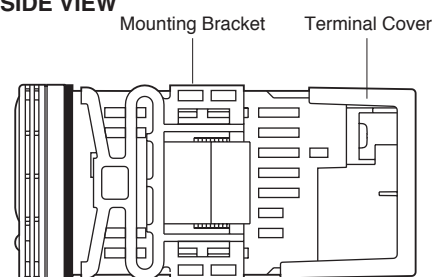


• COMPONENT IDENTIFICATION

No.	COMPONENT	FUNCTION
(1)	Main display	Indicates present values, setting values.
(2)	Function indicators	Indicate setting modes and status.
(3)	Max/Min button	Used to switch the main display to show present values, maximum values or minimum values.
(4)	Alarm/↓ button	Used to shift through setting items in each setting mode.
(5)	Scale/↑ button	Used to move on to the scaling setting mode; or to shift through setting items in each setting mode.
(6)	Shift button	Used to move on to the setting standby status and shift through display digits in each setting item.
(7)	Up button	Used to change setting values, to execute/cancel Forced Zero, or to set input signal values during 'Teach' calibration.

INSTALLATION

■ PANEL CUTOUT unit: mm

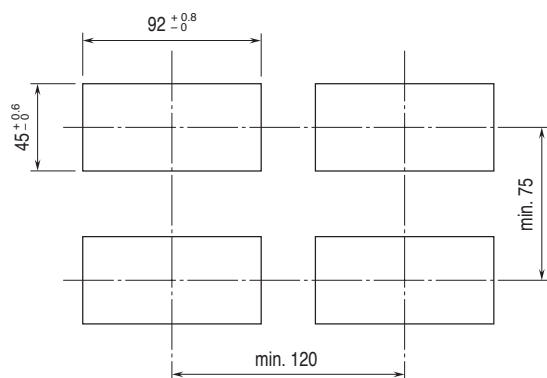


Panel thickness: 1.6 to 8.0 mm

■ HOW TO MOUNT THE UNIT ON A PANEL

The watertight packing must be in place to hold the meter. Do not remove it.

- 1) Insert the unit into the panel cutout.
- 2) Push the mounting brackets into the grooves on both sides of the rear module, until they hit the panel's rear side.

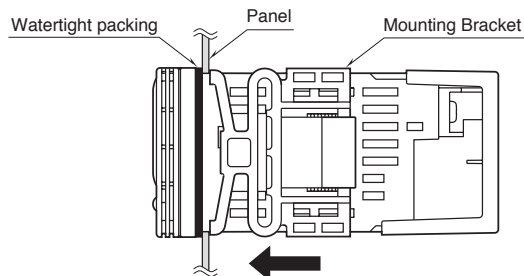


TERMINAL CONNECTIONS


Connect the unit as in the diagram in the following page or refer to the connection diagram on the terminal cover.

■ EXTERNAL DIMENSIONS unit: mm (inch)


■ TOP VIEW

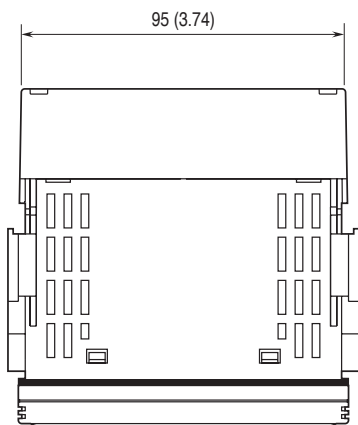


■ FRONT VIEW

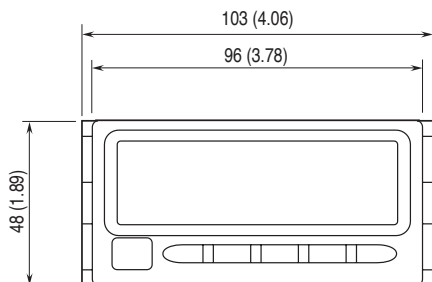


■ SIDE VIEW

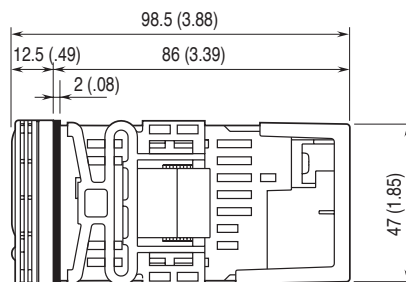

■ REAR VIEW

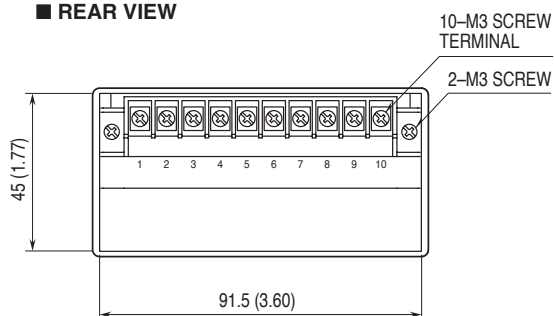


■ CONNECTION DIAGRAM

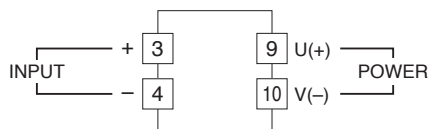

■ TERMINAL BLOCK


• How to remove the terminal block cover

Insert the minus tip of a screwdriver into each hole at the four corners of the cover and pull it to the direction as indicated below to separate the terminal block cover.

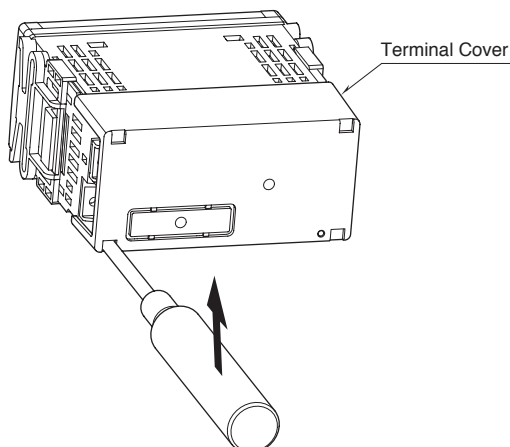


• How to remove the terminal block

The terminal block is separable in two pieces. Loosen two screws on both sides of the terminal block to separate. Be sure to turn off the power supply, input signal and power supply to the output relays before separating the terminal block.

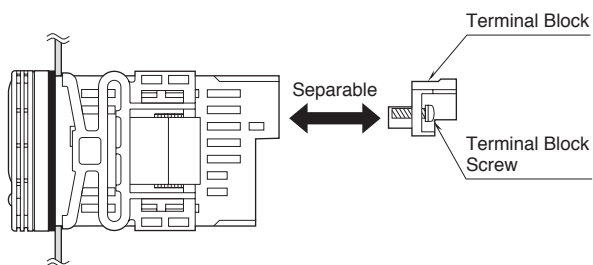


SETTING PROCEDURE

■ INITIAL SETTING FLOWCHART

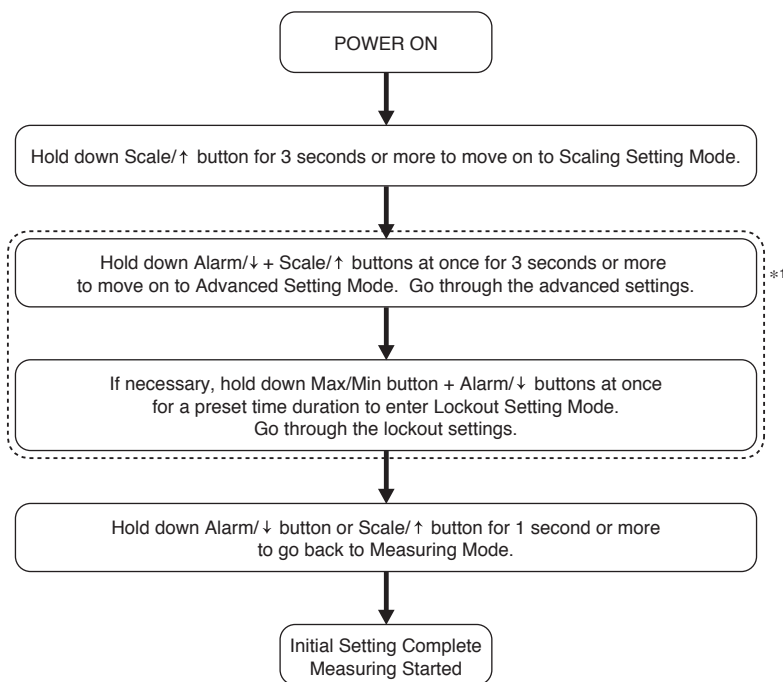

*1. Optional settings for parameters in a broken-line section.

■ GENERAL SETTING FLOWCHART

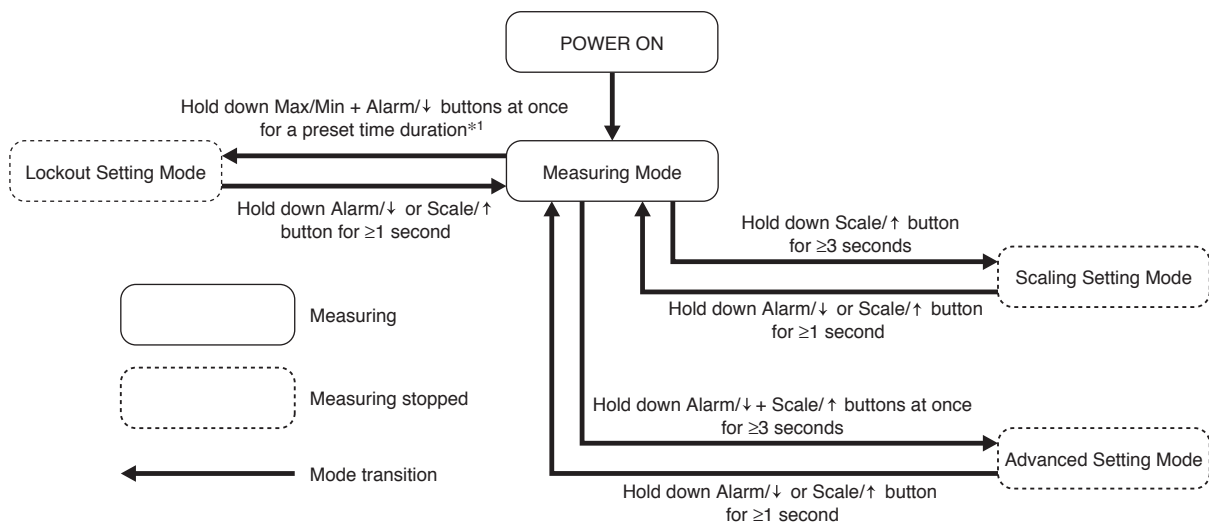

*1. Preset time can be specified with "Transition Time to Lockout Setting Mode" in Advanced Setting Mode.


■ OPERATIONS IN MEASURING MODE

• Switching the main display to MAX or MIN values


Press Max/Min button to switch the main display to MAX or MIN values.

'Max' or 'Min' indicator turns on during the MAX/MIN display mode.

Press Max/Min button again for 1 second or more, or turn the power supply off and on to cancel the MAX/MIN display mode.

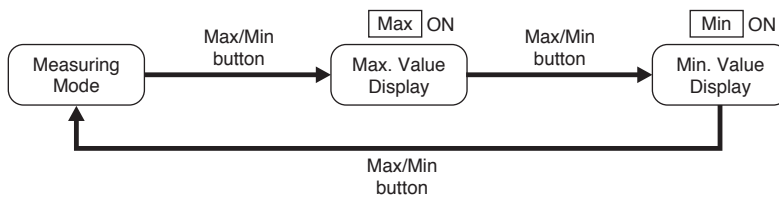

• Forced Zero

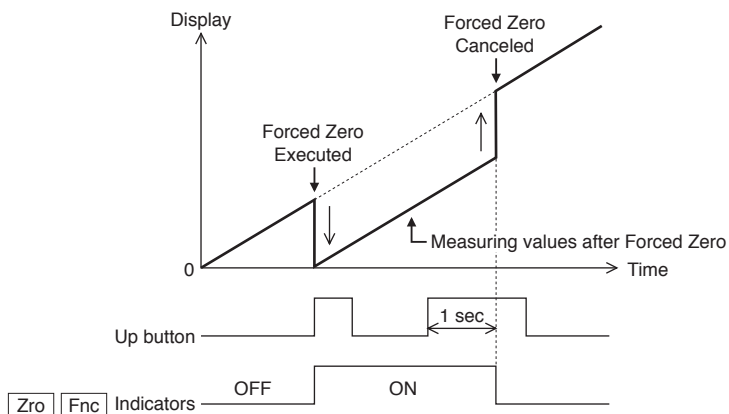

Press Up button to shift the present display value to 0 and to continue measuring in reference to this point.

'Zro' and 'Fnc' indicators turn on during the Forced Zero mode.

Press Up button again for 1 second or more to cancel the mode.


Forced Zero is effectively used when '0' is within the scaled range.

The command cannot be executed when the operation is prohibited with the lockout protection setting.

MAX/MIN display mode cannot be cancelled while in the Forced Zero mode.

Forced Zero cannot be cancelled while in the MAX/MIN display mode.

Forced Zero value is stored in memory even when the power is removed.

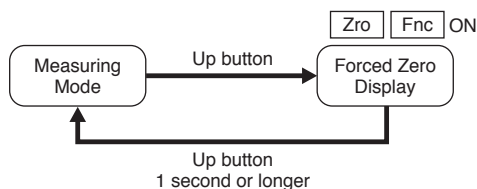

■ OPERATIONS IN SETTING MODES

• Main display

The main display shows the current settings while the panel meter is in the setting mode.

• Shifting through setting parameters

In any setting mode, pressing Alarm/↓ button shifts one parameter to the next. Pressing Scale/↑ button shifts one to the previous.

• Changing parameters

Pressing Shift button while one of the parameter settings is indicated on the display shifts the panel meter into the setting standby mode. The digit to which you can apply changes starts blinking.

Press Up button to change the blinking value.

Press Shift button to go to the next digit.


Press Alarm/↓ or Scale/↑ button to apply the new value and go to the next or previous parameter setting.

• If you get lost...

Hold down Max/Min button for 1 second or more to return to the measuring mode without applying the last changes.

(Those which have been already applied by pressing Alarm/↓ or Scale/↑ button are not cancelled.)

■ SCALING SETTING MODE

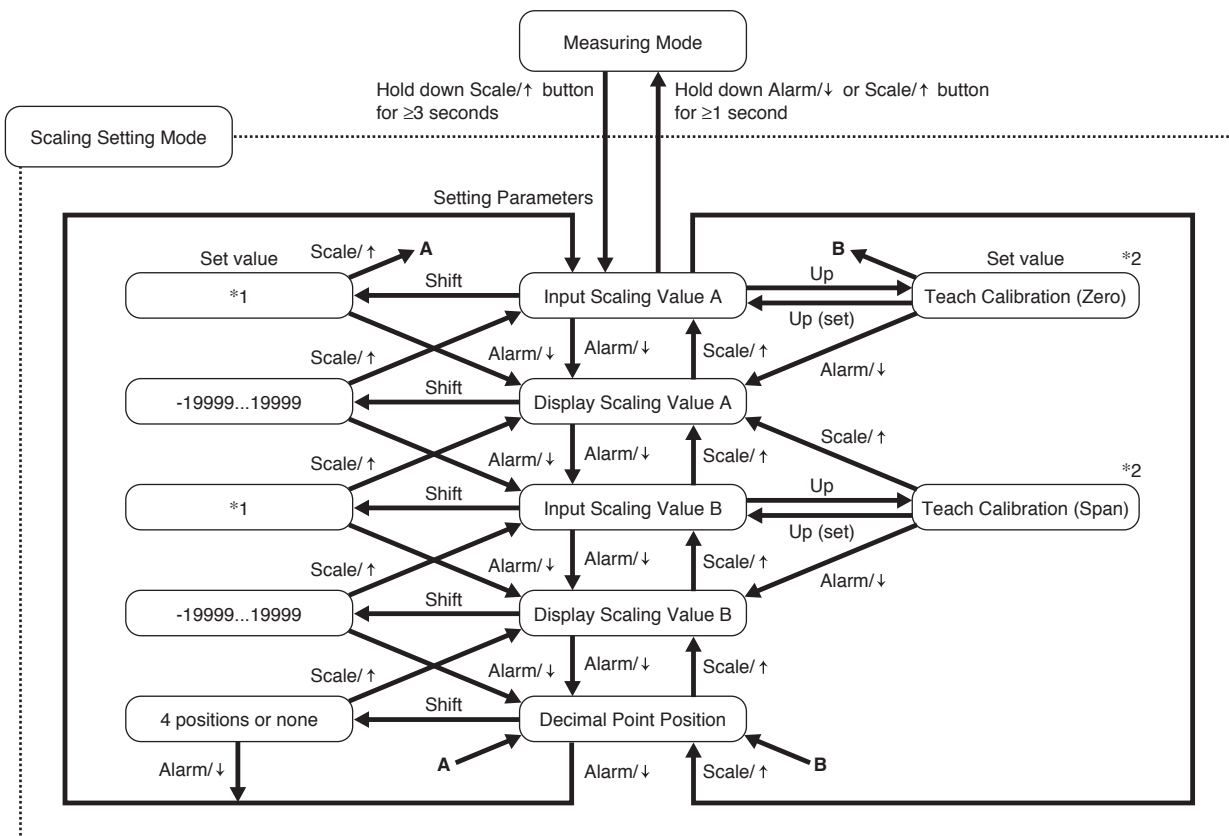

*1. Depends upon model suffix code. Refer to the following parameter list.
 *2. Refer to Teach Calibration for detailed procedures.

PARAMETER	INDICATORS	DISPLAY		FUNCTION	DEFAULT VALUE
Input scaling value A	Zro Tch	A	4.00 ... 20.00	Input value for Zero point: Set to a specific value by using the buttons, or by Teach Calibration	4.00
		D	0.00 ... 20.00		0.00
		5	0.000 ... 5.000		0.000
		6	1.000 ... 5.000		1.000
		4W	- 10.000 ... 10.000		- 10.000
		5W	- 5.000 ... 5.000		- 5.000
Display scaling value A	Zro D/P	A	- 19999 ... 19999	Display value for Input Scaling Value A	4.00
		D			0.00
		5			0.000
		6			1.000
		4W			- 10.000
		5W			- 5.000
Input scaling value B	Spn Tch	A	4.00 ... 20.00	Input value for Full-scale point: Set to a specific value by using the buttons, or by Teach Calibration	20.00
		D	0.00 ... 20.00		20.00
		5	0.000 ... 5.000		5.000
		6	1.000 ... 5.000		5.000
		4W	- 10.000 ... 10.000		10.000
		5W	- 5.000 ... 5.000		5.000
Display scaling value B	Spn D/P	A	- 19999 ... 19999	Display value for Input Scaling Value B	20.00
		D			20.00
		5			5.000
		6			5.000
		4W			10.000
		5W			5.000
Decimal point position	D/P	A	4 positions or none	Decimal point position	20.00
		D			20.00
		5			5.000
		6			5.000
		4W			10.000
		5W			5.000


Scaling setting: Go through the scaling setting in the order of 'Input scaling value A' --> 'Display scaling value A' --> 'Input scaling value B' --> 'Display scaling value B,' so that the zero and the full-scale points are connected linearly as shown in the figures below.

Selectable input range depends upon the model suffix code.

Decimal point position: Decimal point position is specified independently from the scaling. When you set the display scaling, include zeros for fractions (10000 to show 100.00).


• Normal Scaling

The display value increases when the input signal increases.

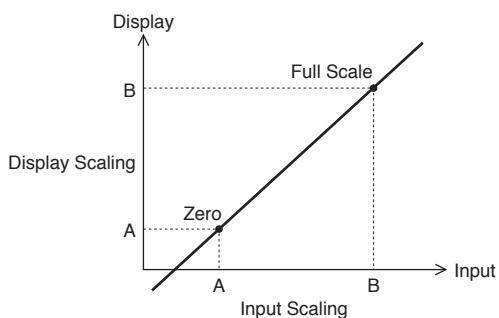

• Inverted Scaling

The display value decreases when the input signal increases.

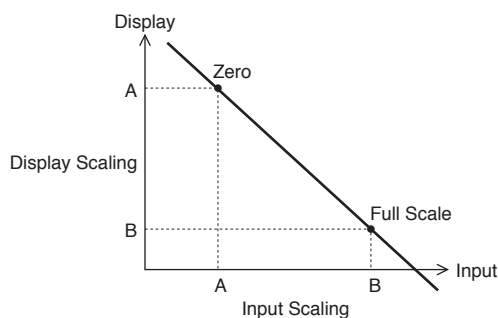


• 'Teach' Calibration

'Input scaling value A' and 'Input scaling value B' can be adjusted by applying actual input signals. These settings will be lost after an initialization.

How to 'Teach' Input Values

- 1) Hold down Scale/↑ button for 3 seconds or more to enter the scaling setting mode.
- 2) Input scaling value A: 'Zro' and 'Tch' indicators turn on.
- 3) Zero point: Press Up button and 'Tch' indicator starts blinking.
- 4) Apply 0% input signal. Press Up button again and 'Tch' indicators returns to ON.
- 5) Press Alarm/↓ button to move on to Display scaling value A.
- 6) Press Alarm/↓ button again to move on to Input scaling value B.
- 7) 'Spn' and 'Tch' indicators turn on.
- 8) Full-scale point: Press Up button and 'Tch' indicator starts blinking.
- 9) Apply 100% input signal. Press Up button again and 'Tch' indicators returns to ON.

■ ADVANCED SETTING MODE

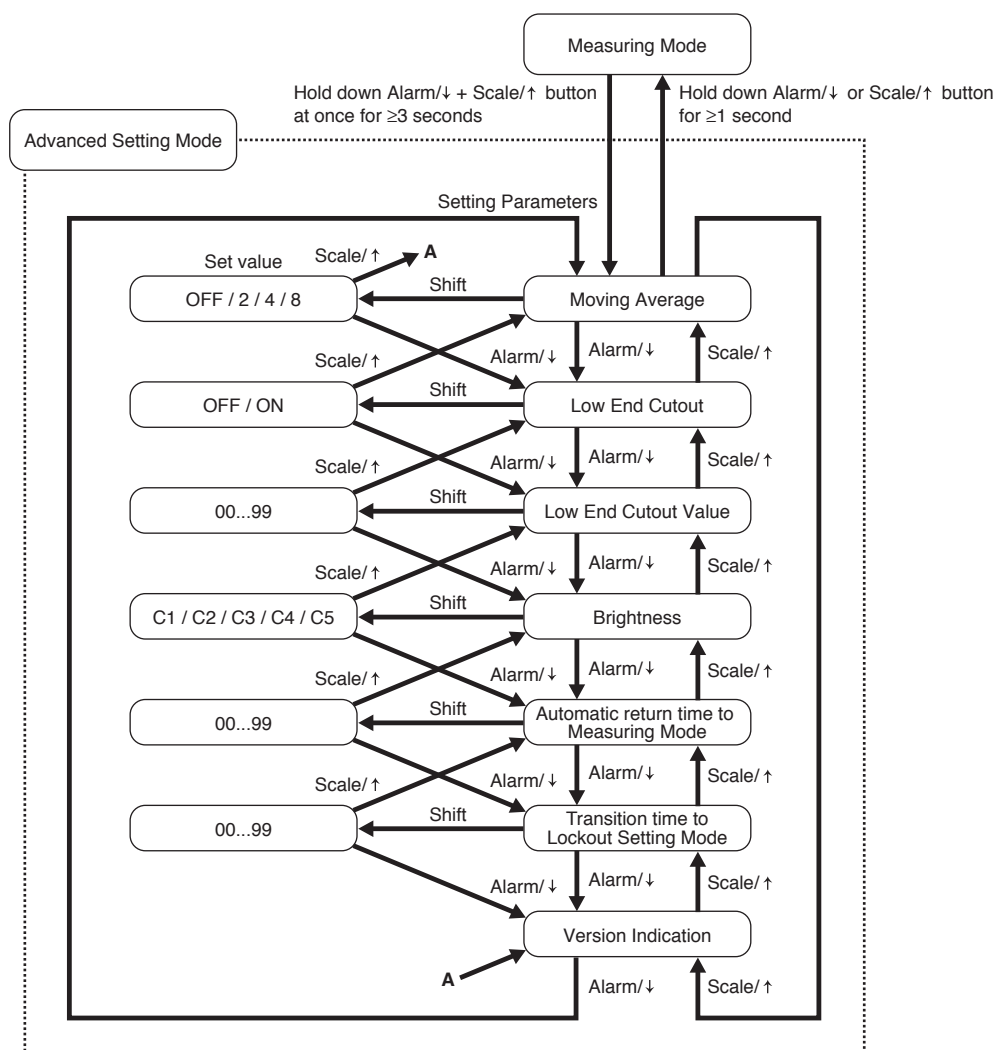

PARAMETER	INDICATORS	DISPLAY	FUNCTION	DEFAULT VALUE
Moving average	[Fnc]	RoFF	No moving averaging	RoFF
		R 2	Moving average with 2 samples	
		R 4	Moving average with 4 samples	
		R 8	Moving average with 8 samples	
Low-end cutout	[Fnc]	oFF	Low-end cutout OFF	oFF
		oN	Low-end cutout ON	
Low-end cutout value	[Zro] [Fnc]	o 00 ... o 99	Low-end cutout value setting	-
Brightness	[D/P] [Fnc]	[1	Brightness level 1 (dark)	[3
		[2	Brightness level 2	
		[3	Brightness level 3	
		[4	Brightness level 4	
		[5	Brightness level 5 (bright)	
Automatic return time to Measuring Mode	[D/P] [Fnc]	r 00 ... r 99	Specify in seconds	r 15
Transition time to Lockout Setting Mode	[D/P] [Fnc]	P 00 ... P 99	Specify in seconds	P 05
Version indication	[Fnc]	N/A	Version number, indication only	N/A

Low-end cutout: Input signal below the preset cutout value is forcibly cut to 0. Turn the low-end cutout ON and choose a display value.

With the cutout set to OFF, the low-end cutout value setting is locked.

(Typically used to show 0 when the input signal goes below zero.)

Set the two least significant digits including fractions, disregarding the decimal point position.


[Note] Low-end cutout value can be changed only with the low-end cutout ON.

Automatic return time to Measuring Mode: The display goes back automatically to Measuring Mode if the front buttons are left untouched for the specified time period while it is in one of the setting modes.

With this value set to 0, the display must always be exited manually from the setting mode.

Transition time to Lockout Setting Mode: The display goes to Lockout Setting Mode only when the designated buttons are pressed for the specified time duration.

■ LOCKOUT SETTING MODE

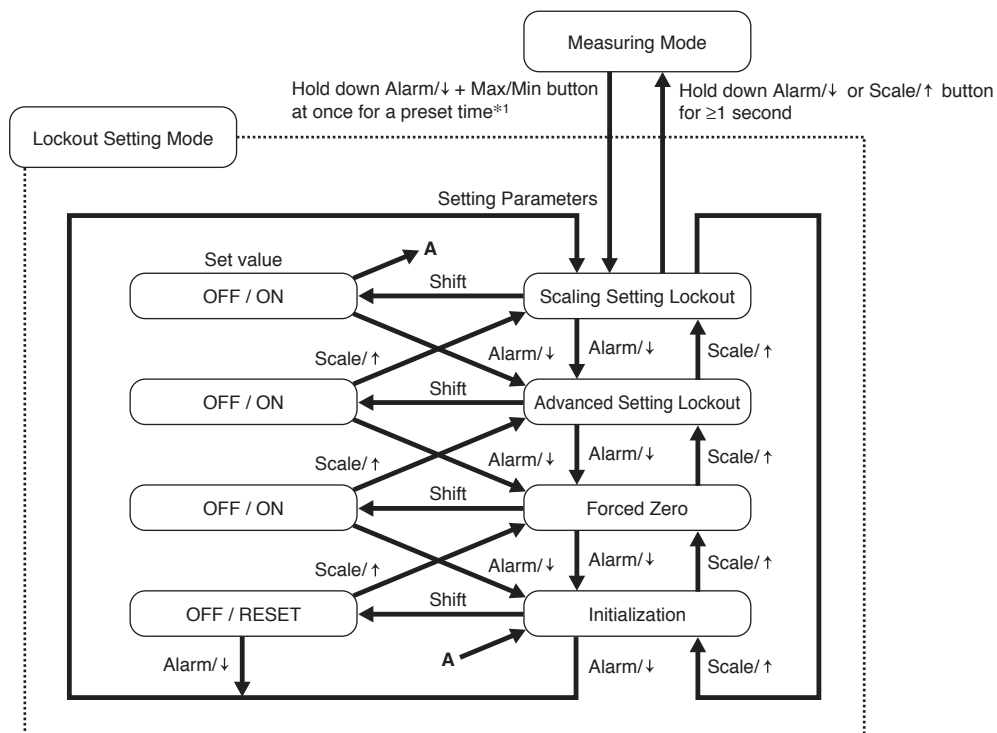

*1. Preset time can be specified with "Transition Time to Lockout Setting Mode" in Advanced Setting Mode.

PARAMETER	INDICATORS	DISPLAY	FUNCTION	DEFAULT VALUE
Scaling setting lockout	[D/P] [Fnc]	5OFF	Unlock Scaling Setting Mode	5OFF
		5ON	Lock Alarm Setting Mode	
Advanced setting lockout	[D/P] [Fnc]	dOFF	Unlock Advance Setting Mode	dOFF
		dON	Lock Advanced Setting Mode	
Forced zero lockout	[D/P] [Fnc]	≡OFF	Unlock (Enable) Forced Zero operation	≡OFF
		≡ON	Lock (Disable) Forced Zero operation	
Initialization	[D/P] [Fnc]	rOFF	Initialization prohibited	rOFF
		rESt	Execute Initialization	

ERROR MESSAGES

MAIN DISPLAY	ERROR MESSAGE	WHAT TO DO
SErr	Input error, Out of the measuring range	Increase/decrease the input signal until it is back within the measuring range.
iErr	Non-volatile memory error (reading)	While the error message is on the display, press Up button for 3 seconds or more to initialize the unit to its factory default status.*1
wErr	Non-volatile memory error (writing)	

*1. All parameter settings are reset to the factory default values. If the unit does not recover its function after the initialization, repairing in the factory may be required.

CHARACTER SET

0	1	2	3	4	5	6	7	8	9	-	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
0	1	2	3	4	5	6	7	8	9	-	A	b	C	d	E	F	G	H	,	J	K	L	ñ	o	P	q	r	S	t	U	v	y	ü	ÿ	≡	

LIGHTNING SURGE PROTECTION

M-System offers a series of lightning surge protectors for protection against induced lightning surges. Please contact M-System to choose appropriate models.

M-SYSTEM WARRANTY

M-System warrants such new M-System product which it manufactures to be free from defects in materials and workmanship during the 36-month period following the date that such product was originally purchased if such product has been used under normal operating conditions and properly maintained, M-System's sole liability, and purchaser's exclusive remedies, under this warranty are, at M-System's option, the repair, replacement or refund of the purchase price of any M-System product which is defective under the terms of this warranty. To submit a claim under this warranty, the purchaser must return, at its expense, the defective M-System product to the below address together with a copy of its original sales invoice.

THIS IS THE ONLY WARRANTY APPLICABLE TO M-SYSTEM PRODUCT AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. M-SYSTEM SHALL HAVE NO LIABILITY FOR CONSEQUENTIAL, INCIDENTAL OR SPECIAL DAMAGES OF ANY KIND WHATSOEVER.

M-System Co., Ltd., 5-2-55, Minamitsumori, Nishinari-ku, Osaka 557-0063 JAPAN, Phone: (06) 6659-8201, Fax: (06) 6659-8510, E-mail: info@m-system.co.jp