

NPN DISCRETE INPUT MODULE, 32 points

MODEL R8Y-DAZH32A

BEFORE USE

Thank you for choosing us. Before use, please check contents of the package you received as outlined below.

If you have any problems or questions with the product, please contact our sales office or representatives.

■ PACKAGE INCLUDES:

NPN discrete input module(1)

■ MODEL NO.

Confirm Model No. marking on the product to be exactly what you ordered.

■ INSTRUCTION MANUAL

This manual describes necessary points of caution when you use this product, including installation, connection and basic maintenance procedures.

POINTS OF CAUTION**■ CONFORMITY WITH EU DIRECTIVES**

- The equipment must be mounted inside a panel.
- The actual installation environments such as panel configurations, connected devices and connected wires may affect the protection level of this device when it is integrated in a panel system. The user may have to review the CE requirements in regard to the whole system and employ additional protective measures* to ensure CE conformity.

* For example, installation of noise filters and clamp filters for the power source, input and output connected to the device, etc.

■ GENERAL PRECAUTIONS

- Before you remove or mount the device, turn off the power supply and input signal for safety.
- Switches on the side of the device can be set for maintenance only while the power supply is off. Do not access them while the power is supplied.

■ ENVIRONMENT

- Indoor use.
- When heavy dust or metal particles are present in the air, install the device inside proper housing with sufficient ventilation.
- Do not install the device where it is subjected to continuous vibration. Do not subject the device to physical impact.
- Environmental temperature must be within -10 to +55°C (14 to 131°F) with relative humidity within 30 to 90% RH in order to ensure adequate life span and operation.

■ WIRING


- Do not install cables close to noise sources (relay drive cable, high frequency line, etc.).
- Do not bind these cables together with those in which noises are present. Do not install them in the same duct.

■ EXCITATION SUPPLY


- Input connector: Rated current 3A DC, 0.75A DC per 1 connector (rated current 3A for internal fuse (slow blow fuse)).

■ AND


- The device is designed to function as soon as power is supplied, however, a warm up for 10 minutes is required for satisfying complete performance described in the data sheet.

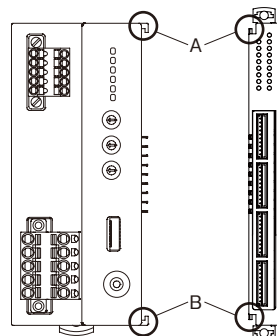INSTALLATION**■ HOW TO MOUNT THE DEVICE ON DIN RAIL****• I/O Module**


Confirm that the locking clamps of the I/O module are set. Insert the module in parallel to the next one while aligning the grooves of both modules (A & B in the above figure). Maintain it perpendicularly to the rail.

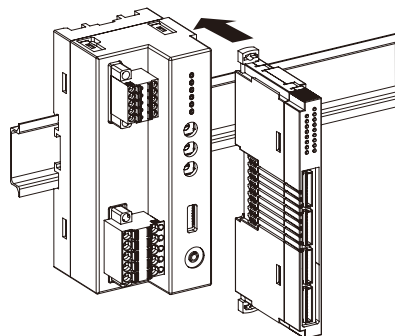


More I/O modules can be added in the same manner.

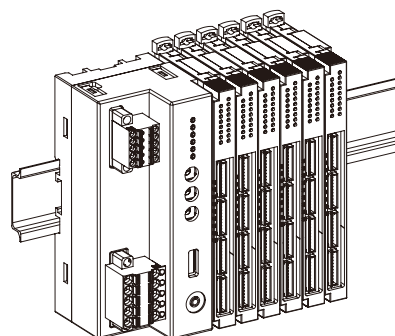


• Protective Cover

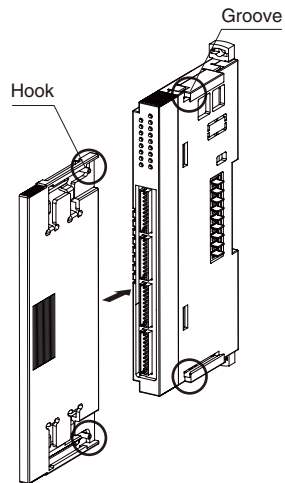

The protective cover is to be attached over the connected I/O module at the right end.
Align the hooks on the cover with the grooves of the module and slide it straight until the hooks are latched.


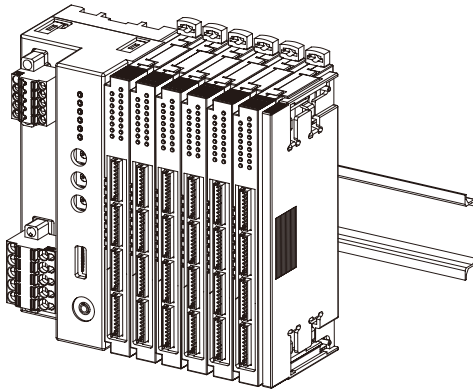


When removing the cover, pull it out while squeezing the hooks inward.


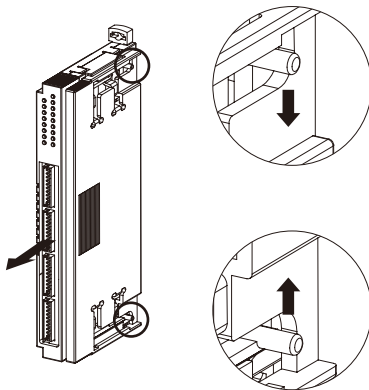


■ HOW TO UNMOUNT THE DEVICE FROM DIN RAIL

Release the locking clamps and pull out straight the module.

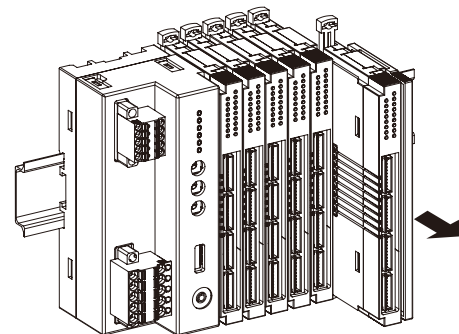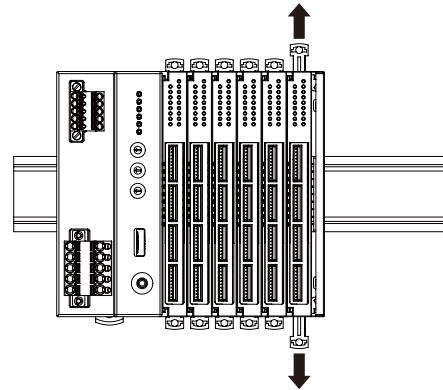

• Removing an intermediate module

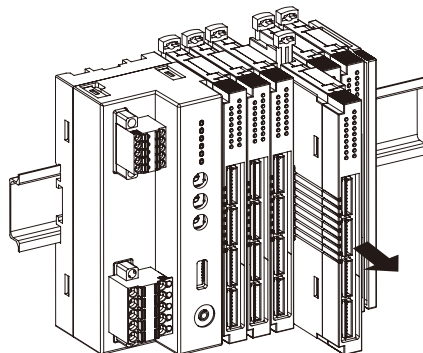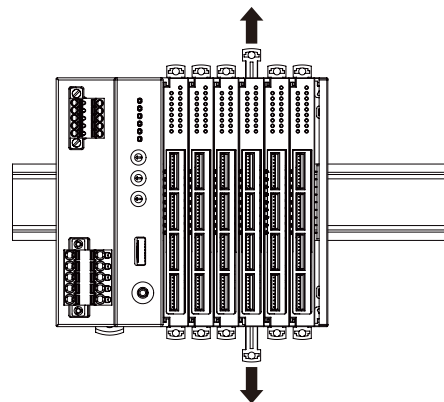


Caution !

- 1) Be careful not to hurt your hand by pointed edges of the internal communication bus connector.
- 2) I/O modules cannot hold tightly on the DIN rail by themselves without power/network module.
Secure them to the position if necessary by using DIN rail end plates.

COMPONENT IDENTIFICATION

■ FRONT VIEW

■ SIDE VIEW

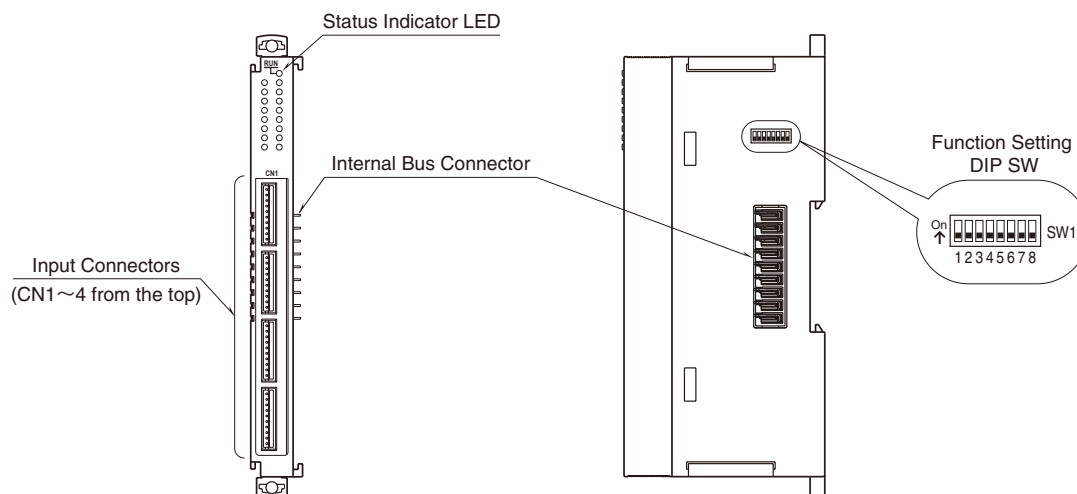

■ INDICATOR LED

LED	OPERATION	FUNCTION
Status	OFF	Stopping
	Green ON	Valid host communication
	Red ON	Setting error

■ MODULE ADDRESS

The SW1-1, SW1-2 determines the tenth place digit, while the SW1-3, SW1-4, SW1-5, SW1-6 does the ones place digit of the address.

Address is selected between 0 to 30.

(Factory setting: 0)

MODULE ADDRESS	SW1				
	×10	3	4	1	2
	×1			5	6
0		OFF	OFF	OFF	OFF
1		OFF	OFF	OFF	ON
2		OFF	OFF	ON	OFF
3		OFF	OFF	ON	ON
4		OFF	ON	OFF	OFF
5		OFF	ON	OFF	ON
6		OFF	ON	ON	OFF
7		OFF	ON	ON	ON
8		ON	OFF	OFF	OFF
9		ON	OFF	OFF	ON

■ TERMINATOR DIP SW

TERMINATOR SW	SW1-8
Without (*)	OFF
With	ON

(*) Factory setting

Note: Be sure to set unused SW1-7 to OFF.

■ INPUT CONNECTOR ASSIGNMENT

• ZH connector

Device side connector: S10B-ZR (Japan Solderless Terminal MFG. Co., Ltd.)

Recommended socket: ZHR-10 (Japan Solderless Terminal MFG. Co., Ltd.)

Recommended contact: SZH-002T-P0.5 (Japan Solderless Terminal MFG. Co., Ltd.)

Applicable wire size: AWG28 - 26

(The socket and contact are not included in the package. Refer to the specifications of the product)




CN1			CN2			CN3			CN4		
PIN No.	ID	FUNCTION	PIN No.	ID	FUNCTION	PIN No.	ID	FUNCTION	PIN No.	ID	FUNCTION
10	24V	Excitation supply 24V	10	24V	Excitation supply 24V	10	24V	Excitation supply 24V	10	24V	Excitation supply 24V
9	Di 1	Input 1	9	Di 9	Input 9	9	Di 17	Input 17	9	Di 25	Input 25
8	Di 2	Input 2	8	Di 10	Input 10	8	Di 18	Input 18	8	Di 26	Input 26
7	Di 3	Input 3	7	Di 11	Input 11	7	Di 19	Input 19	7	Di 27	Input 27
6	Di 4	Input 4	6	Di 12	Input 12	6	Di 20	Input 20	6	Di 28	Input 28
5	Di 5	Input 5	5	Di 13	Input 13	5	Di 21	Input 21	5	Di 29	Input 29
4	Di 6	Input 6	4	Di 14	Input 14	4	Di 22	Input 22	4	Di 30	Input 30
3	Di 7	Input 7	3	Di 15	Input 15	3	Di 23	Input 23	3	Di 31	Input 31
2	Di 8	Input 8	2	Di 16	Input 16	2	Di 24	Input 24	2	Di 32	Input 32
1	0V	Excitation supply 0V	1	0V	Excitation supply 0V	1	0V	Excitation supply 0V	1	0V	Excitation supply 0V

TERMINAL CONNECTIONS

Connect the device as in the diagram below.

■ EXTERNAL DIMENSIONS unit: mm [inch]

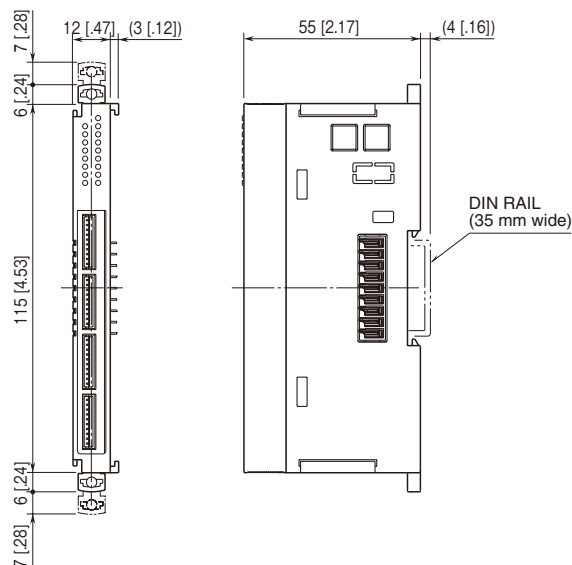

■ CONNECTION DIAGRAM

