



AC Servo System

MITSUBISHI ELECTRIC SERVO SYSTEM
MELSERVO-J5

MR-J5-G/MR-J5W-G User's Manual (Introduction)



-MR-J5- _G_
-MR-J5W- _ _G_

SAFETY INSTRUCTIONS

Please read the instructions carefully before using the equipment.

To use the equipment correctly, do not attempt to install, operate, maintain, or inspect the equipment until you have read through this manual, installation guide, and appended documents carefully. Do not use the equipment until you have a full knowledge of the equipment, safety information and instructions.





In this manual, the safety instruction levels are classified into "WARNING" and "CAUTION".

 WARNING	Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.
 CAUTION	Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight injury.

Note that the CAUTION level may lead to a serious consequence depending on conditions.

Please follow the instructions of both levels because they are important to personnel safety.

Forbidden actions and required actions are indicated by the following diagrammatic symbols.

	Indicates a forbidden action. For example, "No Fire" is indicated by  .
	Indicates a required action. For example, grounding is indicated by  .

In this manual, precautions for hazards that can lead to property damage, instructions for other functions, and other information are shown separately in the "Point" area.

After reading this manual, keep it accessible to the operator.

[Installation/wiring]

WARNING

- To prevent an electric shock, turn off the power and wait for 15 minutes or more before starting wiring and/or inspection.
 - To prevent an electric shock, ground the servo amplifier.
 - To prevent an electric shock, any person who is involved in wiring should be fully competent to do the work.
 - To prevent an electric shock, mount the servo amplifier before wiring.
 - To prevent an electric shock, connect the protective earth (PE) terminal of the servo amplifier to the protective earth (PE) of the cabinet, then connect the grounding lead wire to the ground.
 - To prevent an electric shock, do not touch the conductive parts.
-

[Setting/adjustment]

WARNING

- To prevent an electric shock, do not operate the switches with wet hands.
-

[Operation]

WARNING

- To prevent an electric shock, do not operate the switches with wet hands.
-


[Maintenance]

WARNING

- To prevent an electric shock, any person who is involved in inspection should be fully competent to do the work.
 - To prevent an electric shock, do not operate the switches with wet hands.
-

ABOUT THE MANUAL

If using the servo for the first time, prepare and use the following related manuals to ensure that the servo is used safely.

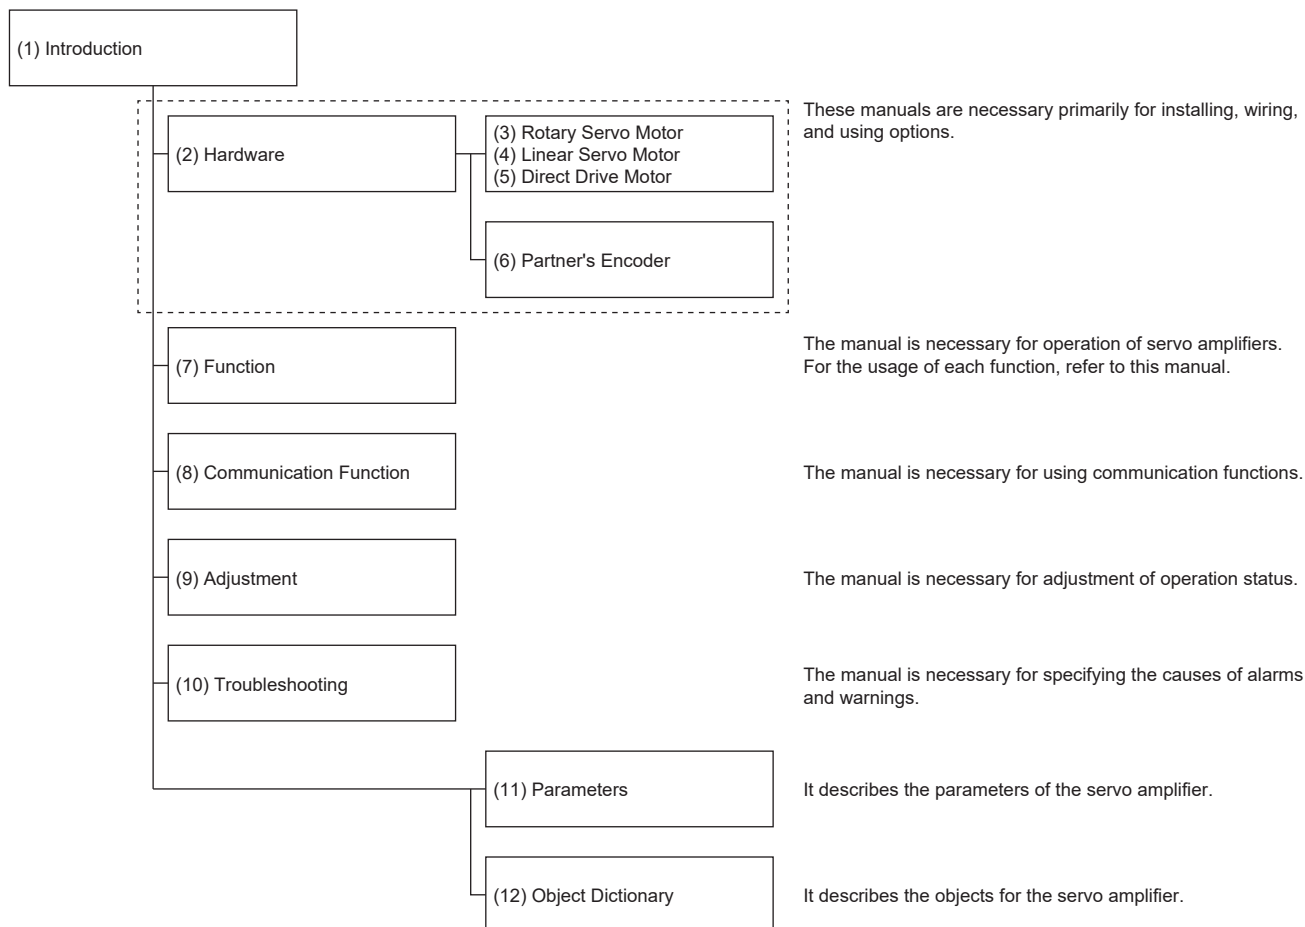


No.	Manual name	Manual No.
(1)	MR-J5-G/MR-J5W-G User's Manual (Introduction)	SH(NA)-030294ENG
(2)	MR-J5 User's Manual (Hardware)	SH(NA)-030298ENG
(3)	Rotary Servo Motor User's Manual (For MR-J5)	SH(NA)-030314ENG
(4)	Linear Servo Motor User's Manual (LM-H3/LM-U2/LM-F/LM-K2)	SH(NA)-030316ENG
	Linear Servo Motor User's Manual (LM-AJ/LM-AU)	IB(NA)-0300518ENG
(5)	Direct Drive Motor User's Manual	SH(NA)-030318ENG
(6)	MR-J5 Partner's Encoder User's Manual	SH(NA)-030320ENG
(7)	MR-J5 User's Manual (Function)	SH(NA)-030300ENG
(8)	MR-J5-G/MR-J5W-G User's Manual (Communication Function)	SH(NA)-030302ENG
(9)	MR-J5 User's Manual (Adjustment)	SH(NA)-030306ENG
(10)	MR-J5 User's Manual (Troubleshooting)	SH(NA)-030312ENG
(11)	MR-J5-G/MR-J5W-G User's Manual (Parameters)	SH(NA)-030308ENG
(12)	MR-J5-G/MR-J5W-G User's Manual (Object Dictionary)	SH(NA)-030304ENG

Interpreting servo parameter numbers


For a servo parameter which uses one particular digit to select a function, the position of its digit indicates the detail number of the servo parameter, and the value in hexadecimal which is set to the digit indicates the selected function.

For example, the detail number of the servo parameter in the last digit is expressed as [Pr. PA01.0]. In addition, a servo parameter which uses a combination of several digits to select a function, is expressed using "-" as seen in [Pr. PA01.0-1]. The following is an example of the servo parameter number PA01 with the setting values of "FEDCBA98" in hexadecimal.

- When setting a servo parameter with one particular digit

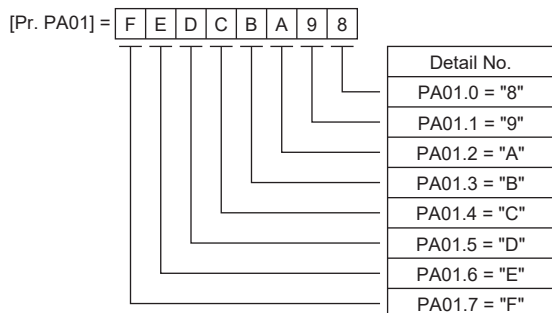

- When setting a servo parameter using a combination of several digits

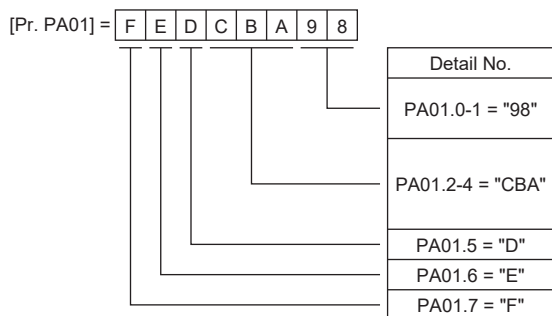

For example, if the servo parameter name is "Function selection A-1", the setting digit name is "Forced stop deceleration function selection", and the setting digit is the fourth last digit in PA04, the servo parameter is expressed as shown below.
[Pr. PA04.3 Forced stop deceleration function selection]

Servo parameter	Symbol	Name	Description
PA04.3	*AOP	Forced stop deceleration function selection	Set "Forced stop deceleration function" to enabled/disabled. Initial value: 1h (enabled)

Global standards and regulations

Compliance with the indicated global standards and regulations is current as of the release date of this manual. Some standards and regulations may have been modified or withdrawn.

DEFINITION OF TERMS IN COMMON BUS CONNECTION

The terms related to the construction of the common bus connection system are defined as follows:

Main unit: The servo amplifier connected to the 3-phase AC input power supply. It is the axis with the largest capacity in the servo system.

Sub unit: The servo amplifier not connected to the 3-phase AC input power supply. It is the axis powered by the bus of the main unit.

U.S. CUSTOMARY UNITS

U.S. customary units are not shown in this manual. Convert the values if necessary according to the following table.

Quantity	SI (metric) unit	U.S. customary unit
Mass	1 [kg]	2.2046 [lb]
Length	1 [mm]	0.03937 [inch]
Torque	1 [N•m]	141.6 [oz•inch]
Moment of inertia	1 [$\times 10^{-4}$ kg•m ²]	5.4675 [oz•inch ²]
Load (thrust load/axial load)	1 [N]	0.2248 [lbf]
Temperature	N [°C] \times 9/5 + 32	N [°F]

CONTENTS

SAFETY INSTRUCTIONS	1
ABOUT THE MANUAL	3
DEFINITION OF TERMS IN COMMON BUS CONNECTION	4
U.S. CUSTOMARY UNITS	5
CHAPTER 1 SPECIFICATIONS	8
1.1 Outline	8
1.2 Model designation	8
1.3 Servo amplifier/motor combinations	12
1.4 Servo amplifier standard specifications	13
MR-J5-_G_	13
MR-J5W2-_G_	18
MR-J5W3-_G_	20
Positioning mode	22
Functional safety	23
Environment	26
1.5 Function block diagram	27
MR-J5-_G_ (excluding MR-J5-_G_-HS_)	27
MR-J5-_G_-HS_	31
MR-J5W-_G_	34
1.6 Configuration including peripheral equipment	35
1.7 Special specifications	36
Servo amplifiers without dynamic brake (-ED/-RU/-HU)	36
Servo amplifiers without regenerative resistor (-PX/-HZ/-RN)	36
Special coating specification products (-EB/-RB/-HB)	37
CHAPTER 2 FUNCTION	38
2.1 Restrictions on MR-J5-_G_	38
Restrictions on CC-Link IE TSN	38
Restrictions on CC-Link IE Field Network Basic	39
2.2 Function list	40
2.3 Security	51
CHAPTER 3 STRUCTURE	52
3.1 Parts identification	52
3.2 Switch setting and display of the servo amplifier	59
Switches	59
7-segment LED	60
CN1A/CN1B connector LED	64
Status LEDs	65
CHAPTER 4 STARTUP	66
4.1 Turning on servo amplifier for the first time	70
Test operation of the servo motor alone in test operation mode	71
Equipment configuration setting	72
Controller-related setting	72
Operation by controller command	73
4.2 Instructions on startup	74

4.3	Troubleshooting at startup	74
4.4	Duplicate setting	75
	Duplication using MR Configurator2	75
4.5	Test operation	75
	Execution method	75
	Test operation mode	76
	Motor driving by test operation	76
	Motor-less operation	80
	Output signal (DO) forced output	81
4.6	Servo amplifier setting initialization	82
	Initialization procedure by MR Mode Change	82
CHAPTER 5 MAINTENANCE, INSPECTION AND PARTS REPLACEMENT		83
5.1	Inspection items	83
	Periodic inspection	83
5.2	Parts with a service life	83
CHAPTER 6 COMPLIANCE WITH GLOBAL LAWS AND REGULATIONS		85
6.1	Compliance with global standards	85
6.2	Handling of AC servo amplifier batteries for the United Nations Recommendations on the Transport of Dangerous Goods	85
	Target model	85
	Purpose	86
	Handling during transportation	86
	Package at our shipment	87
	Transportation precaution for customers	87
6.3	Symbol for EU	88
	EU Battery Regulation	88
6.4	Compliance with China Compulsory Certification (CCC)	89
6.5	Compliance with the China RoHS directive	90
	REVISIONS	92
	WARRANTY	93
	TRADEMARKS	94

1 SPECIFICATIONS

1.1 Outline


MR-J5_-_G_ operates in the Ethernet open network (communication speed of up to 1 Gbps).

One MR-J5W_-_G servo amplifier can drive two or three servo motors. The footprint of one MR-J5W_-_G servo amplifier is considerably smaller than that of two or three MR-J5_-_G_ servo amplifiers.

1.2 Model designation

Rating plate

The following shows an example of the rating plate for explanation of each item.

	MITSUBISHI ELECTRIC	AC SERVO CC-Link IE TSN Class B/A SER.SAMPLE001	CC-Link IE TSN Class
MODEL MR-J5-10G			Model
POWER :100W			Capacity
INPUT :3AC/AC 200-240V 0.9A/1.5A 50/60Hz			Applicable power supply
OUTPUT:3PH 0-240V 0-590Hz 1.3A			Rated output
STD.:IEC/EN/UL61800-5-1 GB12668.501 MAN.:IB(NA) 0300391			Standard, manual number
Max. Surrounding Air Temp.: 60°C			Ambient temperature
IP20/UL Open Type			IP rating *1
R-R-MEK-TC301A421G51			KC number
MITSUBISHI ELECTRIC CORPORATION TOKYO 100-8310, JAPAN		DATE: 2019-05	Date of manufacture
MADE IN JAPAN		PASSED	Country of origin

*1 The IP rating of the standard certification. For the actual IP rating, refer to the following.

☞ Page 13 Servo amplifier standard specifications

Model

The following describes what each block of a model name indicates. Not all combinations of the symbols are available.

■MR-J5-_G_

MR - J 5 - 6 0 G 4 - R J		Special specification	
Series		Special specification	
Rated output		Power supply ^{*1}	
Symbol	Rated output [kW]	Symbol	Power supply
10	0.1	None	3-phase or 1-phase 200 V AC to 240 V AC
20	0.2	4	3-phase 380 V AC to 480 V AC
40	0.4		
60	0.6		
70	0.75		
100	1		
200	2		
350	3.5		
500	5		
700	7		
12K	12		
17K	17		
25K	25		

^{*1} When using a servo amplifier with a 1-phase 100 V AC to 120 V AC power supply input, connect an MR-CM08K1 simple converter and a 200 V class 1-axis or multi-axis servo amplifier. The MR-CM08K1 simple converter is available on servo amplifiers with firmware version F0 or later. For details, refer to "MR-CM08K1 simple converter" in the following manual.

MR-J5 User's Manual (Hardware)

Item		Special specifications *1												
		Not attached	-RJ	-HS	-ED *3	-RU *3	-HU *3	-LL	-PX *4	-HZ *4	-RN *4	-EB *5	-RB *5	-HB *5
Analog input		×	×	×	×	×	×	3 points *6	×	×	3 points *6	×	×	×
Encoder output pulses (A/B/Z-phase pulses)		○	○	○	○	○	○	×	○	○	×	○	○	○
Digital input	Touch probe cannot be assigned	4 points	3 points	3 points	4 points	3 points	3 points	4 points	4 points	3 points	4 points	4 points	3 points	3 points
	Touch probe can be assigned	2 points *2	3 points	3 points	2 points *2	3 points	3 points	1 point	2 points	3 points	1 point	2 points	3 points	3 points
Functional safety input signal (double wiring)		1 point	1 point	3 points	1 point	1 point	3 points	1 point	1 point	3 points	1 point	1 point	1 point	3 points
Functional safety output signal (double wiring)		1 point	1 point	3 points	1 point	1 point	3 points	1 point	1 point	3 points	1 point	1 point	1 point	3 points
External wiring diagnostic output		×	×	○	×	×	○	×	×	○	×	×	×	○
Thrust/torque control	Cyclic synchronous pressure mode (cspr)	×	×	×	×	×	×	○	×	×	○	×	×	×
Point table method	Point table mode (pt)	○	○	○	○	○	○	×	○	○	×	○	○	○
	JOG operation mode (jg)	○	○	○	○	○	○	×	○	○	×	○	○	○

Item		Special specifications *1												
		Not attached	-RJ	-HS	-ED *3	-RU *3	-HU *3	-LL	-PX *4	-HZ *4	-RN *4	-EB *5	-RB *5	-HB *5
Slave axis control	Slave axis torque mode	○	○	○	○	○	○	×	○	○	×	○	○	○
CN2L connector		×	○	○	×	○	○	×	×	○	×	×	○	○
Linear servo system	Two-wire type	○	○	○	○	○	○	○	○	○	○	○	○	○
	Four-wire type	○	○	○	○	○	○	○	○	○	○	○	○	○
	A/B/Z-phase differential input	×	○	○	×	○	○	×	×	○	×	×	○	○
Fully closed loop system Scale measurement function	Two-wire type	○	○	○	○	○	○	×	○	○	×	○	○	○
	Four-wire type	×	○	○	×	○	○	×	×	○	×	×	○	○
	A/B/Z-phase differential input	×	○	○	×	○	○	×	×	○	×	×	○	○
Direct drive servo system		○	○	○	○	○	○	×	○	○	×	○	○	○
Synchronization function	Master-slave operation function	○	○	○	○	○	○	×	○	○	×	○	○	○
Tracking control	Super trace control	○	○	○	○	○	○	×	○	○	×	○	○	○
Touch probe		○ *2	○	○	○ *2	○	○	○	○	○	○	○	○	○
Functional safety	STO	○	○	○	○	○	○	○	○	○	○	○	○	○
	SS1	×	○	○	×	○	○	×	×	○	×	×	○	○
	SS2	×	○	○	×	○	○	×	×	○	×	×	○	○
	SOS	×	○	○	×	○	○	×	×	○	×	×	○	○
	SBC	×	○	○	×	○	○	×	×	○	×	×	○	○
	SLS	×	○	○	×	○	○	×	×	○	×	×	○	○
	SSM	×	○	○	×	○	○	×	×	○	×	×	○	○
	SDI	×	○	○	×	○	○	×	×	○	×	×	○	○
	SLI	×	○	○	×	○	○	×	×	○	×	×	○	○
	SLT	×	○	○	×	○	○	×	×	○	×	×	○	○
Built-in dynamic brake	7 kW or less	○	○	○	×	×	×	○	—	—	—	○	○	○
	12 kW or more	×	×	×	×	×	×	×	×	×	×	×	×	×
Built-in regenerative resistor		○	○	○	○	○	○	○	×	×	×	○	○	○
Special coating		×	×	×	×	×	×	×	×	×	×	○	○	○

*1 ○: The corresponding item is included or supported.

×: The corresponding item is not included or not supported.

*2 Available on servo amplifiers manufactured in June 2021 or later with firmware version C0 or later. Servo amplifiers with both the former and new versions may be distributed in the market around the same time depending on the stock status. When considering introducing the touch probe function, contact your local sales office.

*3 For details of this special specifications, refer to the following.

☞ Page 36 Servo amplifiers without dynamic brake (-ED/-RU/-HU)

*4 For details of this special specification, refer to the following.

☞ Page 36 Servo amplifiers without regenerative resistor (-PX/-HZ/-RN)

*5 For details of this special specification, refer to the following.

☞ Page 37 Special coating specification products (-EB/-RB/-HB)

*6 Available on servo amplifiers manufactured in May 2025 or later with firmware version F0 or later.

Point

When using a servo amplifier with a 1-phase 100 V AC to 120 V AC power supply input, connect an MR-CM08K1 simple converter and a 200 V class 1-axis or multi-axis servo amplifier. The MR-CM08K1 simple converter is available on servo amplifiers with firmware version F0 or later. For details, refer to "MR-CM08K1 simple converter" in the following manual.

MR-J5 User's Manual (Hardware)

MR - J 5 W 2 - 4 4 G - E D

Series

Number of axes

Symbol	Number of axes
W2	2
W3	3

Special specification

Symbol	Special specification
None	Standard model
-ED	Without dynamic brake
-EB	Standard products with a special coating specification

CC-Link IE TSN interface

Rated output

Symbol	Rated output [kW]		
	A-axis	B-axis	C-axis
22	0.2	0.2	-
44	0.4	0.4	-
77	0.75	0.75	-
1010	1	1	-
222	0.2	0.2	0.2
444	0.4	0.4	0.4

Item		Special specifications *1		
		Not attached (standard model)	-ED *4	-EB *5
CN2L connector		×	×	×
Linear servo system	Two-wire type	○	○	○
	Four-wire type	○	○	○
	A/B/Z-phase differential input	×	×	×
Fully closed loop system *2 Scale measurement function *2	Two-wire type	○	○	○
	Four-wire type	×	×	×
	A/B/Z-phase differential input	×	×	×
Touch probe		○	○	○
Functional safety	STO	○	○	○
	SS1	○	○	○
	SS2	○ *3	○ *3	○
	SOS	○ *3	○ *3	○
	SBC	○	○	○
	SLS	○ *3	○ *3	○
	SSM	○ *3	○ *3	○
	SDI	○ *3	○ *3	○
	SLI	○ *3	○ *3	○
	SLT	○ *3	○ *3	○
Built-in dynamic brake		○	×	○
Special coating		×	×	○

*1 ○: The corresponding item is included or supported.

×: The corresponding item is not included or not supported.

*2 Not available on the MR-J5W3-_G.

*3 Available on servo amplifiers with firmware version D8 or later.

*4 For details of this special specifications, refer to the following.


Page 36 Servo amplifiers without dynamic brake (-ED/-RU/-HU)

*5 For details of this special specification, refer to the following.

Page 37 Special coating specification products (-EB/-RB/-HB)

1.3 Servo amplifier/motor combinations

Refer to "Servo amplifier/motor combinations" in the following manual.

 MR-J5 User's Manual (Hardware)

1.4 Servo amplifier standard specifications

1



When using a servo amplifier with a 1-phase 100 V AC to 120 V AC power supply input, connect an MR-CM08K1 simple converter and a 200 V class 1-axis or multi-axis servo amplifier. The MR-CM08K1 simple converter is available on servo amplifiers with firmware version F0 or later. For details, refer to "MR-CM08K1 simple converter" in the following manual.

MR-J5 User's Manual (Hardware)

MR-J5-_G_

200 V class

Model: MR-J5-			10G	20G	40G	60G	70G	100G	200G	350G	500G	700G	12KG	17KG	25KG
Output	Voltage		3-phase 0 V AC to 240 V AC												
	Rated current [A]		1.3	1.8	2.8	3.2	5.8	6.0	11.0	17.0	28.0	37.0	68.0	87.0	126.0
Main circuit power supply input	Voltage/ Frequency	At AC input	3-phase or 1-phase 200 V AC to 240 V AC, 50 Hz/60 Hz					3-phase or 1-phase 200 V AC to 240 V AC, 50 Hz/60 Hz ^{*4}		3-phase 200 V AC to 240 V AC, 50 Hz/60 Hz					
		At DC input	283 V DC to 340 V DC												
	Rated current [A] ^{*3}	At AC input	0.9 (1.5)	1.5 (2.5)	2.6 (4.5)	3.2 (5.0)	3.8 (6.5)	5.0 (10.5)	10.5 (15.8)	16.0	21.7	28.9	52.0	72.2	109.7
		At DC input	1.1	1.8	3.2	3.5	4.6	6.0	12.4	19.4	26.5	38.9	63.6	77.7	132.9
	Permissible voltage fluctuation	At AC input	3-phase or 1-phase 170 V AC to 264 V AC					3-phase or 1-phase 170 V AC to 264 V AC ^{*4}		3-phase 170 V AC to 264 V AC					
		At DC input	241 V DC to 374 V DC												
	Permissible frequency fluctuation		Within ±5 %												
	Power supply capacity [kVA]		Refer to "Power supply capacity and generated loss" in the following manual. 📖MR-J5 User's Manual (Hardware)												
	Inrush current [A]		Refer to "Inrush currents at power-on of main circuit and control circuit" in the following manual. 📖MR-J5 User's Manual (Hardware)												
	Control circuit power supply input	Voltage/ Frequency	At AC input	1-phase 200 V AC to 240 V AC, 50 Hz/60 Hz											
At DC input			283 V DC to 340 V DC												
Rated current [A]		0.2									0.3				
Permissible voltage fluctuation		At AC input	1-phase 170 V AC to 264 V AC												
		At DC input	241 V DC to 374 V DC												
Permissible frequency fluctuation		Within ±5 %													
Power consumption [W]		30											45		
Inrush current [A]		Refer to "Inrush currents at power-on of main circuit and control circuit" in the following manual. 📖MR-J5 User's Manual (Hardware)													
Interface power supply	Voltage		24 V DC ±10 %												
	Current capacity [A]		0.3 (including CN8 connector signals) ^{*1}												
Control method			Sine-wave PWM control, current control method												
Dynamic brake			Built-in											External ^{*11*12}	

Model: MR-J5-			10G	20G	40G	60G	70G	100G	200G	350G	500G	700G	12KG	17KG	25KG	
CC-Link IE TSN Class B	Communication cycle ^{*5}	MR-J5-_G(-RJ) MR-J5-_G-HS ^{*7}	31.25 μs, 62.5 μs, 125 μs, 250 μs, 500 μs, 1 ms, 1.5 ms, 2 ms, 2.5 ms, 3 ms, 3.5 ms, 4 ms, 4.5 ms, 5 ms, 5.5 ms, 6 ms, 6.5 ms, 7 ms, 7.5 ms, 8 ms													
		MR-J5-_G-LL	125 μs, 250 μs, 500 μs, 1 ms, 1.5 ms, 2 ms, 2.5 ms, 3 ms, 3.5 ms, 4 ms, 4.5 ms, 5 ms, 5.5 ms, 6 ms, 6.5 ms, 7 ms, 7.5 ms, 8 ms													
		Protocol version ^{*10}		1.0/2.0												
	Protocol version		1.0/2.0													
CC-Link IE TSN Class A ^{*9}	Communication cycle		500 μs to 500 ms													
	Protocol version		2.0													
CC-Link IE Field Network Basic ^{*8}	MR-J5-_G(-RJ) MR-J5-_G-HS		Supported													
	MR-J5-_G-LL		Not supported													
Communication function	USB		Connection to a personal computer or other devices (MR Configurator2-compatible)													
Encoder output pulses	MR-J5-_G(-RJ) MR-J5-_G-HS		Compatible (A/B/Z-phase pulse)													
	MR-J5-_G-LL		Not supported													
Analog monitor			Two channels													
Analog input	MR-J5-_G(-RJ) MR-J5-_G-HS		Not supported													
	MR-J5-_G-LL		3 points ^{*15}													
Digital I/O	MR-J5-_G(-RJ) MR-J5-_G-HS		DI 6 points, DO 3 points													
	MR-J5-_G-LL		DI 5 points, DO 3 points													
Fully closed loop control	MR-J5-_G(-RJ) MR-J5-_G-HS		Supported													
	MR-J5-_G-LL		Not supported													
Scale measurement function	MR-J5-_G(-RJ) MR-J5-_G-HS		Supported													
	MR-J5-_G-LL		Not supported													
Load-side encoder interface	MR-J5-_G		Mitsubishi Electric high-speed serial communication													
	MR-J5-_G-RJ MR-J5-_G-HS		Mitsubishi Electric high-speed serial communication/A/B/Z-phase differential input signal													
	MR-J5-_G-LL		Not supported													
Pressure control	MR-J5-_G(-RJ) MR-J5-_G-HS		Not supported													
	MR-J5-_G-LL	Pressure feedback voltage	0 V to 10 V													
		Pressure feedback cycle	One-point mode: 62.5 μs, three-point mode: 125 μs ^{*15}													
		Cyclic synchronous pressure mode	Basic mode, pressure model adaptive mode													
Protective functions			Overcurrent shut-off, regenerative overvoltage shut-off, overload shut-off (electronic thermal), servo motor overheat protection, encoder error protection, regenerative error protection, undervoltage protection, instantaneous power failure protection, overspeed protection, excessive error protection, magnetic pole detection protection, and linear servo control error protection													
Global standards	CE marking		LVD: EN 61800-5-1, EMC: EN 61800-3, MD: EN ISO 13849-1: 2015, EN 61800-5-2, EN IEC 62061													
	UKCA marking		LVD: BS EN 61800-5-1, EMC: BS EN IEC 61800-3, MD: BS EN ISO 13849-1:2015, BS EN 61800-5-2, BS EN IEC 62061													
	UL standard		UL 61800-5-1													
Structure (IP rating)			Natural cooling, open (IP20)				Force cooling, open (IP20)				Force cooling, open (IP20) ^{*6}		Force cooling, open (IP20) ^{*13*14}			
Close mounting ^{*2}	3-phase power supply input		Possible										Impossible			
	1-phase power supply input		Possible				Impossible		—							
Mass [kg]			0.8			1.0	1.4		2.2		3.7	6.2	12.7		18.1	

- *1 This value is applicable when all I/O signals are used. Reducing the number of I/O points decreases the current capacity.
- *2 If closely mounting the servo amplifiers, operate them at an ambient temperature of 0 °C to 45 °C or at 75 % or less of the effective load ratio.
- *3 The value in () is the rated current for the 1-phase power supply input.
- *4 If using 1-phase power supply in combination with the servo motor of 750 W or higher, operate the servo amplifier at 75 % or less of the effective load ratio.
- *5 The command communication cycle depends on the controller specifications and the number of the connected axes.
- *6 This does not apply to connectors.
- *7 The communication cycles of 31.25 μ s and 62.5 μ s can be used by servo amplifiers with firmware version A6 or later. The following communication cycles can be used by servo amplifiers with firmware version E0 or later: 1.5 ms, 2.5 ms, 3 ms, 3.5 ms, 4.5 ms, 5 ms, 5.5 ms, 6 ms, 6.5 ms, 7 ms, and 7.5 ms.
- *8 It is available on servo amplifiers with firmware version C0 or later.
- *9 CC-Link IE TSN Class A is available on servo amplifiers with firmware version D0 or later.
- *10 CC-Link IE TSN protocol version 2.0 is available on servo amplifiers with firmware version D0 or later.
- *11 Use an external dynamic brake for this servo amplifier. Otherwise, the servo amplifier coasts without a quick stop and may cause an accident. Ensure the safety in the entire system.
- *12 To make the servo amplifier comply with the SEMI-F47 standard, the external dynamic brake cannot be used. Do not assign DB (dynamic brake interlock) to [Pr. PD07] to [Pr. PD09]. If DB (dynamic brake interlock) is assigned, the servo amplifier turns to the servo-off state when an instantaneous power failure occurs.
- *13 The terminal block is excluded.
- *14 The IP rating of the standard certification is IP00.
- *15 The three-point mode is available on servo amplifiers manufactured in May 2025 or later with firmware version F0 or later.

400 V class

Model: MR-J5-			60G4	100G4	200G4	350G4	500G4	700G4	12KG4	17KG4	25KG4
Output	Voltage		3-phase 0 V AC to 480 V AC								
	Rated current [A]		1.6	2.8	5.5	8.6	14	17	32.0	41.0	63.0
Main circuit power supply input	Voltage/ Frequency	At AC input	3-phase 380 V AC to 480 V AC, 50 Hz/60 Hz								
	Rated current [A]		1.4	2.5	5.1	7.9	10.8	14.4	26.0	36.1	54.8
	Permissible voltage fluctuation	At AC input	3-phase 323 V AC to 528 V AC								
	Permissible frequency fluctuation		Within ±5 %								
	Power supply capacity [kVA]		Refer to "Power supply capacity and generated loss" in the following manual. 📖MR-J5 User's Manual (Hardware)								
	Inrush current [A]		Refer to "Inrush currents at power-on of main circuit and control circuit" in the following manual. 📖MR-J5 User's Manual (Hardware)								
Control circuit power supply input	Voltage/ Frequency	At AC input	1-phase 380 V AC to 480 V AC, 50 Hz/60 Hz								
	Rated current [A]		0.1				0.2				
	Permissible voltage fluctuation	At AC input	1-phase 323 V AC to 528 V AC								
	Permissible frequency fluctuation		Within ±5 %								
	Power consumption [W]		30				45				
	Inrush current [A]		Refer to "Inrush currents at power-on of main circuit and control circuit" in the following manual. 📖MR-J5 User's Manual (Hardware)								
Interface power supply	Voltage		24 V DC ±10 %								
	Current capacity [A]		0.3 (including CN8 connector signals) *1								
Control method			Sine-wave PWM control, current control method								
Dynamic brake			Built-in						External *7*8		
CC-Link IE TSN Class B	Communication cycle *2	MR-J5-_G4(-RJ)	31.25 μs, 62.5 μs, 125 μs, 250 μs, 500 μs, 1 ms, 1.5 ms, 2 ms, 2.5 ms, 3 ms, 3.5 ms, 4 ms, 4.5 ms, 5 ms, 5.5 ms, 6 ms, 6.5 ms, 7 ms, 7.5 ms, 8 ms								
		MR-J5-_G4-HS *6									
		MR-J5-_G4-LL	125 μs, 250 μs, 500 μs, 1 ms, 1.5 ms, 2 ms, 2.5 ms, 3 ms, 3.5 ms, 4 ms, 4.5 ms, 5 ms, 5.5 ms, 6 ms, 6.5 ms, 7 ms, 7.5 ms, 8 ms								
	Protocol version *5		1.0/2.0								
CC-Link IE TSN Class A *4	Communication cycle		500 μs to 500 ms								
	Protocol version		2.0								
CC-Link IE Field Network Basic *3	MR-J5-_G4(-RJ) MR-J5-_G4-HS		Supported								
	MR-J5-_G4-LL		Not supported								
Communication function	USB		Connection to a personal computer or other devices (MR Configurator2-compatible)								
Encoder output pulses	MR-J5-_G4(-RJ) MR-J5-_G4-HS		Compatible (A/B/Z-phase pulse)								
	MR-J5-_G4-LL		Not supported								
Analog monitor			Two channels								
Analog input	MR-J5-_G4(-RJ) MR-J5-_G4-HS		Not supported								
	MR-J5-_G4-LL		3 points *12								
Digital I/O	MR-J5-_G4(-RJ) MR-J5-_G4-HS		DI 6 points, DO 3 points								
	MR-J5-_G4-LL		DI 5 points, DO 3 points								
Fully closed loop control	MR-J5-_G4(-RJ) MR-J5-_G4-HS		Supported								
	MR-J5-_G4-LL		Not supported								

Model: MR-J5-			60G4	100G4	200G4	350G4	500G4	700G4	12KG4	17KG4	25KG4
Scale measurement function	MR-J5-_G4(-RJ) MR-J5-_G4-HS		Supported								
	MR-J5-_G4-LL		Not supported								
Load-side encoder interface	MR-J5-_G4		Mitsubishi Electric high-speed serial communication								
	MR-J5-_G4-RJ MR-J5-_G4-HS		Mitsubishi Electric high-speed serial communication/A/B/Z-phase differential input signal								
	MR-J5-_G4-LL		Not supported								
Pressure control	MR-J5-_G4(-RJ) MR-J5-_G4-HS		Not supported								
	MR-J5-_G4-LL	Pressure feedback voltage	0 V to 10 V								
		Pressure feedback cycle	One-point mode: 62.5 μs, three-point mode: 125 μs ^{*12}								
		Cyclic synchronous pressure mode	Basic mode, pressure model adaptive mode								
Protective functions			Overcurrent shut-off, regenerative overvoltage shut-off, overload shut-off (electronic thermal), servo motor overheat protection, encoder error protection, regenerative error protection, undervoltage protection, instantaneous power failure protection, overspeed protection, excessive error protection, magnetic pole detection protection, and linear servo control error protection								
Global standards	CE marking		LVD: EN 61800-5-1, EMC: EN 61800-3, MD: EN ISO 13849-1: 2015, EN 61800-5-2, EN IEC 62061								
	UKCA marking		LVD: BS EN 61800-5-1, EMC: BS EN IEC 61800-3, MD: BS EN ISO 13849-1:2015, BS EN 61800-5-2, BS EN IEC 62061								
	UL standard		UL 61800-5-1								
Structure (IP rating)			Natural cooling, open (IP20) ^{*9}		Force cooling, open (IP20) ^{*9}		Force cooling, open		Force cooling, open (IP20) ^{*10*11}		
Close mounting			Impossible								
Mass [kg]			1.6		2.2	2.3	5.2	5.4	12.7		18.1

*1 This value is applicable when all I/O signals are used. Reducing the number of I/O points decreases the current capacity.

*2 The command communication cycle depends on the controller specifications and the number of the connected axes.

*3 It is available on servo amplifiers with firmware version C0 or later.

*4 CC-Link IE TSN Class A is available on servo amplifiers with firmware version D0 or later.

*5 CC-Link IE TSN protocol version 2.0 is available on servo amplifiers with firmware version D0 or later.

*6 The following communication cycles can be used by servo amplifiers with firmware version E0 or later: 1.5 ms, 2.5 ms, 3 ms, 3.5 ms, 4.5 ms, 5 ms, 5.5 ms, 6 ms, 6.5 ms, 7 ms, and 7.5 ms.

*7 Use an external dynamic brake for this servo amplifier. Otherwise, the servo amplifier coasts without a quick stop and may cause an accident. Ensure the safety in the entire system.

*8 To make the servo amplifier comply with the SEMI-F47 standard, the external dynamic brake cannot be used. Do not assign DB (dynamic brake interlock) to [Pr. PD07] to [Pr. PD09]. If DB (dynamic brake interlock) is assigned, the servo amplifier turns to the servo-off state when an instantaneous power failure occurs.

*9 The IP rating of the MR-J5-60G4-HS to MR-J5-350G4-HS standard certification is IP00.

*10 The IP rating of the standard certification is IP00.

*11 The terminal block is excluded.

*12 The three-point mode is available on servo amplifiers manufactured in May 2025 or later with firmware version F0 or later.

MR-J5W2-_G

Model: MR-J5W2-			22G	44G	77G	1010G
Output	Voltage		3-phase 0 V AC to 240 V AC			
	Rated current (each axis) [A]		1.8	2.8	5.8	6.0
Main circuit power supply input	Voltage/ Frequency	At AC input	3-phase or 1-phase 200 V AC to 240 V AC, 50 Hz/60 Hz			3-phase 200 V AC to 240 V AC, 50 Hz/60 Hz
		At DC input	283 V DC to 340 V DC			
	Rated current [A] *3	At AC input	2.9 (5.0)	5.2 (9.0)	7.5 (13.0)	9.8
		At DC input	3.5	6.4	9.2	12.0
	Permissible voltage fluctuation	At AC input	3-phase or 1-phase 170 V AC to 264 V AC			3-phase 170 V AC to 264 V AC
		At DC input	241 V DC to 374 V DC			
	Permissible frequency fluctuation		Within ±5 %			
	Power supply capacity [kVA]		Refer to "Power supply capacity and generated loss" in the following manual. 📖MR-J5 User's Manual (Hardware)			
	Inrush current [A]		Refer to "Inrush currents at power-on of main circuit and control circuit" in the following manual. 📖MR-J5 User's Manual (Hardware)			
Control circuit power supply input	Voltage/ Frequency	At AC input	1-phase 200 V AC to 240 V AC, 50 Hz/60 Hz			
		At DC input	283 V DC to 340 V DC			
	Rated current [A]		0.4			
	Permissible voltage fluctuation	At AC input	1-phase 170 V AC to 264 V AC			
		At DC input	241 V DC to 374 V DC			
	Permissible frequency fluctuation		Within ±5 %			
	Power consumption [W]		55			
	Inrush current [A]		Refer to "Inrush currents at power-on of main circuit and control circuit" in the following manual. 📖MR-J5 User's Manual (Hardware)			
Interface power supply	Voltage		24 V DC ±10 %			
	Current capacity [A]		0.35 (including CN8 connector signals) *1			
Control method			Sine-wave PWM control, current control method			
Dynamic brake			Built-in			
CC-Link IE TSN Class B	Communication cycle *4*5		62.5 μs, 125 μs, 250 μs, 500 μs, 1 ms, 1.5 ms, 2 ms, 2.5 ms, 3 ms, 3.5 ms, 4 ms, 4.5 ms, 5 ms, 5.5 ms, 6 ms, 6.5 ms, 7 ms, 7.5 ms, 8 ms			
	Protocol version *7		1.0/2.0			
CC-Link IE TSN Class A *6	Communication cycle		500 μs to 500 ms			
	Protocol version		2.0			
CC-Link IE Field Network Basic			Not supported			
Communication function	USB		Connection to a personal computer or other devices (MR Configurator2-compatible)			
Encoder output pulses			Compatible (A/B-phase pulse)			
Analog monitor			Two channels			
Fully closed loop control			Supported			
Scale measurement function			Supported			
Load-side encoder interface			Mitsubishi Electric high-speed serial communication			
Protective functions			Overcurrent shut-off, regenerative overvoltage shut-off, overload shut-off (electronic thermal), servo motor overheat protection, encoder error protection, regenerative error protection, undervoltage protection, instantaneous power failure protection, overspeed protection, excessive error protection, magnetic pole detection protection, and linear servo control error protection			
Global standards	CE marking		LVD: EN 61800-5-1, EMC: EN 61800-3, MD: EN ISO 13849-1: 2015, EN 61800-5-2, EN IEC 62061			
	UKCA marking		LVD: BS EN 61800-5-1, EMC: BS EN IEC 61800-3, MD: BS EN ISO 13849-1:2015, BS EN 61800-5-2, BS EN IEC 62061			
	UL standard		UL 61800-5-1			
Structure (IP rating)			Natural cooling, open (IP20)	Force cooling, open (IP20)		
Close mounting *2			Possible			

Model: MR-J5W2-	22G	44G	77G	1010G
Mass [kg]	1.5		1.9	

- *1 This value is applicable when all I/O signals are used. Reducing the number of I/O points decreases the current capacity.
- *2 If closely mounting the servo amplifiers, operate them at an ambient temperature of 0 °C to 45 °C or at 75 % or less of the effective load ratio.
- *3 The value in () is the rated current for the 1-phase power supply input.
- *4 The command communication cycle depends on the controller specifications and the number of the connected axes.
- *5 The communication cycle of 62.5 μs can be used by servo amplifiers with firmware version A6 or later. The following communication cycles can be used by servo amplifiers with firmware version E0 or later: 1.5 ms, 2.5 ms, 3 ms, 3.5 ms, 4.5 ms, 5 ms, 5.5 ms, 6 ms, 6.5 ms, 7 ms, and 7.5 ms.
- *6 CC-Link IE TSN Class A is available on servo amplifiers with firmware version D0 or later.
- *7 CC-Link IE TSN protocol version 2.0 is available on servo amplifiers with firmware version D0 or later.


MR-J5W3-_G

Model: MR-J5W3-			222G	444G
Output	Voltage		3-phase 0 V AC to 240 V AC	
	Rated current (each axis) [A]		1.8	2.8
Main circuit power supply input	Voltage/ Frequency	At AC input	3-phase or 1-phase 200 V AC to 240 V AC, 50 Hz/60 Hz	
		At DC input	283 V DC to 340 V DC	
	Rated current [A] ^{*3}	At AC input	4.3 (7.5)	7.8 (13.5)
		At DC input	5.3	9.5
	Permissible voltage fluctuation	At AC input	3-phase or 1-phase 170 V AC to 264 V AC	
		At DC input	241 V DC to 374 V DC	
	Permissible frequency fluctuation		Within ±5 %	
	Power supply capacity [kVA]		Refer to "Power supply capacity and generated loss" in the following manual. 📖MR-J5 User's Manual (Hardware)	
Inrush current [A]		Refer to "Inrush currents at power-on of main circuit and control circuit" in the following manual. 📖MR-J5 User's Manual (Hardware)		
Control circuit power supply input	Voltage/ Frequency	At AC input	1-phase 200 V AC to 240 V AC, 50 Hz/60 Hz	
		At DC input	283 V DC to 340 V DC	
	Rated current [A]		0.4	
	Permissible voltage fluctuation	At AC input	1-phase 170 V AC to 264 V AC	
		At DC input	241 V DC to 374 V DC	
	Permissible frequency fluctuation		Within ±5 %	
	Power consumption [W]		55	
	Inrush current [A]		Refer to "Inrush currents at power-on of main circuit and control circuit" in the following manual. 📖MR-J5 User's Manual (Hardware)	
Interface power supply	Voltage		24 V DC ±10 %	
	Current capacity [A]		0.45 (including CN8 connector signals) ^{*1}	
Control method			Sine-wave PWM control, current control method	
Dynamic brake			Built-in	
CC-Link IE TSN Class B	Communication cycle ^{*4*8}		125 μs, 250 μs, 500 μs, 1 ms, 1.5 ms, 2 ms, 2.5 ms, 3 ms, 3.5 ms, 4 ms, 4.5 ms, 5 ms, 5.5 ms, 6 ms, 6.5 ms, 7 ms, 7.5 ms, 8 ms	
	Protocol version ^{*7}		1.0/2.0	
CC-Link IE TSN Class A ^{*6}	Communication cycle		500 μs to 500 ms	
	Protocol version		2.0	
CC-Link IE Field Network Basic			Not supported	
Communication function	USB		Connection to a personal computer or other devices (MR Configurator2-compatible)	
Encoder output pulses			Available only on axes A and B (A/B-phase pulse) ^{*5}	
Analog monitor			Two channels	
Fully closed loop control			Not supported	
Scale measurement function			Not supported	
Protective functions			Overcurrent shut-off, regenerative overvoltage shut-off, overload shut-off (electronic thermal), servo motor overheat protection, encoder error protection, regenerative error protection, undervoltage protection, instantaneous power failure protection, overspeed protection, excessive error protection, magnetic pole detection protection, and linear servo control error protection	
Global standards	CE marking		LVD: EN 61800-5-1, EMC: EN 61800-3, MD: EN ISO 13849-1: 2015, EN 61800-5-2, EN IEC 62061	
	UKCA marking		LVD: BS EN 61800-5-1, EMC: BS EN IEC 61800-3, MD: BS EN ISO 13849-1:2015, BS EN 61800-5-2, BS EN IEC 62061	
	UL standard		UL 61800-5-1	
Structure (IP rating)			Force cooling, open (IP20)	
Close mounting ^{*2}			Possible	
Mass [kg]			1.8	

- *1 This value is applicable when all I/O signals are used. Reducing the number of I/O points decreases the current capacity.
- *2 If closely mounting the servo amplifiers, operate them at an ambient temperature of 0 °C to 45 °C or at 75 % or less of the effective load ratio.
- *3 The value in () is the rated current for the 1-phase power supply input.
- *4 The command communication cycle depends on the controller specifications and the number of the connected axes.
- *5 If [Pr. PT01.1 Speed/acceleration/deceleration unit selection] is set to "1" (command unit/s) or if TPR1 (touch probe 1) to TPR3 (touch probe 3) are assigned to devices, A/B-phase pulses will not be outputted.
- *6 CC-Link IE TSN Class A is available on servo amplifiers with firmware version D0 or later.
- *7 CC-Link IE TSN protocol version 2.0 is available on servo amplifiers with firmware version D0 or later.
- *8 The following communication cycles can be used by servo amplifiers with firmware version E0 or later: 1.5 ms, 2.5 ms, 3 ms, 3.5 ms, 4.5 ms, 5 ms, 5.5 ms, 6 ms, 6.5 ms, 7 ms, and 7.5 ms.

Positioning mode

Point table method (CP)

Item		Description
Command interface		Object dictionary
Operation specifications		Positioning by specifying the point table number (255 points)
System		Signed absolute value command method
Position command input	Absolute value command method	Setting in the point table Setting range of feed length for one point: -2147483648 to 2147483647 [μm], -214748.3648 to 214748.3647 [inch], -2147483648 to 2147483647 [pulse], -360.000 to 360.000 [degree]
Speed command input		Set the servo motor speed in the point table. Set the acceleration/deceleration time constants and acceleration/deceleration in the point table. Set the S-pattern acceleration/deceleration time constant in [Pr. PT51]. The speed unit can be selected ([r/min], command unit/s) The acceleration/deceleration unit can be selected ([ms], command unit/s ²).
Torque limit		Setting by the servo parameter or object dictionary
Point table mode (pt)	One positioning operation	Point table number input method Perform one positioning operation based on the position command and speed command.
	Continuous positioning operation	Speed change operation (2nd gear to 255th gear)/ Continuous positioning operation (2 points to 255 points)/ Continuous operation to the point table selected at startup/ Continuous operation to the point table No. 1
JOG operation mode (jg)	JOG operation	Perform inching operation in the network communication function based on the speed command.
Homing mode (hm)		For information on the homing method, refer to "Homing mode (hm)" in the following manual.  MR-J5 User's Manual (Function)
Function on positioning operation		Absolute position detection/external limit switch/software position limit/positioning function to the home position, etc.

Functional safety

1

Restriction

- For the MR-J5W_-_G, the functional safety is available on servo amplifiers manufactured in November 2019 or later.
- Functional safety is not available for the MR-J5-_G4-HS in the default state. When using the functional safety, refer to the following manual and set the functional safety parameters.

MR-J5 User's Manual (Function)

Servo amplifier specifications

Item		Specifications		
		MR-J5-_G(4)(-LL)	MR-J5-_G(4)-RJ/MR-J5W_-_G	MR-J5-_G4-HS
Safety performance	Standards ^{*1}	EN ISO 13849-1:2015 Category 3 PL e, IEC 61508 SIL 3, EN IEC 62061 maximum SIL 3, EN 61800-5-2	EN ISO 13849-1:2015 Category 4 PL e, IEC 61508 SIL 3, EN IEC 62061 maximum SIL 3, EN 61800-5-2	EN ISO 13849-1:2015 Category 4 PL e, IEC 61508 SIL 3, EN IEC 62061 maximum SIL 3, EN 61800-5-2
	Mean time to dangerous failure (MTTFd)	MTTFd ≥ 100 [years] (314a)	MTTFd ≥ 100 [years] (750a)	MTTFd ≥ 100 [years] (300a)
	Diagnostic coverage (DC)	DC = Medium, 97.6 [%]	DC = Medium, 96.5 [%]	DC = Medium, 96.5 [%]
	Probability of dangerous Failure per Hour (PFH)	PFH = 6.4×10^{-9} [1/h]	PFH = 3×10^{-9} [1/h]	PFH = 7.7×10^{-9} [1/h]
	Mission time (T _M) ^{*2}	T _M = 20 [year]		

^{*1} When DI/O connection (CN8) is used, diagnosis by test pulses is required in order to satisfy Category 4 PL e, SIL 3.

^{*2} Although the special proof tests within the mission time of the safety sub-function is not needed to be performed, the suggested diagnostic test interval in IEC 61800-5-2: 2016 is at least one test per three months for Category 3 PL e, SIL 3.

Function specifications

Item			Specifications	
			MR-J5-_G(4)(-RJ) MR-J5-_G(4)-LL MR-J5W_-_G	MR-J5-_G4-HS
Safety sub-function *1	STO	Shut-off response time (STO input off → energy shut off)	8 ms or less (when an input device is used) 60 ms or less (when a network is used) *3*4*7	
	SS1	Deceleration delay time	0 ms to 60000 ms (set by functional safety parameters)	
	SS2	Deceleration delay time	0 ms to 60000 ms (set by functional safety parameters)	
	SOS	Observation position	0 rev to 1000 rev (set by functional safety parameters)	
	SBC	Shut-off response time	8 ms or less (when an input device is used) 60 ms or less (when a network is used) *3*4*7	
	SLS1/2/3/4	Observation speed	0 r/min (mm/s) to 10000 r/min (mm/s) (set by functional safety parameters) *5	
	SSM	Observation speed	0 r/min (mm/s) to 10000 r/min (mm/s) (set by functional safety parameters)	
	SDI	Direction monitor delay time	0 ms to 60000 ms (set by functional safety parameters)	
	SLI	Observation position	0 rev to 1000 rev (set by functional safety parameters)	
	SLT	Observation torque	-1000.0 % to 1000.0 % (set by functional safety parameters)	
I/O function	Input device	Number of inputs (double wiring)	1 point	3 points
		Permissible time for mismatched double inputs	0 ms to 60000 ms (set by functional safety parameters) *8	
		Noise elimination filter	1.000 ms to 32.000 ms (set by functional safety parameters)	
		Test pulse off time *6	Within 1 ms	
		Test pulse interval *6	250 ms to 1000 ms	
	Output device	Number of outputs (double wiring)	1 point	3 points
		Test pulse off time	0.500 ms to 2.000 ms (set by functional safety parameters)	
		Test pulse interval	Within 1 s	
	External wiring diagnostic output	Number of outputs (double wiring)	—	1 point
		Test pulse off time	—	1.000 ms/2.000 ms (set by functional safety parameters)
		Test pulse interval	—	Within 1 s
Safety communication function	Response time		250 ms *2	
	Transmission interval monitor time		16.0 ms to 1000.0 ms (set by functional safety parameters) (when a network is used) *7	
	Safety communication delay time		60 ms or less (when a network is used) *3*7	

*1 Available functions and safety levels differ depending on the combination of the servo amplifiers and the servo motors and the firmware version of the servo amplifier.

☞ Page 25 List of safety sub-function compatible units

*2 This value applies when the transmission interval monitor time is 64.0 ms or less.

*3 This value applies when the transmission interval monitor time is 32.0 ms or less.

*4 For the MR-J5-_G(4)-RJ and MR-J5-_G4-HS, connect to a network with a communication cycle of 125 μs or longer. For MR-J5W_-_G, connect to a network with a communication cycle of 500 μs or longer.

*5 The safety observation speed can be set separately.

*6 A test pulse is a signal which instantaneously turns off a signal to the servo amplifier at a constant period for external circuits to perform self-diagnosis.

*7 This specification applies when the safety sub-functions by a network connection is used.

*8 If it is set to 0 ms, no alarm occurs.

List of safety sub-function compatible units

Servo amplifier	Function achieving method (wiring destination)	Servo motor type	Safety sub-function (IEC/EN 61800-5-2)										
			STO	SS1		SS2 *3*12	SOS *3*12	SBC	SLS *3*12	SSM *3*12	SDI *3*12	SLI *3*12	SLT *12
				SS1-t	SS1-r *3*12	SS2-t, SS2-r							
MR-J5- _G(4)(-LL)	DI/O connection (CN8)	Servo motor with functional safety Rotary servo motor Linear servo motor Direct drive motor	Cat. 3PL e, SIL 3	— ^{*6}	—	—	—	—	—	—	—	—	—
MR-J5- _G(4)-RJ MR-J5-_G4- HS MR-J5W - _G ^{*4*10}	DI/O connection ^{*2} (CN8/CN3)	Servo motor with functional safety	Cat. 4PL e, SIL 3	Cat. 4PL e, SIL 3	Cat. 4PL e, SIL 3	Cat. 4PL e, SIL 3	Cat. 4PL e, SIL 3	Cat. 4PL e, SIL 3	Cat. 4PL e, SIL 3	Cat. 4PL e, SIL 3	Cat. 4PL e, SIL 3	Cat. 4PL e, SIL 3	Cat. 3PL d, SIL 2
		Rotary servo motor	Cat. 4PL e, SIL 3	Cat. 4PL e, SIL 3	Cat. 3PL d, SIL 2	—	—	Cat. 4PL e, SIL 3	Cat. 3PL d, SIL 2	Cat. 3PL d, SIL 2	Cat. 3PL d, SIL 2	—	Cat. 3PL d, SIL 2
		Linear servo motor	Cat. 4PL e, SIL 3	Cat. 4PL e, SIL 3	Cat. 3PL d, SIL 2	—	—	Cat. 4PL e, SIL 3	Cat. 3PL d, SIL 2	Cat. 3PL d, SIL 2	Cat. 3PL d, SIL 2	—	Cat. 3PL d, SIL 2
	Network connection ^{*1*5*7*8*9*11} (CN1A/CN1B)	Servo motor with functional safety	Cat. 4PL e, SIL 3	Cat. 4PL e, SIL 3	Cat. 4PL e, SIL 3	Cat. 4PL e, SIL 3	Cat. 4PL e, SIL 3	Cat. 4PL e, SIL 3	Cat. 4PL e, SIL 3	Cat. 4PL e, SIL 3	Cat. 4PL e, SIL 3	Cat. 4PL e, SIL 3	Cat. 3PL d, SIL 2
		Rotary servo motor	Cat. 4PL e, SIL 3	Cat. 4PL e, SIL 3	Cat. 3PL d, SIL 2	—	—	Cat. 4PL e, SIL 3	Cat. 3PL d, SIL 2	Cat. 3PL d, SIL 2	Cat. 3PL d, SIL 2	—	Cat. 3PL d, SIL 2

- *1 Combine the servo amplifier with a safety programmable controller R_SFCPU that has firmware version 20 or later.
- *2 The safety levels in the table apply if the safety sub-function control is performed by test pulse diagnosis using one of the following.
- MR-J5-_G4-HS
 - Safety programmable controller or a safety controller that complies with Category 4 PL e and SIL 3
- If the servo amplifiers are directly connected to emergency stop switches, safety switches, enabling switches, or other similar devices and test pulse diagnosis is not performed, the safety level Category 3 PL d, SIL 2 applies.
- *3 Fully closed loop control systems do not support SS1-r, SS2, SOS, SLS, SSM, SDI, and SLI.
- *4 STO can be set separately for each axis.
- *5 For MR-J5-_G(4)-RJ and MR-J5-_G4-HS, connect to a network with a communication cycle of 125 μs or longer. For MR-J5W -_G, connect to a network with a communication cycle of 500 μs or longer.
- *6 SS1-t is available when the MR-J3-D05 and a servo amplifier are combined.
- *7 The safety sub-function by a network connection cannot be used with CC-Link IE Field Network Basic.
- *8 When used with CC-Link IE TSN Class A, the safety sub-function by a network connection is available on servo amplifiers with firmware version D4 or later.
- *9 When the master-slave operation function is used, the safety sub-function by a network connection is not available.
- *10 SS1-r, SS2, SOS, SLS, SSM, SDI, SLI, and SLT are available on servo amplifiers with firmware version D8 or later.
- *11 For MR-J5W -_G, the safety sub-function by a network connection is available on servo amplifiers with firmware version D8 or later.
- *12 When using SS1-r, SS2, SOS, SLS, SSM, SDI, SLI, and SLT in CC-Link IE Field Network Basic, they are available on servo amplifiers with firmware version D8 or later.

Environment

Item		Operation	Transportation	Storage
Ambient temperature		0 °C to 60 °C (non-freezing) Class 3K3 (IEC 60721-3-3)	-25 °C to 70 °C (non-freezing) Class 2K12 (IEC 60721-3-2)	-25 °C to 70 °C (non-freezing) Class 1K4 (IEC 60721-3-1)
Ambient humidity		5 %RH to 95 %RH (non-condensing)	5 %RH to 95 %RH (non-condensing)	5 %RH to 95 %RH (non-condensing)
Ambience		Indoors (no direct sunlight); no corrosive gas, inflammable gas, oil mist or dust		
Altitude/atmospheric pressure		Altitude: 2000 m or less ^{*1}	Transportation conditions: Must be transported by ground/sea, or air at an atmospheric pressure of 700 hPa or more.	Atmospheric pressure: 700 hPa to 1060 hPa (equivalent to the altitude of -400 m to 3000 m.)
Vibration resistance		Under intermittent vibration: 10 Hz to 57 Hz, displacement amplitude 0.075 mm 57 Hz to 150 Hz, acceleration amplitude 9.8 m/s ² Class 3M1 (IEC 60721-3-3) Under continuous vibration (in each of the X, Y, and Z directions): 10 Hz to 55 Hz, acceleration amplitude 5.9 m/s ²	2 Hz to 9 Hz, displacement amplitude (half amplitude) 7.5 mm 9 Hz to 200 Hz, acceleration amplitude 20 m/s ² Class 2M3 (IEC 60721-3-2)	2 Hz to 9 Hz, displacement amplitude (half amplitude) 1.5 mm 9 Hz to 200 Hz, acceleration amplitude 5 m/s ² Class 1M2 (IEC 60721-3-1)
Dielectric strength	200 V class	Between main circuit (power supply/power terminal) and PE: 1500 V AC, 1 minute, 50 Hz/60 Hz		
	400 V class	Between main circuit (power supply/power terminal) and PE: 2000 V AC, 1 minute, 50 Hz/60 Hz		
Insulation resistance		Between main circuit (power supply/power terminal) and PE: 0.5 MΩ or more (with a 500 V DC megger)		

^{*1} Refer to "Restrictions when using this product at altitude exceeding 1000 m and up to 2000 m" in the following manual for using the product at altitude exceeding 1000 m.

 MR-J5 User's Manual (Hardware)

1.5 Function block diagram

The following shows the function block diagram of this servo amplifier.


MR-J5-_G_ (excluding MR-J5-_G_-HS_)

For the function block diagram of the cyclic synchronous pressure mode, refer to "Cyclic synchronous pressure mode (cspr)" in the following manual.

MR-J5 User's Manual (Function)

200 V class

7 kW or less

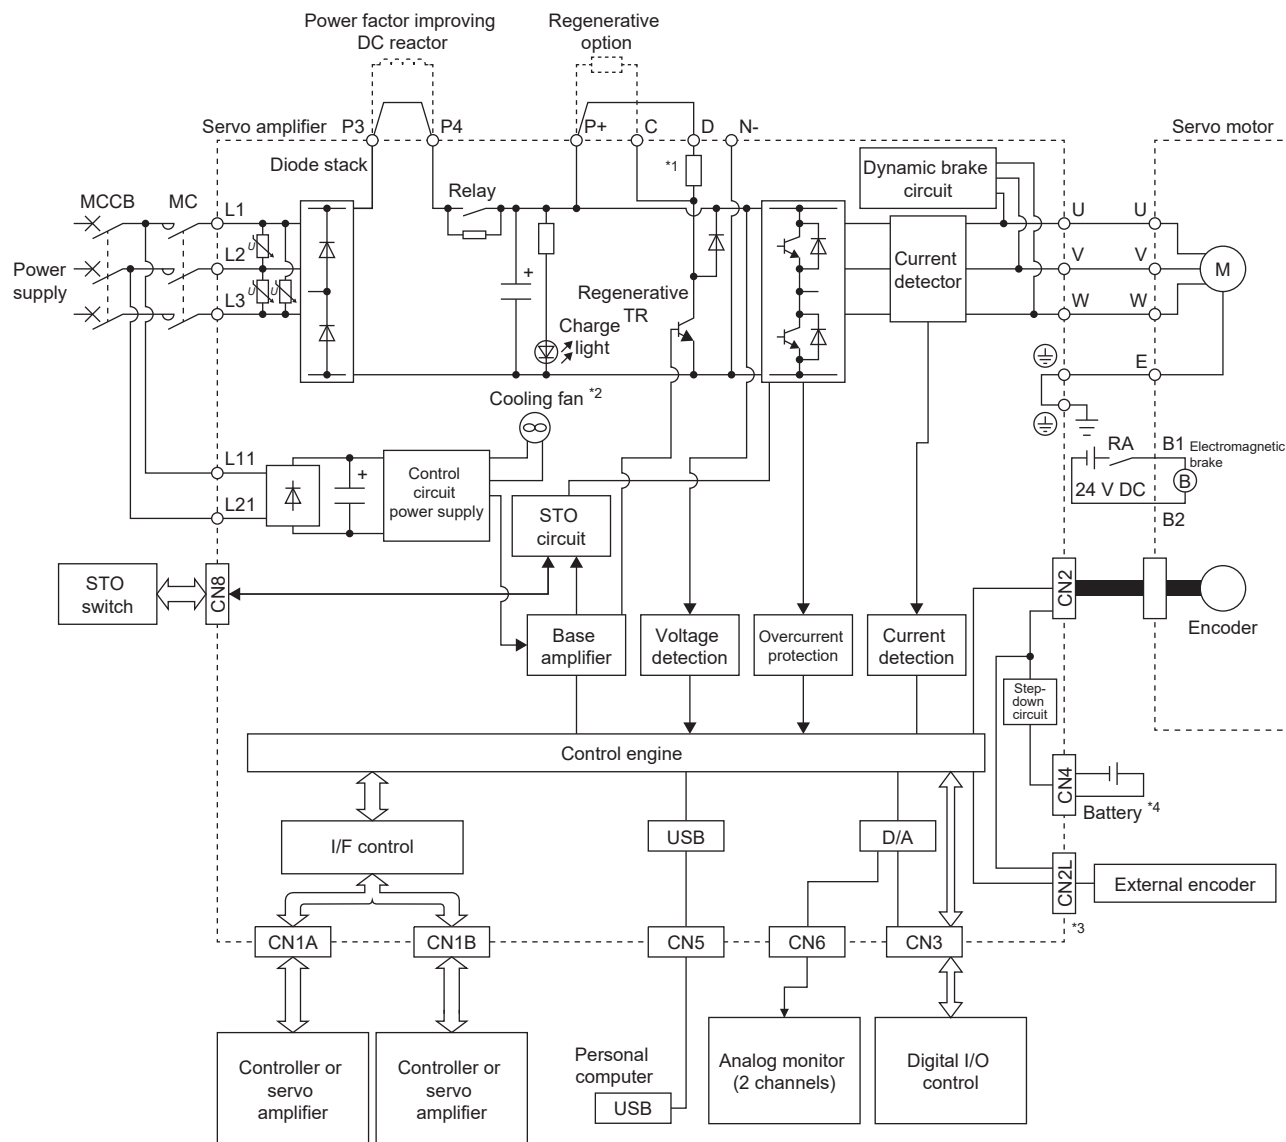


*1 The regenerative resistor is not built into the MR-J5-10G_.

*2 Servo amplifiers with the rated output symbol of 70 (MR-J5-70G_) or greater have a cooling fan.


*3 This is for the MR-J5-_G_-RJ servo amplifier. The MR-J5-_G_ servo amplifier and MR-J5-_G_-LL servo amplifier do not have a CN2L connector.

*4 To configure an absolute position detection system by using a direct drive motor, the battery is required. To configure the absolute position detection system by using the HK series servo motor, the battery is not required.

■12 kW or more

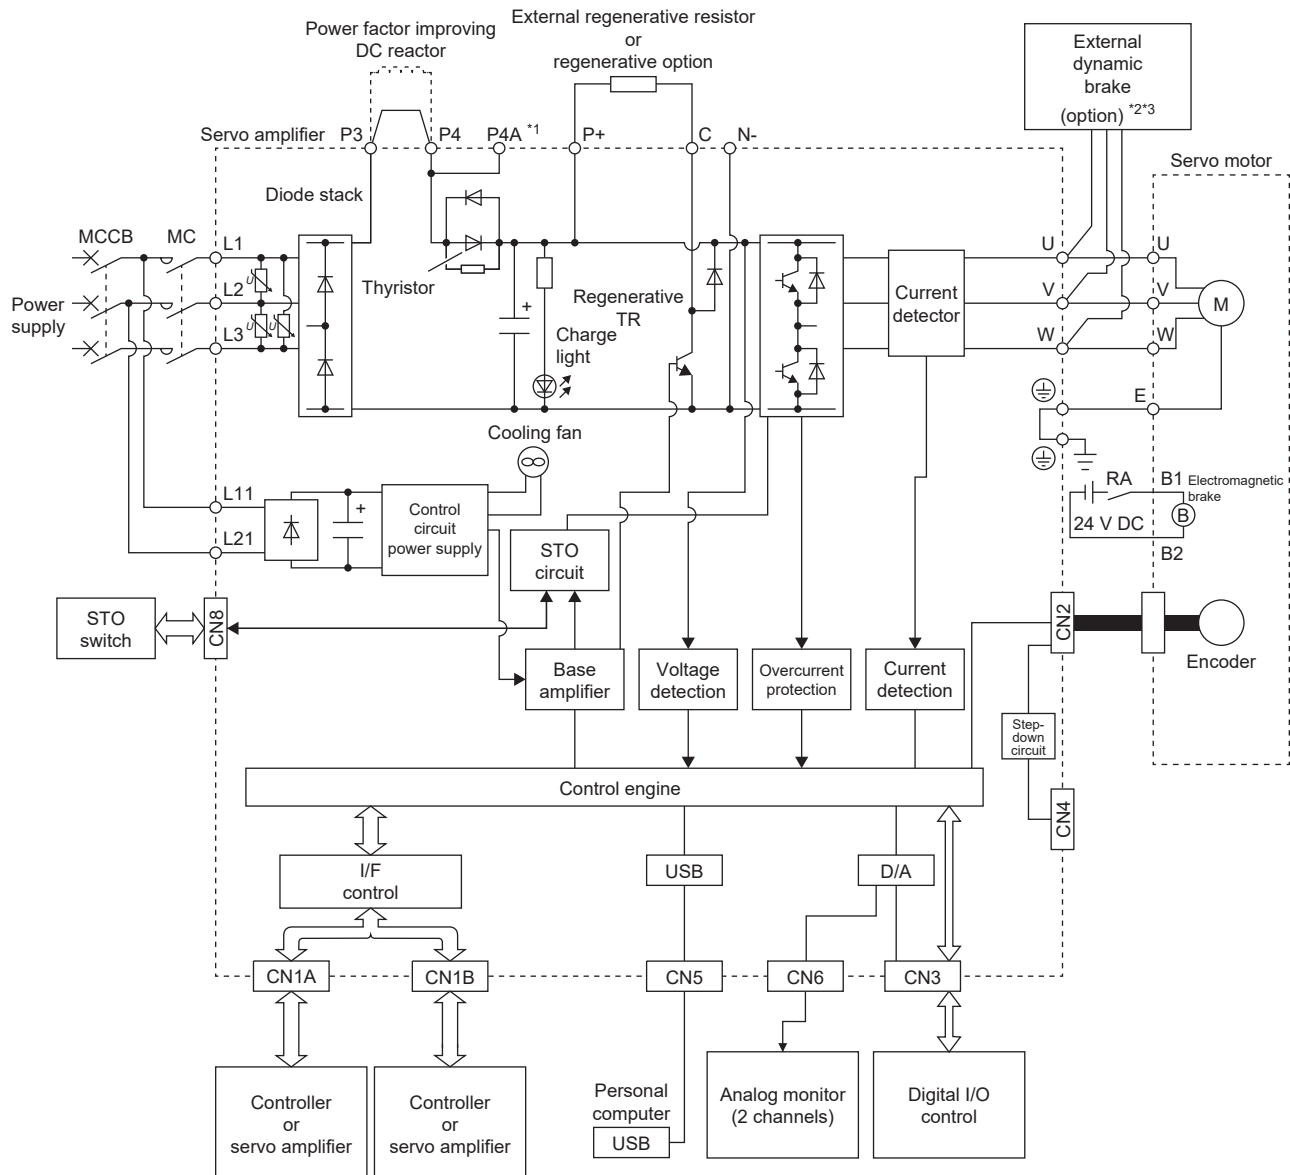


- *1 The P4A terminal is connected to the P4 terminal inside the servo amplifier. The terminal is used when a common bus connection using a servo amplifier as the main unit is constructed.
- *2 Use an external dynamic brake for this servo amplifier. Otherwise, the servo amplifier coasts without a quick stop after the occurrence of an alarm for which the deceleration stop is not executed. This may cause an accident. Ensure the safety in the entire system.
- *3 To make the servo amplifier comply with the SEMI-F47 standard, the external dynamic brake cannot be used. Do not assign DB (dynamic brake interlock) to [Pr. PD07] to [Pr. PD09]. If DB (dynamic brake interlock) is assigned, the servo amplifier turns to the servo-off state when an instantaneous power failure occurs.

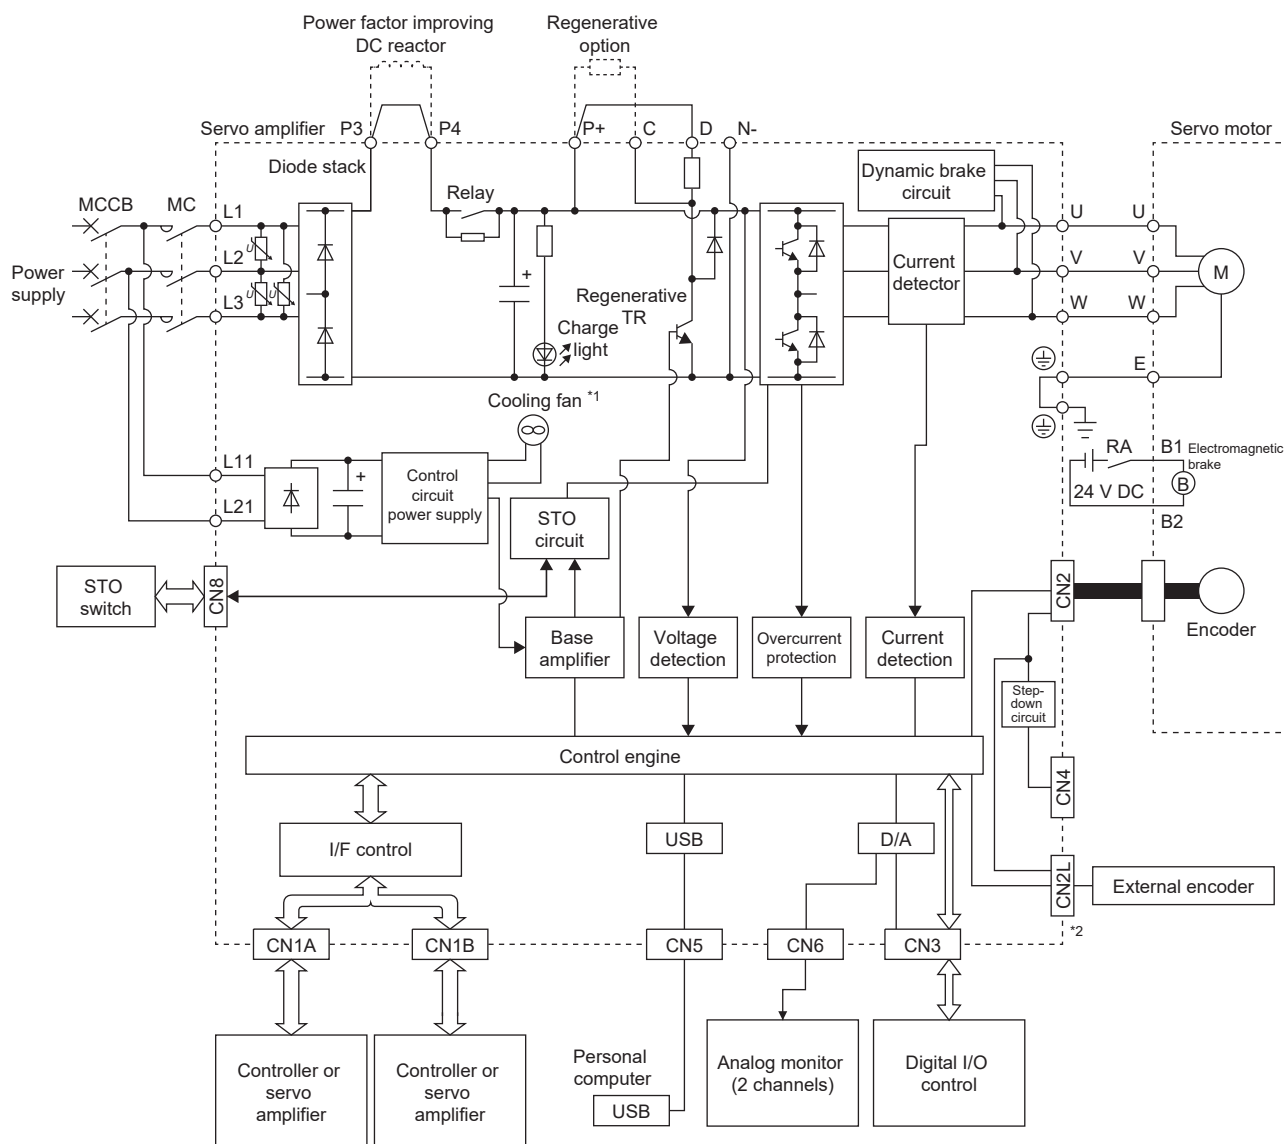

*1 Servo amplifiers with the rated output symbol of 200 (MR-J5-200G4_) or greater have a cooling fan.

*2 This is for the MR-J5-_G4-RJ servo amplifier. The MR-J5-_G4 servo amplifier and MR-J5-_G4-LL servo amplifier do not have a CN2L connector.


■12 kW or more

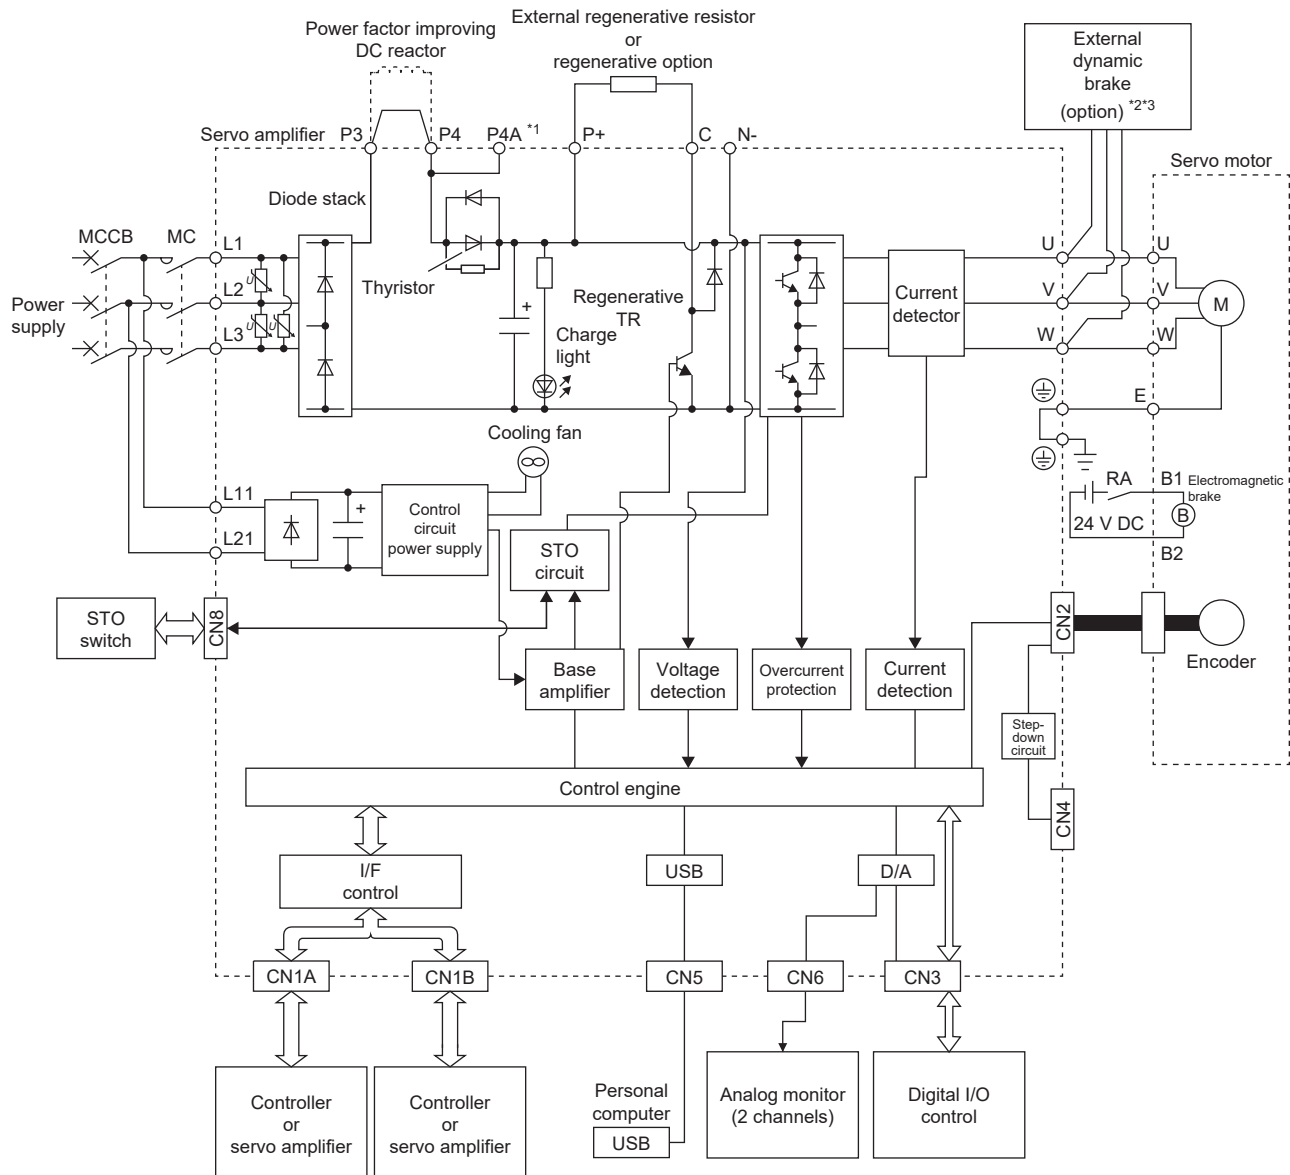

- *1 The P4A terminal is connected to the P4 terminal inside the servo amplifier. The terminal is used when a common bus connection using a servo amplifier as the main unit is constructed.
- *2 Use an external dynamic brake for this servo amplifier. Otherwise, the servo amplifier coasts without a quick stop after the occurrence of an alarm for which the deceleration stop is not executed. This may cause an accident. Ensure the safety in the entire system.
- *3 To make the servo amplifier comply with the SEMI-F47 standard, the external dynamic brake cannot be used. Do not assign DB (dynamic brake interlock) to [Pr. PD07] to [Pr. PD09]. If DB (dynamic brake interlock) is assigned, the servo amplifier turns to the servo-off state when an instantaneous power failure occurs.

200 V class

■12 kW or more

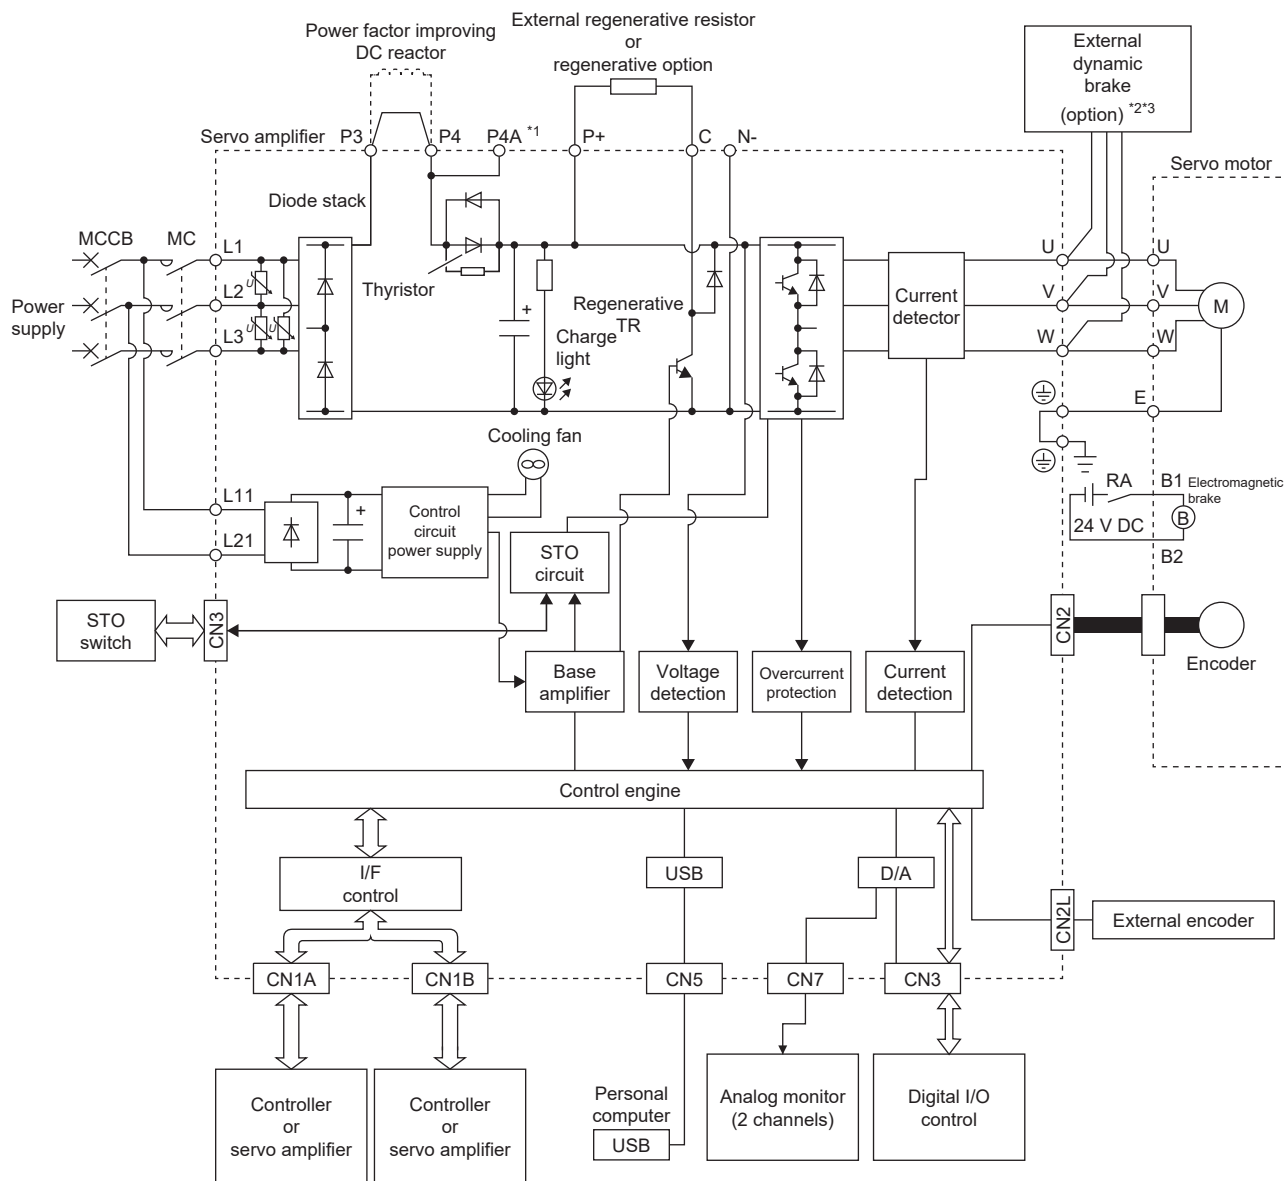


*1 The P4A terminal is connected to the P4 terminal inside the servo amplifier. The terminal is used when a common bus connection using a servo amplifier as the main unit is constructed.


*2 Use an external dynamic brake for this servo amplifier. Otherwise, the servo amplifier coasts without a quick stop after the occurrence of an alarm for which the deceleration stop is not executed. This may cause an accident. Ensure the safety in the entire system.

*3 To make the servo amplifier comply with the SEMI-F47 standard, the external dynamic brake cannot be used. Do not assign DB (dynamic brake interlock) to [Pr. PD07] to [Pr. PD09]. If DB (dynamic brake interlock) is assigned, the servo amplifier turns to the servo-off state when an instantaneous power failure occurs.

400 V class

■ 7 kW or less

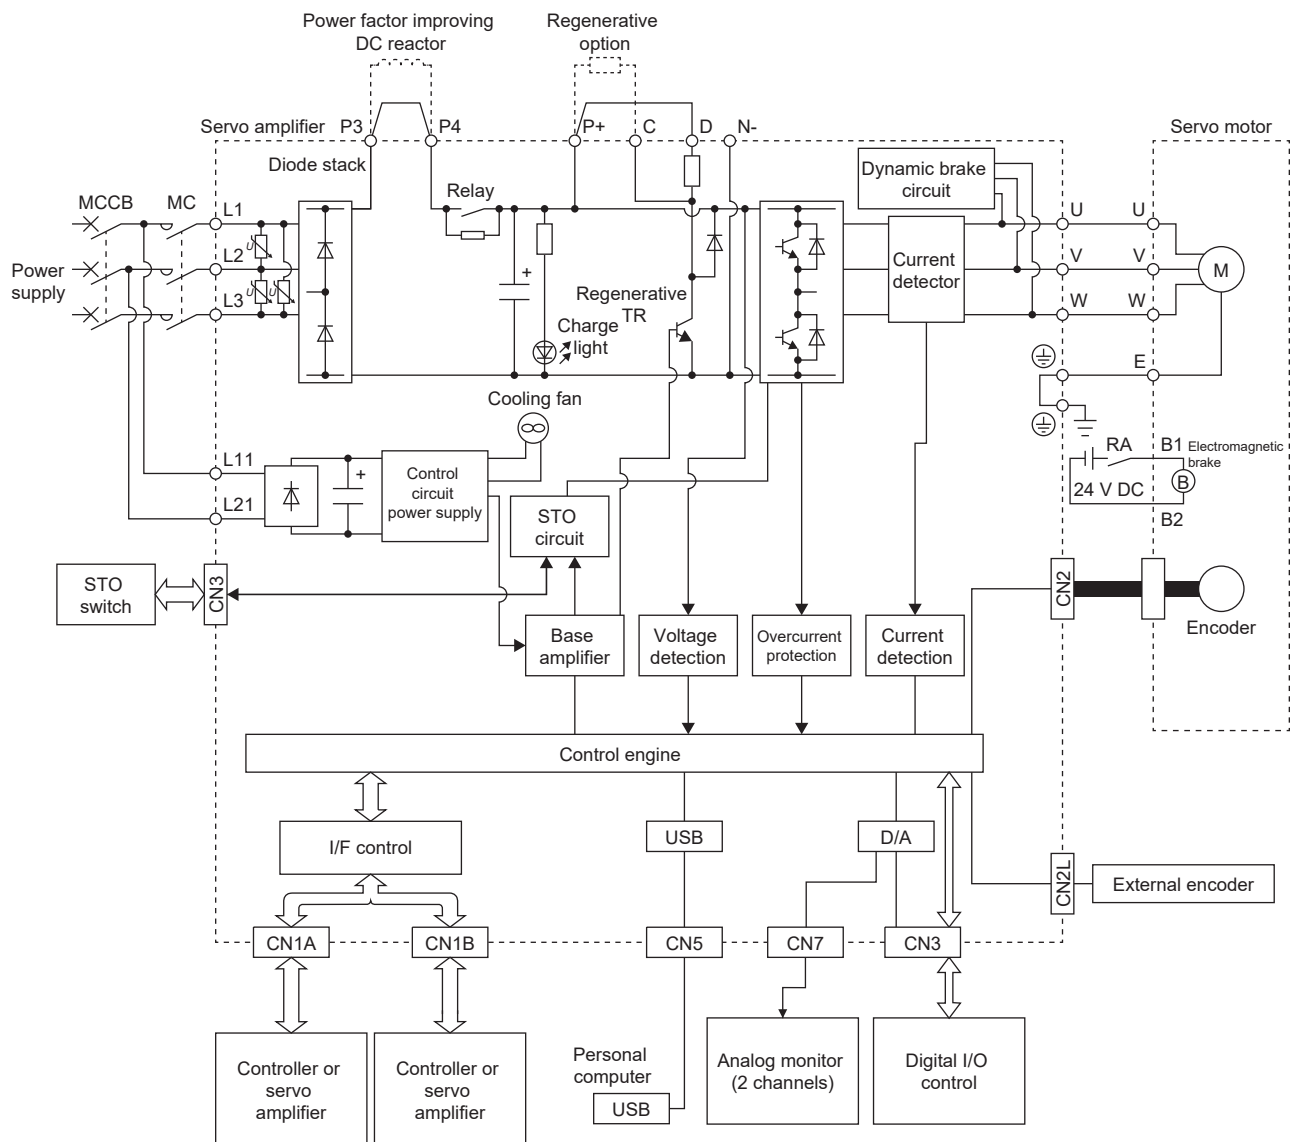


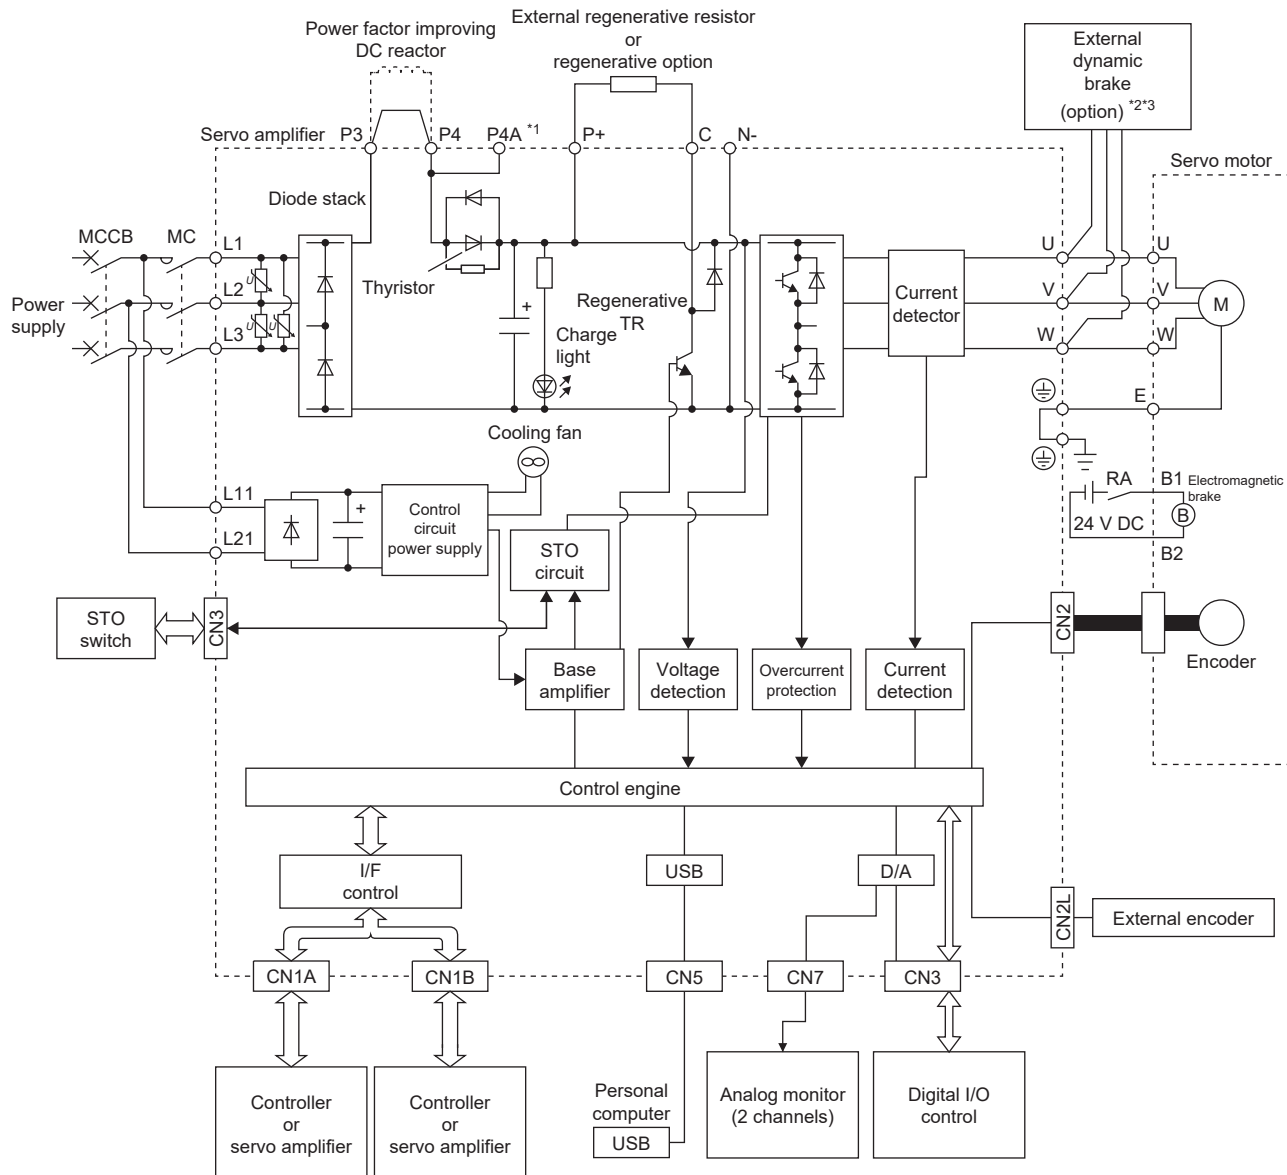

- *1 The P4A terminal is connected to the P4 terminal inside the servo amplifier. The terminal is used when a common bus connection using a servo amplifier as the main unit is constructed.
- *2 Use an external dynamic brake for this servo amplifier. Otherwise, the servo amplifier coasts without a quick stop after the occurrence of an alarm for which the deceleration stop is not executed. This may cause an accident. Ensure the safety in the entire system.
- *3 To make the servo amplifier comply with the SEMI-F47 standard, the external dynamic brake cannot be used. Do not assign DB (dynamic brake interlock) to [Pr. PD07] to [Pr. PD09]. If DB (dynamic brake interlock) is assigned, the servo amplifier turns to the servo-off state when an instantaneous power failure occurs.

MR-J5W_-_G

The following is an example using MR-J5W3-_G.

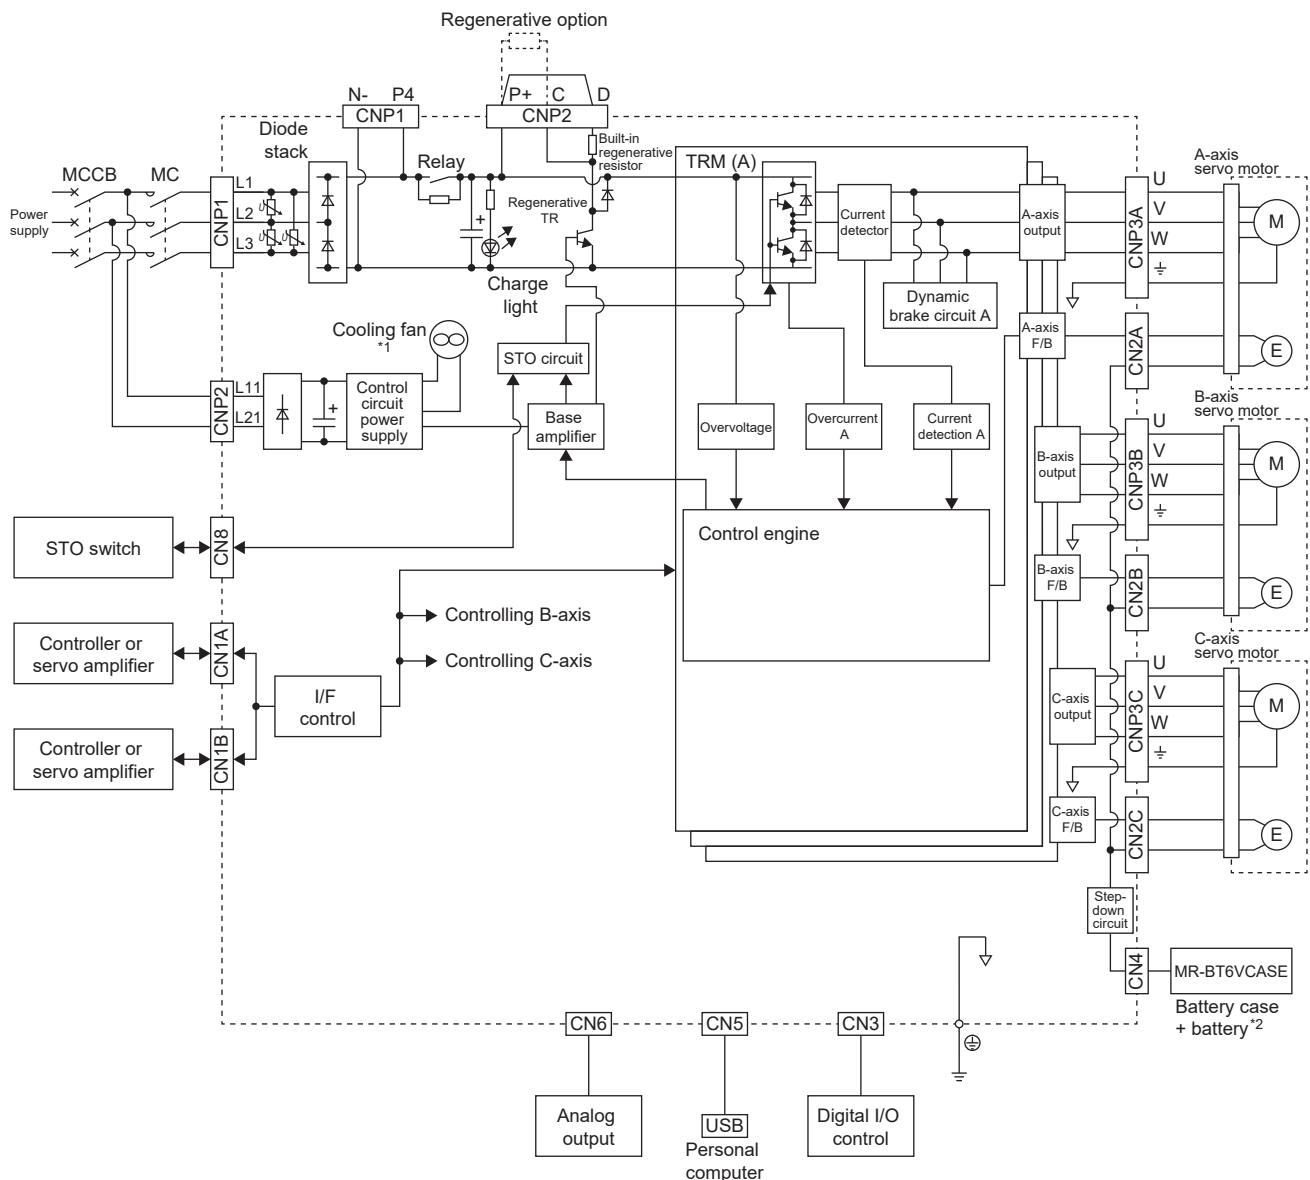

*1 The MR-J5W2-22G does not have a cooling fan.


*2 To configure an absolute position detection system by using a direct drive motor, the battery is required. To configure the absolute position detection system by using the HK series servo motor, the battery is not required.

1.6 Configuration including peripheral equipment

1

- To prevent a malfunction, do not connect these connectors to any network other than the specified network.
- Equipment other than the servo amplifier and servo motor is optional or a recommended product.

The following is an example using MR-J5-20G-RJ.

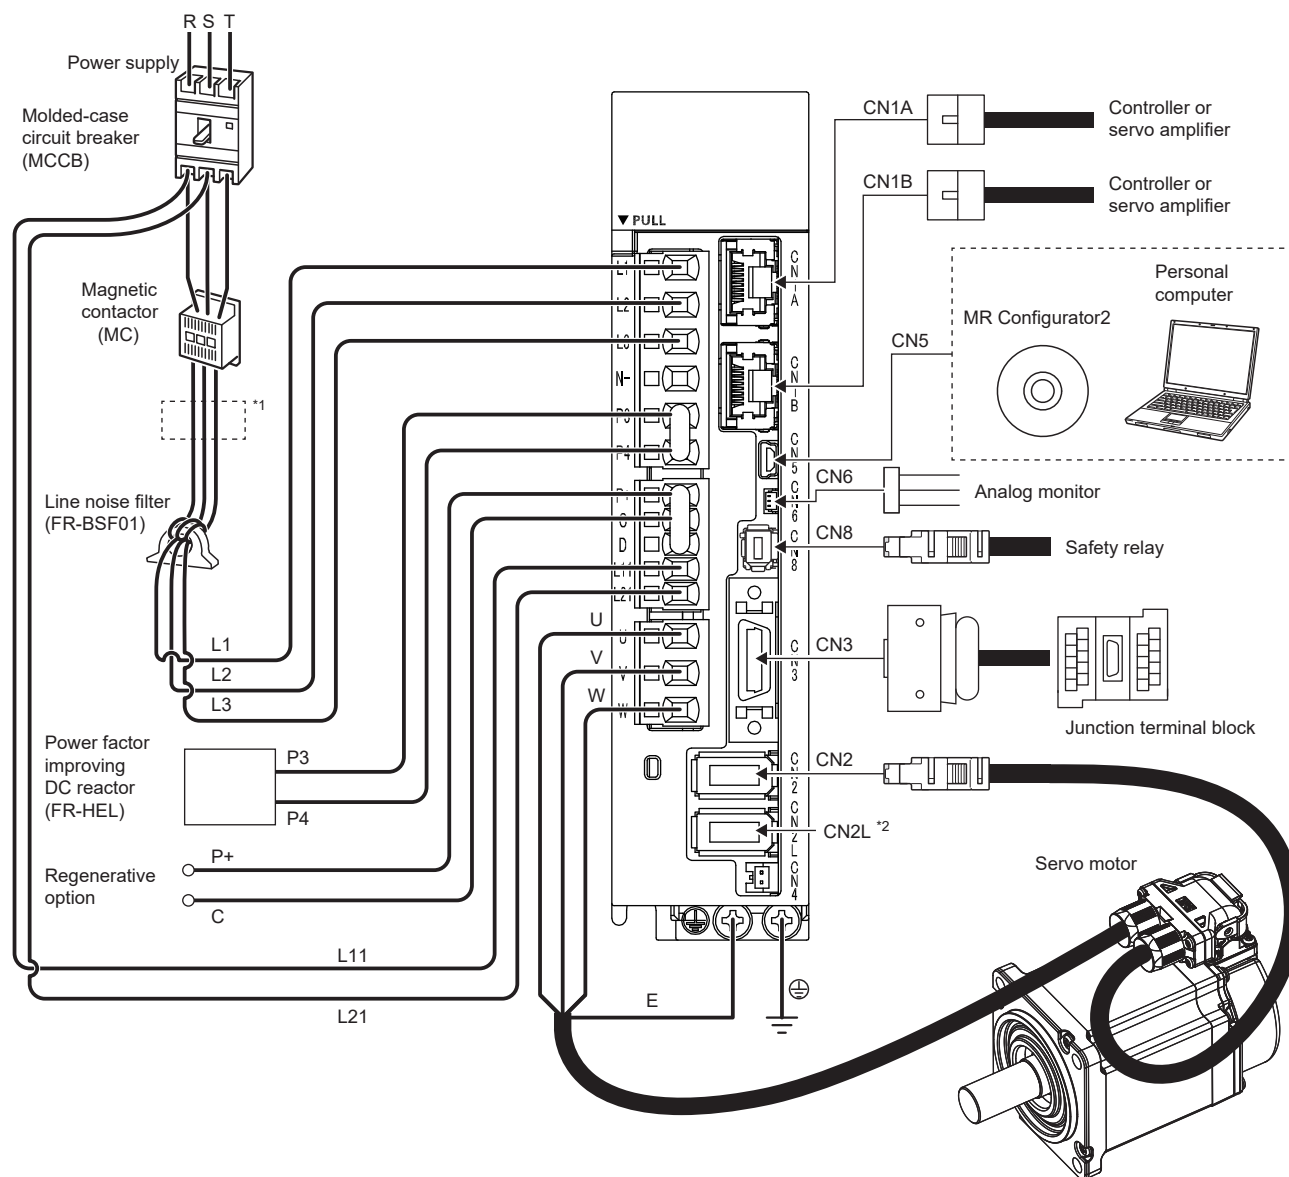

*1 The power factor improving AC reactor can also be used. In this case, the power factor improving DC reactor cannot be used.

*2 This is for the MR-J5_G-RJ servo amplifier. The MR-J5_G servo amplifier and MR-J5_G-LL servo amplifier do not have a CN2L connector. If using the MR-J5_G-RJ servo amplifier in a linear servo system or a fully closed loop system, connect an external encoder to this connector. Refer to the following for the compatible external encoders.

☞ Page 52 Parts identification

1.7 Special specifications

Servo amplifiers without dynamic brake (-ED/-RU/-HU)

Summary

This section describes the servo amplifiers without dynamic brake. Items not described in this section are equivalent to those for the MR-J5-_G(4)(-RJ), MR-J5-_G(4)-HS, and MR-J5W_-_G.

Specifications

The built-in dynamic brakes of the servo amplifiers with capacity of 7 kW or less are removed.

Take safety measures such as providing an extra circuit in case of an emergency stop, alarm, and servo motor stop at power supply shut-off.

When specific servo motors are being used, the electronic dynamic brake may be activated at an alarm occurrence.

For the specific servo motors, refer to "Precautions relating to the dynamic brake characteristics" in the following manual.

 MR-J5 User's Manual (Hardware)

Setting the following servo parameter disables the electronic dynamic brake.

Servo amplifier	Servo parameter	Setting value
MR-J5-_G(4)-ED MR-J5-_G(4)-RU MR-J5-_G4-HU MR-J5W_-_G-ED	[Pr. PF06.0]	2

When [Pr. PA04.3] is set to "2" (initial value), the forced stop deceleration function may be executed at an alarm occurrence.

Setting [Pr. PA04.3] to "0" disables the forced stop deceleration function.

Servo amplifiers without regenerative resistor (-PX/-HZ/-RN)

Summary

This section describes the servo amplifiers without regenerative resistor. Items not described in this section are equivalent to those for the MR-J5-_G(4), MR-J5-_G(4)-HS, and MR-J5-_G(4)-LL.

Specifications

The regenerative resistor, which is a standard accessory of servo amplifiers with a capacity of 12 kW to 25 kW, does not come with this type. When using this type of servo amplifier, use the regenerative option MR-RB5R, MR-RB9F, MR-RB9T, MR-RB5K-4, or MR-RB6K-4.

Special coating specification products (-EB/-RB/-HB)

Summary

This section describes the servo amplifiers with the special coating specification. Items not described in this section are equivalent to those for the MR-J5-_G(4)(-RJ), MR-J5-_G(4)-HS, and MR-J5W_-_G.

Specifications

■Special coating

Using the MR-J5 series in the atmosphere containing corrosive gases may result in malfunction due to corrosion over time. For the special coating specification products, coating material is applied on the areas of the printed circuit boards used in the servo amplifiers where it can be technically applied (excluding connectors and terminal boards) to improve the resistance to corrosive gases. In particular, use special coating specification products for applications that tend to be affected by corrosive gases, such as tire manufacturing and water treatment. The resistance to corrosive gases of the special coating specification products is enhanced, however, it does not guarantee the use of the products in such environments. Inspect the products regularly to check for any abnormalities.

■Corrosive gases

According to JIS C60721-3-3/IEC 60721-3-3, corrosive gases refer to sea salt, sulfur dioxide, hydrogen sulfide, chlorine, hydrogen chloride, hydrogen fluoride, ammonia, ozone, and nitrogen oxides.

The special coating specification products have improved resistance to corrosion in environments with corrosive gases. Compared to the standard products, enhanced resistance to corrosive gases has been confirmed in a representative model.

2 FUNCTION

2.1 Restrictions on MR-J5_-_G_

Restrictions on CC-Link IE TSN

Category	Detailed functions	Network communication cycle restrictions (minimum)				
		MR-J5-_G(4)	MR-J5-_G(4)-RJ MR-J5-_G4-HS	MR-J5-_G(4)-LL	MR-J5W2-_G	MR-J5W3-_G
Control mode	Profile position mode (pp)	250 μ s	250 μ s	250 μ s	500 μ s	500 μ s
	Profile velocity mode (pv)	250 μ s	250 μ s	250 μ s	500 μ s ^{*4}	500 μ s ^{*4}
	Profile torque mode (tq)	250 μ s	250 μ s	250 μ s	500 μ s ^{*4}	500 μ s ^{*4}
	Continuous operation to torque control mode (ct)	62.5 μ s	62.5 μ s	125 μ s	No restrictions	No restrictions
	Cyclic synchronous pressure mode (cspr)	Not used	Not used	125 μ s	Not used	Not used
	Point table method (When [Pr. PA01.0 Control mode selection] is set to "6")	250 μ s	250 μ s	Not used	500 μ s	500 μ s
Network	Master-slave operation function ^{*2}	125 μ s ^{*1}	125 μ s ^{*1}	Not used	Not used	Not used
Position detection	Fully closed loop control	125 μ s	125 μ s	Not used	250 μ s	Not used
	Scale measurement function	125 μ s	125 μ s	Not used	250 μ s	Not used
I/O, monitor	A/B/Z-phase output	No restrictions	No restrictions	Not used	125 μ s	250 μ s
	Touch probe	62.5 μ s	62.5 μ s	125 μ s	250 μ s	250 μ s
Functional safety	Safety sub-function (When [Pr. PSA01.0 Safety sub-function activation setting] is set to "1" (enabled))	Not used	125 μ s	Not used	125 μ s	No restrictions
	Safety sub-function control by network (When [Pr. PSA01.1 Input mode selection] is set to "1") ^{*2}	Not used	125 μ s	Not used	500 μ s ^{*3}	500 μ s ^{*3}
	Monitor the position/speed using a servo motor with functional safety. (When [Pr. PSA02.1 Position/Speed monitor setting] is set to "1")	Not used	125 μ s	Not used	500 μ s ^{*3}	500 μ s ^{*3}
—	Command unit selection function (When [Pr. PT01.2 Unit for position data] is set to "2" (degree))	250 μ s	250 μ s	250 μ s	500 μ s	500 μ s
	Command unit selection function (When [Pr. PT01.1 Speed/acceleration/deceleration unit selection] is set to "1" (command unit/s))	125 μ s	125 μ s	125 μ s	250 μ s	250 μ s

^{*1} When the master-slave operation function is used, the network communication cycle must be 125 μ s or 250 μ s.

^{*2} When the safety sub-function by a network is used (when [Pr. PSA01.1 Input mode selection] is set to "1"), the master-slave operation function is not available.

^{*3} Available on servo amplifiers with firmware version D8 or later.

^{*4} Available on servo amplifiers with firmware version E8 or later.

Restrictions on CC-Link IE TSN Class A

Item		Availability
Control mode	Cyclic synchronous position mode (csp)	Unavailable
	Cyclic synchronous velocity mode (csv)	Unavailable
	Cyclic synchronous torque mode (cst)	Unavailable
	Continuous operation to torque control mode (ct)	Unavailable
	Cyclic synchronous pressure mode (cspr)	Unavailable
Network	CC-Link IE TSN network synchronous communication function	Unavailable
	Motion mode (high-speed)	Unavailable
	Master-slave operation function	Unavailable
Functional safety	Safety sub-function by a network connection	Available *1

*1 Available on servo amplifiers with firmware version D4 or later.

Restrictions on CC-Link IE Field Network Basic

Item		Availability
Servo amplifier	2-axis servo amplifier	Unavailable
	3-axis servo amplifier	Unavailable
Control mode	Cyclic synchronous position mode (csp)	Unavailable
	Cyclic synchronous velocity mode (csv)	Unavailable
	Cyclic synchronous torque mode (cst)	Unavailable
	Continuous operation to torque control mode (ct)	Unavailable
	Cyclic synchronous pressure mode (cspr)	Unavailable
Network	Parameter automatic setting	Unavailable
	Master-slave operation function	Unavailable
Functional safety	SS2 (Safe stop 2)	Available *1
	SOS (Safe operating stop)	Available *1
	SLS (Safely-limited speed)	Available *1
	SSM (Safe speed monitor)	Available *1
	SDI (Safe direction)	Available *1
	SLI (Safely-limited increment)	Available *1
	SLT (Safely-limited torque)	Available *1
	Safety sub-function by a network connection	Unavailable

*1 Available on servo amplifiers with firmware version D8 or later.

2.2 Function list

The function list of this servo amplifier is shown in the following table. For details of the functions, refer to each section indicated in the detailed explanation field.

Control mode

Functions	Detailed functions	Description	Ver. ^{*1}	Detailed explanation
CiA 402 control mode	Cyclic synchronous position mode (csp) ^{*3 *4}	This function operates the servo motor in the cyclic synchronous position mode.	A0	Refer to "CONTROL MODE" in the following manual. MR-J5 User's Manual (Function)
	Cyclic synchronous velocity mode (csv) ^{*3 *4}	This function operates the servo motor in the cyclic synchronous velocity mode.	A0	
	Cyclic synchronous torque mode (cst) ^{*3 *4}	This function operates the servo motor in the cyclic synchronous torque mode.	A0	
	Profile position mode (pp)	This function operates the servo motor in the profile position mode.	A5	
	Profile velocity mode (pv) ^{*2}	This function operates the servo motor in the profile velocity mode.	A5	
	Profile torque mode (tq) ^{*2}	This function operates the servo motor in the profile torque mode.	A5	
	Homing mode (hm)	This function either operates the servo motor in the homing mode or performs homing.	A0	
Thrust/torque control	Continuous operation to torque control mode (ct) ^{*3 *4}	This function enables smooth switching to torque control from the position control mode or speed control mode without stopping the servo motor. This eliminates rapid change of speed and torque, contributing to reduction in load to the machine and high-quality product molding.	B0	
	Cyclic synchronous pressure mode (cspr) ^{*7}	This function inputs the analog signal from a pressure sensor (load cell) to the servo amplifier and controls the target pressure by giving a pressure command from the servo system controller, enabling the actual pressure to be kept constant even when the load fluctuates. This function is available for equipment that requires pressure control, such as a molding machine and bonder.	E4	
Point table method	Point table mode (pt) ^{*6}	This function operates the servo motor according to the setting values by selecting the point table with preset 255 points.	B8	
	JOG operation mode (jg) ^{*6}	This control mode enables desired positioning for machine adjustment and home positioning.	B8	
Slave axis control	Slave axis torque mode ^{*2 *3 *4 *5 *6}	This control mode drives servo motors by receiving a torque command from the master axis.	D0	Refer to "Master-slave operation function" in the following manual. MR-J5-G/MR-J5W-G User's Manual (Communication Function)
Test operation	Test operation mode	This function requires MR Configurator2 for JOG operation, positioning operation, motor-less operation, DO forced output, and program operation.	A0	Page 75 Test operation

^{*1} "Ver." indicates the supported firmware version of the servo amplifier. The functions are available on servo amplifiers with the indicated firmware version or later.

^{*2} For multi-axis servo amplifiers, this control mode is available on servo amplifiers with firmware version E8 or later.

^{*3} This control mode is not available for CC-Link IE Field Network Basic.

^{*4} This control mode is not available for CC-Link IE TSN Class A.

^{*5} When the safety sub-function by a network is used (when [Pr. PSA01.1 Input mode selection] is set to "1"), this control mode is not available.

^{*6} This control mode is not available for the MR-J5- _G_-LL servo amplifier.

^{*7} This control mode is available only for the MR-J5- _G_-LL servo amplifier.

Drive motor

Functions	Detailed functions	Description	Ver. *1	Detailed explanation
Servo motor	Linear servo motor	Using the linear servo motor and linear encoder enables the linear servo system to be configured.	A0	Refer to "USING A LINEAR SERVO MOTOR" in the following manual. MR-J5 User's Manual (Hardware)
	Direct drive motor *2	Using this function enables the direct drive servo system to be configured to drive the direct drive motor.	A0	Refer to "USING A DIRECT DRIVE MOTOR" in the following manual. MR-J5 User's Manual (Hardware)
Encoder	High-resolution encoder	A 67108864 pulses/rev high-resolution encoder is used for the encoder of the rotary servo motor.	A0	—
	Batteryless absolute position encoder	The rotation position of the servo motor can be backed up without the battery. Using the servo motor with this encoder enables an absolute value detection system to be configured without battery.	A0	Refer to "ABSOLUTE POSITION DETECTION SYSTEM" in the following manual. MR-J5 User's Manual (Hardware)

*1 "Ver." indicates the supported firmware version of the servo amplifier. The functions are available on servo amplifiers with the indicated firmware version or later.

*2 This servo motor is not available for the MR-J5-_G_-LL servo amplifier.

Network

Functions	Detailed functions	Description	Ver. *1	Detailed explanation
Open network (CC-Link line)	CC-Link IE TSN	This function connects the servo amplifier to equipment such as a controller through CC-Link IE TSN.	A0	MR-J5-G/MR-J5W-G User's Manual (Communication Function)
	CC-Link IE Field Network Basic *6	This function connects the servo amplifier to equipment such as a controller through CC-Link IE Field Network Basic.	C0	
Common protocol	SLMP	This function supports SLMP (SeamLess Message Protocol). Servo parameter settings and monitoring are available.	A0	
Remote maintenance	Parameter automatic setting *2	This function transmits settings for servo parameters, etc. from the controller.	A0	Refer to "Firmware update" in the following manual. MR-J5 User's Manual (Function)
	Firmware update	This function updates the firmware of the servo amplifier.	A0	
Synchronization	Master-slave operation function *2 *3 *4 *5 *6	This function transmits the torque of the master axis to a slave axis through driver communication, and controls and operates the slave axis using the torque as a command.	D0	Refer to "Master-slave operation function" in the following manual. MR-J5-G/MR-J5W-G User's Manual (Communication Function)

*1 "Ver." indicates the supported firmware version of the servo amplifier. The functions are available on servo amplifiers with the indicated firmware version or later.

*2 This function cannot be used for CC-Link IE Field Network Basic.

*3 This function is not available for multi-axis servo amplifiers.

*4 This function is not available for CC-Link IE TSN Class A.

*5 When the safety sub-function by a network is used (when [Pr. PSA01.1 Input mode selection] is set to "1"), this function is not available.

*6 This function is not available for the MR-J5-_G_-LL servo amplifier.

Position detection

Functions	Detailed functions	Description	Ver. *1	Detailed explanation
Control method	Semi closed loop system	This function uses the servo motor encoder to configure semi closed loop systems.	A0	—
	Fully closed loop system *2	This function uses the load-side encoder to configure fully closed loop systems.	A5	Refer to "USING A FULLY CLOSED LOOP SYSTEM" in the following manual. MR-J5 User's Manual (Hardware)
	Scale measurement function *2	This function connects the scale measurement encoder in the state of the semi closed loop control to transmit the position information of the scale measurement encoder to the controller.	A5	Refer to "Scale measurement function" in the following manual. MR-J5 User's Manual (Function)
Absolute position	Absolute position detection system	This function performs homing once, and thereafter does not require homing at every power-on.	A0	Refer to "ABSOLUTE POSITION DETECTION SYSTEM" in the following manual. MR-J5 User's Manual (Hardware)

*1 "Ver." indicates the supported firmware version of the servo amplifier. The functions are available on servo amplifiers with the indicated firmware version or later.

*2 This function is not available for the MR-J5-_G_-LL servo amplifier.

Operation function

Functions	Detailed functions	Description	Ver. *1	Detailed explanation
Stop function	Quick Stop	This function stops the servo motor with a specified method and switches to the servo-off status.	A0	Refer to "Quick stop" in the following manual. MR-J5 User's Manual (Function)
	Halt	This function stops the servo motor while the servo-on status is maintained.	A0	Refer to "Halt" in the following manual. MR-J5 User's Manual (Function)
	Stroke limit function	This function uses LSP (Forward rotation stroke end) and LSN (Reverse rotation stroke end) to limit the travel interval of the servo motor.	A0	Refer to "Stroke limit function" in the following manual. MR-J5 User's Manual (Function)
	Software position limit	This function uses servo parameters to limit the travel intervals by address. A function equivalent to the stroke limit function can be set with the servo parameter.	A0	Refer to "Software position limit" in the following manual. MR-J5 User's Manual (Function)
Command generation	Rotation/travel direction selection	This function sets the rotation direction of the servo motor without changing the command polarity.	A0	Refer to "Rotation/travel direction selection" in the following manual. MR-J5 User's Manual (Function)
	Electronic gear	This function performs positioning control with the value obtained by multiplying the position command from the upper controller by a set electronic gear ratio.	A0	Refer to "Electronic gear function" in the following manual. MR-J5 User's Manual (Function)
	Acceleration/deceleration function	This function enables smooth acceleration/deceleration.	A0	Refer to "Acceleration/deceleration function" in the following manual. MR-J5 User's Manual (Function)
	S-pattern acceleration/deceleration time constant	This function performs smooth acceleration and deceleration.	A5	Refer to "S-pattern acceleration/deceleration time constant" in the following manual. MR-J5 User's Manual (Function)
	Torque limit	This function limits the servo motor torque.	A0	Refer to "Torque limit" in the following manual. MR-J5 User's Manual (Function)
	Speed limit	This function limits the servo motor speed in the torque control mode.	A0	Refer to "Speed limit" in the following manual. MR-J5 User's Manual (Function)
	Command offset	This function compensates the position/speed/torque/pressure commands by adding a desired amount of offset to the commands.	A5	Refer to "Command offset" in the following manual. MR-J5 User's Manual (Function)

*1 "Ver." indicates the supported firmware version of the servo amplifier. The functions are available on servo amplifiers with the indicated firmware version or later.

Positioning function

Functions	Detailed functions	Description	Ver. *1	Detailed explanation
Override function	Override function	This function can change the servo motor speed via communication. The value can be changed to 0% to 360% of the set speed.	D4	Refer to "Override function" in the following manual. MR-J5 User's Manual (Function)
Absolute position	Infinite feed function	In an absolute position detection system, even if the servo motor rotates 32768 rev or more in the same direction, [AL. 0E3.1 Multi-revolution counter travel distance exceeded warning] will not occur and the home position will not be erased. Therefore, the current position will be restored after the power is cycled. When this function is not used, if the servo motor rotates 32768 rev or more in the same direction, [AL. 0E3.1] will occur and the home position will be erased.	B6	Refer to "Infinite feed function" in the following manual. MR-J5 User's Manual (Function)

*1 "Ver." indicates the supported firmware version of the servo amplifier. The functions are available on servo amplifiers with the indicated firmware version or later.

Control function

Functions	Detailed functions	Description	Ver. *1	Detailed explanation
Vibration suppression	Advanced vibration suppression control II	This function suppresses vibration and residual vibration at an arm end.	A0	Refer to "Advanced vibration suppression control II" in the following manual. MR-J5 User's Manual (Adjustment)
	Machine resonance suppression filter	This function decreases the gain of the specific frequency to suppress the resonance of the mechanical system.	A0	Refer to "Machine resonance suppression filter" in the following manual. MR-J5 User's Manual (Adjustment)
	Shaft resonance suppression filter	When driving the servo motor with a load mounted to the servo motor shaft, resonance due to shaft torsion may generate high frequency mechanical vibration. The shaft resonance suppression filter suppresses this vibration.	A0	Refer to "Shaft resonance suppression filter" in the following manual. MR-J5 User's Manual (Adjustment)
	Robust filter	This function improves a disturbance response when a response performance cannot be increased because of a large load to motor inertia ratio, such as a roll feed axis.	A0	Refer to "Robust filter" in the following manual. MR-J5 User's Manual (Adjustment)
	Slight vibration suppression control	This function suppresses vibration of ± 1 pulse generated at each servo motor stop.	A0	Refer to "SLIGHT VIBRATION SUPPRESSION CONTROL" in the following manual. MR-J5 User's Manual (Adjustment)
Tracking control	Lost motion compensation function	This function reduces the response delay generated when the machine moving direction is reversed.	A0	Refer to "Lost motion compensation function" in the following manual. MR-J5 User's Manual (Adjustment)
	Super trace control *2	This function reduces the droop pulses at the rated speed and at the uniform acceleration/ deceleration to almost zero.	A5	Refer to "Super trace control" in the following manual. MR-J5 User's Manual (Adjustment)
	Path tracking model adaptive control	This function reduces tracking errors in reciprocation.	A0	Refer to "Path tracking model adaptive control" in the following manual. MR-J5 User's Manual (Adjustment)

*1 "Ver." indicates the supported firmware version of the servo amplifier. The functions are available on servo amplifiers with the indicated firmware version or later.

*2 This function is not available for the MR-J5-_G_-LL servo amplifier.

Adjustment function

Functions	Detailed functions	Description	Ver. *1	Detailed explanation
Automatic adjustment	Quick tuning	This function automatically adjusts the gain at servo-on in a short time without acceleration/ deceleration operation of the servo motor. Response without overshoot is possible, saving gain adjustment time.	A0	Refer to "Quick tuning" in the following manual. MR-J5 User's Manual (Adjustment)
	Auto tuning	This function automatically adjusts the gain to an optimum value even if the load applied to the servo motor shaft varies.	A0	Refer to "ADJUSTMENT FUNCTION TYPES" in the following manual. MR-J5 User's Manual (Adjustment)
	One-touch tuning	Gain adjustment is performed with this function just by pressing buttons on the servo amplifier or by clicking a button once on MR Configurator2. One-touch tuning can also be performed via a network.	A0	Refer to "One-touch tuning" in the following manual. MR-J5 User's Manual (Adjustment)
Custom adjustment	Model adaptive control	This function enables control according to the ideal model that is both stable and highly responsive. This is a two-degrees-of-freedom model and can adjust responses to commands and disturbances separately. This function can also be disabled.	A0	Refer to "MODEL ADAPTIVE CONTROL" in the following manual. MR-J5 User's Manual (Adjustment)
	Pressure model adaptive control *2	This function enables stable and highly responsive pressure control according to the ideal model in which the characteristics of the object to be pressured are incorporated.	E4	Refer to "PRESSURE MODEL ADAPTIVE CONTROL" in the following manual. MR-J5 User's Manual (Adjustment)
	Gain switching function	This function switches gains during rotation and during stop, and uses an input device to switch gains during operation. It supports the gain switching by rotation direction and the 3-step gain switching. Therefore, more detailed gain switching is available.	A0	Refer to "GAIN SWITCHING FUNCTION" in the following manual. MR-J5 User's Manual (Adjustment)
Adjustment support	Machine analyzer	This function analyzes the frequency characteristic of the mechanical system by simply connecting the servo amplifier with an MR Configurator2 installed personal computer.	A0	Refer to "Adjustment functions available in combination with MR Configurator2" in the following manual. MR-J5 User's Manual (Adjustment)

*1 "Ver." indicates the supported firmware version of the servo amplifier. The functions are available on servo amplifiers with the indicated firmware version or later.

*2 This function is available only for the MR-J5-_G_-LL servo amplifier.

I/O, monitor

Functions	Detailed functions	Description	Ver. *1	Detailed explanation
DI/DO	Input signal selection (device selection)	This function assigns input devices such as LSP (Forward rotation stroke end) to certain pins of the connector.	A0	Refer to "Assigning I/O devices" in the following manual. MR-J5 User's Manual (Function)
	Output signal selection (device setting)	This function assigns output devices such as MBR (Electromagnetic brake interlock) to certain pins of the connector.	A0	
	Output signal (DO) forced output	This function forcibly switches the output signals on and off regardless of the servo status. Use this function for purposes such as checking output signal wiring.	A0	Page 81 Output signal (DO) forced output
	A/B/Z-phase output *3	This function outputs the positions of the encoder and linear encoder in the A/B/Z-phase signal.	A0	Refer to "A/B/Z-phase pulse output function" in the following manual. MR-J5 User's Manual (Function)
LED	Status display	This function shows the servo status on the 7-segment LED display.	A0	Page 59 Switch setting and display of the servo amplifier
Analog I/O	High-resolution analog input *3	When using the MR-J5- _G _LL, the analog input resolution is 16 bits.	E4	—
	Analog monitor	This function outputs the servo status in voltage in real time.	A0	Refer to "MONITORING" in the following manual. MR-J5 User's Manual (Function)
Monitor	Power monitoring function	This function calculates the running power and the regenerative power from the data in the servo amplifier such as speed and current. The power consumption and other values are displayed on MR Configurator2.	A0	
Touch probe *2	Current position latch function	This function latches the current position when TPR1 (Touch probe 1), TPR2 (Touch probe 2), or TPR3 (Touch probe 3) is turned on.	A5	Refer to "Touch probe" in the following manual. MR-J5 User's Manual (Function)

*1 "Ver." indicates the supported firmware version of the servo amplifier. The functions are available on servo amplifiers with the indicated firmware version or later.

*2 If the touch probe is enabled on the MR-J5W3- _G, encoder output pulses will not be outputted.


*3 This function is available only for the MR-J5- _G _LL servo amplifier.

Option

Functions	Detailed functions	Description	Ver. *1	Detailed explanation
Regenerative capacity enhancement	MR-CM3K Simple converter	This function enables servo amplifiers to be used in a common DC bus connection. Utilizing the regenerative power contributes to energy-conservation. In addition, it decreases the number of molded case circuit breakers and magnetic contactors.	A0	Refer to "MR-CM3K simple converter" in the following manual. MR-J5 User's Manual (Hardware)
	MR-CM08K1 Simple converter	200 V class servo amplifiers can be used with a 1-phase 100 V AC power supply input. This function enables servo amplifiers to be used in a common DC bus connection. Utilizing the regenerative power contributes to energy-conservation. In addition, it decreases the number of molded case circuit breakers and magnetic contactors.	F0	Refer to "MR-CM08K1 simple converter" in the following manual. MR-J5 User's Manual (Hardware)
	Regenerative option	Use this function if the built-in regenerative resistor of the servo amplifier does not have sufficient regenerative capacity for the generated regenerative power.	A0	Refer to "Regenerative option" in the following manual. MR-J5 User's Manual (Hardware)
	Multifunction regeneration converter	This function returns the regenerative energy generated at servo motor deceleration to the power supply. The bus voltage can be standardized among multiple servo amplifiers.	B0	Refer to "FR-XC-(H) multifunction regeneration converter" in the following manual. MR-J5 User's Manual (Hardware)







*1 "Ver." indicates the supported firmware version of the servo amplifier. The functions are available on servo amplifiers with the indicated firmware version or later.

Engineering software

Functions	Detailed functions	Description	Ver. *1	Detailed explanation
Setup software	MR Configurator2	This function performs settings (such as servo parameter settings), test operation, and monitoring with a personal computer.	A0	 Page 66 STARTUP

*1 "Ver." indicates the supported firmware version of the servo amplifier. The functions are available on servo amplifiers with the indicated firmware version or later.

Protective functions

Functions	Detailed functions	Description	Ver. *1	Detailed explanation
Alarm	Alarm function	This function displays an alarm or warning when an error occurs during operation. When an alarm occurs, ALM (Malfunction) turns off and stops the servo motor. When a warning occurs, WNG (Warning) will turn on. The servo motor may stop or continue operation depending on the warning.	A0	Refer to "Alarm function" in the following manual.  MR-J5 User's Manual (Function)
Power error detection	Disconnection detection function	This function detects a disconnection in the main circuit power supply input and the servo motor power supply output.	A0	Refer to "Disconnection/incorrect wiring detection function" in the following manual.  MR-J5 User's Manual (Function)
Coasting distance reduction	Forced stop deceleration function	This function decelerates the servo motor to a stop at EM2 (Forced stop 2) off or when there is an alarm.	A0	Refer to "Forced stop deceleration function" in the following manual.  MR-J5 User's Manual (Function)
Drop protection	Electromagnetic brake interlock function	This function operates the electromagnetic brake at servo off and error occurrence, and prevents the vertical axis from dropping.	A0	Refer to "Electromagnetic brake interlock function" in the following manual.  MR-J5 User's Manual (Function)
	Vertical axis freefall prevention function	This function moves the axis up by the mechanical backlash amount of the electromagnetic brake to prevent damage to machines.	A0	Refer to "Vertical axis freefall prevention function" in the following manual.  MR-J5 User's Manual (Function)
Braking protection	Dynamic brake	During the power shut-off and alarm occurrence, this function shorts between U, V, and W phases and operates the dynamic brake.	A0	Refer to "Dynamic brake characteristics" in the following manual.  MR-J5 User's Manual (Hardware)

*1 "Ver." indicates the supported firmware version of the servo amplifier. The functions are available on servo amplifiers with the indicated firmware version or later.

Functional safety



Available functions and safety levels differ depending on the combination of the servo amplifiers and the servo motors and the firmware version of the servo amplifiers.

☞ Page 25 List of safety sub-function compatible units

Functions	Detailed functions	Description	Ver. *1	Detailed explanation
Safety sub-function	STO (Safe torque off) (When functional safety parameters are not used)	This servo amplifier supports the STO function for functional safety as per IEC/EN 61800-5-2. This allows a safety system to be easily configured for the equipment.	A0	Refer to "USING STO FUNCTION" in the following manual. ☞ MR-J5 User's Manual (Hardware)
	STO (Safe torque off) (When functional safety parameters are used)	This function electrically shuts off the servo motor driving energy with input signals from external devices (shut-off by the secondary-side output). This is equivalent to the stop category 0 of IEC/EN 60204-1.	B2	Refer to "FUNCTIONAL SAFETY" in the following manual. ☞ MR-J5 User's Manual (Function)
	SS1 (Safe stop 1)	This function starts deceleration with input signals from external devices. After the specified time to confirm the motor stop, the STO function is executed (SS1). This is equivalent to the stop category 1 of IEC/EN 60204-1.	B2	
	SS2 (Safe stop 2)	This function starts deceleration with input signals from external devices. After the specified time to confirm the motor stop, the SOS function is executed (SS2). This is equivalent to the stop category 2 of IEC/EN 60204-1.	B2	
	SOS (Safe operating stop)	This function monitors whether the servo motor stops within the prescribed range. Energy is supplied to the servo motor.	B2	
	SLS (Safely-limited speed)	This function monitors whether the speed is within the prescribed speed limit. If the speed exceeds the specified speed limit, the STO will shut off energy.	B2	
	SSM (Safe speed monitor)	This function outputs signals when the servo motor speed is below the prescribed speed.	B2	
	SBC (Safe brake control)	This function outputs signals for controlling the external brake.	B2	
	SDI (Safe direction)	This function monitors whether the servo motor travels in the specified direction. If the servo motor travels in a direction different from the specified direction, the STO will shut off energy.	B2	
	SLI (Safely-limited increment)	This function monitors whether the travel distance of the servo motor is within the specified range. If the travel distance of the servo motor exceeds the specified range, the STO will shut off energy.	B2	
	SLT (Safely-limited torque)	This function monitors whether the torque is below the specified torque. If the torque exceeds the specified torque, the STO will shut off energy.	B2	

*1 "Ver." indicates the supported firmware version of the servo amplifier. The functions are available on servo amplifiers with the indicated firmware version or later.

Instantaneous power failure measures


Functions	Detailed functions	Description	Ver. *1	Detailed explanation
Tough drive	SEMI-F47 function	This function uses the electrical energy charged in the capacitor to avoid triggering [AL. 010 Undervoltage] in case that an instantaneous power failure occurs during operation. Use a 3-phase power supply for the input power supply of the servo amplifier. Using a 1-phase 200 V AC for the input power supply will not comply with SEMI-F47 standard.	A0	Refer to "Compliance with SEMI-F47 standard" in the following manual.  MR-J5 User's Manual (Function)
	Tough drive function	This function makes the equipment continue operating even under conditions where an alarm would normally occur. There are two types of tough drive function: the vibration tough drive and the instantaneous power failure tough drive.	A0	Refer to "Tough drive function" in the following manual.  MR-J5 User's Manual (Function)

*1 "Ver." indicates the supported firmware version of the servo amplifier. The functions are available on servo amplifiers with the indicated firmware version or later.

Diagnostics

Functions	Detailed functions	Description	Ver. *1	Detailed explanation
Drive data diagnosis	Drive recorder	This function continuously monitors the servo status and records the state transition before and after an alarm for a fixed period of time. The recorded data can be checked by the Waveform-Display button on the drive recorder window of MR Configurator2 being clicked.	A0	Refer to "Drive recorder" in the following manual. MR-J5 User's Manual (Function)
	Graph function	This function obtains the servo status in the graph.	A0	Refer to "Graph function" in the following manual. MR-J5 User's Manual (Function)
		This function obtains a graph by using the trigger synchronized on multiple servo amplifiers via a network.	A0	—
Failure diagnosis	Encoder communication diagnosis function	This function diagnoses with MR Configurator2 whether the encoder communication error is caused by the circuit malfunction of the servo amplifier or by the malfunction of the cables/ encoder.	A0	Refer to "Encoder communication diagnosis function" in the following manual. MR-J5 User's Manual (Function)
Service life diagnosis	Servo amplifier life diagnosis function	This function enables checking of the cumulative energization time and the number of inrush relay on/off times. It gives an indication of the replacement time for parts on the servo amplifier with a service life (such as the capacitor and the relay) before they malfunction. MR Configurator2 is required for this function.	A0	Refer to "Servo amplifier life diagnosis function" in the following manual. MR-J5 User's Manual (Function)
	Motor life diagnosis function	This function predicts failures of the equipment and the servo motor based on the machine total travel distance. It gives an indication of the replacement time for the servo motor.	A0	Refer to "Machine diagnosis" in the following manual. MR-J5 User's Manual (Function)
	Machine diagnosis function	This function uses the data in the servo amplifier to estimate the friction and vibrational component of the drive system in the equipment and to recognize an error in machine parts such as ball screws and bearings.	A0	
		This function automatically sets the threshold used for detecting the error of machine parts such as ball screws and bearings. It outputs the warning when the friction, vibrational component, and total revolution of the servo motor are out of the set threshold. The error in the machine parts such as ball screws and bearings can be detected automatically.	A0	
		This function estimates the friction of gears and loosening of belts (decrease in the belt tension), and detects errors in the gears and belts.	A0	
System diagnosis	System configuration information	This function uses MR Configurator2 to monitor the servo amplifier model, connected servo motor, encoder, and other information.	A0	Refer to "System configuration display" in the following manual. MR-J5 User's Manual (Function)

*1 "Ver." indicates the supported firmware version of the servo amplifier. The functions are available on servo amplifiers with the indicated firmware version or later.

History				
Functions	Detailed functions	Description	Ver. *1	Detailed explanation
—	Alarm history	This function saves information of the alarm that occurred in the servo amplifier. The information is saved in chronological order and used for occasions such as analyzing the cause of the alarm.	A0	Refer to "Alarm history" in the following manual.  MR-J5 User's Manual (Function)

*1 "Ver." indicates the supported firmware version of the servo amplifier. The functions are available on servo amplifiers with the indicated firmware version or later.

2.3 Security

To completely prevent unauthorized access to the system from external devices, the user also must take safety measures. Mitsubishi Electric Corporation cannot be held responsible for any problems caused by unauthorized access.


3 STRUCTURE

The flame retardancy of the resin material used for the cabinet of the servo amplifier (excluding the display cover) and printing board is UL94 V-0.

3.1 Parts identification

MR-J5-_G(4)(-RJ)/MR-J5-_G(4)-LL

The diagram shows MR-J5-10G-RJ.

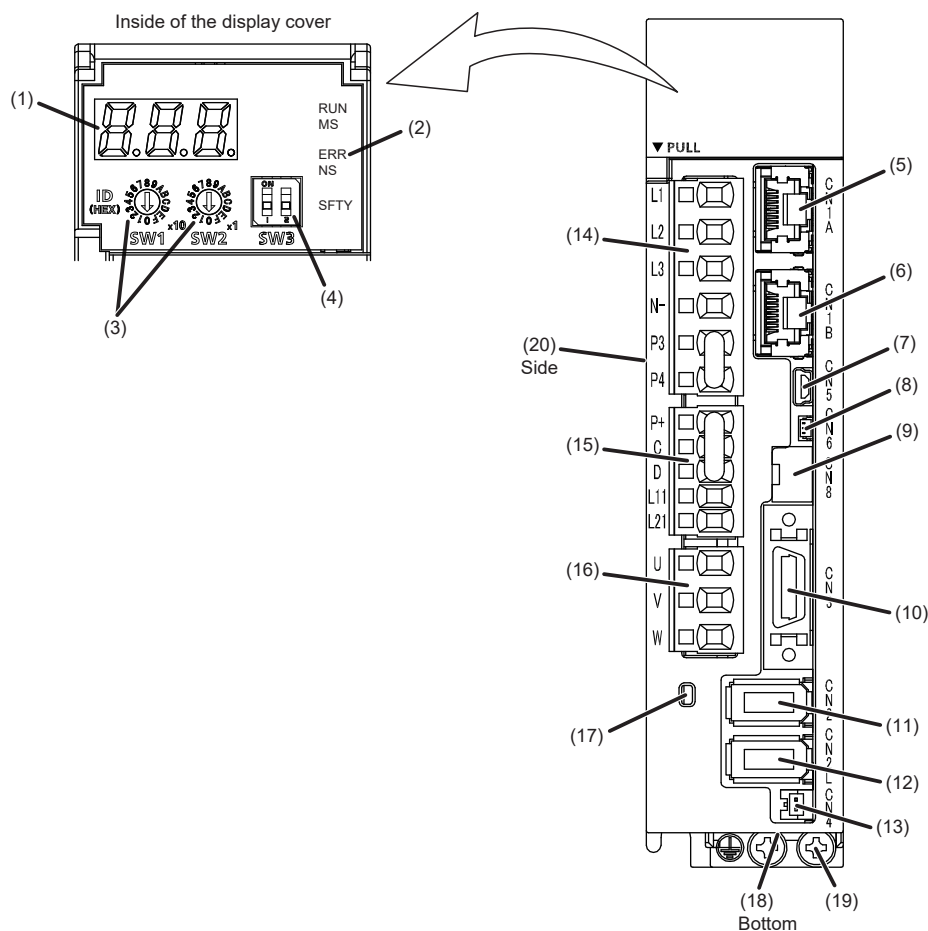

No.	Name	Application	Detailed explanation
(1)	Display	The 3-digit, 7-segment LED display shows the servo status and alarm number.	Page 59 Switch setting and display of the servo amplifier
(2)	Network status display LED	Displays each network status.	
(3)	Rotary switch (SW1/SW2)	Set the IP address of the servo amplifier.	
(4)	DIP switch (SW3)	To change the mode to the test operation mode, set the switch. (SW3-1)	
(5)	Ethernet cable connector (CN1A)	Connect the controller, servo amplifier, or each network connected device.	Page 64 CN1A/CN1B connector LED
(6)	Ethernet cable connector (CN1B)		
(7)	USB communication connector (CN5)	Connect to a personal computer.	—
(8)	Analog monitor connector (CN6)	Outputs the analog monitor.	Refer to "Connectors and pin assignments" in the following manual. MR-J5 User's Manual (Hardware)

No.	Name	Application	Detailed explanation
(9)	Functional safety I/O signal connector (CN8)	Connect an external safety relay to use the STO function. When using other safety-sub functions, refer to "FUNCTIONAL SAFETY" in the following manual. MR-J5 User's Manual (Function)	Refer to "USING STO FUNCTION" and "USING FUNCTIONAL SAFETY" in the following manual. MR-J5 User's Manual (Hardware)
(10)	I/O signal connector (CN3)	Connect the digital I/O signals. When using the MR-J5-_G-LL servo amplifier, connect the analog input signal.	Refer to "Connectors and pin assignments" in the following manual. MR-J5 User's Manual (Hardware)
(11)	Encoder connector (CN2)	Connect a servo motor encoder or an external encoder.	Page 54 External encoder connector
(12) *1	External encoder connector (CN2L)	Connect the external encoder.	
(13)	Battery connector (CN4)	To configure the absolute position detection system by using a direct drive motor, connect the battery for absolute position data backup.	Refer to "ABSOLUTE POSITION DETECTION SYSTEM" in the following manual. MR-J5 User's Manual (Hardware)
(14)	Main circuit power connector (CNP1) *2	Connect the input power supply.	Refer to "Explanation of power supply system" in the following manual. MR-J5 User's Manual (Hardware)
(15)	Control circuit power connector (CNP2) *2	Connect the control circuit power supply and regenerative option.	
(16)	Servo motor power output connector (CNP3) *2	Connect the servo motor.	MR-J5 User's Manual (Hardware)
(17)	Charge light	When the main circuit is charged, this light is on. While the light is on, do not change the connections of the wires.	—
(18)	Battery holder	Store the battery for absolute position data backup.	Refer to "DIMENSIONS" in the following manual. MR-J5 User's Manual (Hardware)
(19)	Protective earth (PE) terminal	Connect this terminal to the protective earth (PE) of the cabinet.	Refer to "Explanation of power supply system" in the following manual. MR-J5 User's Manual (Hardware)
(20)	Rating plate	Indicates model, capacity, and other information.	Page 8 Rating plate

*1 This is for the MR-J5-_G-RJ servo amplifier. The MR-J5-_G servo amplifier and MR-J5-_G-LL servo amplifier do not have a CN2L connector.

*2 When a servo amplifier with a capacity of 12 kW or more is used, connect the power supply system to the terminal block. For the terminal name/assignment, refer to "DIMENSIONS" in the following manual.

MR-J5 User's Manual (Hardware)

■External encoder connector

The external encoder of A/B/Z-phase differential output type can be connected using the CN2L connector. The following table shows the communication method of the external encoder compatible with the MR-J5-_G_, MRJ5-_G_-RJ, and MR-J5-_G_-LL servo amplifiers.

System configuration	External encoder communication method	Connector		
		MR-J5-_G_	MR-J5-_G_-RJ	MR-J5-_G_-LL
Linear servo system	Two-wire type	CN2 ^{*1}	CN2 ^{*1}	CN2 ^{*1}
	Four-wire type			
	A/B/Z-phase differential input	—	CN2L ^{*4}	—
Fully closed loop system ^{*5}	Two-wire type	CN2 ^{*2 *3}	CN2L	—
	Four-wire type	—		
	A/B/Z-phase differential input			
Scale measurement function ^{*5}	Two-wire type	CN2 ^{*2 *3}	CN2L	—
	Four-wire type	—		
	A/B/Z-phase differential input			

*1 An MR-J4THCBL03M branch cable is required.

*2 An MR-J4FCCBL03M branch cable is required.


*3 If the servo motor encoder communication method is the four-wire type, CN2 cannot be used. Use the MR-J5-_G_-RJ or MR-J5-_G_-HS servo amplifier.









*4 Connect a thermistor to CN2.

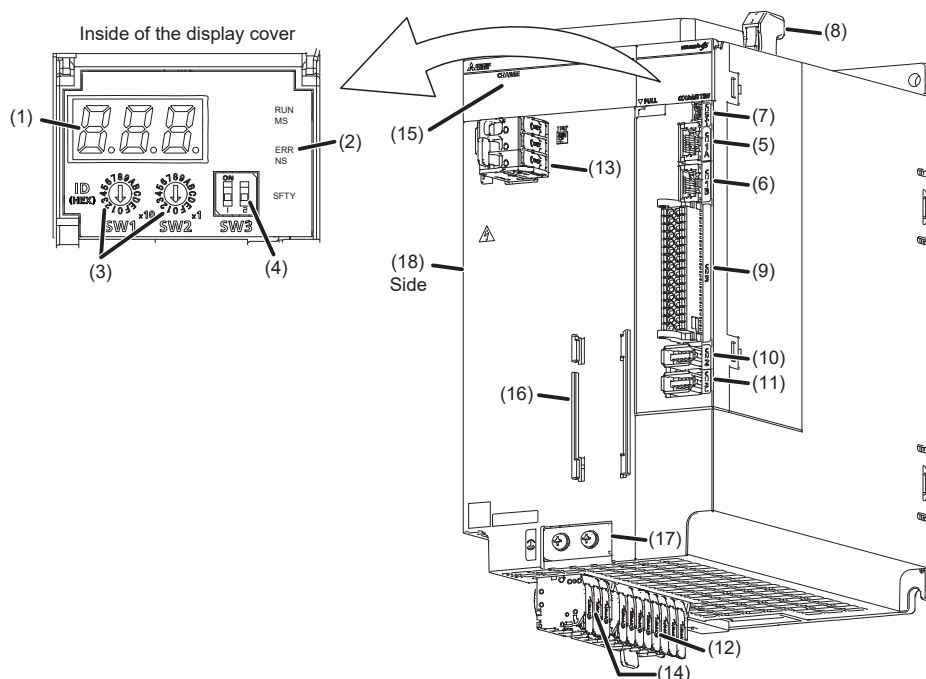

*5 Available on servo amplifiers with firmware version A5 or later.

MR-J5-_G4-HS


The diagram shows MR-J5-500G4-HS.



No.	Name	Application	Detailed explanation
(1)	Display	The 3-digit, 7-segment LED display shows the servo status and alarm number.	 Page 59 Switch setting and display of the servo amplifier
(2)	Network status display LED	Displays each network status.	
(3)	Rotary switch (SW1/SW2)	Set the IP address of the servo amplifier.	
(4)	DIP switch (SW3)	To change to the test operation mode, set this. (SW3-1)	
(5)	Ethernet cable connector (CN1A)	Connect the controller, servo amplifier or each network connected device.	 Page 64 CN1A/CN1B connector LED
(6)	Ethernet cable connector (CN1B)		
(7)	USB communication connector (CN5)	Connect with a personal computer.	—
(8)	Analog monitor and A/B/Z-phase pulse output connector (CN7)	Outputs the analog monitor and the ABZ pulses.	Refer to "Connectors and pin assignments" in the following manual.  MR-J5 User's Manual (Hardware)
(9)	I/O signal connector (CN3)	Connect the digital I/O signals. When using the safety-sub functions, refer to "FUNCTIONAL SAFETY" in the following manual.  MR-J5 User's Manual (Function)	Refer to "Connectors and pin assignments" and "USING FUNCTIONAL SAFETY" in the following manual.  MR-J5 User's Manual (Hardware)
(10)	Encoder connector (CN2)	Connect a servo motor encoder or an external encoder.	 Page 56 External encoder connector
(11)	External encoder connector (CN2L)	Connect an external encoder.	
(12)	Power connector (CNP1) ^{*1}	Connect the input power supply, control circuit power supply, and regenerative option.	Refer to "Explanation of power supply system" in the following manual.  MR-J5 User's Manual (Hardware)
(13)	External converter connector ^{*1}	Connect the FR-XC multifunction regeneration converter.	
(14)	Servo motor power output connector (CNP3) ^{*1}	Connect the servo motor.	
(15)	Charge light	When the main circuit is charged, this light is on. While the light is on, do not change the connections of the wires.	—
(16)	Battery holder	Store the battery for absolute position data backup.	Refer to "DIMENSIONS in the following manual.  MR-J5 User's Manual (Hardware)

No.	Name	Application	Detailed explanation
(17)	Protective earth (PE) terminal	Connect this terminal to the protective earth (PE) of the cabinet.	Refer to "Explanation of power supply system" in the following manual.  MR-J5 User's Manual (Hardware)
(18)	Rating plate	Indicates model, capacity, and other information.	 Page 8 Rating plate


*1 When a servo amplifier with a capacity of 12 kW or more is used, connect the power supply system to the terminal block. For the terminal name/assignment, refer to "DIMENSIONS" in the following manual.

 MR-J5 User's Manual (Hardware)

■ External encoder connector

The external encoder of A/B/Z-phase differential output type can be connected by using the CN2L connector. The following table shows the communication methods of the external encoders compatible with the MR-J5-_G4-HS servo amplifiers.

System configuration	External encoder communication method	Connector
		MR-J5-_G4-HS
Fully closed loop system	Two-wire type	CN2L
	Four-wire type	
	A/B/Z-phase differential input	
Scale measurement function	Two-wire type	CN2L
	Four-wire type	
	A/B/Z-phase differential input	

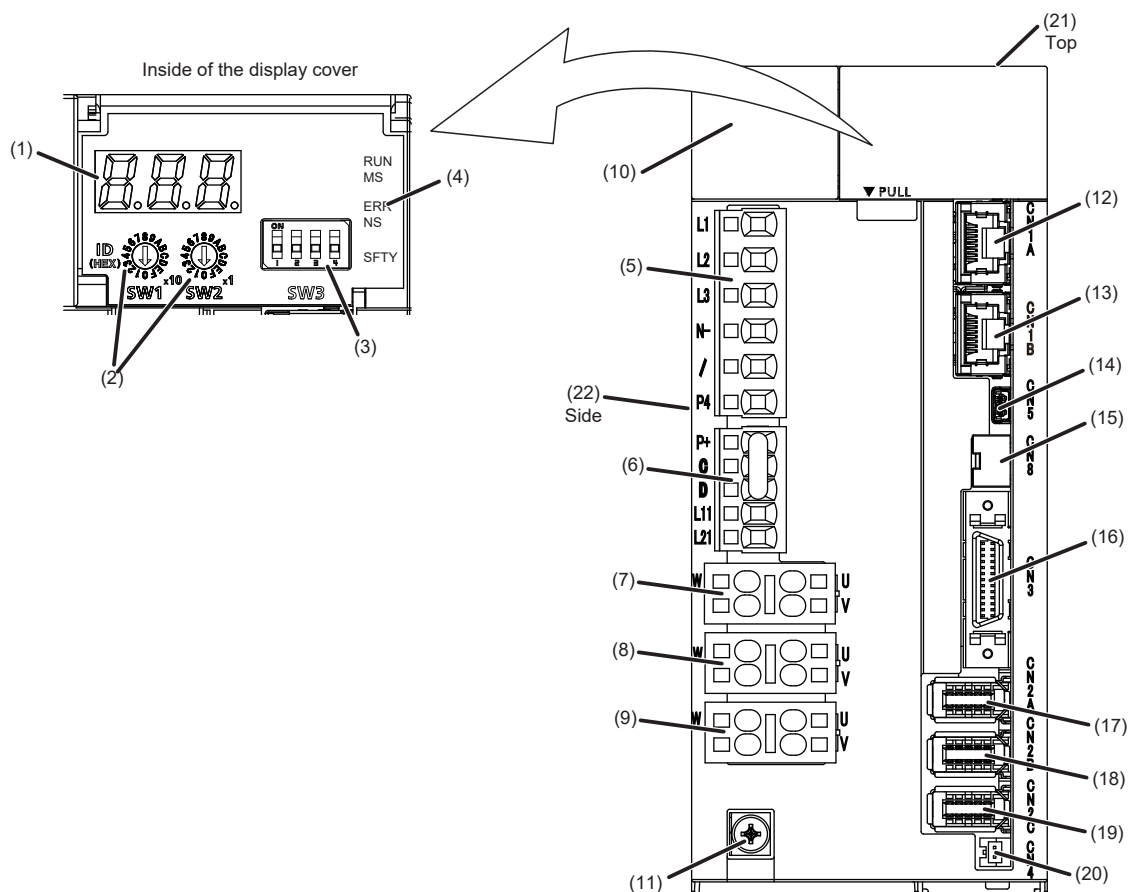

No.	Name	Application	Detailed explanation
(1)	Display	The 3-digit, 7-segment LED display shows the servo status and alarm number.	Page 59 Switch setting and display of the servo amplifier
(2)	Rotary switch (SW1/SW2)	Set the IP address of the servo amplifier.	
(3)	DIP switch (SW3)	Consists of the test operation switch and control axis deactivation switch.	
(4)	Network status display LED	Displays each network status.	
(5)	Main circuit power connector (CNP1)	Connect the input power supply.	Refer to "Explanation of power supply system" in the following manual. IMR-J5 User's Manual (Hardware)
(6)	Control circuit power connector (CNP2)	Connect the control circuit power supply and regenerative option.	
(7)	A-axis servo motor power connector (CNP3A)	Connect the A-axis servo motor.	
(8)	B-axis servo motor power connector (CNP3B)	Connect the B-axis servo motor.	
(9) *1	C-axis servo motor power connector (CNP3C)	Connect the C-axis servo motor.	
(10)	Charge light	When the main circuit is charged, this light is on. While the light is on, do not change the connections of the wires.	—
(11)	Protective earth (PE) terminal	Connect this terminal to the protective earth (PE) of the cabinet.	Refer to "Explanation of power supply system" in the following manual. IMR-J5 User's Manual (Hardware)
(12)	Ethernet cable connector (CN1A)	Connect the controller, servo amplifier or each network connected device.	Page 64 CN1A/CN1B connector LED
(13)	Ethernet cable connector (CN1B)		
(14)	USB communication connector (CN5)	Connect with a personal computer.	—

No.	Name	Application	Detailed explanation
(15)	Functional safety I/O signal connector (CN8)	Connect an external safety relay to use the STO function. When using other safety-sub functions, refer to "FUNCTIONAL SAFETY" in the following manual. IMR-J5 User's Manual (Function)	Refer to "USING STO FUNCTION" and "USING FUNCTIONAL SAFETY" in the following manual. IMR-J5 User's Manual (Hardware)
(16)	I/O signal connector (CN3)	Connect the digital I/O signals.	Refer to "Connectors and pin assignments" in the following manual. IMR-J5 User's Manual (Hardware)
(17)	A-axis encoder connector (CN2A)	Connect the A-axis servo motor encoder or external encoder.	Page 58 External encoder connector
(18)	B-axis encoder connector (CN2B)	Connect the B-axis servo motor encoder or external encoder.	
(19) *1	C-axis encoder connector (CN2C)	Connect the C-axis servo motor encoder or external encoder.	
(20)	Battery connector (CN4)	To configure the absolute position detection system by using a direct drive motor, connect the battery for absolute position data backup.	Refer to "ABSOLUTE POSITION DETECTION SYSTEM" in the following manual. IMR-J5 User's Manual (Hardware)
(21)	Analog monitor connector (CN6)	Outputs the analog monitor.	Refer to "Connectors and pin assignments" in the following manual. IMR-J5 User's Manual (Hardware)
(22)	Rating plate	Indicates model, capacity, and other information.	Page 8 Rating plate

*1 For the MR-J5 3-axis servo amplifier

External encoder connector

The following table shows the communication method of the external encoder compatible with the MR-J5W2-_G and MR-J5W3-_G servo amplifiers.

System configuration	External encoder communication method	Connector	
		MR-J5W2-_G	MR-J5W3-_G
Linear servo system	Two-wire type	CN2A *1	CN2A *1
	Four-wire type	CN2B *1	CN2B *1 CN2C *1
	A/B/Z-phase differential input	—	—
Fully closed loop system *4	Two-wire type	CN2A *2 *3 CN2B *2 *3	—
	Four-wire type	—	
	A/B/Z-phase differential input	—	
Scale measurement function *4	Two-wire type	CN2A *2 *3 CN2B *2 *3	—
	Four-wire type	—	
	A/B/Z-phase differential input	—	

*1 An MR-J4THCBL03M branch cable is required.

*2 An MR-J4FCCBL03M branch cable is required.

*3 If the servo motor encoder communication method is the four-wire type, the MR-J5W2-_G servo amplifier cannot be used. Use the MR-J5-_G-_RJ or MR-J5-_G4-HS servo amplifier.

*4 Available on servo amplifiers with firmware version A5 or later.

3.2 Switch setting and display of the servo amplifier

Switching to the test operation mode and configuring network setting can be done with switches on the servo amplifier. The network communication status and alarm status can also be checked on the display (3-digit, 7-segment LED) of the servo amplifier.

Switches

If a metal screw driver contacts with the conductive areas, the switches may malfunction. Therefore, use an insulated screw driver instead of the metal screw driver to operate rotary switches (SW1/SW2) and DIP switches (SW3).


If all the DIP switches (SW3) are turned "ON (up)", the servo amplifier is switched to the operation mode for manufacturer setting and "off" will be displayed. The servo amplifier cannot be used in this mode. Thus, set the DIP switches (SW3) correctly according to this section.

To apply the settings of all switches, cycle the control circuit power supply or reset the software.


The following explains the rotary switches (SW1/SW2) and DIP switches (SW3).

Switch identification


■1-axis servo amplifier

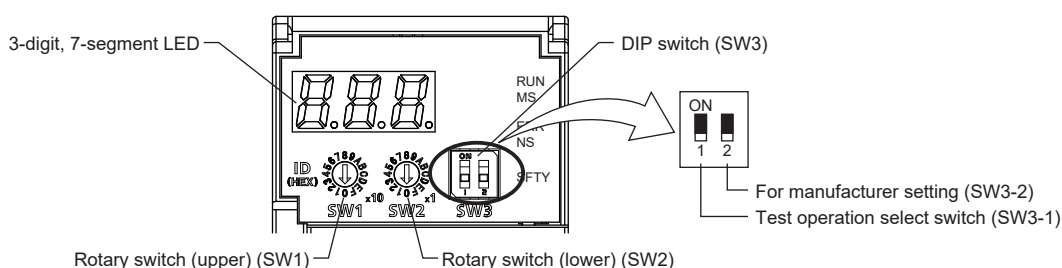

■2-axis servo amplifier

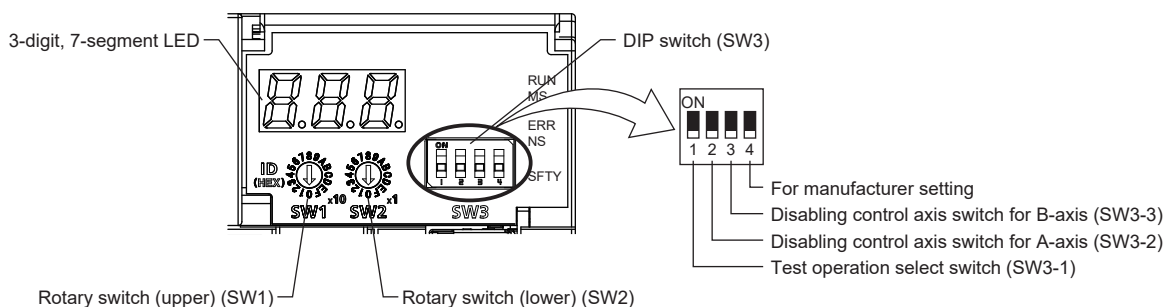

■3-axis servo amplifier

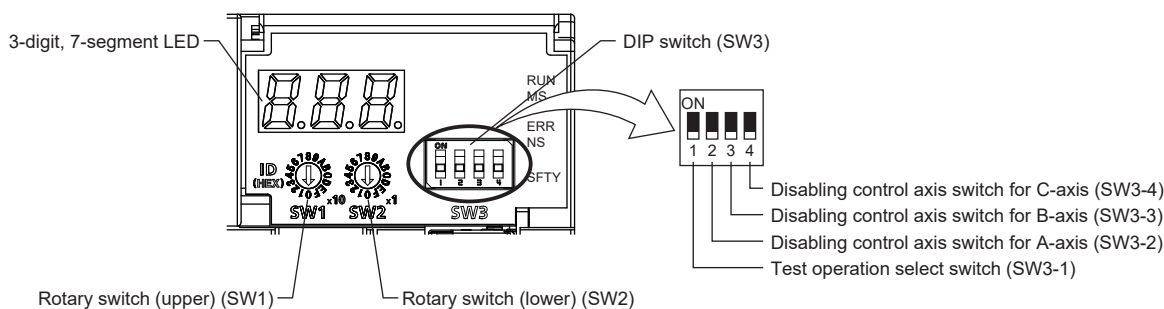

Test operation select switch (SW3-1)

Turning "ON (up)" the test operation select switch enables the test operation mode. In the test operation mode, functions such as JOG operation, positioning operation, and machine analyzer are available using MR Configurator2.

☞ Page 75 Test operation

Disabling control axis switches (SW3-2, SW3-3, and SW3-4)



To set the disabling control axis switches, refer to the controller manual.

Turning "ON (up)" the disabling control axis switch disables the corresponding servo motor. The servo motor will become in the disabled-axis state and will not be recognized by the controller.

Rotary switches (SW1/SW2)

The IP address can be set with the rotary switches (SW1/SW2) of the servo amplifier. SW1 indicates an upper digit and SW2 indicates a lower digit of a hexadecimal. The rotary switches are set to 01h when shipped from the factory.

To apply the settings of the rotary switches, set "0" (the rotary switch is used.) in [Pr. NPA01 IP address setting]. To set the IP address without using the rotary switches, set them to 0 and use the engineering software.

For how to set IP addresses, refer to "IP address setting function" in the following manual.

📖 MR-J5-G/MR-J5W-G User's Manual (Communication Function)


7-segment LED

The network connection status, servo status, and alarm/warning occurrence statuses can be checked on the 7-segment LED display.

Display sequence


The following shows the display sequence of the 7-segment LED display after power-on. Once a system check is complete and the servo amplifier is started, the network connection status will be displayed.

■CC-Link IE TSN

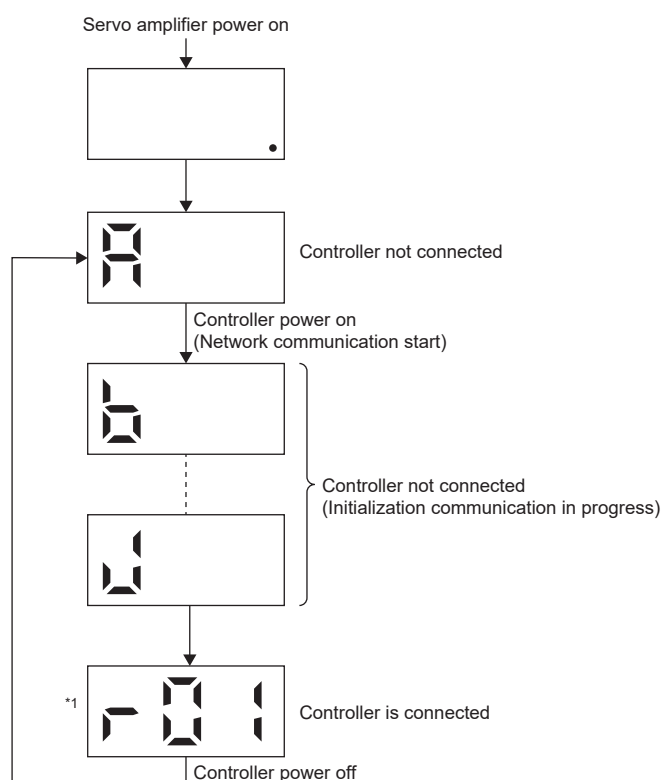

*1 The segment of the last 2 digits shows the IP address.
 ☞ Page 62 When the network is connected

■CC-Link IE Field Network Basic

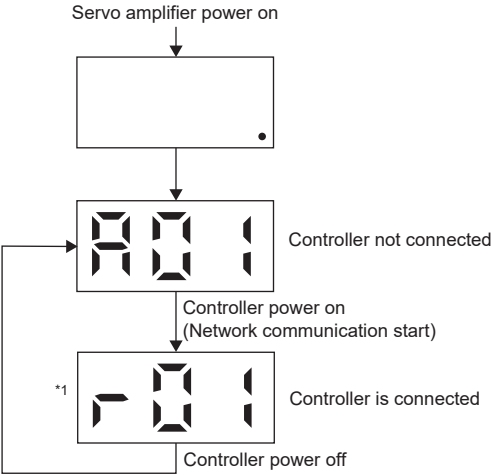


*1 The segment of the last 2 digits shows the IP address.
 ☞ Page 62 When the network is connected


Alarm display

When an alarm/warning occurs, the alarm status is displayed after the network connection status. This is an example of the alarm display for when [AL. 032.2 Overcurrent] is occurring.

■1-axis servo amplifier

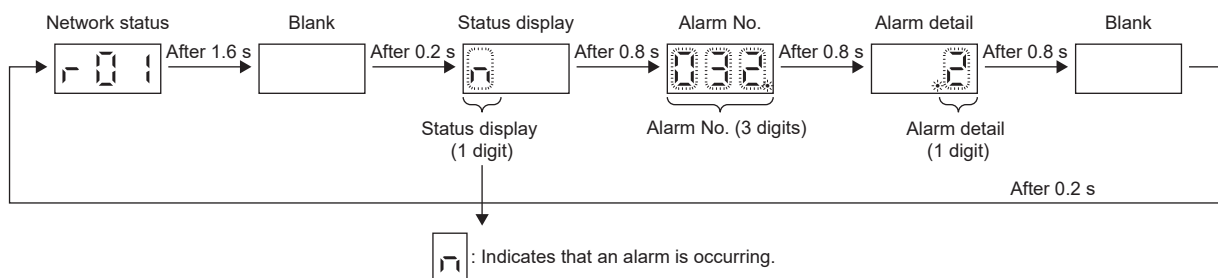

■For multi-axis servo amplifiers

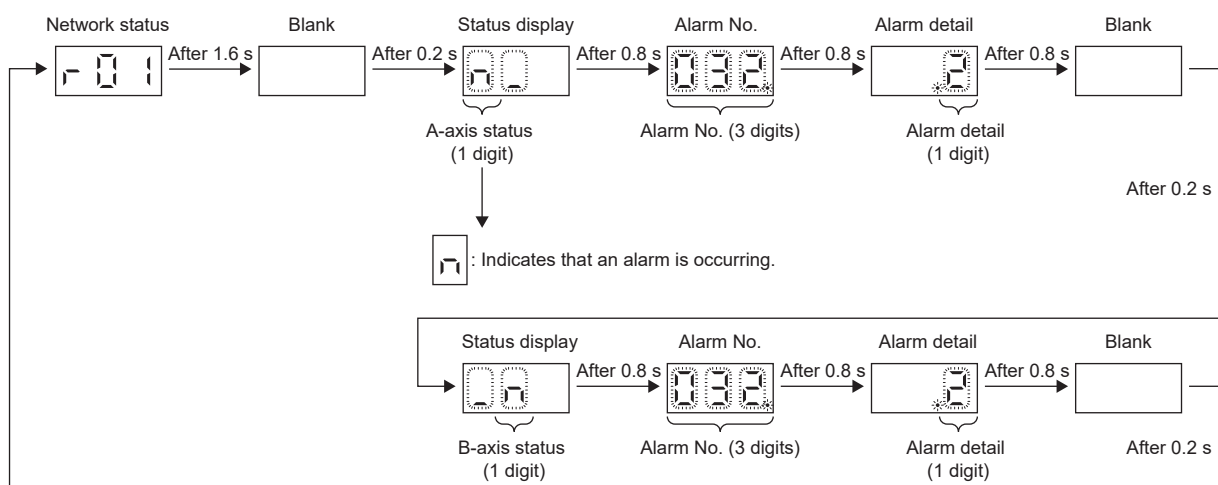

When a 3-axis servo amplifier is used, the alarm occurrence status in the B-axis is indicated before the alarm occurrence in the C-axis.

When the network is connected

The network connection status is displayed as follows. The servo status is expressed in decimal points.

1-axis servo amplifier	2-axis servo amplifier	3-axis servo amplifier
<p>Servo status</p> <p>Off: Indicates ready-off and servo-off status. Blinking: Indicates ready-on and servo-off status. On: Indicates ready-on and servo-on status.</p>	<p>A-axis servo status</p> <p>B-axis servo status</p> <p>Off: Indicates ready-off and servo-off status. Blinking: Indicates ready-on and servo-off status. On: Indicates ready-on and servo-on status.</p>	<p>A-axis servo status</p> <p>B-axis servo status</p> <p>C-axis servo status</p> <p>Off: Indicates ready-off and servo-off status. Blinking: Indicates ready-on and servo-off status. On: Indicates ready-on and servo-on status.</p>




The last 2 digits indicate a network address corresponding to each network.

Network	Address
CC-Link IE TSN	The 4th octet of the IP address is displayed in hexadecimal.
CC-Link IE Field Network Basic	










When the network is not connected

■CC-Link IE TSN


The network connection status is displayed for each axis.

1-axis servo amplifier	2-axis servo amplifier	3-axis servo amplifier
 <p>Network status</p>	 <p>A-axis network status B-axis network status</p>	 <p>A-axis network status B-axis network status C-axis network status</p>






The 7-segment LED display during initialization is as follows.

Display	Status	Description
	Controller not connected	Indicates that the servo amplifier is not connected to the controller.
	Data not linked	Indicates that initial communication for CC-Link IE TSN is in progress.
		
		
		
		
	Cyclic communication in progress	Indicates the Pre-Operational state shown in the state transition diagram of the NMT state machine.
		Indicates the Safe-Operational state shown in the state transition diagram of the NMT state machine.
	Cyclic communication being stopped	Indicates that the servo amplifier is in the state of the reserved station.

■CC-Link IE Field Network Basic


Display	Status	Description
	Controller not connected	Indicates that the servo amplifier is not connected to the controller.

Other status displays

Display	Status	Description
	Test operation mode	Indicates that the test operation mode is set.
	CPU error	Indicates that a CPU watchdog error has occurred.
	Updating	Indicates that a firmware update is in progress.
	Initialization in progress	Indicates that initialization of settings such as parameters is in progress.
	IP address setting in progress	Indicates that the IP address is being set via network.

CN1A/CN1B connector LED


The following shows the LED display of the CN1A and CN1B connectors.

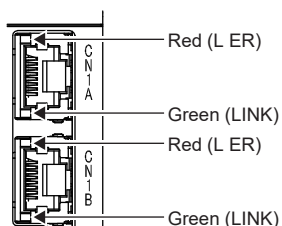

LED	Name	Lighting status	Description
L ER (CN1A/CN1B)	Line error status	On	Indicates that erroneous data is being received.
LINK (CN1A/CN1B)	Link status	On	Linking up

Status LEDs

The LED states (RUN MS/ERR NS) indicate the network status of the servo amplifier.

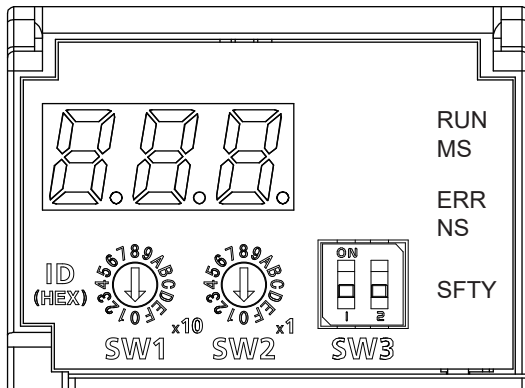

LED	Description
RUN MS (green)	Off: Indicates that an alarm is occurring. On: Indicates that the servo amplifier is on.
ERR NS (red)	Off: Indicates that no alarm or warning is occurring. Blinking: Indicates that a warning is occurring. On: Indicates that an alarm is occurring.
SFTY (green)	Off: Indicates that the functional safety cannot be activated. On: Indicates that the functional safety can be activated.

4 STARTUP

Point

- MR-J5_ _G_ servo amplifiers can be set with MR Configurator2 with software version 1.100E or later.
- This chapter explains how to start up the servo amplifier by using MR Configurator2 with software version 1.100E.
- Before starting operation, check each servo parameter. Depending on the machine, an unexpected operation may occur.

When using a linear servo motor, the terms below have the following meanings.

- Load to motor inertia ratio → Load to motor mass ratio
- Torque → Thrust


Servo parameter setting method

Point


- Servo parameters may be changed by the controller via a network. In this case, take measures such as not turning on the controller or not connecting the network cable to the controller, so that the servo parameter setting does not change.
- The USB communication may be disconnected by operations such as servo parameter settings and drive recorder readout, depending on the load on the servo amplifier. If this is the case, remove the USB cable, then connect it again.

MR Configurator2 is the software used for purposes such as servo parameter settings, graph measurement/display, and test operation. This chapter describes the startup procedure of the servo amplifier when the servo amplifier is connected to a personal computer which has MR Configurator2 installed. To learn more about using MR Configurator2, refer to Help in MR Configurator2.


1. Connect the servo amplifier and the personal computer with a USB cable. Turn on the servo amplifier control circuit power supply.

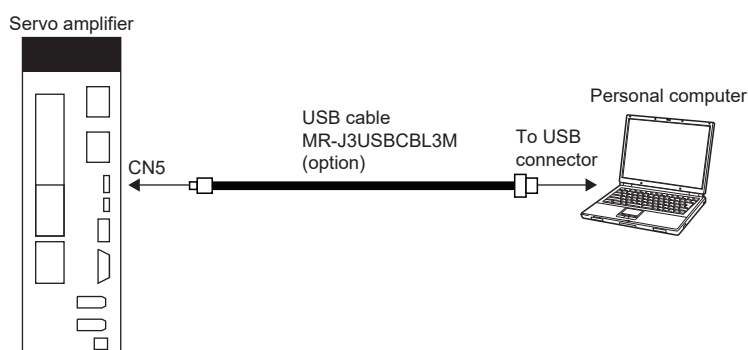


2. Start MR Configurator2 and create a new project. For the connection setting, select USB. Select the servo amplifier model.

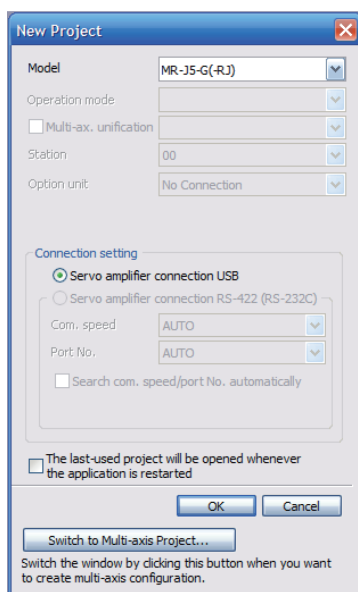


3. Selecting "Parameter" from the project tree opens the "Parameter Setting" screen.

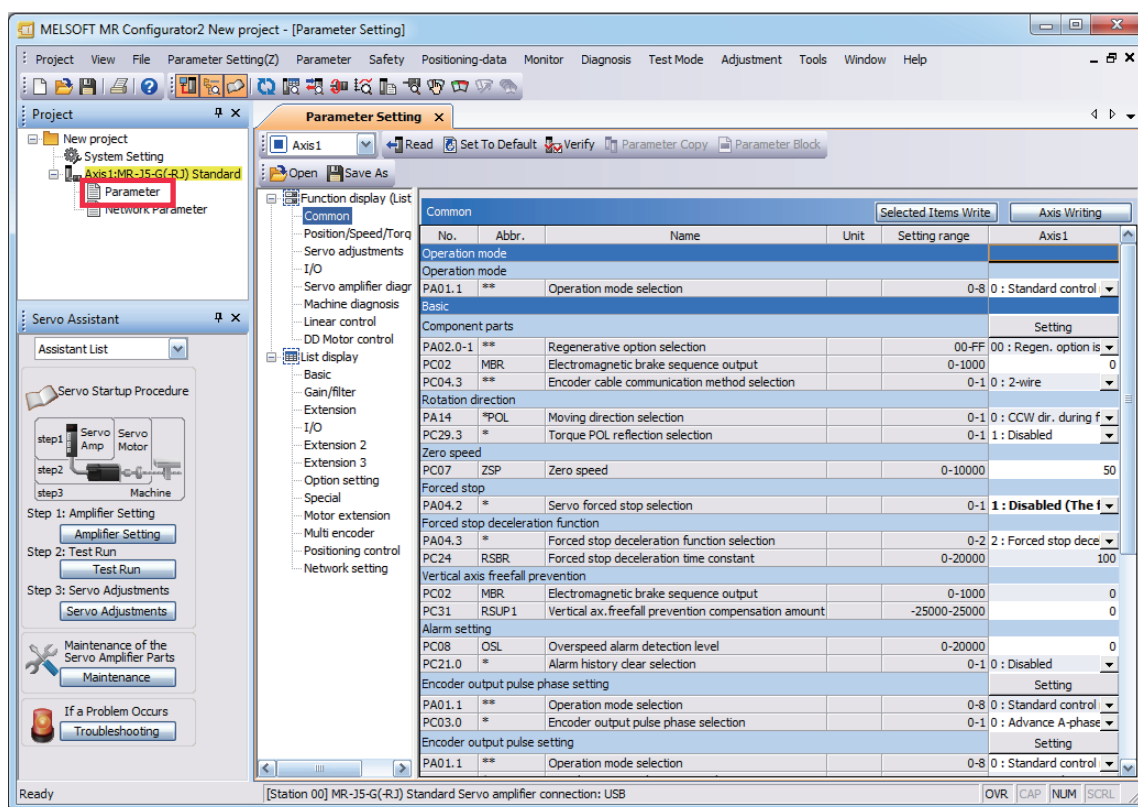


4. Select a group of servo parameters in the selection tree of the "Parameter Setting" window to display and configure the settings.

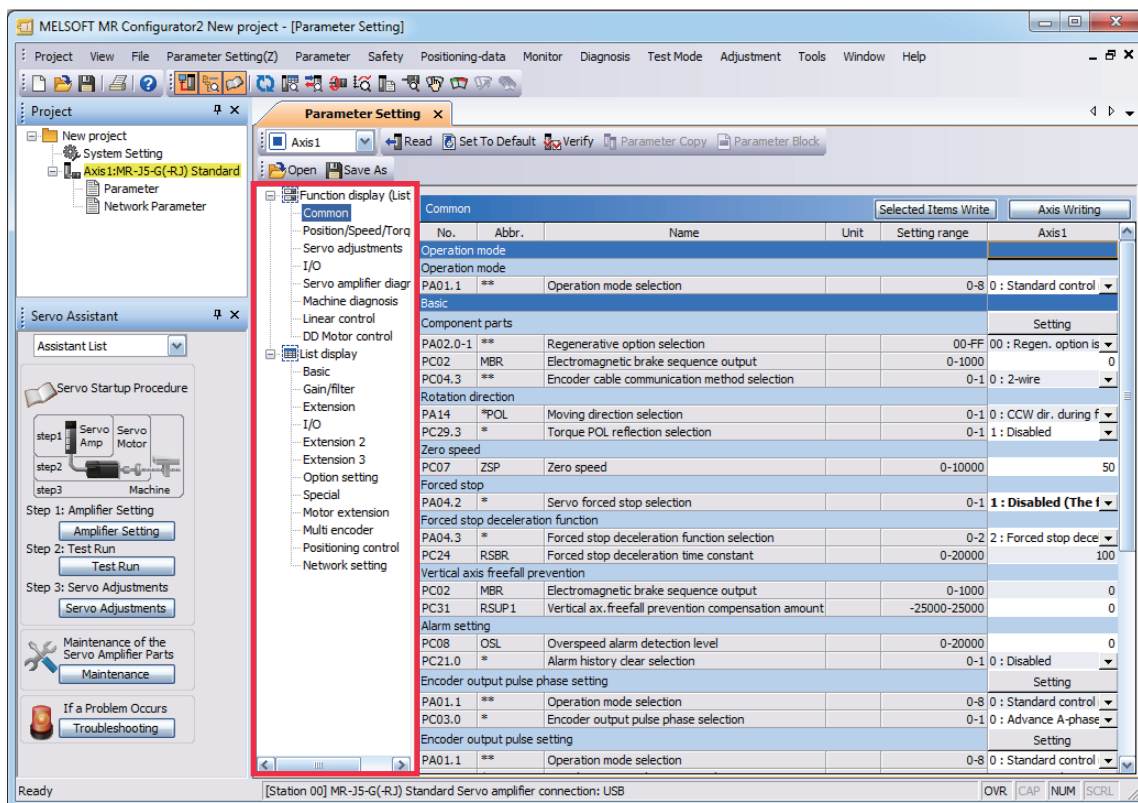

5. After changing the servo parameter, click "Selected Items Write" or "Axis Writing".

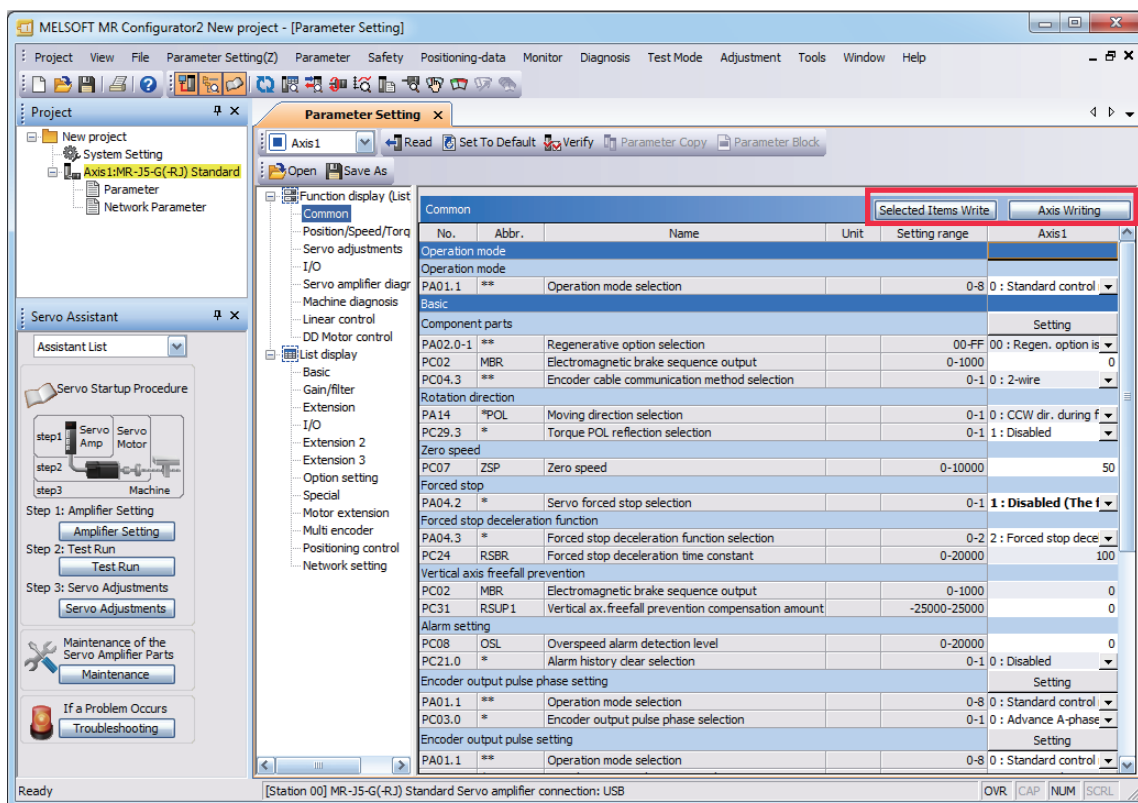

6. Abbreviated servo parameters prefixed with * and servo parameters marked with ** are enabled after the power is cycled or a software reset is performed. Click "Software Reset" in MR Configurator2 to perform the software reset.

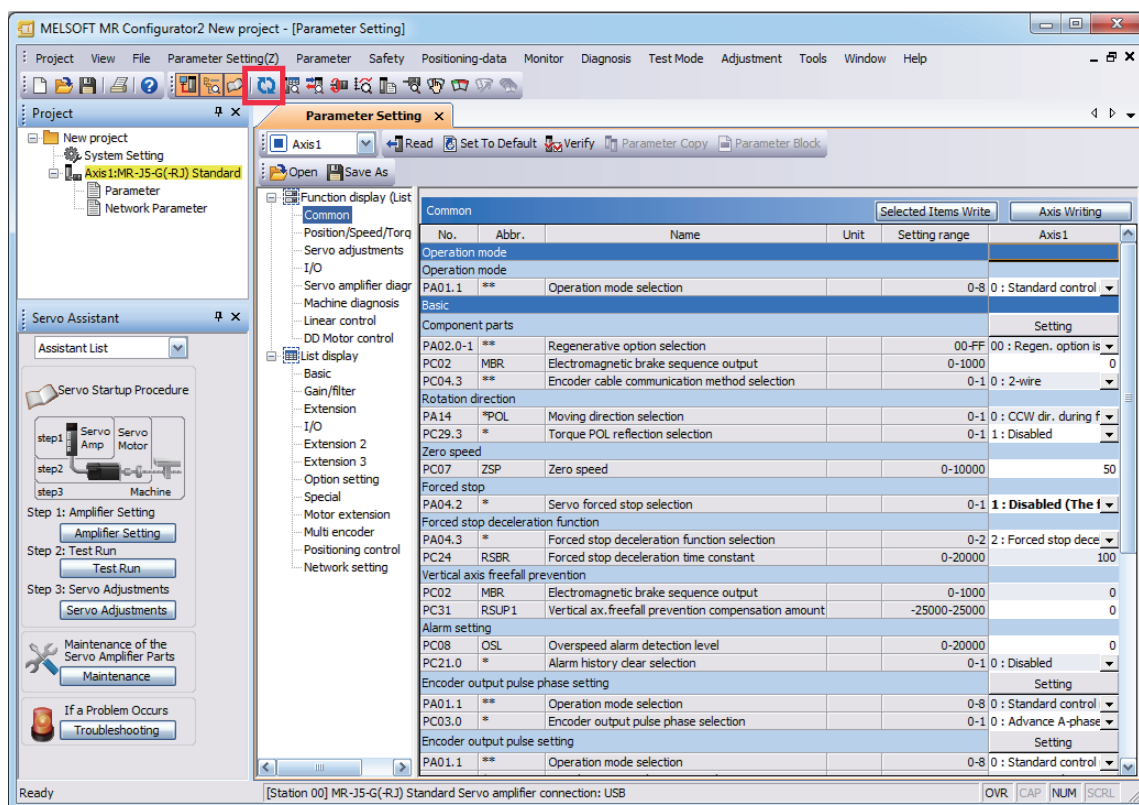

4.1 Turning on servo amplifier for the first time

Point

- For the controller settings, refer to the relevant controller manual.
- For the gain adjustment, refer to the following manual.

MR-J5 User's Manual (Adjustment)

When turning on the servo amplifier for the first time, follow the steps below.

Procedure	Description	Reference
1. Installation and wiring	Install and wire the servo amplifier and servo motor.	MR-J5 User's Manual (Hardware)
2. Test operation of the servo motor alone in test operation mode	With the servo motor disconnected from the machine, operate the servo motor at the lowest speed possible, and check whether the servo motor operates correctly.	Page 71 Test operation of the servo motor alone in test operation mode
3. Equipment configuration setting	Set each servo parameter according to the equipment configuration.	Page 72 Equipment configuration setting
4. Controller-related setting	Perform necessary settings according to commands from the controller.	Page 72 Controller-related setting
5. Operation by controller command	Operate the servo motor at the lowest speed possible by giving commands to the servo amplifier from the controller, and check whether the servo motor operates correctly.	Page 73 Operation by controller command
6. Actual operation	—	—

Test operation of the servo motor alone in test operation mode



- If the servo motor operates in an unintended manner, stop the servo motor with EM2 (Forced stop 2).


Check that the servo amplifier and servo motor operate normally. With the servo motor disconnected from the machine, use the test operation mode and check whether the servo motor operates correctly. This section describes how to check the servo motor operation in the JOG operation. The test operation also includes the positioning operation and program operation.

☞ Page 75 Test operation

In the linear servo motor control mode, the JOG operation cannot be performed. Check the linear servo motor operation status by using the positioning operation or by other means.

☞ Page 76 Motor driving by test operation

1. Turn off the power.
2. Turn "ON (up)" the test operation select switch (SW3-1).

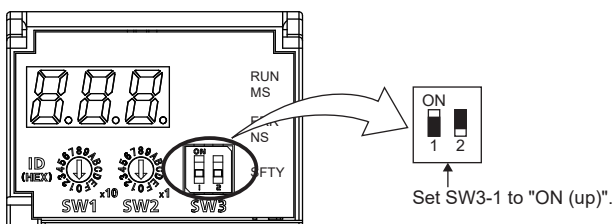


3. Turn on the power supply of the servo amplifier. Once initialization is complete, the display will change as follows.

Test operation status display




The display of a 1-axis servo amplifier is shown as an example.

4. Open the "JOG Mode" screen of MR Configurator2.

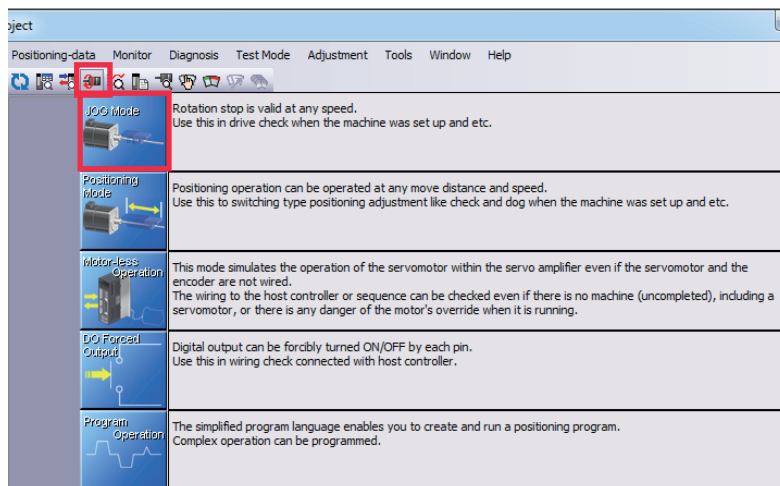

5. To operate the servo motor, input the motor speed and acceleration/deceleration time constants, then click "Forward CCW" or "Reverse CW". The servo motor operates only while the button is being clicked. Give a low speed command at first and check the operation status.

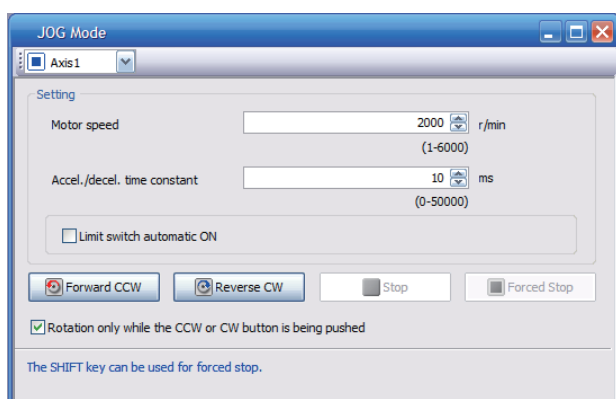

6. After the test operation is complete, turn off the power and "OFF (down)" the test operation select switch (SW3-1).

Equipment configuration setting

Set the servo parameters for each function according to the equipment configuration. For details, refer to the following manual.

MR-J5 User's Manual (Function)

Item	Description
Rotation/travel direction selection	To change the rotation/travel direction (POL), change the servo parameter.
Stroke limit function	Limit switches can be used to limit travel intervals of the servo motor. Configure the settings according to the connection method of the limit switch.
In-position setting	Positioning completion status can be checked with in-position. Set this as necessary.
Forced stop deceleration function	Stops the servo motor at EM2 (Forced stop 2) off. Perform settings such as the deceleration time constant.
Vertical axis freefall prevention function	For vertical axes, this function pulls up the shaft slightly. When using a servo motor with an electromagnetic brake for a vertical axis, perform settings as required.

Controller-related setting

Refer to the applicable network instruction manual for the network connection setting.

Network	Reference
CC-Link IE TSN	Refer to "Startup" in the following manual.
CC-Link IE Field Network Basic	MR-J5-G/MR-J5W-G User's Manual (Communication Function)

Set the servo parameter using the controller according to the control mode to be used.

Item	Description	Reference
Network standard mode	Operates in the modes such as csp/csv/cst specified in CiA 402.	Refer to "CONTROL MODE" in the following manual. MR-J5 User's Manual (Function)
Positioning mode (point table method)	This function operates the servo motor according to the setting values by selecting the point table with preset 255 points.	Refer to "Positioning mode (point table method) (CP)" in the following manual. MR-J5 User's Manual (Function)


Set each servo parameter that is necessary for the operation using controller commands.

Item	Description	Reference
Command unit selection function	This function enables the unit of speed command to be selected.	Refer to "Command unit selection function" in the following manual. MR-J5 User's Manual (Function)
Electronic gear setting	Perform the settings related to the controller command unit and amplifier command unit.	Refer to "Electronic gear function" in the following manual. MR-J5 User's Manual (Function)
Homing	To perform homing with the function of the amplifier without using the homing function of the controller, perform the necessary settings.	Refer to "CONTROL MODE" in the following manual. MR-J5 User's Manual (Function)


Operation by controller command

Confirm that the servo motor operates correctly under the commands from the controller. Give a low speed command at first to check the servo motor operations such as the rotation direction. If the servo motor does not operate in the intended direction, check the input signal.

1. Display the Display All window in MR Configurator2. Confirm that there is no error in the items such as servo motor speed and load ratio.

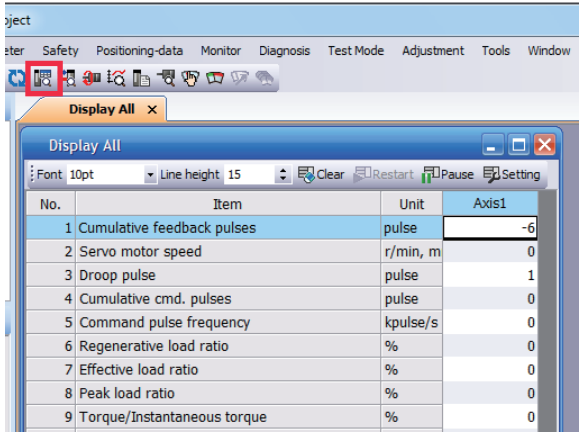

2. Display the I/O Monitor window. Confirm that there is no error in the I/O signal.

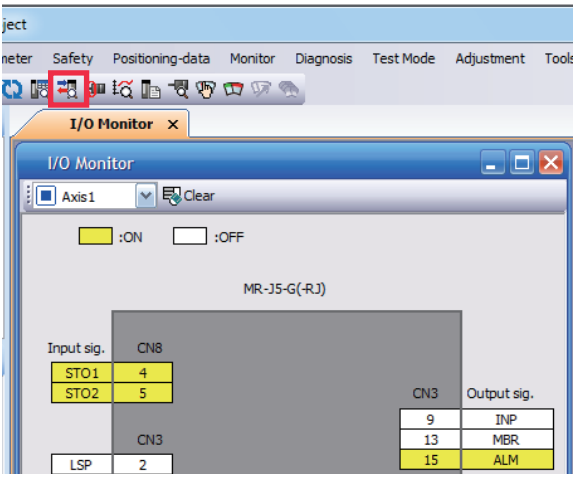


4.2 Instructions on startup

Instructions for power-on

- When the absolute position detection system is used in a rotary servo motor, [AL. 025 Absolute position erased] occurs the first time that the power is turned on and the servo motor cannot be changed to servo-on status. Shut off the power once, then cycle the power to deactivate the alarm.
- If the power is turned on while the servo motor is being rotated by an external force, an alarm may occur. Make sure that the servo motor is not operating before turning on the power. In addition, refer to the manual for the servo motor or encoder being used.

Stop

If any of the following situations occur, the servo amplifier suspends and stops the operation of the servo motor. If the servo motor is operated by the network command, the servo motor may be stopped by the controller command.

Operation/command	Stopping condition
Alarm occurrence	The servo motor decelerates to a stop. There are also alarms that activate and stop the dynamic brake. For details of alarms, refer to the following manual.  MR-J5 User's Manual (Troubleshooting)
EM2 (Forced stop 2) off	The servo motor decelerates to a stop. [AL. 0E6 Servo forced stop warning] occurs. In the torque mode, EM2 functions the same as EM1.
STO (STO1 and STO2) off	The base circuit is shut off and the dynamic brake operates to stop the servo motor.
Limit switch off	If LSP (Forward rotation stroke end), LSN (Reverse rotation stroke end), FLS (Upper stroke limit), or RLS (Lower stroke limit) is turned off, the servo motor will stop slowly and become in the servo-lock state. Operation in the opposite direction is possible.

Instructions for network disconnection

To turn off the system power and disconnect the servo amplifier from the network, specific procedures may be required. For details, refer to "Establishing and disconnecting the communication" in the following manual.

 MR-J5-G/MR-J5W-G User's Manual (Communication Function)

4.3 Troubleshooting at startup

Investigation by using MR Configurator2.

The reason that the servo motor does not rotate can be investigated via MR Configurator2.


The cause that the servo motor fails to rotate is acquired from the servo amplifier of the target axis, and displayed on "No Motor Rotation". The window will remain blank when no cause exists. "- - -" is displayed when off-line or the cause cannot be acquired.

4.4 Duplicate setting

Servo amplifier parameters for which setting has been completed can be copied to another servo amplifier. Use this function when replacing the servo amplifier of equipment with another servo amplifier during operation, and when starting up multiple devices with the same configuration.

Restrictions

■The following data is not duplicated. Set them as required after the duplication.

Item	Description
Homing	The information of the home position is not duplicated. Execute homing again.
Machine service life diagnosis	Machine service life diagnosis information may not be duplicated. Refer to "Machine diagnosis" in the following manual, and perform required settings.  MR-J5 User's Manual (Function)

■The following data is not duplicated.

- Alarm history data
- Drive recorder data

Duplication using MR Configurator2

1. The data set in MR Configurator2 can be saved as a project.
2. To copy the project to a different servo amplifier, open the project and then connect the servo amplifier and a personal computer via a USB cable. Turn on the servo amplifier control circuit power supply.
3. Write the required data in MR Configurator2. After the writing is completed, cycle the power or reset the software as necessary.

4.5 Test operation

Using the test operation function enables the machine operation to be checked before the actual operation. With a personal computer and MR Configurator2, operations such as the JOG operation, positioning operation, output signal forced output, and program operation can be performed.

Precautions

- The test operation mode is designed for checking servo operation. This mode is not for checking machine operation. Do not use this mode with the machine. Use this mode only with the servo motor.

Execution method

Test operation mode is enabled by MR Configurator2. To set to the normal operation mode again after executing the test operation mode, cycle the power or reset the software.


- Perform the test operation after the forced stop has been released. For details of the forced stop, refer to "Forced stop deceleration function" in the following manual.

 MR-J5 User's Manual (Function)

Test operation mode

Setting the servo amplifier to the test operation mode enables the test operation while the personal computer and servo amplifier are connected via a USB cable.

1. Turn off the power.
2. Turn "ON (up)" the test operation select switch (SW3-1).

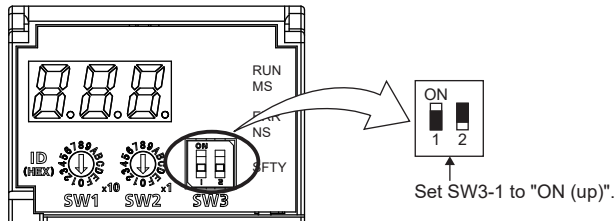

3. Turn on the power supply of the servo amplifier. Once initialization is complete, the display will change as follows.

Test operation status display



4. Use MR Configurator2 to perform the test operation.


Page 76 Motor driving by test operation

5. After the test operation is complete, turn off the power and "OFF (down)" the test operation select switch (SW3-1).

Motor driving by test operation

JOG operation

The JOG operation can be performed when there is no command from the controller. The motor can be operated at the specified speed. Operate the motor using the JOG Mode screen of MR Configurator2.

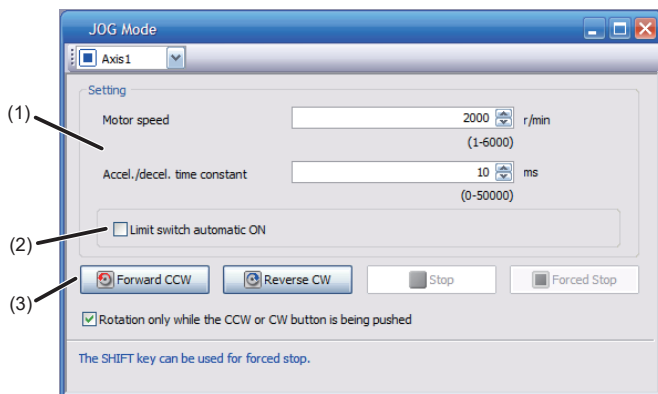

■Motor operation setting (1)

Set the motor speed and acceleration/deceleration time constants for JOG operation. When changing the speed to the permissible speed, set the speed in [Pr. PA28.4 Speed range limit selection].

■Limit switch automatic ON (2)


JOG operation can be performed when the limit switch is not connected. Be sure to avoid causing a collision while performing the operation.

■Operation (3)

The servo motor can be started (CCW/CW), paused, stopped, or forcibly stopped. Clicking "Start" starts the operation. When "Rotation only while the CCW or CW button is being pushed" is selected, clicking "Forward CCW" or "Reverse CW" will perform operation until "Stop" or "Forced Stop" is clicked.

Positioning operation

Positioning operation can be performed without the controller. Operate the motor using the Positioning Mode screen of MR Configurator2.

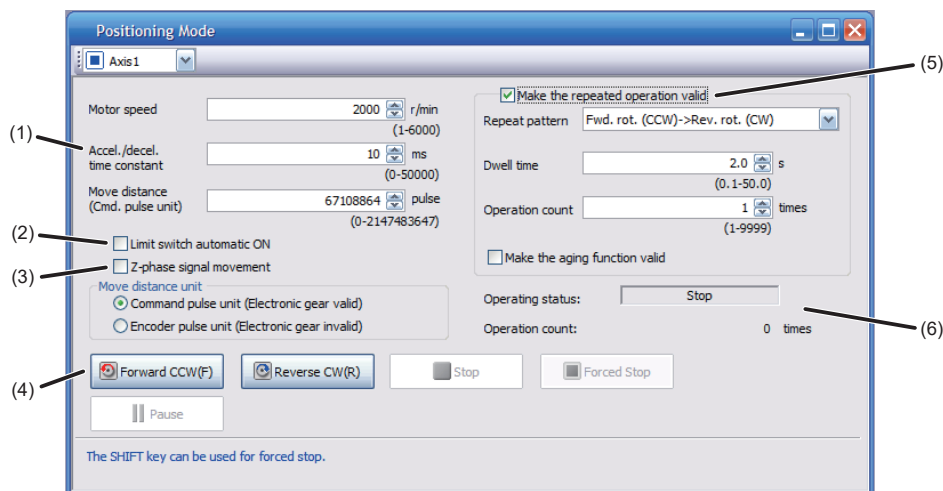

■Motor operation setting (1)

Set the motor speed, acceleration/deceleration time constants, and travel distance in the positioning operation mode. When changing the speed to the permissible speed, set the speed in [Pr. PA28.4 Speed range limit selection].

■Limit switch (2)

Select "Limit switch automatic ON" to perform the positioning operation when the limit switch is not connected. Be sure to avoid causing a collision while performing the operation.

■Move until Z-phase signal (3)

When "Z-phase signal movement" is selected, the servo motor moves until the first Z-phase signal after positioning operation.

■Operation (4)

The servo motor can be started (CCW/CW), paused, stopped, or forcibly stopped. Clicking "Operation Start" starts the operation in the specified operation condition.

■Repeat operation (5)

Selecting "Make the repeated operation valid" enables the repeat operation. Selecting "Make the aging function valid" enables the continuous operation until clicking "Stop" or "Forced Stop". Set the repeat pattern, the dwell time, and the number of operations.


■Operation status (6)

The operation status during the repeat operation and the number of operations are displayed.

Program operation


Positioning operation using multiple operation patterns can be performed without a controller. Operate the motor using the Program Operation screen of MR Configurator2. For details, refer to Help of MR Configurator2.

1. Open the Program Operation screen of MR Configurator2.

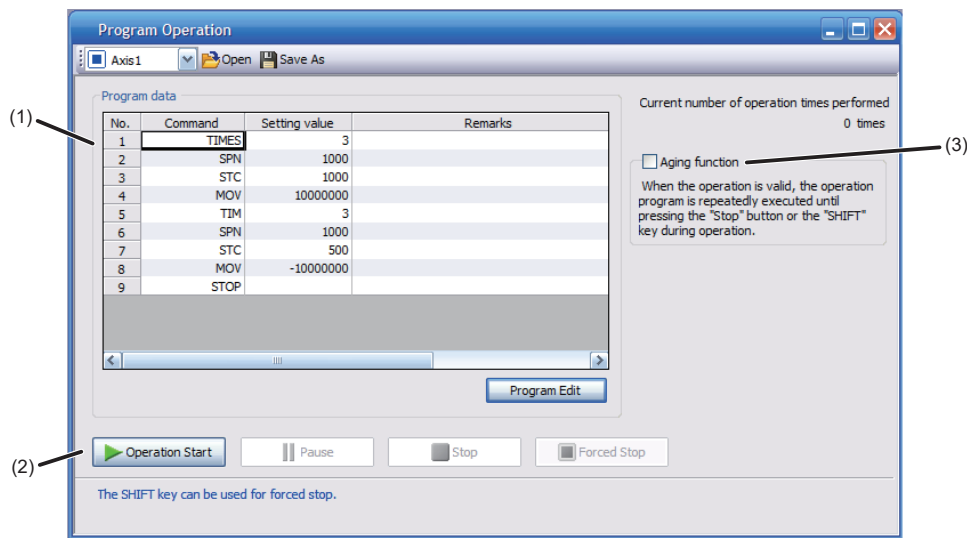

No.	Item	Screen operation
(1)	Program display	Displays the program. To edit the display item, click "Program Edit".
(2)	Operation	The servo motor can be started (CCW/CW), paused, stopped, or forcibly stopped. Clicking "Operation Start" starts the operation.
(3)	Repeat execution	Displays the number of execution times. Selecting "Aging function" enables the repeated operation of the operation program.


2. Clicking "Program Edit" in the program operation screen opens the Program Edit screen. Input the program and click "OK". For program commands, refer to Help of MR Configurator2.

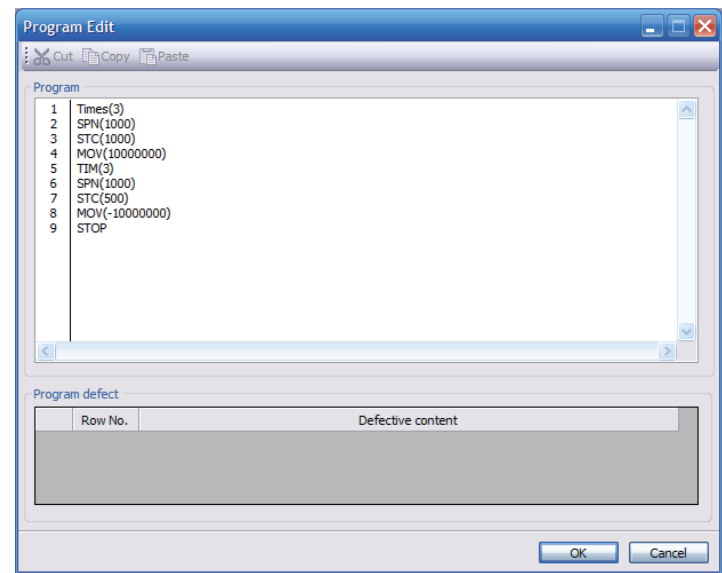

Single-step Feed

This function enables test operation in accordance with the point table. Configure the settings of the point table operation in advance. For the point table operation, refer to "POSITIONING MODE (POINT TABLE METHOD) (CP)" in the following manual.

MR-J5 User's Manual (Function)

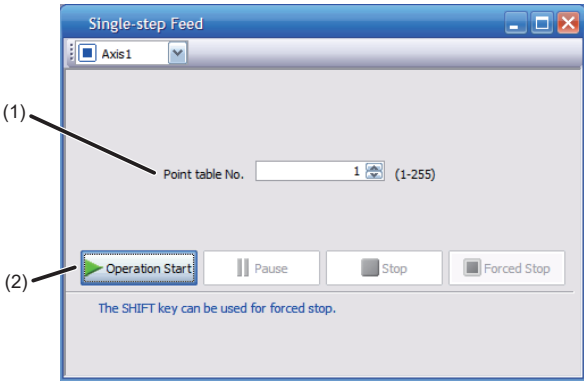

No.	Item	Screen operation
(1)	Point table No.	Specify the point table number to be operated.
(2)	Operation	The servo motor can be started (CCW/CW), paused, stopped, or forcibly stopped. Clicking "Operation Start" starts the operation in accordance with the point table.

Motor-less operation

Point

- The motor-less operation cannot be used in the fully closed loop control mode, linear servo motor control mode, direct drive motor control mode, or cyclic synchronous pressure mode.

Without connecting a servo motor to the servo amplifier, output signals or status displays can be provided in response to the controller commands as if the servo motor is actually running. This operation can be used to check the sequence of a controller. Use this operation after the forced stop has been released. Use this operation with the servo amplifier connected to the controller.

To perform the motor-less operation, set [Pr. PC05.0 Motor-less operation selection] to "1" (enabled). To terminate the motor-less operation, set [Pr. PC05.0] to "0" (disabled).

To apply the motor-less operation settings, cycle the power or reset the software.

Load conditions

The operation is performed in the following conditions. Note that the conditions may differ from those of actual machines.

Load item	Condition
Load torque	0
Load to motor inertia ratio	[Pr. PB06 Load to motor inertia ratio/load to motor mass ratio]


Alarm

In the motor-less operation, some alarms and warnings are not generated. The following are examples of alarms which do not occur.

- [AL. 016 Encoder initial communication error 1]
- [AL. 01E Encoder initial communication error 2]
- [AL. 01F Encoder initial communication error 3]
- [AL. 020 Encoder normal communication error 1]
- [AL. 021 Encoder normal communication error 2]
- [AL. 025 Absolute position erased]
- [AL. 092 Battery cable disconnection warning]
- [AL. 09F Battery warning]

Output signal (DO) forced output

This function forcibly switches the output signals on and off regardless of the servo status. Use this function for purposes such as checking output signal wiring. Operate this function on the DO Forced Output screen of MR Configurator2.

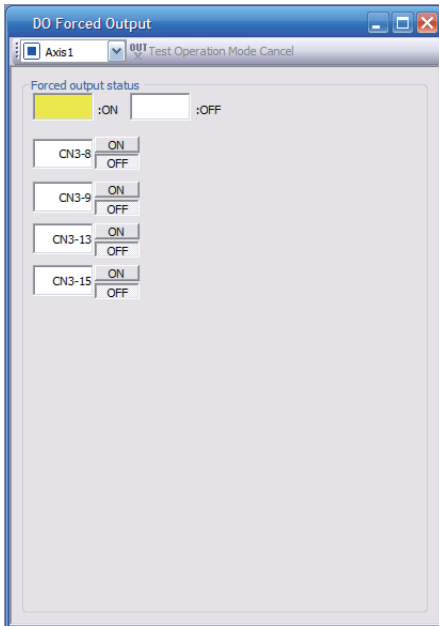

Each output signal can be turned on/off by clicking the ON/OFF button next to its name. After checking, click "Test Operation Mode Cancel" and terminate the output signal (DO) forced output.

4.6 Servo amplifier setting initialization

Servo amplifier settings can be initialized by using the engineering software (MR Mode Change packed with MR Configurator2).


However, information related to the servo amplifier, including power-on cumulative time and the number of relays on/off, is not initialized.

Point


- The storage area of the servo amplifier has a limit for the number of writings. Do not use this function frequently.
- Execute the initialization with the servo amplifier disconnected from the network and directly connected to MR Mode Change via a USB cable.

Initialization procedure by MR Mode Change

Open MR Mode Change and use a USB cable to connect the servo amplifier that will be initialized with a personal computer. Turn on the servo amplifier control circuit power supply.

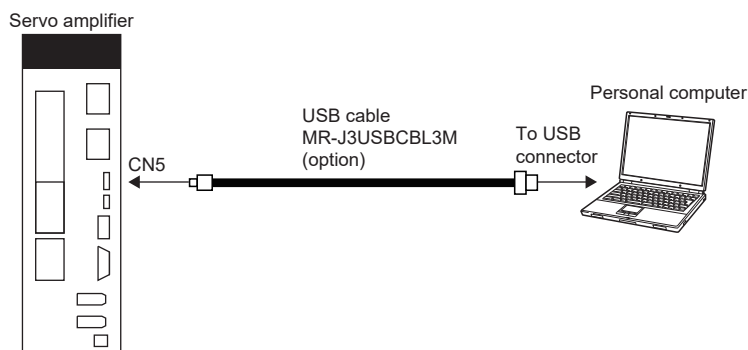

Confirm that "Reset to factory settings" is selected, then click "Write". After the writing is completed, cycle the power or reset the software.

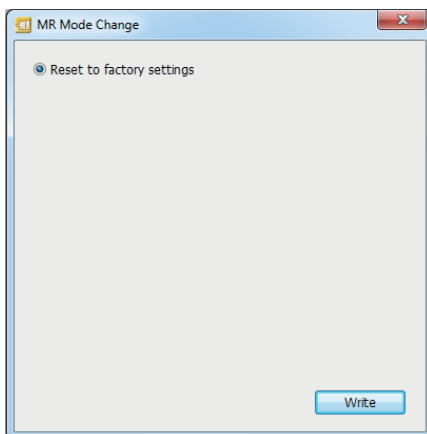

Cycling the power or resetting the software initializes the setting of the servo amplifier at startup. Confirm that the initialization has completed by reading the settings from the servo amplifier.

5 MAINTENANCE, INSPECTION AND PARTS REPLACEMENT

5.1 Inspection items

Precautions

- Do not disassemble, repair, or modify the product.
- For repair and parts replacement, contact your local sales office.
- To prevent a malfunction, do not perform an insulation resistance test (megger test) on the servo amplifier.

Periodic inspection


Perform the following inspections.

- Check for loose terminal block screws. Retighten any loose screws.
- Check the cables and the like for scratches or cracks. Inspect them periodically according to operating conditions especially when the servo motor is movable.
- Check that the connector is securely connected to the servo amplifier.
- Check that the wires are not coming out from the connector.
- Check for dust accumulation on the servo amplifier.
- Check for unusual noise generated from the servo amplifier.
- Make sure that the emergency stop circuit operates properly such that an operation can be stopped immediately and a power is shut off by the emergency stop switch.

5.2 Parts with a service life

This section describes the service life of parts. The service life varies depending on the operating methods and environment. If any fault is found in a part, it is necessary to replace it immediately regardless of its service life. For parts replacement, please contact your local sales office. Customers can replace the cooling fan by purchasing a fan unit. For details, refer to "Fan unit replacement procedure" in the following manual.

 MR-J5 User's Manual (Hardware)

Part name	Recommended service life
Smoothing capacitor	10 years
Relay	Total number of power-on, operation of dynamic brake, and forced stops: 100,000 times
Cooling fan	50,000 hours to 70,000 hours (7 to 8 years)
Absolute position battery	Refer to "ABSOLUTE POSITION DETECTION SYSTEM" in the following manual.  MR-J5 User's Manual (Hardware)

Smoothing capacitor

The service life of the capacitor is 10 years (with a three-phase power supply input) under continuous operation in air-conditioned environments (ambient temperatures of 40 °C or less at altitudes of up to 1000 m and 30 °C or less at altitudes of over 1000 m and up to 2000 m). Ripple currents or other factors will deteriorate the characteristic of the smoothing capacitor. The service life of the capacitor greatly varies depending on ambient temperature and operating conditions.

Relays

Contact faults occur due to contact wear arisen from switching currents. A relay will reach the end of its service life if the following actions are performed a total of 100,000 times: powering on the servo amplifier, inputting the dynamic brake operation, and inputting the forced stop. In addition, the service life of a relay may vary depending on the power supply capacity.

For the approximate number of times a dynamic brake can be used, refer to "Dynamic brake characteristics" in the following manual.

 MR-J5 User's Manual (Hardware)

Servo amplifier cooling fan

The cooling fan bearings will reach the end of their service life in 50,000 hours to 70,000 hours. Therefore, the cooling fan must be replaced after seven to eight years of continuous operation as a guideline. If unusual noise or vibration is found during inspection, the cooling fan must also be replaced. The service life has been calculated in an environment which contains no corrosive gas, flammable gas, oil mist, or dust. The average annual ambient temperature was 40 °C.

6 COMPLIANCE WITH GLOBAL LAWS AND REGULATIONS

This chapter provides information common among AC servo amplifiers. Information that is not applicable to MR-J5 servo amplifier/other equipment combinations is also included.

6.1 Compliance with global standards

For compliance with the standards of Europe/UK, United States/Canada, and South Korea, refer to the following manual. Safety Instructions and Precautions for MR-J5 AC Servos (IB(NA)-0300391)

6.2 Handling of AC servo amplifier batteries for the United Nations Recommendations on the Transport of Dangerous Goods

The transportation of lithium metal batteries is regulated under the Technical Instruction (ICAO-TI) by the International Civil Aviation Organization (ICAO) and the International Maritime Dangerous Goods Code (IMDG Code) by the International Maritime Organization (IMO), which are based on the United Nations Recommendations on the Transport of Dangerous Goods (hereinafter Recommendations of the United Nations).

This section describes the handling of lithium metal batteries in air transportation that has been changed in response to the IATA (International Air Transport Association) Dangerous Goods Regulations 63rd Edition issued on January 1, 2022, and the handling of lithium metal batteries in maritime transportation that has also been changed.

Target model

Battery (cell)

Model	Option model	Type	Lithium content	Mass of battery	Remark
ER6	MR-J3BAT	Cell	0.65 g	16 g	Each battery (cell) contains more than 0.3 grams of lithium content and must be handled as dangerous goods (Class 9) for certain packaging requirements.
	MR-J3W03BATSET	Cell	0.65 g	16 g	
ER17330	MR-BAT	Cell	0.48 g	13 g	
	A6BAT	Cell	0.48 g	13 g	

Battery unit (assembled)

Model	Option model	Type	Lithium content	Mass of battery	Remark
ER6	MR-J2M-BT_	Assembled battery (Seven cells)	4.55 g	112 g	The assembled battery contains more than two grams of lithium content and must be handled as dangerous goods (Class 9) regardless of packaging requirements.
CR17335A	MR-BAT6V1	Assembled battery (Two cells)	1.20 g	34 g	Each battery (cell) contains more than 0.3 grams of lithium content and must be handled as dangerous goods (Class 9) for certain packaging requirements.
	MR-BAT6V1SET_	Assembled battery (Two cells)	1.20 g	34 g	
	MR-BAT6V1BJ	Assembled battery (Two cells)	1.20 g	34 g	

Purpose

To enable safer transportation of lithium metal batteries.

Handling during transportation

This section describes how to handle lithium metal batteries in transportation. The batteries alone transported by air are classified as UN3090, and the batteries packed with or contained in equipment transported by air are classified as UN3091. Lithium metal batteries are classified as SP188 when transported by sea as non-dangerous goods.

Air transportation of lithium metal batteries alone

Packaging requirements	Classification	Main requirements
Lithium content per cell ≤ 1 g Lithium content per battery ≤ 2 g	UN3090 PI968 Section IB	The total battery weight per package must be 10 kg or less. The package must pass a 1.2 m drop test, and a lithium battery mark (size: 100 × 100 mm) must be attached on the package. The batteries must be handled conforming to Class 9 Dangerous Goods Regulations (e.g.: displaying the lithium battery hazard label).
Lithium content per cell > 1 g Lithium content per battery > 2 g	UN3090 PI968 Section IA	The total battery weight per package must be 35 kg or less. The package must comply with UN specification packing requirements and be handled complying with Class 9 Dangerous Goods Regulations (e.g.: displaying the lithium battery hazard label).

Transportation of lithium metal batteries alone as cargo on passenger aircraft has been prohibited since January 1, 2015.

Lithium metal batteries can be transported by sea or cargo aircraft.

Air transportation of lithium metal batteries packed with or contained in equipment

Lithium metal batteries packed with or contained in equipment can be transported as cargo on passenger aircraft.

■For batteries packed with equipment, follow the requirements of UN3091 PI969.

Batteries are classified into either Section II or Section I depending on the lithium content/packaging requirements.

■For batteries contained in equipment, follow the requirements of UN3091 PI970.

Batteries are classified into either Section II or Section I depending on the lithium content/packaging requirements. The special handling may be unnecessary depending on the number of batteries and gross mass per package.

Maritime transportation of lithium metal batteries

Packaging requirements	Classification	Main requirements
Lithium content per cell ≤ 1 g Lithium content per battery ≤ 2 g	SP188	For transportation of batteries alone, the total weight of the package must be 30 kg or less. The package must pass a 1.2 m drop test, and the lithium battery mark (size: 100 × 100 mm) must be attached on the package. For transportation of batteries packed with or contained in equipment, the special handling may be unnecessary depending on the number of batteries per package.
Lithium content per cell > 1 g Lithium content per battery > 2 g	—	The package must comply with UN specification packing requirements and be handled complying with Class 9 Dangerous Goods Regulations (e.g.: displaying the lithium battery hazard label).

Package at our shipment

When the packages containing the target batteries are shipped overseas directly from us, the lithium battery mark (Figure 1) is displayed on the packages.

If the packages are shipped domestically, the mark (Figure 1) is not displayed.

Thus, when customers transport the domestic-bound packages overseas, the lithium battery mark (Figure 1) must be displayed on the packages by customers. The responsibility for the cargo lies with the customers. Please contact a transportation company for details on the lithium battery mark (Figure 1).

For both domestic and overseas shipments, the target battery units which must be handled as Class 9 Dangerous Goods are packaged according to UN specification packaging requirements, and the packages bear the lithium battery hazard label (Figure 2).

Figure 1: Lithium battery mark example



* UN number(s)

** Telephone number for additional information

Figure 2: Lithium battery hazard label example



Transportation precaution for customers

For maritime or air transportation, the lithium battery mark (Figure 1) is required also for the outer package containing several packages of Mitsubishi Electric cells or batteries. When the content of a package must be handled as dangerous goods (Class 9), the package must comply with UN specification packaging requirements. Please issue Shipper's Declaration for Dangerous Goods and an Air Waybill (AWB) and attach the lithium battery hazard label (Figure 2) to the packages for transportation.

This section outlines the IATA Dangerous Goods Regulations 63rd Edition and the conditions of SP188 for non-dangerous goods transported by sea. The IATA Dangerous Goods Regulations are revised, and the requirements are changed annually. When customers transport lithium batteries by themselves, the responsibility for the cargo lies with the customers. Thus, be sure to check the latest version of the IATA Dangerous Goods Regulations and International Maritime Dangerous Goods Code (IMDG Code).

6.3 Symbol for EU

The contents of the regulations described in this section apply in countries within the EU.

EU Battery Regulation

To comply with the requirements of the EU Battery Regulation (REGULATION (EU) 2023/1542) newly enacted by the European Commission, which took effect on August 18, 2024, the batteries incorporated in the AC servo amplifier products are marked with the CE mark.



The symbol that is affixed to the battery inside the product is explained here.



Point

- This symbol is valid only in EU.

This symbol is specified in Article 13 "Labelling and marking of batteries" and Annex IV of the EU battery regulation (REGULATION(EU) 2023/1542).

MITSUBISHI ELECTRIC products are designed and manufactured with high quality materials and components which can be recycled and/or reused.

This symbol means that batteries and accumulators, at their end-of-life, should be disposed of separately from household waste.

If a chemical symbol is shown beneath the above symbol, a heavy metal of the corresponding chemical symbol is contained in the battery or the accumulator with the following standard concentration or more.

This will be indicated as follows.

Hg: mercury (0.0005 %), Cd: cadmium (0.002 %), Pb: lead (0.004 %)

In the European Union, there are separate collection systems for used batteries and accumulators. Batteries and accumulators must be disposed of properly.

Help us to conserve the environment we live in.

6.4 Compliance with China Compulsory Certification (CCC)

Introduction

Some products are required to comply with China Compulsory Certification (hereinafter referred to as CCC) if exported, distributed, or sold to China. An outline of CCC is explained in this section. Mitsubishi Electric servo products are not subject to CCC.



Outline of CCC

CCC is a system for product certification that has been in effect in China since August 2003, the purpose of which is to protect consumers and ensure safety domestically in China. The certification system currently has five types of certification: safety, electromagnetic compatibility (EMC), safety + EMC, fire-fighting equipment, and wireless LAN. Products subject to the certification are allowed to be exported, distributed, or sold to China only if they are certified by this system.

Products that have received certification proving compliance with the relevant technical standards (or products declared by the manufacturer as being compliant) must carry the specified mark (CCC mark). Many of the technical standards to be applied are GB standards (Chinese national standards), which comply with global standards such as those set forth by the IEC (International Electrotechnical Commission) and CISPR (International Special Committee on Radio Interference).

As part of the State Administration for Market Supervision and Administration Announcement No. 36 of 2023 ("Administration for Market Supervision and Administration Announcement on the Description of the Catalogue of Compulsory Product Certification and Issue of the List of Products" (Thursday, August 10, 2023)), a revised list of products subject to CCC certification (2023 version) has been published. Simultaneously, the description of the catalogue of compulsory product certification and the list of products in Announcement No. 18 of 2020 (revised 2020) was repealed.

Judgment

16 product groups divided into 96 categories are specified as the subject products (announcement No. 36 of 2023). The following table shows the judgment rendered regarding the CCC compliance requirement for servo products.

Model	Judgment
AC servo amplifier	Not subject
AC servo motor ^{*1}	Not subject
Options ^{*2}	Not subject

- ^{*1} AC servo motors are included in the list of low-power motors (small motors 750 W or less) in the list of products subject to compulsory certification, but are not subject to certification requirements for the following reason.
Explosion proof motors and controlled motors (servo motors, stepping motors, etc.) are excluded from the subject small capacity motors.
- ^{*2} Mitsubishi Electric option cables use the wires that is not classified into the cable category in the catalog.

6.5 Compliance with the China RoHS directive





Outline

The China RoHS directive: 电子信息产品污染控制管理办法 (Management Methods for Controlling Pollution by Electronic Information Products) came into effect on March 1, 2007. The China RoHS directive was replaced by the following China RoHS directive: 电器电子产品有害物质限制使用管理办法 (Management Methods for the Restriction of the Use of Hazardous Substances in Electrical and Electronic Products). The succeeding China RoHS directive has been in effect since July 1, 2016.

The China RoHS directive restricts the following hazardous substances: six hazardous substances (lead, mercury, cadmium, hexavalent chromium, polybrominated biphenyls (PBB), and polybrominated diphenyl ethers (PBDE)) which are also restricted by EU RoHS 2 (directive 2011/65/EU), and other hazardous substances specified by the State (currently no applicable substances).

Status of our products for compliance with the China RoHS directive

The following table shows the logo types for the environmental protection use period, and whether the six hazardous substances are contained in our products or not. This table was created based on the standard SJ/T11364.

Part name		Hazardous substance (substance/threshold/standard) * ¹						Logo for environmental protection use period * ²	Remark
		Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr(VI))	PBB	PBDE		
		Threshold: cadmium: 0.01 wt% (100 ppm), other than cadmium: 0.1 wt% (1000 ppm)							
Servo amplifier Servo system controller	Mounting board	×	○	○	○	○	○		—
	Heat sink	×	○	○	○	○	○		
	Resin cabinet	○	○	○	○	○	○		
	Plate and screw	○	○	○	○	○	○		
Servo motor	Bracket	×	○	○	○	○	○		—
	Mounting board	×	○	○	○	○	○		
	Resin cabinet	○	○	○	○	○	○		
	Core and cable	○	○	○	○	○	○		
Cable product	Wire	○	○	○	○	○	○		Including connector set
	Connector	○	○	○	○	○	○		
Optional unit	Mounting board	×	○	○	○	○	○		—
	Resin cabinet	○	○	○	○	○	○		
	Plate and screw	○	○	○	○	○	○		

*1 ○: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T26572.

×: Indicates that said hazardous substance contained in at least one of the homogeneous materials for this part is above the limit requirement of GB/T26572.

*2 Indications based on "Marking for the restriction of the use of hazardous substances in electrical and electronic products" [SJ/T11364-2014]



Indicates that a certain hazardous substance is contained in the product manufactured or sold in China.

Follow safety and usage precautions for the product, and use the product within a limited number of years from the production date. Doing so prevents any hazardous substances in the product from causing environmental pollution or seriously affecting human health or property.



Indicates that no certain hazardous substance is contained in the product.

Difference between the China RoHS directive and the EU RoHS directive

The China RoHS directive allows no restriction exemption unlike the EU RoHS directive. Although a product complies with the EU RoHS directive, a hazardous substance in the product may be considered to be above the limit requirement (marked "×") in the China RoHS directive.


The following shows some restriction exemptions and their examples according to the EU RoHS directive.

- Lead as an alloying element in steel for machining purposes and in galvanized steel containing up to 0.35 % lead by weight, lead as an alloying element in aluminum containing up to 0.4 % lead by weight, and copper alloy containing up to 4 % lead by weight, e.g. brass-made insert nuts
- Lead in high melting temperature type solders (i.e. lead-based alloys containing 85 % by weight or more lead)
- Electrical and electronic components (such as piezoelectric sensors) containing lead in glass or ceramic materials, but not including the dielectric ceramics used in capacitors
- Electrical and electronic components containing lead in a glass or ceramic matrix compound, e.g. chip resistors

Status of our products for compliance with the China RoHS directive (Chinese)

The following table is given in Chinese according with a request by "Management Methods for the Restriction of the Use of Hazardous Substances in Electrical and Electronic Products".

☞ Page 90 Status of our products for compliance with the China RoHS directive

部件名称		有害物质（物质名称/阈值/基准）*1						环境保护 使用期限 标识 *2	备注
		铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	PBB	PBDE		
		阈值：镉：0.01wt%（100ppm）、镉以外：0.1wt%（1000ppm）							
伺服放大器 伺服系统控制 器	电路板组件	×	○	○	○	○	○		—
	散热片	×	○	○	○	○	○		
	树脂壳体	○	○	○	○	○	○		
	金属板、螺丝	○	○	○	○	○	○		
伺服电机	托架	×	○	○	○	○	○		—
	电路板组件	×	○	○	○	○	○		
	树脂壳体	○	○	○	○	○	○		
	铁心、电线	○	○	○	○	○	○		
电缆加工品	电线	○	○	○	○	○	○		包括连接器 组件
	连接器	○	○	○	○	○	○		
选件模块	电路板组件	×	○	○	○	○	○		—
	树脂壳体	○	○	○	○	○	○		
	金属板、螺丝	○	○	○	○	○	○		

*1 ○: 表示该有害物质在该部件所有均质材料中的含量均在GB/T26572规定的限量要求以下。

×: 表示该有害物质在该部件的至少一种均质材料中的含量超出GB/T26572规定的限量要求。

*2 根据“电子电气产品有害物质限制使用标识要求”、[SJ/T11364-2014]的表示



该标志表示在中国制造/销售的产品中含有特定有害物质。

只要遵守本产品的安全及使用方面的注意事项, 从生产日期起的环保使用期限内不会造成环境污染或对人体、财产产生深刻的影响。



该标志表示制造的产品中不含有特定有害物质。

REVISIONS

*The manual number is given on the bottom left of the back cover.

Revision date	*Manual number	Description
July 2019	SH(NA)-030294ENG-A	First edition
January 2020	SH(NA)-030294ENG-B	<p>■The following functions are added: Profile mode, fully closed loop system, scale measurement function, S-pattern acceleration/ deceleration time constants, command offset, super trace control, touch probe</p>
July 2020	SH(NA)-030294ENG-C	<p>■The MR-J5-500G_, MR-J5-700G_, and models without the dynamic brake are added. ■The following functions are added: Continuous operation to torque control mode (ct), firmware update, multifunction regeneration converter, SS1, SS2, SOS, SLS, SSM, SBC, SDI, SLI, SLT ■Added: Section 1.3, Section 1.7, Section 6.4</p>
November 2020	SH(NA)-030294ENG-D	<p>■The MR-J5-60G4_, MR-J5-100G4_, MR-J5-200G4_, and MR-J5-350G4_ are added. ■Added/edited: Section 1.2, Section 1.4, Section 1.5, Section 1.7, Chapter 2, Section 5.3</p>
March 2021	SH(NA)-030294ENG-E	<p>■The following function is added: Positioning mode (point table method) ■Added/edited: Section 1.4, Chapter 2, Section 2.1, Section 4.1, Section 4.5, Section 5.2</p>
June 2021	SH(NA)-030294ENG-F	<p>■The following functions are added: CC-Link IE Field Network Basic, touch probe of the standard model ■HK-MT series servo motors are added. ■Added/edited: Section 1.2, Section 1.4, Section 1.7, Section 2.1, Section 2.2, Section 3.2, Section 4.1</p>
July 2022	SH(NA)-030294ENG-G	<p>■The following functions are added: CC-Link IE TSN Class A, master-slave operation function ■Complied with UKCA ■The servo amplifier display is changed. ■Added/edited: Section 1.2, Section 1.4, Section 1.7, Section 2.1, Section 2.2, Section 3.1, Section 3.2, Chapter 4, Section 4.1, Section 4.5, Chapter 6, Section 6.1, Section 6.2, Section 6.4</p>
January 2023	SH(NA)-030294ENG-H	<p>■The following function is added: Override function ■EU WEEE Directive is added. ■Added/edited: Section 2.2, Section 5.2, Section 5.3, Section 6.3</p>
July 2023	SH(NA)-030294ENG-J	<p>■The safety sub-function by a network connection of the MR-J5W_ -G is added. ■Edited: Section 1.2, Section 1.4, Section 2.1, Section 3.2, Section 6.3</p>
January 2024	SH(NA)-030294ENG-K	<p>■The MR-J5-500G4_ and MR-J5-700G4_ are added. ■Edited: Section 1.2, Section 1.4, Section 1.5, Section 1.7, Section 2.1, Section 3.1, Section 3.2, Section 4.1, Section 4.5, Section 5.2</p>
July 2024	SH(NA)-030294ENG-L	<p>■The MR-J5-_G_-LL is added. ■Edited: Section 1.2, Section 1.4, Section 1.5, Section 1.6, Section 2.1, Section 2.2, Chapter 3, Section 3.1, Section 3.2, Section 4.5, Section 4.6, Chapter 6, Section 6.4</p>
January 2025	SH(NA)-030294ENG-M	<p>■The MR-J5-60G4-HS, MR-J5-100G4-HS, MR-J5-200G4-HS, MR-J5-350G4-HS, MR-J5-12KG(4)_, MR-J5-17KG(4)_, and MR-J5-25KG(4)_ are added. ■Edited: Section 1.2, Section 1.4, Section 1.5, Section 1.7, Section 3.1</p>
July 2025	SH(NA)-030294ENG-N	<p>■MR-CM08K1 and special coating specification products are added. ■Added/edited: Section 1.2, Section 1.4, Section 1.7, Section 2.2, Section 6.2, Section 6.3</p>

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

© 2019 MITSUBISHI ELECTRIC CORPORATION

WARRANTY

Warranty

1. Warranty period and coverage

We will repair any failure or defect hereinafter referred to as "failure" in our FA equipment hereinafter referred to as the "Product" arisen during warranty period at no charge due to causes for which we are responsible through the distributor from which you purchased the Product or our service provider. However, we will charge the actual cost of dispatching our engineer for an on-site repair work on request by customer in Japan or overseas countries. We are not responsible for any on-site readjustment and/or trial run that may be required after a defective unit are repaired or replaced.

[Term]

For terms of warranty, please contact your original place of purchase.

[Limitations]

(1) You are requested to conduct an initial failure diagnosis by yourself, as a general rule.

It can also be carried out by us or our service company upon your request and the actual cost will be charged. However, it will not be charged if we are responsible for the cause of the failure.

(2) This limited warranty applies only when the condition, method, environment, etc. of use are in compliance with the terms and conditions and instructions that are set forth in the instruction manual and user manual for the Product and the caution label affixed to the Product.

(3) Even during the term of warranty, the repair cost will be charged on you in the following cases;

1. a failure caused by your improper storing or handling, carelessness or negligence, etc., and a failure caused by your hardware or software problem
2. a failure caused by any alteration, etc. to the Product made on your side without our approval
3. a failure which may be regarded as avoidable, if your equipment in which the Product is incorporated is equipped with a safety device required by applicable laws and has any function or structure considered to be indispensable according to a common sense in the industry
4. a failure which may be regarded as avoidable if consumable parts designated in the instruction manual, etc. are duly maintained and replaced
5. any replacement of consumable parts (battery, fan, smoothing capacitor, etc.)
6. a failure caused by external factors such as inevitable accidents, including without limitation fire and abnormal fluctuation of voltage, and acts of God, including without limitation earthquake, lightning and natural disasters
7. a failure generated by an unforeseeable cause with a scientific technology that was not available at the time of the shipment of the Product from our company
8. any other failures which we are not responsible for or which you acknowledge we are not responsible for

2. Term of warranty after the stop of production

(1) We may accept the repair at charge for another seven (7) years after the production of the product is discontinued. The announcement of the stop of production for each model can be seen in our Sales and Service, etc.

(2) Please note that the Product (including its spare parts) cannot be ordered after its stop of production.

3. Service in overseas countries

Our regional FA Center in overseas countries will accept the repair work of the Product. However, the terms and conditions of the repair work may differ depending on each FA Center. Please ask your local FA center for details.

4. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation to:

- (1) Damages caused by any cause found not to be the responsibility of Mitsubishi.
- (2) Loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products.
- (3) Special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products.
- (4) Replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

5. Change of Product specifications

Specifications listed in our catalogs, manuals or technical documents may be changed without notice.

6. Application and use of the Product

- (1) For the use of our AC Servo, its applications should be those that may not result in a serious damage even if any failure or malfunction occurs in AC Servo, and a backup or fail-safe function should operate on an external system to AC Servo when any failure or malfunction occurs.
- (2) Our AC Servo is designed and manufactured as a general purpose product for use at general industries. Therefore, applications substantially influential on the public interest for such as atomic power plants and other power plants of electric power companies, and also which require a special quality assurance system, including applications for railway companies and government or public offices are not recommended, and we assume no responsibility for any failure caused by these applications when used.
In addition, applications which may be substantially influential to human lives or properties for such as airlines, medical treatments, railway service, incineration and fuel systems, man-operated material handling equipment, entertainment machines, safety machines, etc. are not recommended, and we assume no responsibility for any failure caused by these applications when used. We will review the acceptability of the abovementioned applications, if you agree not to require a specific quality for a specific application. Please contact us for consultation.
- (3) Mitsubishi Electric shall have no responsibility or liability for any problems involving programmable controller trouble and system trouble caused by DoS attacks, unauthorized access, computer viruses, and other cyberattacks.

TRADEMARKS

MELSERVO is a trademark or registered trademark of Mitsubishi Electric Corporation in Japan and/or other countries.
All other product names and company names are trademarks or registered trademarks of their respective companies.

SH(NA)-030294ENG-N(2507)MEE

MODEL:

MODEL CODE:

mitsubishi electric corporation

HEAD OFFICE: TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
NAGOYA WORKS: 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA 461-8670, JAPAN

When exported from Japan, this manual does not require application to the
Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.

Compliance with the indicated global standards and regulations is current as of the release date of this manual.