

Mitsubishi Electric Industrial Robot


CR750/CR751 series controller
CR800 series controller


R56TB/R57TB


Instruction Manual


Safety Precautions


Always read the following precautions and the separate "Safety Manual" before starting use of the robot to learn the required measures to be taken.


 **CAUTION** All teaching work must be carried out by an operator who has received special training. (This also applies to maintenance work with the power source turned ON.)
Enforcement of safety training


 **CAUTION** For teaching work, prepare a work plan related to the methods and procedures of operating the robot, and to the measures to be taken when an error occurs or when restarting. Carry out work following this plan. (This also applies to maintenance work with the power source turned ON.)
Preparation of work plan


 **WARNING** Prepare a device that allows operation to be stopped immediately during teaching work. (This also applies to maintenance work with the power source turned ON.)
Setting of emergency stop switch

 **CAUTION** During teaching work, place a sign indicating that teaching work is in progress on the start switch, etc. (This also applies to maintenance work with the power source turned ON.)
Indication of teaching work in progress

 **WARNING** Provide a fence or enclosure during operation to prevent contact of the operator and robot.
Installation of safety fence

 **CAUTION** Establish a set signaling method to the related operators for starting work, and follow this method. Signaling of operation start

 **CAUTION** As a principle turn the power OFF during maintenance work. Place a sign indicating that maintenance work is in progress on the start switch, etc.
Indication of maintenance work in progress

 **CAUTION** Before starting work, inspect the robot, emergency stop switch and other related devices, etc., and confirm that there are no errors.
Inspection before starting work

- The points of the precautions given in the separate "Safety Manual" are given below. Refer to the actual "Safety Manual" for details.

⚠CAUTION

Use the robot within the environment given in the specifications. Failure to do so could lead to a drop or reliability or faults. (Temperature, humidity, atmosphere, noise environment, etc.)

⚠CAUTION

Transport the robot with the designated transportation posture. Transporting the robot in a non-designated posture could lead to personal injuries or faults from dropping.

⚠CAUTION

Always use the robot installed on a secure table. Use in an instable posture could lead to positional deviation and vibration.

⚠CAUTION

Wire the cable as far away from noise sources as possible. If placed near a noise source, positional deviation or malfunction could occur.

⚠CAUTION

Do not apply excessive force on the connector or excessively bend the cable. Failure to observe this could lead to contact defects or wire breakage.

⚠CAUTION

Make sure that the workpiece weight, including the hand, does not exceed the rated load or tolerable torque. Exceeding these values could lead to alarms or faults.

⚠WARNING

Securely install the hand and tool, and securely grasp the workpiece. Failure to observe this could lead to personal injuries or damage if the object comes off or flies off during operation.

⚠WARNING

Securely ground the robot and controller. Failure to observe this could lead to malfunctioning by noise or to electric shock accidents.

⚠CAUTION

Indicate the operation state during robot operation. Failure to indicate the state could lead to operators approaching the robot or to incorrect operation.

⚠WARNING

When carrying out teaching work in the robot's movement range, always secure the priority right for the robot control. Failure to observe this could lead to personal injuries or damage if the robot is started with external commands.

⚠CAUTION

Keep the jog speed as low as possible, and always watch the robot. Failure to do so could lead to interference with the workpiece or peripheral devices.

⚠CAUTION

After editing the program, always confirm the operation with step operation before starting automatic operation. Failure to do so could lead to interference with peripheral devices because of programming mistakes, etc.

⚠CAUTION

Make sure that if the safety fence entrance door is opened during automatic operation, the door is locked or that the robot will automatically stop. Failure to do so could lead to personal injuries.

⚠CAUTION

Never carry out modifications based on personal judgments, or use non-designated maintenance parts. Failure to observe this could lead to faults or failures.

⚠WARNING

When the robot arm has to be moved by hand from an external area, do not place hands or fingers in the openings. Failure to observe this could lead to hands or fingers catching depending on the posture.

CAUTION

Do not stop the robot or apply emergency stop by turning the robot controller's main power OFF. If the robot controller main power is turned OFF during automatic operation, the robot accuracy could be adversely affected. Moreover, it may interfere with the peripheral device by drop or move by inertia of the arm.

CAUTION

Do not turn off the main power to the robot controller while rewriting the internal information of the robot controller such as the program or parameters. If the main power to the robot controller is turned off while in automatic operation or rewriting the program or parameters, the internal information of the robot controller may be damaged.

WARNING

For using RH-5AH/10AH/15AH series or RH-6SH/12SH/18SH series.
While pressing the brake releasing switch on the robot arm, beware of the arm which may drop with its own weight.
Dropping of the hand could lead to a collision with the peripheral equipment or catch the hands or fingers.

WARNING

To maintain the security (confidentiality, integrity, and availability) of the robot and the system against unauthorized access, DoS^{*1} attacks, computer viruses, and other cyberattacks from unreliable networks and devices via network, take appropriate measures such as firewalls, virtual private networks (VPNs), and antivirus solutions. Mitsubishi Electric shall have no responsibility or liability for any problems involving robot trouble and system trouble by unauthorized access, DoS attacks, computer viruses, and other cyberattacks.

*1 DoS: A denial-of-service (DoS) attack disrupts services by overloading systems or exploiting vulnerabilities, resulting in a denial-of-service (DoS) state.

Revision History

Date of print	Specifications No.	Revision details
2008-6-25	BFP-A8684-*	First release
2009-9-25	BFP-A8684-A	Corresponds to the version 2.3 <ul style="list-style-type: none"> - Add a SQ Direct Function. - Add a Skip function in the Step operation. - Add a Home position Return function. - Add a display of hand IO state on the hand operation screen. - Add WORK jog operation and "Work coordinate parameter" screen. - Delete "T/B exit", "T/B reboot" and "T/B initialize" functions. - Spell correction.
2010-5-17	BFP-A8684-B	Corresponds to the version 2.4 <ul style="list-style-type: none"> - Add a stopping the program of all task-slots function. - Change "Zone" to "User definition area" - Add a switching base coordinate Function. - Add a Temp. in RC output parameter.
2011-05-10	BFP-A8684-C	Corresponds to the version 2.5 <ul style="list-style-type: none"> - Add the Electric Hand function. - Add the Multi-Hand function.
2011-11-30	BFP-A8684-D	Corresponds to the version 3.0 <ul style="list-style-type: none"> - Add the Operation Panel function. - Add the security function of the robot controller (Setup the password). - Add the I/O unit monitor. - Add the force control function. - Add the collision avoidance ON/OFF function in Jog operation screen. - Added the Encoder temp in the display of Load.
2012-07-19	BFP-A8684-E	Corresponds to the version 3.1 <ul style="list-style-type: none"> - Add the table method to the Electric Hand operation screen. - Add "Electric hand table" screen. - Change "Electric hand teach" screen. - Add "Mode switch judgment/Speed reference" button in "Force control feature" screen. - Add the function "Tool automatic calculation".
2013-07-01	BFP-A8684-F	Corresponds to the version 3.2 <ul style="list-style-type: none"> - Add the parameter editor screens. - Add the update function. - Add buzzer sound muting.
2015-07-07	BFP-A8684-G	Change logo
2016-06-03	BFP-A8684-H	Corresponds to the version 3.4 <ul style="list-style-type: none"> - Add the icon of slots state in the robot controller. - Add the turn off signal function of user definition screen. - Add the message function of user definition screen. - Add lock the screen function. - The limit of user definition screen is released in the T/B disabling state.
2017-05-31	BFP-A8684-J	Corresponds to the version 4.0 <ul style="list-style-type: none"> - Support FR series.
2018-03-31	BFP-A8684-K	Support CR800-Q series.

Date of print	Specifications No.	Revision details
2019-03-29	BFP-A8684-M	Corresponds to the version 4.1 <ul style="list-style-type: none"> - Describes the folder for storing update data. - Change usable USB memory. - Add tool number to tool parameter edit. - Added operation panel button function to user definition screen. - Added menu button function to user definition screen. - Added jog button function to user definition screen. - Add user management function.
2020-03-31	BFP-A8684-N	Corresponds to the version 4.2 <ul style="list-style-type: none"> - Change "Position jump" behavior. - Change backup / restore function to RT ToolBox3 equivalent. - Support collaborative robots.
2020-11-30	BFP-A8684-P	Change the supporting robot controllers for I/O unit parameters.

<u>1.</u>	<u>Before use</u>	<u>1</u>
1.1.	The check of the package.....	1
<u>2.</u>	<u>Connection with controller</u>	<u>2</u>
2.1.	Installing The T/B	2
2.2.	Removing the T/B.....	2
<u>3.</u>	<u>Specification</u>	<u>3</u>
3.1.	Specifications	3
3.2.	Construction.....	4
<u>4.</u>	<u>Basic operation method</u>	<u>5</u>
4.1.	Operating method of R56TB.....	5
4.2.	Selection of items on touch panel	5
4.3.	Display of context menu	5
<u>5.</u>	<u>Operation of menu panel</u>	<u>6</u>
<u>6.</u>	<u>Language setting</u>	<u>7</u>
<u>7.</u>	<u>Guidance</u>	<u>7</u>
7.1.	RC time setting.....	7
7.2.	Robot serial setting.....	8
7.3.	Origin data setting	8
<u>8.</u>	<u>Setting a target robot for using multi-mechanism control</u>	<u>9</u>
<u>9.</u>	<u>JOG operation</u>	<u>10</u>
9.1.	Speed setting	10
9.2.	Jog mode	11
9.3.	Switching Tool Data	12
9.4.	Switching Base Coordinates	13
9.5.	JOINT jog operation	14
9.6.	XYZ jog operation.....	15
9.7.	TOOL jog operation	16
9.8.	3-axis XYZ jog operation	17
9.9.	Cylinder jog operation.....	18
9.10.	Work jog operation	19
9.11.	Jog operation with wheel	20
9.12.	Force control function.....	22
9.13.	Collision avoidance ON/OFF	23
9.14.	Aligning the Hand	24
9.15.	Opening/Closing the Hands.....	25
9.15.1.	Operation of the Electric Hand	26
9.15.2.	Operation of the Normal Hand	30
9.16.	Return to the Home position	31
<u>10.</u>	<u>USB memory stick</u>	<u>32</u>
10.1.	Plug-in the USB memory stick	32
10.2.	Unplug the USB memory stick.....	33
<u>11.</u>	<u>Program edit</u>	<u>34</u>
11.1.	Edit of program.....	34

11.1.1.	Open an edit display (new creation)	34
11.1.2.	Open an edit display (read of the existing program)	36
11.1.3.	Save (robot controller)	38
11.1.4.	Save (USB memory).....	39
11.1.5.	Close the edit screen.....	40
11.1.6.	Add the command line	41
11.1.7.	Delete the command line	42
11.1.8.	Undo the edited contents	43
11.1.9.	Cut, Copy and Paste.....	44
11.1.10.	Renumber	47
11.1.11.	Automatic numbering.....	49
11.1.12.	Search.....	50
11.1.13.	Replace	52
11.1.14.	Jump	54
11.2.	Editing the position variable	56
11.2.1.	Registering the current position data	56
11.2.2.	Edit of position data	58
11.2.3.	Addition of position data.....	60
11.2.4.	Deletion of position data	61
11.2.5.	Confirming the position data (Position jump)	62
11.2.6.	Find.....	64
11.3.	Editing the position for SQ Direct Function.....	65
11.3.1.	Registering the current position data for SQ Direct Function.....	67
11.3.2.	Edit of position data for SQ Direct Function.....	68
11.3.3.	Addition of position data for SQ Direct Function	69
11.3.4.	Initialization of position data for SQ Direct Function.....	70
11.3.5.	Confirming the position data for SQ Direct Function (Position jump)	70
11.3.6.	Saving the position data for SQ Direct Function to USB	70
11.3.7.	Copy position data for SQ Direct Function from controller to USB	71
11.3.8.	Copy position data for SQ Direct Function from USB to controller	72
11.3.9.	Edit of position data for SQ Direct Function in the USB memory.....	73
12.	<u>Debugging</u>	74
12.1.	Starting the step operation.....	74
12.2.	Step operation.....	75
12.2.1.	Step forward.....	75
12.2.2.	Step Backward	75
12.2.3.	Continuous Execution.....	76
12.2.4.	Skip.....	76
12.2.5.	Step forward in another slot	77
12.2.6.	Step jump	77
12.3.	Program reset	77
12.4.	Setting and deleting breakpoints.....	78
13.	<u>Program management</u>	79
13.1.	Starting	79
13.2.	Program list.....	81
13.3.	Copy	82
13.4.	Move.....	83
13.5.	Delete	83
13.6.	Protect	84
13.7.	Rename	84
13.8.	Compare	85
13.9.	Select program.....	87
14.	<u>Backup/Restore</u>	88
14.1.	Starting	88
14.2.	Backup (Robot -> USB memory)	89
14.3.	Restore (USB memory -> Robot).....	90

14.4. Power Reset of the Robot Controller.....	93
15. Monitor	94
15.1. Starting	94
15.2. Outline of each function and starting methods	95
15.2.1. Outline of each function	95
15.3. Each monitor function.....	96
15.3.1. Robot movement monitor.....	96
15.3.1.1. Slot run state.....	96
15.3.1.2. Program monitor	97
15.3.1.3. Movement State.....	100
15.3.1.4. Error	101
15.3.2. Signal monitor	103
15.3.2.1. General-purpose signal.....	103
15.3.2.2. Named signal.....	106
15.3.2.3. Stop signal.....	107
15.3.2.4. Register	108
15.3.2.5. I/O unit monitor	110
15.3.3. Operation monitor.....	111
15.3.3.1. Operating hours	111
15.3.3.2. Production information	111
15.3.3.3. Additional board information.....	112
15.3.4. Servo monitor.....	113
15.3.4.1. Position (ABS)	113
15.3.4.2. Speed	114
15.3.4.3. Current	115
15.3.4.4. Load	117
15.3.4.5. Power	118
16. Maintenance	119
16.1. Origin data	119
16.1.1. Origin data input	120
16.1.2. The others (Mechanical stopper, TOOL, ABS, User origin method).....	121
16.2. Initialize.....	123
16.2.1. Setting the controller's date and time	123
16.2.2. Erase all programs in the controller.....	124
16.2.3. Initialize the battery remaining time	124
16.3. Serial number.....	125
16.3.1. Serial Number setting	125
16.3.2. Save serial number to file	127
16.3.3. Write serial number in a file to the controller.....	127
16.4. Releasing the brakes.....	128
16.4.1. Preparation for releasing the brakes	129
16.4.2. Releasing the brake of one axis.....	130
16.4.3. Releasing the brakes of two of more axes.....	130
16.5. Maintenance Forecast.....	131
16.5.1. Start	131
16.5.2. Forecast (Battery).....	131
16.5.3. Forecast (Grease)	132
16.5.4. Forecast (Belt).....	133
16.5.5. Gear.....	134
16.5.6. Setup.....	135
16.5.7. Reset.....	137
16.5.8. Others	139
16.6. Guidance	140
16.7. Security function of the robot controller (Password Setup)	141
16.7.1. Register the Password.....	142
16.7.2. Change the Password	143
16.7.3. Delete the Password.....	144
16.8. Tool automatic calculation	145

16.8.1. Specifications	145
16.8.2. Start	145
16.8.3. Flow of operations	146
17. Parameter editor	148
17.1. Starting	148
17.2. Downloading the parameter list (Robot controller -> T/B)	149
17.3. Changing the parameters	150
17.4. Parameter menu	151
17.4.1. Motion limit	152
17.4.2. JOG	152
17.4.3. Hand	153
17.4.3.1. Hand	153
17.4.3.2. Multi-Hand Tool	154
17.4.3.3. Multi-Hand Base	156
17.4.3.4. Electric hand table	157
17.4.3.5. Electric hand point	158
17.4.3.6. Electric hand	159
17.4.4. Weight and size (Work)	160
17.4.5. Weight and size (Hand)	160
17.4.6. TOOL parameter	161
17.4.7. Slot table	162
17.4.8. Output signal reset pattern	163
17.4.9. Dedicated input / output signals assignment	164
17.4.9.1. General 1	164
17.4.9.2. General 2	164
17.4.9.3. Data	165
17.4.9.4. Jog	165
17.4.9.5. Hand	166
17.4.9.6. Warm up	166
17.4.9.7. Start (each slot)	167
17.4.9.8. Stop (each slot)	167
17.4.9.9. Servo ON / OFF (each robot)	168
17.4.9.10. Machine lock (each robot)	168
17.4.10. RS-232	169
17.4.11. User-defined area	169
17.4.12. Free plane limit	170
17.4.13. Home position	170
17.4.14. Program language	171
17.4.15. Robot additional axis	171
17.4.16. Collision detection	173
17.4.17. Warm-up operation	173
17.4.18. Movement	174
17.4.19. Command	174
17.4.20. User error	175
17.4.21. Ethernet	176
17.4.22. Multiple CPU	177
17.4.23. CC-Link	178
17.4.24. PROFIBUS	179
17.4.25. I/O unit	180
17.4.26. Work coordinate	181
17.4.27. Force control parameters	182
17.4.27.1. Force sensor	182
17.4.27.2. Force control mode	183
17.4.27.3. Force control characteristics	183
17.4.27.4. Force log	184
17.4.28. Real-time external control command	185
17.4.29. User definition parameter	186
17.5. Find	187
17.6. Power Reset of the Robot Controller	187

18.	System option	188
18.1.	Display	188
18.2.	User management	190
18.2.1.	User management edit	190
18.2.2.	Change the user level	191
18.3.	Update T/B	192
18.4.	Language of T/B	194
18.5.	IP address of T/B	194
19.	User definition screen	195
19.1.	User definition Editor	196
19.1.1.	Adding the new page	197
19.1.2.	Edit of existing page	198
19.1.3.	Copy of page	199
19.1.4.	Deletion of page	199
19.1.5.	Page edit of "User definition screen"	200
19.1.5.1.	Button	201
19.1.5.2.	Lamp	205
19.1.5.3.	Variable	207
19.1.5.4.	Program execution content	208
19.1.5.5.	Program name	210
19.1.5.6.	Execution line number of program	211
19.1.5.7.	Current position data (the XYZ coordinate system)	212
19.1.5.8.	Current position data (the joint coordinate system)	214
19.1.5.9.	Message	216
19.1.5.10.	Label	218
19.1.5.11.	Operation panel button	219
19.1.5.12.	Menu button	221
19.1.5.13.	JOG button	224
19.1.5.14.	Save and end of editing user definition screen	226
19.1.6.	Edit of existing parts	227
19.1.7.	Copy/movement of parts	228
19.1.8.	Deletion of parts	229
19.1.9.	Change of page name	229
19.1.10.	Edit of ruled line	230
19.1.10.1.	Drawing the ruled line	230
19.1.10.2.	Erasing the ruled line	231
19.1.11.	Import / Export of page	232
19.1.11.1.	Import of page (Reading from USB memory)	232
19.1.11.2.	Export of page(Save to USB memory)	232
19.2.	Operation of user definition screen	233
19.2.1.	Mechanism of screen update	234
20.	Operation panel	235
20.1.	Starting	235
20.2.	Display	236
20.3.	Program select	237
20.4.	Override UP/DOWN	237
20.5.	Servo ON/OFF	238
20.6.	Start automatic operation	238
20.7.	Stop	238
20.8.	Reset	239
20.9.	Cycle stop	239

1. Before use

Since this teaching pendant R57TB/R56TB (T/B) carries GUI, you can use it easily by operating the touch panel. The operation method of T/B in the instructions manual of the separate volume is indicated based on R33TB/R32TB. Please refer to this book, when using R57TB/R56TB.

In this book, the operation of the program edit etc. is explained by the example of MELFA-BASIC V program. When using MELFA-BASIC IV, please read the command and line No. in a different way and use this book.

1.1. The check of the package

Please check if all items shown below are included in the package.

- Teaching-pendant body R57TB/R56TB (With touch stylus and connection cable)
- INSTRUCTION MANUAL (CD-ROM) BFP-A8545

* Please contact the branch office or the agency if there is some shortage in the package.

2. Connection with controller

Installing and removing the T/B, with turning off the controller power.

If T/B is Installed and removed in the state of control source ON, emergency stop alarm will be occurred.

If you use the robot wherein T/B is removed, install the dummy connector of attachment for the product instead of T/B.

Take out and insert the dummy connector with the connector itself.



CAUTION

Please do not pull the cable of T/B strongly or do not bend it too much.

It becomes the breaking of a wire of the cable and the cause of breakage of the connector.


Please installing and removing so that stress does not start the cable with the connector itself.

2.1. Installing The T/B


Explain the installation method of T/B below.

- 1) Check that the POWER (power supply) switch of the robot controller is OFF.
- 2) Connects T/B connector to the robot controller.

Use as the upper surface the lock lever shown below, and push in until there is sound.

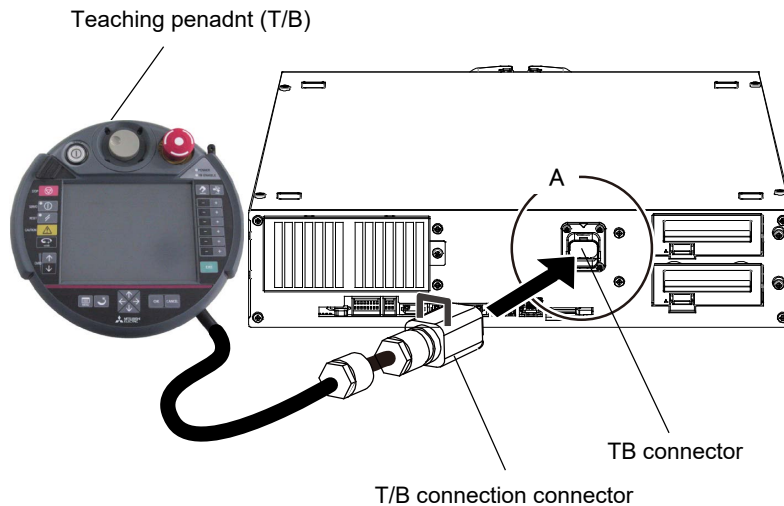

Details of the A section

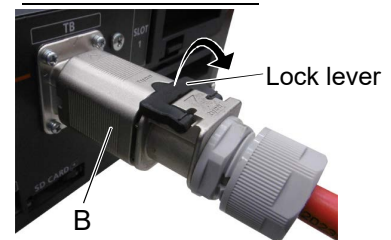

When removing the connector for T/B connection, use lock release (state which raised the lock lever to the up side), make the case of the B section side to the front, and remove and pull up out the latch.

TB correspondence table	
57TB	CR751 series
56TB	CR750/CR800 series

The installation of T/B is finished.

2.2. Removing the T/B

Explain the removing method of T/B below.

Check that the POWER (power supply) switch of the robot controller is OFF.

Raise the lock lever up in the connector upper part, and pull up the connector.

Please install the dummy connector, if you use the robot, without connecting T/B.

The removing of T/B is finished



CAUTION

The content under the edit does not be preserved when you detach T/B while editing the program.

The edit of the user definition screen is also similar. (The user definition screen can be used since this software Ver.2.2.)

3. Specification

3.1. Specifications

Items	Specifications	Remarks
Outline dimensions	252(W) x 240(H) x 114(D) (refer to outline drawing)	
Mass	Approx. 1,250g	The cable is not included.
Connection method	Connection with controller and round connector Cable length 7m	
Interface	RS-422 Ethernet(10BASE-T)	For connection with robot controller
	USB host (USB memory sticks)	32 GB or less
Display method	6.5" TFT (640x480 pixels) with backlighting. Resistive touch screen, to be operated with finger or stylus.	



CAUTION


Use in the environment with a lot of dust and oil mists, etc. causes the trouble. Please do not use or keep in such a place.



CAUTION

USB memory of 32G bytes or more cannot be used.
Using a large capacity USB memory consumes a lot of system resources. Please use as small a USB memory as possible..

3.2. Construction

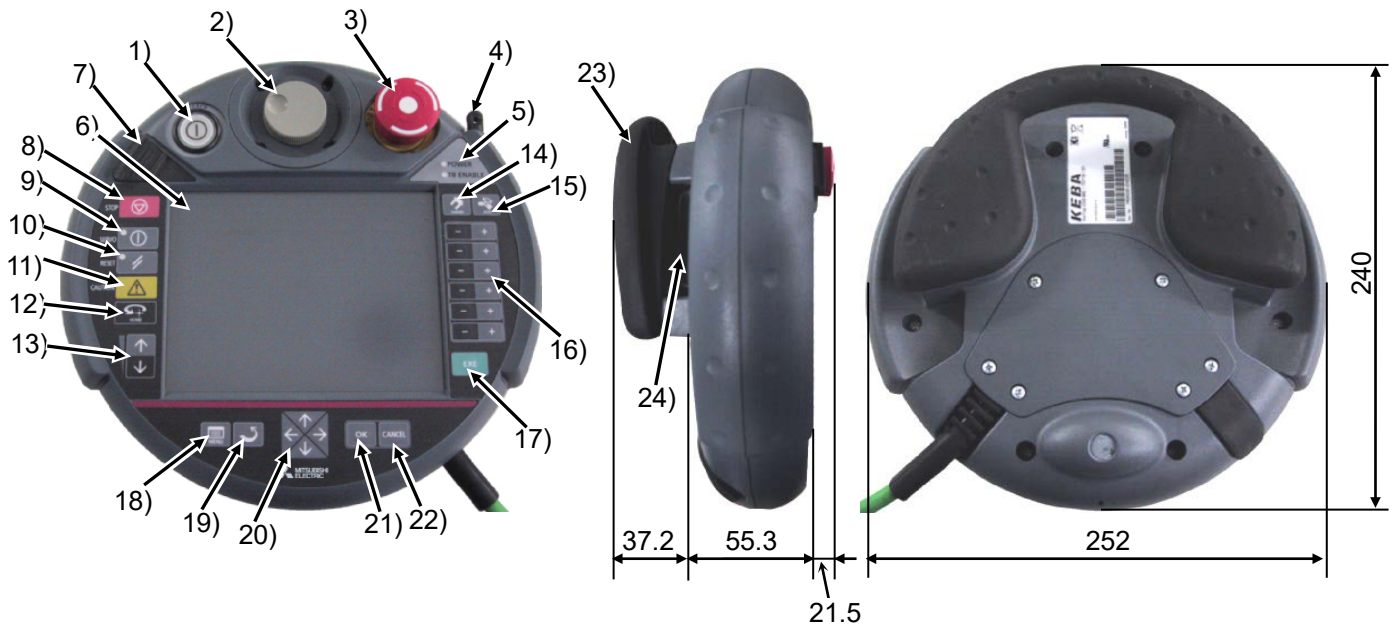

- | | |
|---|---|
| <p>1) TEACH button
This changeover switch is used to enable or disable the T/B key operations. The lamp (white) lights up during enabling state.</p> <p>2) Wheel
Move the cursor to select the menu and so on.</p> <p>3) Emergency stop button
This stops the robot in an emergency state. The servo turns OFF. Turn to the right to cancel.</p> <p>4) Touch stylus (Integrated in housing)
The pen which operates the touch panel.</p> <p>5) Power supply LED, T/B enable LED
POWER LED lights up during supplying the power supply.
TB ENABLE LED lights up during enabling state.</p> <p>6) Touch panel
Tap to operate with the stylus pen and the screen is displayed.</p> <p>7) USB connector
Plug-in the USB memory stick.</p> <p>8) STOP button
This stops the robot immediately. The servo does not turn OFF.</p> <p>9) SERVO button
This turns ON the servo power simultaneously with the enable switch. The LED (green) lights during servo ON.</p> <p>10) RESET button
This key resets an error state that has occurred.</p> <p>11) CAUTION button
During jog operation, the limit switch is released while this button is pushed. Moreover, push this button, when releasing the brake.</p> | <p>12) HOME button
Return the robot to the Home position that set beforehand. This function is available with Ver.2.3 or later of this software.</p> <p>13) OVRD button
This scrolls override up or down.</p> <p>14) HAND button
Display the screen of hand operation.</p> <p>15) JOG button
Display the screen of jog operation.</p> <p>16) +/- button
This button operates corresponding to the selected operation.</p> <p>17) EXE button
Move the robot, such as hand alignment.</p> <p>18) MENU button
Display the menu screen.</p> <p>19) RETURN button
Close each operation screen.</p> <p>20) Arrow button
Move the cursor.</p> <p>21) OK button
Fix each screen operation.</p> <p>22) CANCEL button
Cancel each screen operation.</p> <p>23) Multi grip handle
Holds the T/B.</p> <p>24) Enable switch
When the TEACH button 2) is enabled, and this switch is released or pressed with force, the servo will turn OFF. Press this switch lightly when carrying out functions with the servo ON, such as jog operations. If emergency stop or servo OFF have been applied, and the servo is OFF, the servo will not turn ON even when this switch is pressed. In this case, carry out the servo ON operation again.</p> |
|---|---|

4. Basic operation method

The basic operating method of R56TB is shown.

4.1. Operating method of R56TB

As shown in the figure, holds with one hand and operate the enable switch by finger, and operate the screen and button by another hand. Since the screen is the touch panel, operate it with a touch stylus.



4.2. Selection of items on touch panel

After tap the space of left row, drag quickly.

Name	Size	Date	Time	Protect
1	1106	10-06-02	13:13:52	None
2	1101	10-06-07	09:31:26	Command
3	736	10-06-09	16:20:00	None
6	312	10-06-07	09:33:14	All
11	796	10-06-07	09:33:14	None
30	819	10-05-08	16:36:34	None
55	228	10-06-07	09:33:14	None
99	670	10-05-08	16:36:38	None

Tap the space

Name	Size	Date	Time	Protect
1	1106	10-06-02	13:13:52	None
2	1101	10-06-07	09:31:26	Command
3	736	10-06-09	16:20:00	None
6	312	10-06-07	09:33:14	All
11	796	10-06-07	09:33:14	None
30	819	10-05-08	16:36:34	None
55	228	10-06-07	09:33:14	None
99	670	10-05-08	16:36:38	None

Drag

4.3. Display of context menu

The context menu is displayed when tapping at long time.

Name	Size	Date	Time
1	11106	10-06-02	13:13:52
2	1101	10-06-07	09:31:26
3	736	10-06-09	16:20:00
6	312	10-06-07	09:33:14
11	796	10-06-07	09:33:14
30	819	10-05-08	16:36:34
55	228	10-06-07	09:33:14
99	670	10-05-08	16:36:38
DD	541	10-05-08	16:36:40

Tap at long time

Name	Size	Date	Time
1	11106	10-06-02	13:13:52
2	1101	10-06-07	09:31:26
3	736	10-06-09	16:20:00
6	312	10-06-07	09:33:14
11	796	10-06-07	09:33:14
30	819	10-05-08	16:36:34
55	228	10-06-07	09:33:14
99	670	10-05-08	16:36:38
DD	541	10-05-08	16:36:40

- New
- Open
- Copy/Move
- Delete
- Protect
- Rename
- Compare

5. Operation of menu panel

If the control power of the controller is turned on, the splash window (<a>) will be displayed on the screen of T/B and the initial screen () will be displayed on it in the about 15 seconds.

You can confirm the connecting state between the T/B and the controller (<c>) (Left: RS-422, Right: Ethernet, Blue: connecting, Red: disconnected). If the color of right is red in connecting CRnQ controller, set the IP address of T/B refer to chapter 18.5.

If the [MENU] button (<d>) at the right of the T/B screen is tapped, the menu panel (<e>) will be displayed, and you can do operating easily by tapping each menu button.

At this time, there are the function which T/B can operate also in the invalid state, and the function which needs the enable state.

Finishing of operation taps the button (Ex. [Exit] (<f>) etc.) corresponding to finishing in each operation screen, or taps the [RETURN] button (<g>) at the lower right of the T/B screen.

And the keyboard is displayed when the [KEY] (<h>) is tapped on each screen and the hoped character can be input.

Details are explained in the paragraph of the operation of each screen.

<j> is shown if you make the buzzer sound of the T/B mute (Change "TBBZR" parameter of the controller 1 to 0).



You can confirm the slots state in the robot controller (<k>).



The operation for enabling T/B is shown below.

- (1) Set the controller [MODE] switch to "MANUAL".
- (2) Push in the [TEACH] switch of T/B and change into the enable state.

When the enable state, the lamp (white) of the [TEACH] switch and LED (green) of TB ENABLE light up.

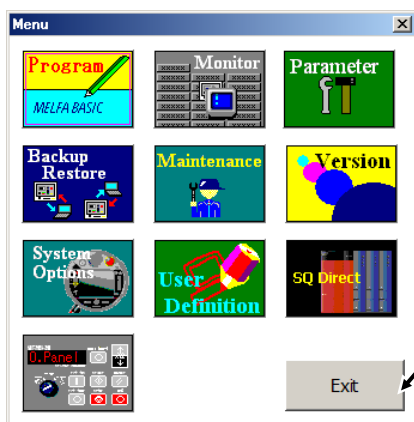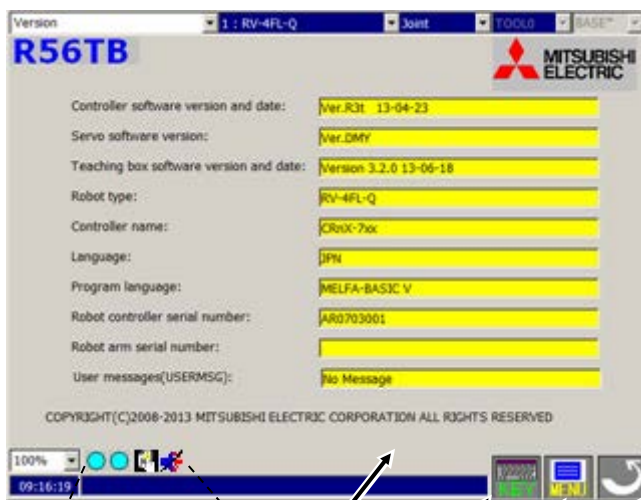

- "User definition screen" is supported by version 2.2 or later of this software.
- "SQ Direct screen" is supported by version 2.3 or later of this software.
- "Operation panel screen" is supported by version 3.0 or later of this software.
- <j> is supported by version 3.2 or later of this software and version R3r/S3r or later of the controller.
- <k> is displayed by version 3.4 or later of this software.

Advice

The screen of T/B is the tap panel. Screen operation taps and operates the icon currently displayed, the button, the radio button, etc. with the attached stylus pen.

Moreover, there is also the function to push and operate the mechanical button.

6. Language setting


At the time of the first power supply on, the language setting screen is displayed.
Please select the language to make it display on the T/B screen. Please tap [OK] Key.
Japanese display: Japanese
English display: English

7. Guidance

Guidance screen is displayed for the basic setting such as the origin setting at the controller started for the first time.

There are three following functions in this screen.

- (1) RC time setting
- (2) Robot serial setting
- (3) Origin data setting

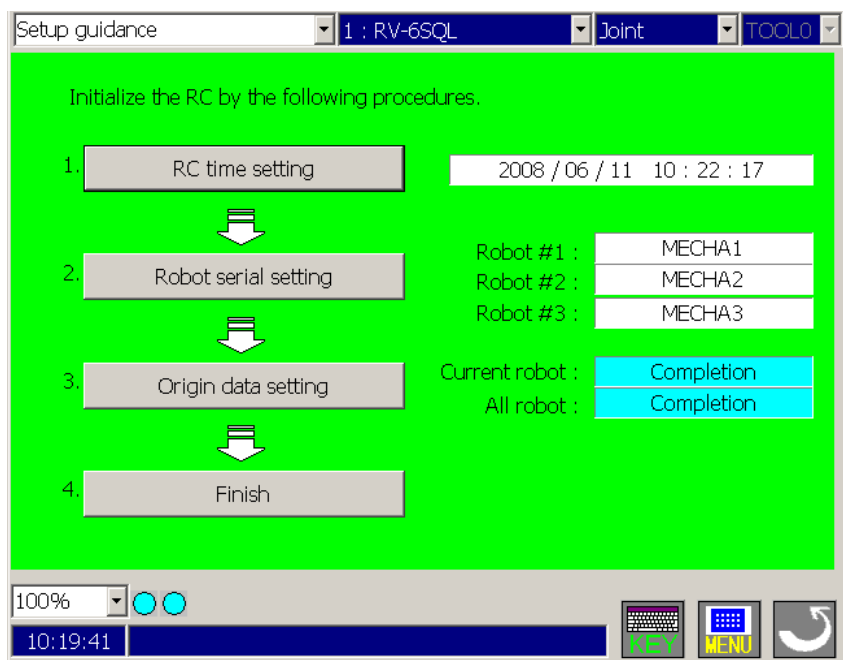

7.1. RC time setting


Set the time of controller.

The controller can be set time when the [RC time setting] button is tapped. The date that the controller is maintaining now is displayed in the right of the button.

7.2. Robot serial setting

Set the serial number of the robot arm.

Tap [Robot serial setting] button and display the setting screen of serial number.

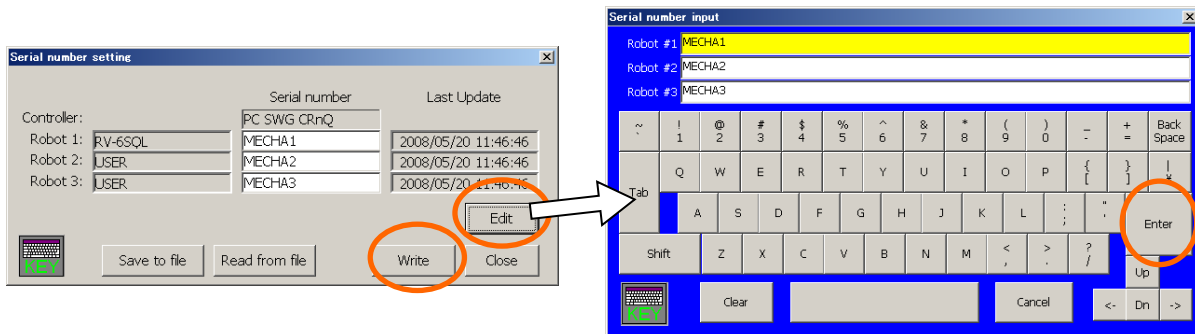

Tap [Edit] button and display the setting screen.

Input the serial number which has been described to the plaque of the robot.


Tap [Enter] button, then Tap [Write] button.

After the confirmation dialog is displayed, the serial number of the robot arm is set.

7.3. Origin data setting

Set the robot origin by input the origin data.

Tap the [Edit] button to input origin data. The origin data to be input is noted in the origin data sheet enclosed with the arm, or on the origin data history table attached to the back side of the shoulder cover.. Please refer to the separate manual "INSTRUCTION MANUAL / ROBOT ARM SETUP & MAINTENANCE" for details.

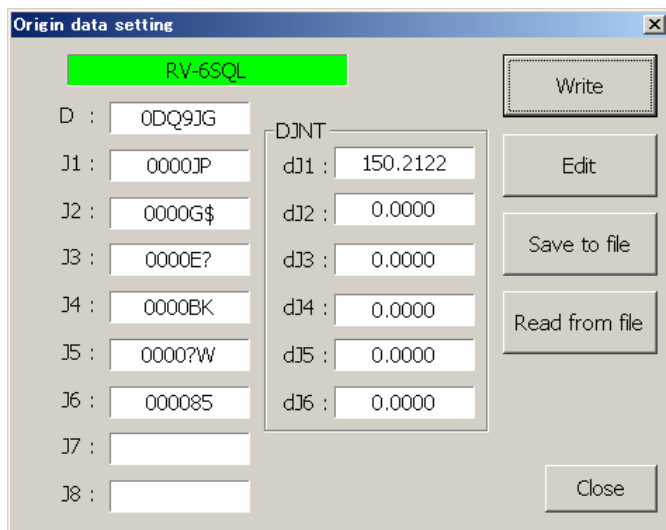


When the [Write] button is tapped, origin data is written in the controller. And setting the origin is completed.

Tap the [Save to file] button, origin data can be saved in a specified file.

Tap the [Read from file] button, origin data can be set from the file where the origin data is saved.

8. Setting a target robot for using multi-mechanism control

When using the multi-mechanism control, please select a target robot at the Select robot combo box.

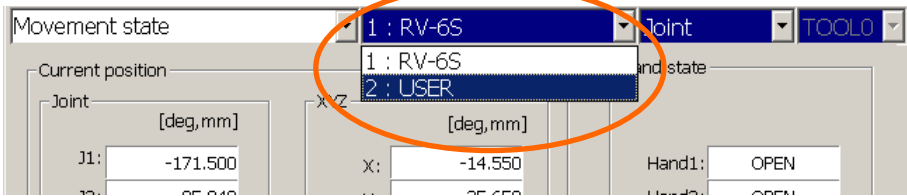

The robot selected here becomes the object of the following operations and monitors.

- Servo ON/OFF
- JOG operation
- Hand operation
- Direct execution
- Position jump
- Releasing the brakes
- Setting the origin
- Various monitor functions



CAUTION

About the target robot of the step operation

The robot which moves when the step operation is executed is the same as the robot which moves when the program is executed by the automatic operating, regardless of the selection of robot at the combo box.

When the GETM command is executed, the robot selected by the GETM command moves in the execution of the robot operation commands after that.

- * Multi-mechanism control is the function to control up to two (excluding the standard robots) robots (user mechanism) driven by servo motors, besides the standard robots. For more information, please refer to the separate manual "ADDITIONAL AXIS INTERFACE".

9. JOG operation

9.1. Speed setting

Push [OVRD (Upper arrow)] or [OVRD (Lower arrow)] button (<a>) of T/B, and change operation speed.

LOW – HIGH – 3% - 5% - 10% - 30% - 50% - 70% - 100%

The changed speed is displayed on STATUS NUMBER of the controller, and on the combo box in the screen lower left of T/B. ()

Selection of this combo box can also do the setup of speed.

LOW and HIGH are fixed-dimension feed. (The STATUS NUMBER display of the controller is 3%). Even if it continues pressing the button at the time of the fixed-dimension feed, the robot moves only the fixed amount. The amount of movement depends on the individual robot.



Advice

Even set to the top speed, the speed of jog feeding is reduced for safety. (250mm/s max)

The highest movement speed and amount of fixed-dimension feed at teaching mode can be set by parameter: JOGJSP, JOGPSP, and JOGSPMX.

9.2. Jog mode


There are JOINT, XYZ, TOOL, 3-axis XYZ, Cylinder and the WORK in jog mode.

Push the [JOG] button (<a>) of T/B, the JOG operation screen will be displayed. The jog mode is changed in order of JOINT->XYZ->TOOL->3-axis XYZ->Cylinder->WORK, each time the button is pushed. The current jog mode is displayed in the combo box. ()

Jog mode can be selected from this combo box.

Please refer to separate manual: "ROBOT ARM SETUP & MAINTENANCE," which provides more detailed explanations.

Note) WORK jog mode is available with Ver.2.3 or later of this software. Moreover the version of connected controller is limited. Please refer to the "9.10 Work jog operation" or "17.4.26 Work coordinate" for details.

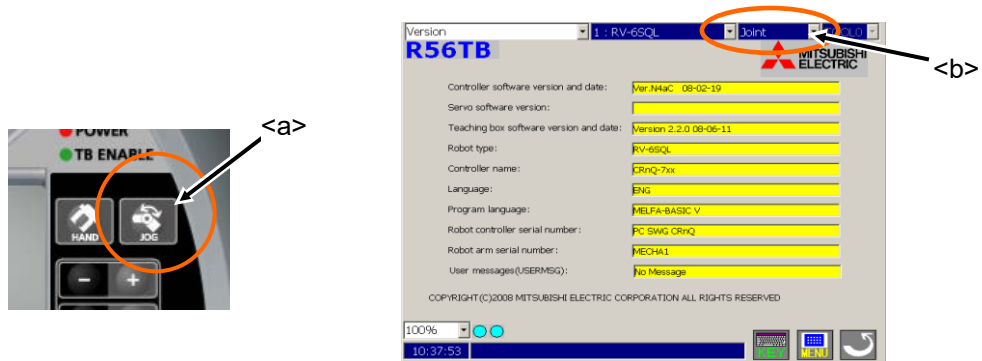


Joint jog mode	XYZ jog mode	TOOL jog mode																																																																								
<p>Joint</p> <table border="1"> <tr><td>J1:</td><td>-161.420</td></tr> <tr><td>J2:</td><td>0.030</td></tr> <tr><td>J3:</td><td>90.070</td></tr> <tr><td>J4:</td><td>0.000</td></tr> <tr><td>J5:</td><td>0.030</td></tr> <tr><td>J6:</td><td>0.000</td></tr> </table> <p>FL1: R,A,N FL2: 0</p> <p>Tool setting value</p> <table border="1"> <tr><td>X:</td><td>0</td></tr> <tr><td>Y:</td><td>0</td></tr> <tr><td>Z:</td><td>0</td></tr> <tr><td>A:</td><td>0</td></tr> <tr><td>B:</td><td>0</td></tr> <tr><td>C:</td><td>0</td></tr> </table>	J1:	-161.420	J2:	0.030	J3:	90.070	J4:	0.000	J5:	0.030	J6:	0.000	X:	0	Y:	0	Z:	0	A:	0	B:	0	C:	0	<p>XYZ</p> <table border="1"> <tr><td>X:</td><td>-426.920</td></tr> <tr><td>Y:</td><td>-143.470</td></tr> <tr><td>Z:</td><td>729.330</td></tr> <tr><td>A:</td><td>180.000</td></tr> <tr><td>B:</td><td>89.870</td></tr> <tr><td>C:</td><td>18.580</td></tr> </table> <p>FL1: R,A,N FL2: 0</p> <p>Tool setting value</p> <table border="1"> <tr><td>X:</td><td>0</td></tr> <tr><td>Y:</td><td>0</td></tr> <tr><td>Z:</td><td>0</td></tr> <tr><td>A:</td><td>0</td></tr> <tr><td>B:</td><td>0</td></tr> <tr><td>C:</td><td>0</td></tr> </table>	X:	-426.920	Y:	-143.470	Z:	729.330	A:	180.000	B:	89.870	C:	18.580	X:	0	Y:	0	Z:	0	A:	0	B:	0	C:	0	<p>TOOL</p> <table border="1"> <tr><td>X:</td><td>-426.920</td></tr> <tr><td>Y:</td><td>-143.470</td></tr> <tr><td>Z:</td><td>729.330</td></tr> <tr><td>A:</td><td>-180.000</td></tr> <tr><td>B:</td><td>89.870</td></tr> <tr><td>C:</td><td>18.580</td></tr> </table> <p>FL1: R,A,N FL2: 0</p> <p>Tool setting value</p> <table border="1"> <tr><td>X:</td><td>0</td></tr> <tr><td>Y:</td><td>0</td></tr> <tr><td>Z:</td><td>0</td></tr> <tr><td>A:</td><td>0</td></tr> <tr><td>B:</td><td>0</td></tr> <tr><td>C:</td><td>0</td></tr> </table>	X:	-426.920	Y:	-143.470	Z:	729.330	A:	-180.000	B:	89.870	C:	18.580	X:	0	Y:	0	Z:	0	A:	0	B:	0	C:	0
J1:	-161.420																																																																									
J2:	0.030																																																																									
J3:	90.070																																																																									
J4:	0.000																																																																									
J5:	0.030																																																																									
J6:	0.000																																																																									
X:	0																																																																									
Y:	0																																																																									
Z:	0																																																																									
A:	0																																																																									
B:	0																																																																									
C:	0																																																																									
X:	-426.920																																																																									
Y:	-143.470																																																																									
Z:	729.330																																																																									
A:	180.000																																																																									
B:	89.870																																																																									
C:	18.580																																																																									
X:	0																																																																									
Y:	0																																																																									
Z:	0																																																																									
A:	0																																																																									
B:	0																																																																									
C:	0																																																																									
X:	-426.920																																																																									
Y:	-143.470																																																																									
Z:	729.330																																																																									
A:	-180.000																																																																									
B:	89.870																																																																									
C:	18.580																																																																									
X:	0																																																																									
Y:	0																																																																									
Z:	0																																																																									
A:	0																																																																									
B:	0																																																																									
C:	0																																																																									
3-axis jog mode	Cylinder jog mode	WORK jog mode																																																																								
<p>3-axis XYZ</p> <table border="1"> <tr><td>X:</td><td>-426.920</td></tr> <tr><td>Y:</td><td>-143.470</td></tr> <tr><td>Z:</td><td>729.330</td></tr> <tr><td>J4:</td><td>0.000</td></tr> <tr><td>J5:</td><td>0.030</td></tr> <tr><td>J6:</td><td>0.000</td></tr> </table> <p>FL1: R,A,N FL2: 0</p> <p>Tool setting value</p> <table border="1"> <tr><td>X:</td><td>0</td></tr> <tr><td>Y:</td><td>0</td></tr> <tr><td>Z:</td><td>0</td></tr> <tr><td>A:</td><td>0</td></tr> <tr><td>B:</td><td>0</td></tr> <tr><td>C:</td><td>0</td></tr> </table>	X:	-426.920	Y:	-143.470	Z:	729.330	J4:	0.000	J5:	0.030	J6:	0.000	X:	0	Y:	0	Z:	0	A:	0	B:	0	C:	0	<p>Cylinder XYZ</p> <table border="1"> <tr><td>R:</td><td>450.380</td></tr> <tr><td>T:</td><td>-161.420</td></tr> <tr><td>Z:</td><td>729.330</td></tr> <tr><td>A:</td><td>180.000</td></tr> <tr><td>B:</td><td>89.870</td></tr> <tr><td>C:</td><td>18.580</td></tr> </table> <p>FL1: R,A,N FL2: 0</p> <p>Tool setting value</p> <table border="1"> <tr><td>X:</td><td>0</td></tr> <tr><td>Y:</td><td>0</td></tr> <tr><td>Z:</td><td>0</td></tr> <tr><td>A:</td><td>0</td></tr> <tr><td>B:</td><td>0</td></tr> <tr><td>C:</td><td>0</td></tr> </table>	R:	450.380	T:	-161.420	Z:	729.330	A:	180.000	B:	89.870	C:	18.580	X:	0	Y:	0	Z:	0	A:	0	B:	0	C:	0	<p>WORK</p> <table border="1"> <tr><td>X:</td><td>400.13</td></tr> <tr><td>Y:</td><td>0.00</td></tr> <tr><td>Z:</td><td>644.62</td></tr> <tr><td>A:</td><td>180.00</td></tr> <tr><td>B:</td><td>-0.07</td></tr> <tr><td>C:</td><td>180.00</td></tr> </table> <p>FL1: R,A,N FL2: 0</p> <p>WORK1</p> <table border="1"> <tr><td>X:</td><td>400.00</td></tr> <tr><td>Y:</td><td>0.00</td></tr> <tr><td>Z:</td><td>0.00</td></tr> <tr><td>A:</td><td>90.00</td></tr> <tr><td>B:</td><td>0.00</td></tr> <tr><td>C:</td><td>90.00</td></tr> </table>	X:	400.13	Y:	0.00	Z:	644.62	A:	180.00	B:	-0.07	C:	180.00	X:	400.00	Y:	0.00	Z:	0.00	A:	90.00	B:	0.00	C:	90.00
X:	-426.920																																																																									
Y:	-143.470																																																																									
Z:	729.330																																																																									
J4:	0.000																																																																									
J5:	0.030																																																																									
J6:	0.000																																																																									
X:	0																																																																									
Y:	0																																																																									
Z:	0																																																																									
A:	0																																																																									
B:	0																																																																									
C:	0																																																																									
R:	450.380																																																																									
T:	-161.420																																																																									
Z:	729.330																																																																									
A:	180.000																																																																									
B:	89.870																																																																									
C:	18.580																																																																									
X:	0																																																																									
Y:	0																																																																									
Z:	0																																																																									
A:	0																																																																									
B:	0																																																																									
C:	0																																																																									
X:	400.13																																																																									
Y:	0.00																																																																									
Z:	644.62																																																																									
A:	180.00																																																																									
B:	-0.07																																																																									
C:	180.00																																																																									
X:	400.00																																																																									
Y:	0.00																																																																									
Z:	0.00																																																																									
A:	90.00																																																																									
B:	0.00																																																																									
C:	90.00																																																																									

9.3. Switching Tool Data

Beforehand the tool data setting as MEXTL1 – MEXTL*(It is different depending on the specification of the robot controller connected) can be selected.

If tool data not change, this operation is not necessary.

Tool data can be selected also from combo box. (<a>)

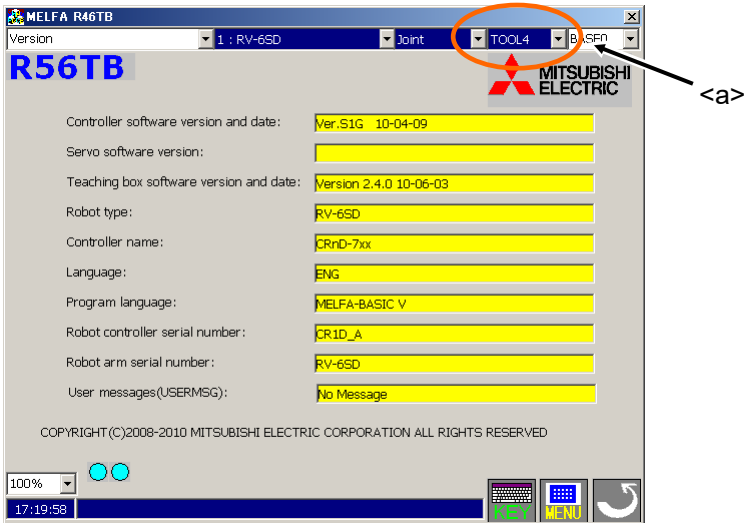

The tool which can be selected is different depending on the software version of the robot controller connected.

Table 9-1 The Tool which can be selected by each version

		The Tool which can be selected
Version of this software	Version 2.4 or earlier	"TOOL0" to "TOOL4" TOOL0=MEXTL TOOL1=MEXTL1 TOOL2=MEXTL2 TOOL3=MEXTL3 TOOL4=MEXTL4
	Version 2.5 or later	It is different depending on the specification of the robot controller connected. TOOL0=MEXTL TOOL1=MEXTL1 TOOL2=MEXTL2 TOOL3=MEXTL3 TOOL4=MEXTL4 TOOL5=MEXTL5 : TOOL16=MEXTL16

⚠ CAUTION

When the robot moves with changing tool data, the tool data needs to be changed by setting tool number into the M_TOOL. To move the robot to the position where teaching was performed while switching tool data (MEXTL* parameters) during the automatic operation of the program, substitute the M_TOOL variable by a tool number when needed, and operate the robot by switching tool data. Exercise caution as the robot moves to an unexpected direction if the tool data during teaching does not match the tool number during operation.


⚠ CAUTION

To move the robot while switching tool data during the step operation of the program, exercise caution as the robot moves to an unexpected direction if the tool data at the time of teaching does not match the tool number during step operation.

9.4. Switching Base Coordinates

The base coordinates are switched. The base coordinates used from the combo box in the upper-right corner of the screen <a> this time are selected. This function is available with Ver.2.4 or later of this software. Moreover, the software version of the controller which can use this function is as follows.

Controller	S/W Ver. of the controller
CR750-D/CRnD-700	Ver.S1 or later
CR750-Q/CRnQ-700	Ver.R1 or later
CR800-D/R/Q	Can be used with all versions

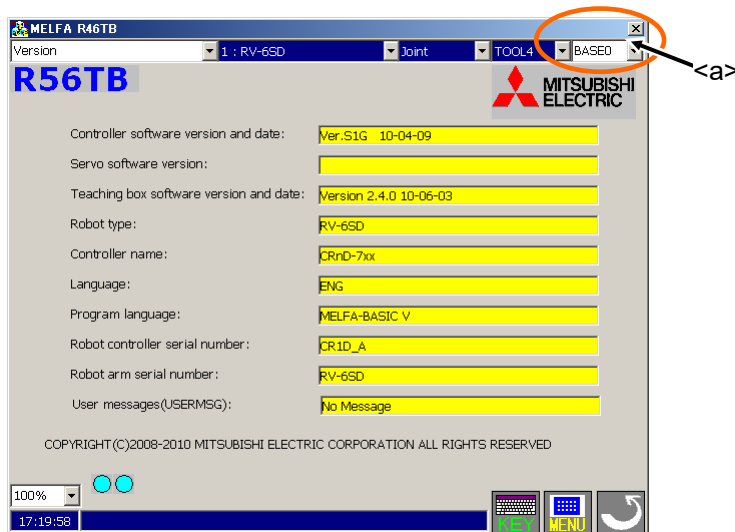

The content of the display is as follows.

Display	Content
BASE *	The state where base conversion data is directly specified by the program
BASE0	The state of a system initial value(P_NBase)
BASE1~8	The state where the base coordinates number is specified

If controller's version is older than the above-mentioned version, the switch combo box of the base coordinates is not displayed.




In case that controller's version is newer than the above-mentioned version



In case that controller's version is older than the above-mentioned version

9.5. JOINT jog operation

Push the [TEACH] switch and enable the T/B. The LED (white) lights up.
 Press the [JOG] button (<a>) of T/B and display the JOG operation screen.
 Select jog mode (JOINT).

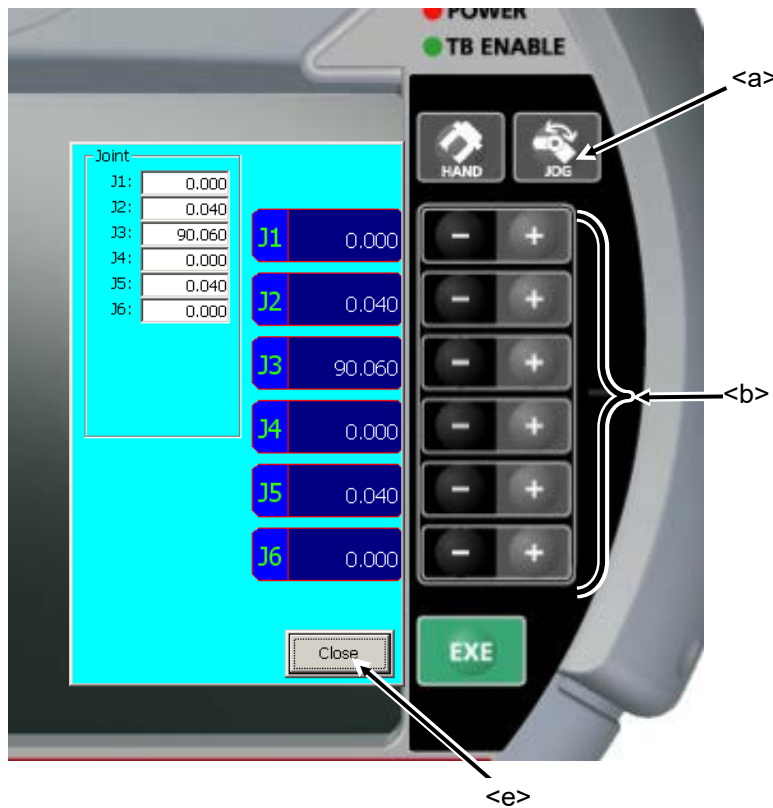

Enable switch



Servo switch

Jogging movement is in the servo power supply ON state, and execute jog feeding by pushing the button of each axis (), continuing pushing the enable switch of T/B. (<c>)

By pushing in the enable switch still more strongly during jog feeding, or detaching, the servo power supply can be turned off and can stop the robot.

The servo will turn ON when the [SERVO] button (<d>) pressed, in the condition that the enable switch is pushed. When the servo turns on, LED (green) of the [SERVO] button lights up.

If the button corresponding to the axis to move is pushed, only while pushing, the robot will move.

If it finishes, tap the [Close] button (<e>) of the T/B screen and close the JOG operation screen.



Advice

The enable switch is in two right and left on the back of T/B.

The servo-on state will be maintained if keeping pushing one of the enable switches.

9.6. XYZ jog operation

Push the [TEACH] switch and enable the T/B. The LED (white) lights up.
 Push the [JOG] button (<a>) of T/B and display the JOG operation screen.
 Select jog mode (XYZ).

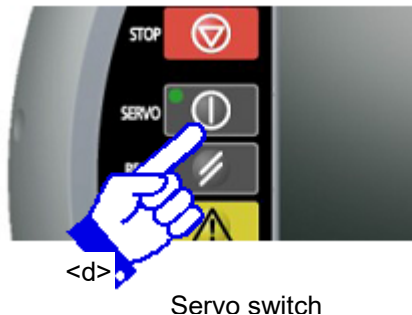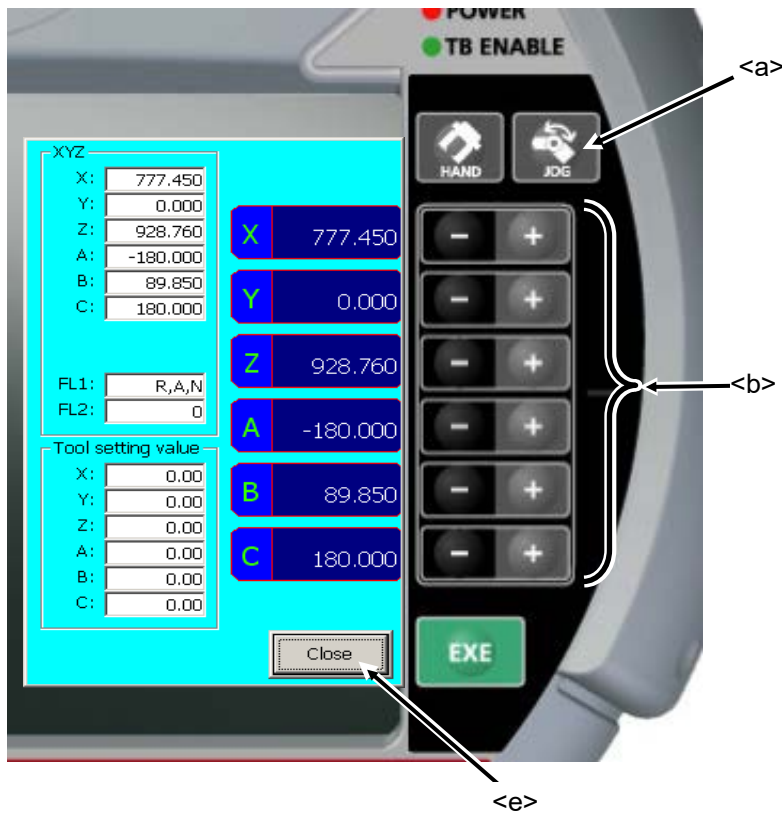

Jogging movement is in the servo power supply ON state, and execute jog feeding by pushing the button of each axis (), continuing pushing the enable switch of T/B. (<c>)

By pushing in the enable switch still more strongly during jog feeding, or detaching, the servo power supply can be turned off and can stop the robot.

The servo will turn ON when the [SERVO] button (<d>) pushed, in the condition that the enable switch is pushed. When the servo turns on, LED (green) of the [SERVO] button lights up.

If the button corresponding to the axis to move is pushed, only while pushing, the robot will move.

If it finishes, tap the [Close] button (<e>) of the T/B screen and close the JOG operation screen.


Advice

The enable switch is in two right and left on the back of T/B.

The servo-on state will be maintained if keeping pushing one of the enable switches.

9.7. TOOL jog operation

Push the [TEACH] switch and enable the T/B. The LED (white) lights up.
 Push the [JOG] button (<a>) of T/B and display the JOG operation screen.
 Select jog mode (TOOL).

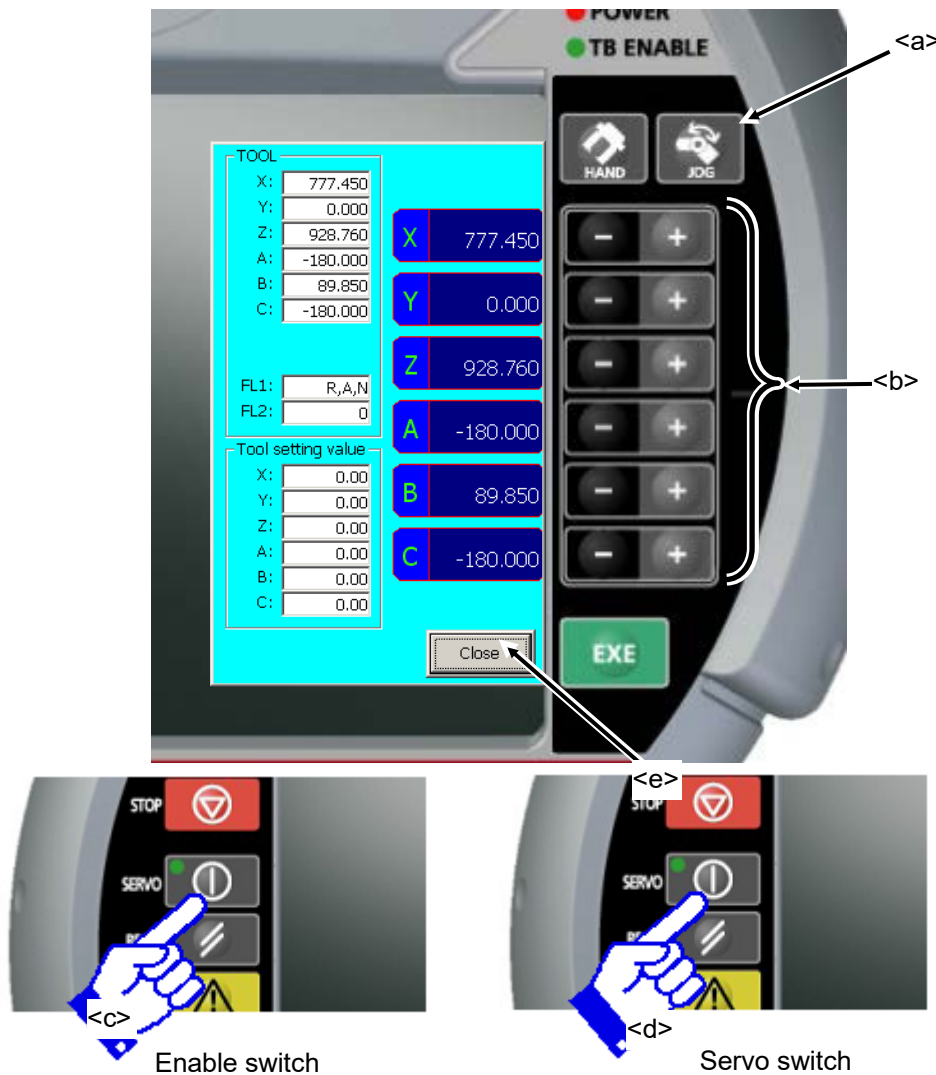

Jogging movement is in the servo power supply ON state, and execute jog feeding by pushing the button of each axis (), continuing pushing the enable switch of T/B. (<c>)

By pushing in the enable switch still more strongly during jog feeding, or detaching, the servo power supply can be turned off and can stop the robot.

The servo will turn ON when the [SERVO] button (<d>) pushed, in the condition that the enable switch is pushed. When the servo turns on, LED (green) of the [SERVO] button lights up.

If the button corresponding to the axis to move is pushed, only while pushing, the robot will move.

If it finishes, tap the [Close] button (<e>) of the T/B screen and close the JOG operation screen.


Advice

The enable switch is in two right and left on the back of T/B.

The servo-on state will be maintained if keeping pushing one of the enable switches.

9.8. 3-axis XYZ jog operation

Push the [TEACH] switch and enable the T/B. The LED (white) lights up.
Push the [JOG] button (<a>) of T/B and display the JOG operation screen.
Select jog mode (3-axis XYZ).

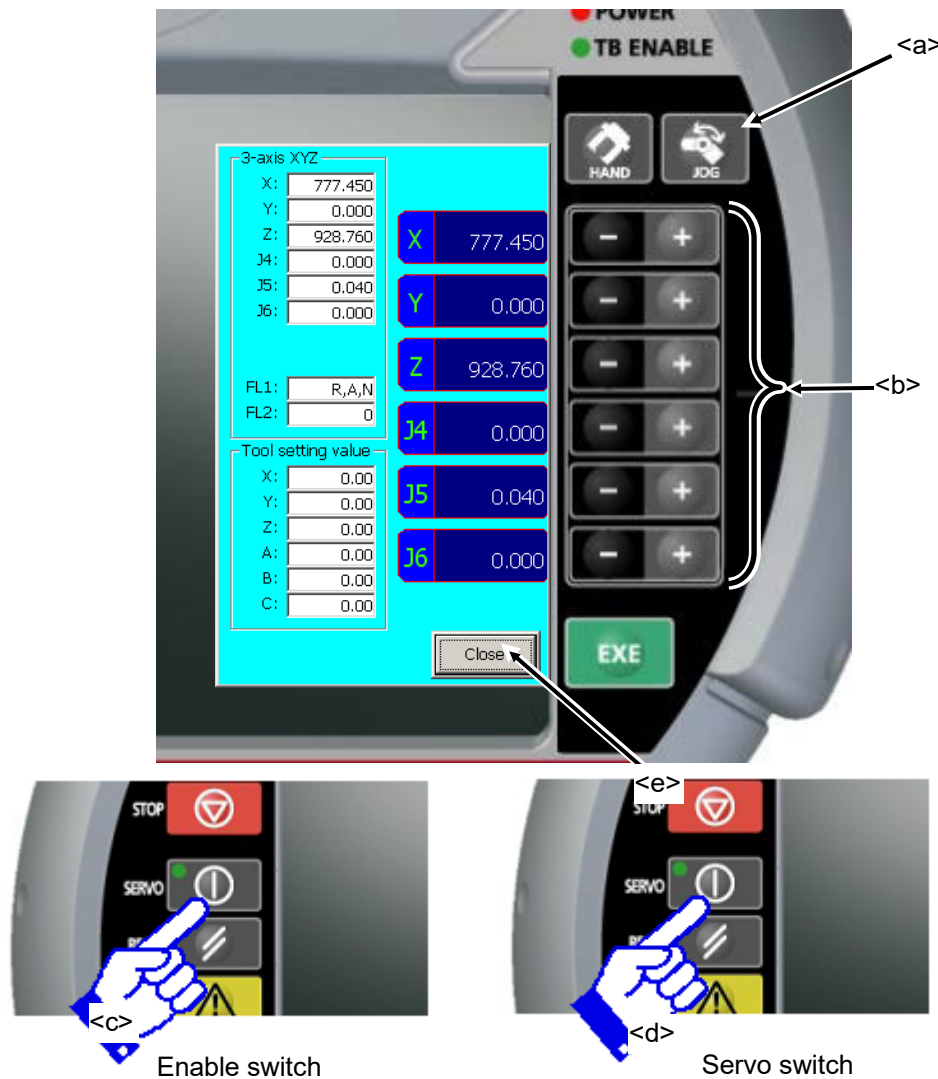

Jogging movement is in the servo power supply ON state, and execute jog feeding by pushing the button of each axis (), continuing pushing the enable switch of T/B. (<c>)

By pushing in the enable switch still more strongly during jog feeding, or detaching, the servo power supply can be turned off and can stop the robot.

The servo will turn ON when the [SERVO] button (<d>) pushed, in the condition that the enable switch is pushed. When the servo turns on, LED (green) of the [SERVO] button lights up.

If the button corresponding to the axis to move is pushed, only while pushing, the robot will move.

If it finishes, tap the [Close] button (<e>) of the T/B screen and close the JOG operation screen.


Advice

The enable switch is in two right and left on the back of T/B.

The servo-on state will be maintained if keeping pushing one of the enable switches.

9.9. Cylinder jog operation

Push the [TEACH] switch and enable the T/B. The LED (white) lights up.
 Push the [JOG] button (<a>) of T/B and display the JOG operation screen.
 Select jog mode (Cylinder).

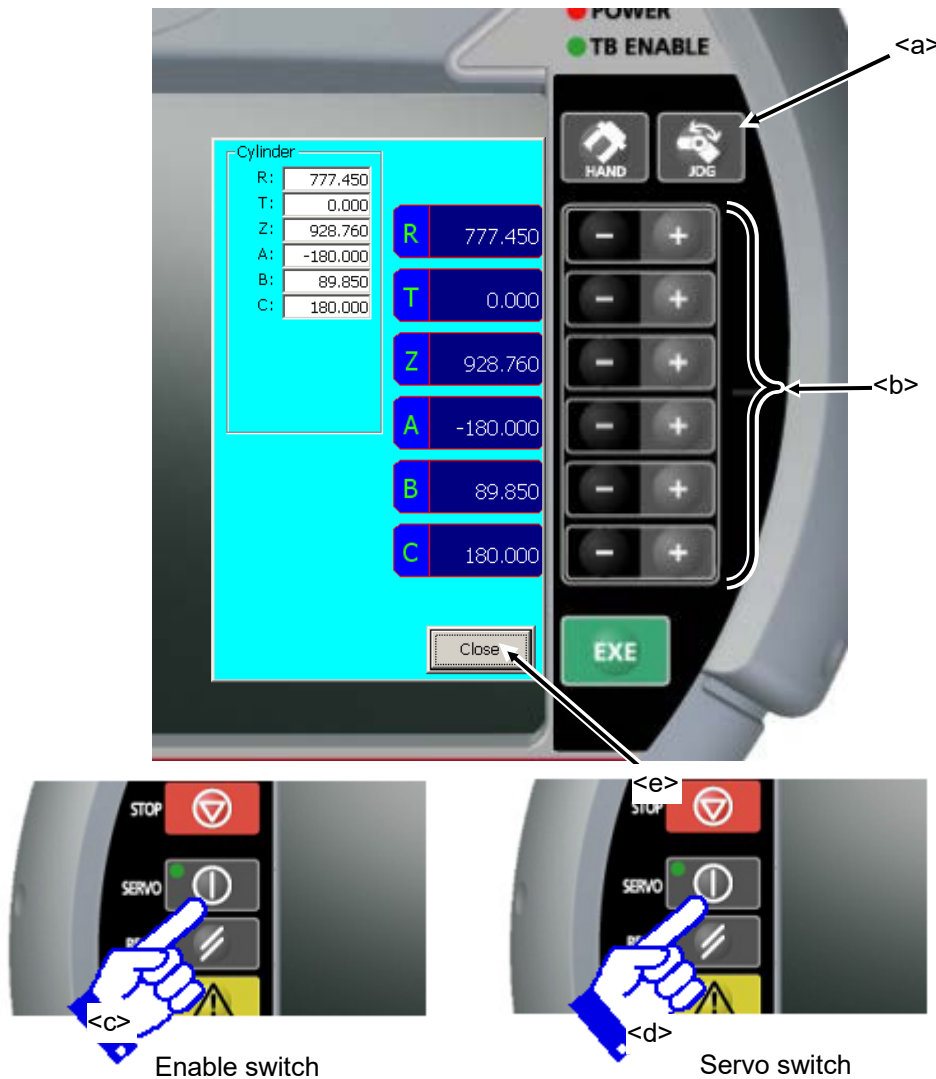

Jogging movement is in the servo power supply ON state, and execute jog feeding by pushing the button of each axis (), continuing pushing the enable switch of T/B. (<c>)

By pushing in the enable switch still more strongly during jog feeding, or detaching, the servo power supply can be turned off and can stop the robot.

The servo will turn ON when the [SERVO] button (<d>) pushed, in the condition that the enable switch is pushed. When the servo turns on, LED (green) of the [SERVO] button lights up.

If the button corresponding to the axis to move is pushed, only while pushing, the robot will move.

If it finishes, tap the [Close] button (<e>) of the T/B screen and close the JOG operation screen.

Advice

The enable switch is in two right and left on the back of T/B.


The servo-on state will be maintained if keeping pushing one of the enable switches.

9.10. Work jog operation

Push the [TEACH] switch and enable the T/B. The LED (white) lights up.
 Push the [JOG] button (<a>) of T/B and display the JOG operation screen.
 Select jog mode (WORK).
 By the WORK jog operation, the robot can be moved along the work coordinate that set beforehand.

The WORK jog function is available with Ver.2.3 or later of this software. Moreover, the software version of the controller which can use this function is as follows.

Controller	S/W Ver. of the controller
CR750-D/CRnD-700	Ver.P8 or later
CR750-Q/CRnQ-700	Ver.N8 or later
CR800-D/R/Q	Can be used with all versions

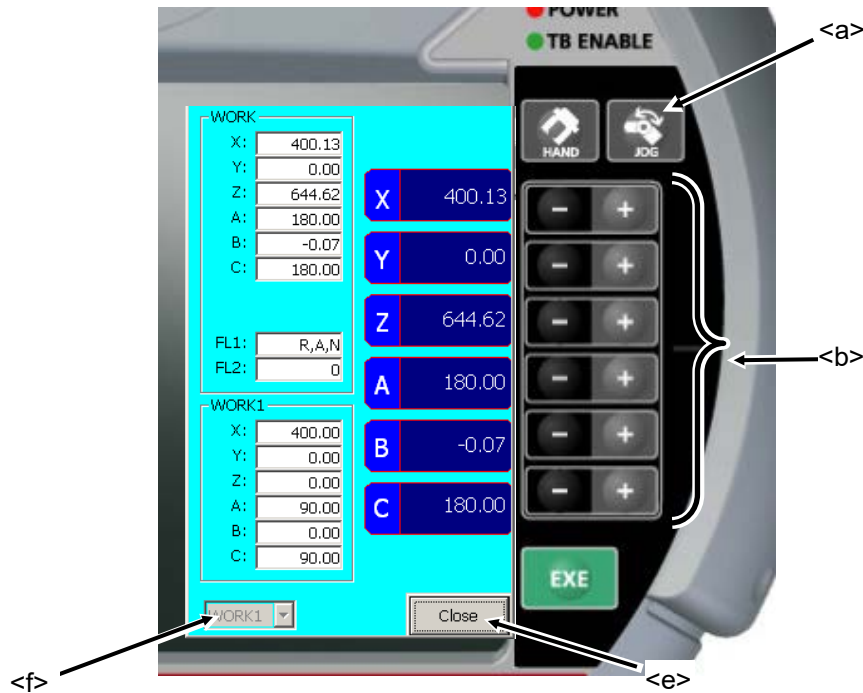

Enable switch



Servo switch

Jogging movement is in the servo power supply ON state, and execute jog feeding by pushing the button of each axis (), continuing pushing the enable switch of T/B. (<c>)

By pushing in the enable switch still more strongly during jog feeding, or detaching, the servo power supply can be turned off and can stop the robot.

The servo will turn ON when the [SERVO] button (<d>) pushed, in the condition that the enable switch is pushed. When the servo turns on, LED (green) of the [SERVO] button lights up.

The work coordinate of the target for operation can be switched by combo box (<f>) on the JOG operation screen.

If the button corresponding to the axis to move is pushed, only while pushing, the robot will move.

If it finishes, tap the [Close] button (<e>) of the T/B screen and close the JOG operation screen.

Advice

The enable switch is in two right and left on the back of T/B.

The servo-on state will be maintained if keeping pushing one of the enable switches.

9.11. Jog operation with wheel

While setting the operation speed to fixed-dimension feed High or Low, it is possible to operate by even rotating the wheel <a>, in addition to the usual jog operation done with [+] and the [-] key.
(This function is available with R56TB Ver.2.1 or later.)



Wheel-jog mode is released at the following time.

- Release the target axis for the operation.
- Change the jog mode.
- Change the operation speed to besides fixed-dimension feed High or Low.
- Disable the T/B.



WARNING

The operation speed of the robot might exceed 250mm/s.

In the jog operation with the wheel, the instruction in the jog is sent continuously when the wheel is rotated. Please note the movement of the robot enough.

Especially, because the amount of operation of fixed-dimension feed is large in Jog mode which operates the joint axis, the speed in the flange plane of the robot might exceed 250mm/s. Feed amount when jog speed can be set by the first element of parameter JOGJSP (Inching H) and the second element (Inching L). Please set each below factory setting value and use it.

Operate according to the following procedures.


1. Push the [JOG] button () of T/B and display the JOG operation screen. Select the jog mode.
And Set the operation speed to High or Low.



2. Tap a part of axis name<c> of axis to operate on the JOG operation screen, the axis becomes the target axis for the operation. If the target axis is set, it becomes Wheel-jog mode. And the Wheel-mark<d> is displayed.

If tapping other axis name, the target axis changes into that axis.

Moreover, if tapping axis name of current target again, it is released.

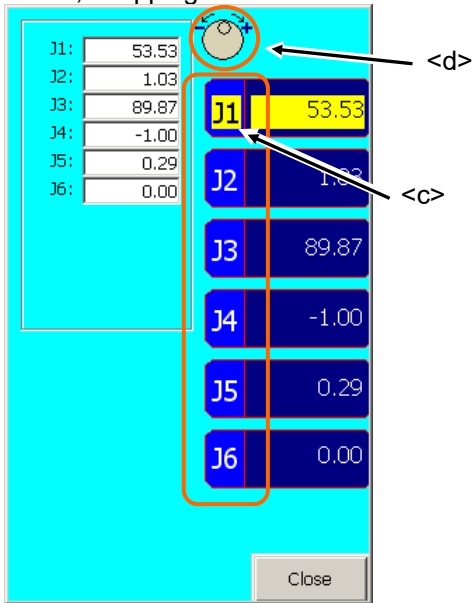

3. Turn the servo on, and rotate the wheel with pushing the enable switch of T/B. The target axis for the operation is moved in fixed-dimension feed.

Right rotation : Direction of +

Left rotation : Direction of -


9.12. Force control function

If the force control function can be used, [F] <a>bottom is displayed in the Jog operation screen. Tap [F] <a> bottom, [force control screen] is displayed. The force control function is available with Ver.3.0 or later of this software.

Moreover, the software version of the controller which can use this function is as follows.

Controller	S/W Ver. of the controller
CR750-D/CRnD-700	Ver.R3 or later
CR750-Q/CRnQ-700	Ver.S3 or later
CR800-D/R/Q	Can be used with all versions


This screen has these functions (" Specification of sense of force control ON/OFF", " Confirmation of present state", " Monitoring of force control sensor"). Refer to the manual: "Force control" for details on the operation.

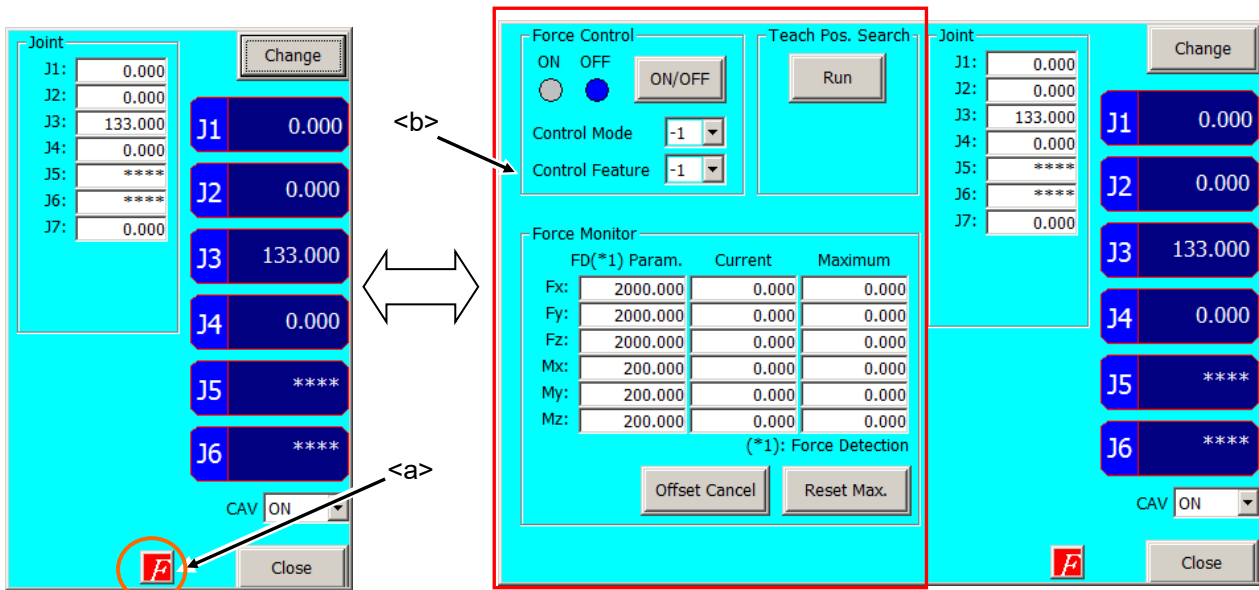

9.13. Collision avoidance ON/OFF

If the collision avoidance function is can be used, [CAV] <a> combo box is displayed in the Jog operation screen. Select [CAV] <a> combo box ON/OFF, The collision avoidance function when Jog is operated can be turned ON/OFF. The collision avoidance function is available with Ver.3.0 or later of this software. Moreover, the software version of the controller which can use this function is as follows.

Controller	S/W Ver. of the controller
CR750-D	-
CR750-Q	Ver.S3 or later
CR800-D/R	-
CR800-Q	Can be used with all versions

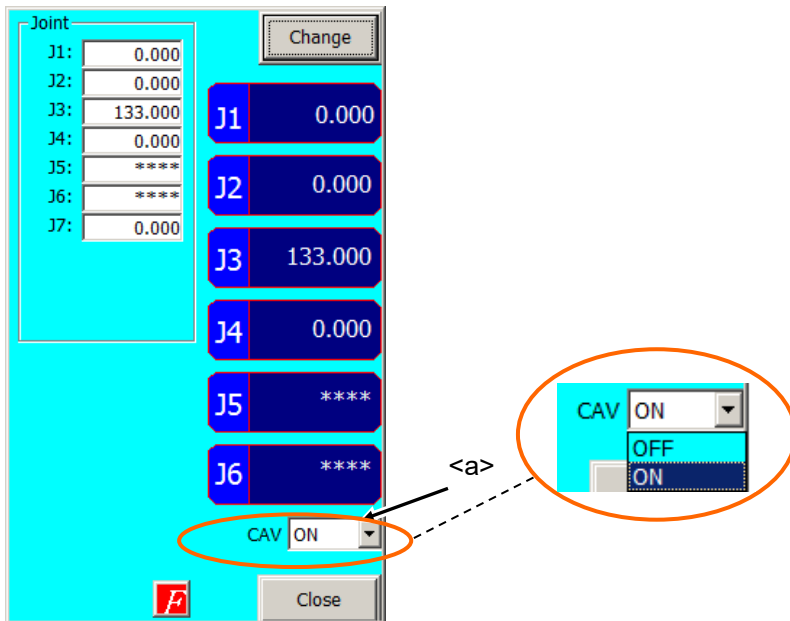


9.14. Aligning the Hand

The posture of the hand attached to the robot can be aligned in units of 90 degrees.




This feature moves the robot to the position where the A, B and C components of the current position are set at the closest values in units of 90 degrees.

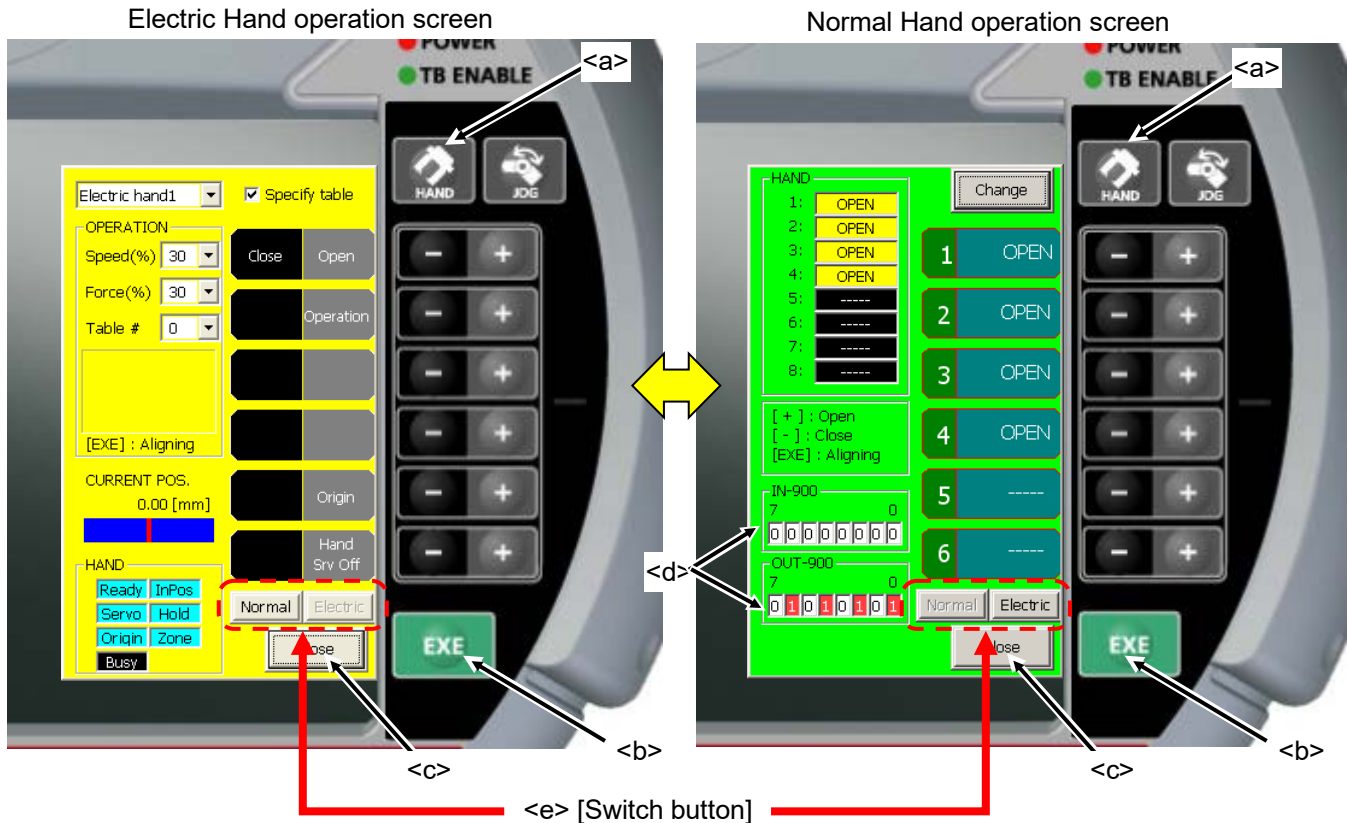If the tool coordinates are specified by the TOOL instruction or parameters, the hand is aligned at the specified tool coordinates. If the tool coordinates are not specified, the hand is aligned at the center of the mechanical interface. Push the [HAND] button (<a>) of T/B and display the hand operation screen.



* The Electric Hand operation screen is different with wit versions of this software. For details, refer to “9.15.1 Operation of the Electric Hand”.

When aligning the hand, the servo power supply is in ON state, and in the condition that the enable switch of T/B continues being pushed. By pushing in the enable switch still more strongly during hand alignment, or detaching, the servo power supply can be turned off and can stop the robot.

In the condition that the enable switch of T/B is pushed, if the [EXE] button () of T/B is pushed, only while pushing, the robot will move toward the alignment position. During movement, During movement, displayed  and  by turns at the lower left of the T/B screen, and if alignment is completed, displayed  at there. If it finishes, tap the [Close] button (<c>) of the T/B screen and close the hand operation screen.

The “IN-900” and “OUT-900”, which show the state of hand I/O signals, are displayed from Ver.2.3 or later of this software.

The operation of the Electric Hand and the switch button are available from this software version 2.5 or later.

Advice


The enable switch is in two right and left on the back of T/B.

The servo-on state will be maintained if keeping pushing one of the enable switches.

9.15. Opening/Closing the Hands

Push the [HAND] button (<a>) of T/B and display the hand operation screen.

In this software version 2.5 or later, the Electric Hand screen is displayed when the robot has the Electric Hand. The Electric Hand operation screen and the Normal Hand operation screen can be switched by the button in the hand operation lower right of the screen.

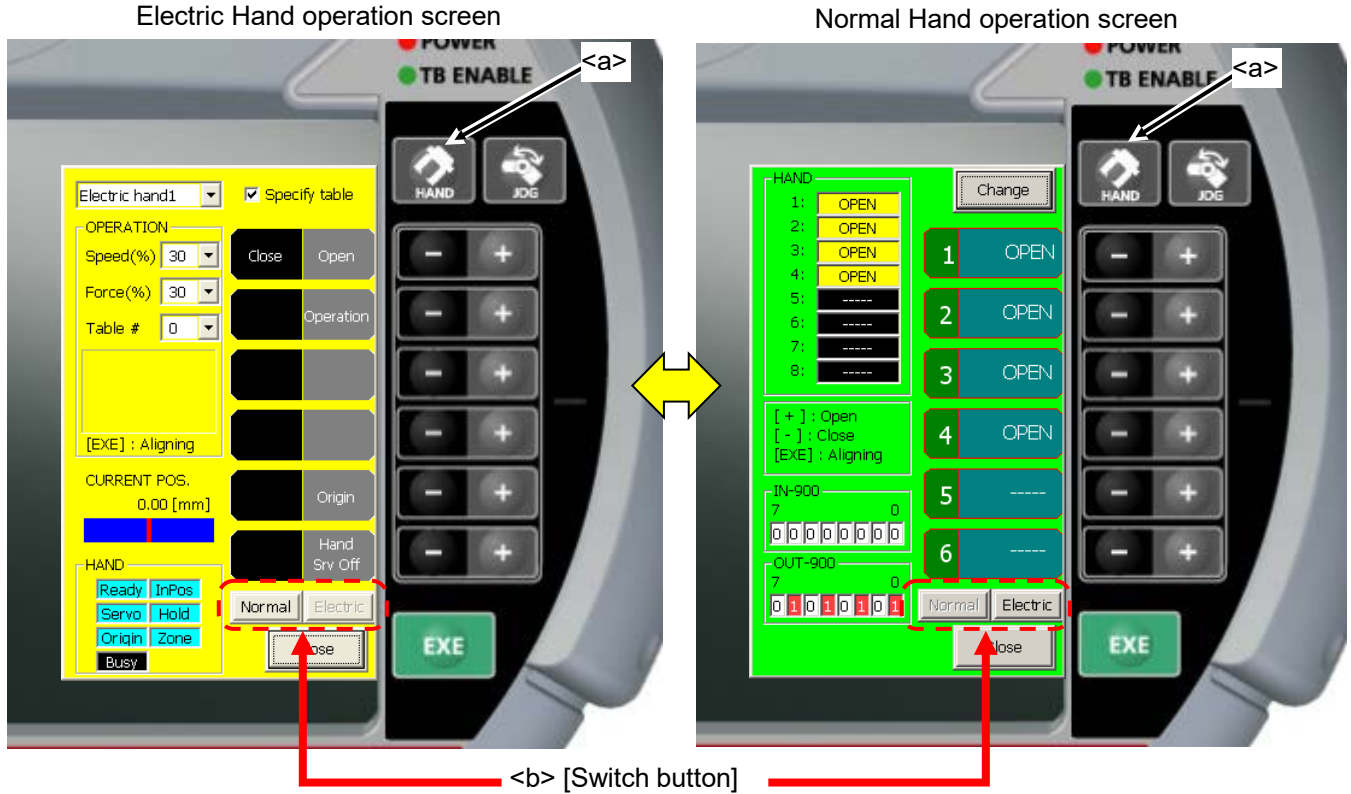

* The Electric Hand operation screen is different with wit versions of this software. For details, refer to “9.15.1 Operation of the Electric Hand”.

9.15.1. Operation of the Electric Hand


The Electric Hand operation function can be used this software Version 2.5 or later. And the software version of the controller which you can use is as follows.

Controller	Software version of the controller
CR750-D/CRnD-700	Version S2a or later
CR750-Q/CRnQ-700	Version R2a or later
CR800-D/R/Q	Can be used with all versions


The electric hand table method can be used this software Version 3.1 or later. And the software version of the controller which you can use is as follows.

Controller	Software version of the controller
CR750-D/CRnD-700	Version S3e or later
CR750-Q/CRnQ-700	Version R3e or later
CR800-D/R/Q	Can be used with all versions

(1) In the case of using version 3.0 or earlier

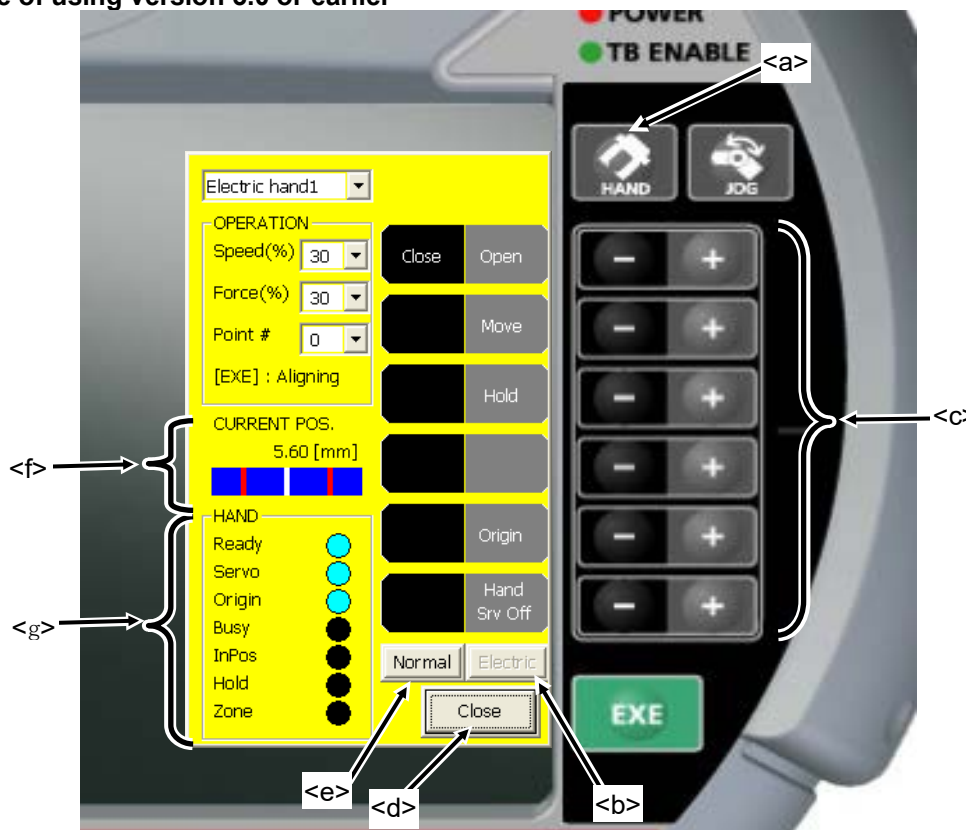

(2) In the case of using version 3.1 or later

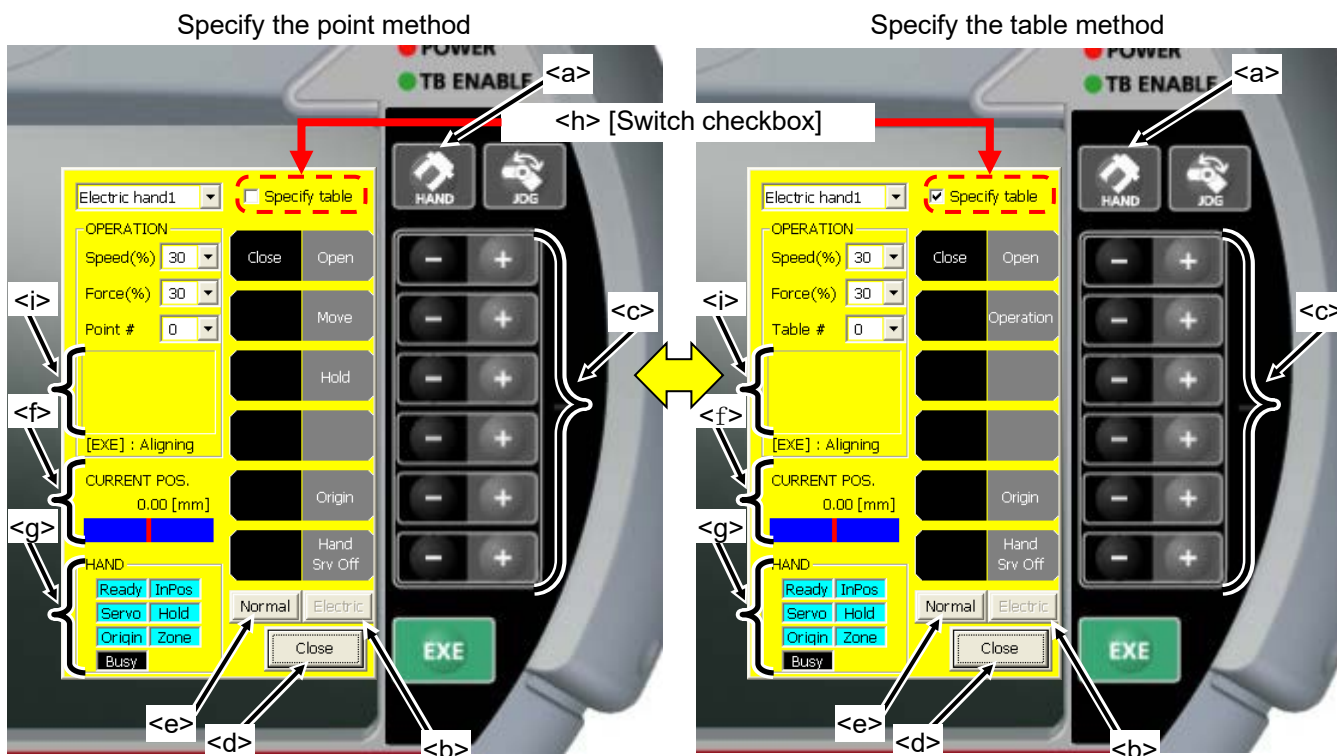

Push the [HAND] button (<a>) of T/B and display the Electric Hand operation screen. When the Normal Hand operation screen is displayed, the Electric Hand operation screen can be displayed by tapping the lower right [Electric] key of the screen. The Normal Hand operation screen can be displayed by tapping the [Normal] key <e> in the Electric-Hand operation screen.

The current hand state is displayed on the hand operation screen.

The Electric Hand can be operated by pushing [+] button or [-] button corresponding to hand operation.

Please refer to “**Table 9-3 The operation of the Electric Hand and the explanation of the functions.**” for detail. In this software version 3.1 or later, when the [Specify table] checkbox (<h>) is set the tick mark (for true), the operation mode is switched. And a comment corresponding to the selected table # or point # is displayed (<i>).

The condition of operating the Electric Hand is as follows.

Table 9-2 The condition of operating the Electric Hand

The conditions in the robot controller	The conditions in the Electric Hand
(1) Not operating (2) Not emergency stop (3) Stop is not input (4) The T/B key operations is enable. * It is possible to operate regardless of pushing the enable switch button. * It is possible to operate while the H-level error or L-level error is occurring (The electric hand error is excluded).	(1) Connect with the robot. (2) The model selection is finished. (3) Moving to the origin point is completed. (excluding while moving to the origin point.) (4) The electric hand error (L814*/L815*/L816*) do not occur. (5) The Electric Hand is not operating.

If it finishes, tap the [Close] button (<d>) of the T/B screen and close the hand operation screen.

Table 9-3 The operation of the Electric Hand and the explanation of the functions.

Operation	Explanation
Open	The hand is opened. (Only while holding down the button.) The same operation as time when the EHOpen instruction was executed is done based on a set value of the "Speed" and "Force".
Close	The hand is closed. (Only while holding down the button.) The same operation as time when the EHClose instruction was executed is done based on a set value of the "Speed" and "Force".
Operation	The hand is moved by the table method. (Only while holding down the button.) The same operation as time when the EHTble instruction was executed is done based on a set value of the "Table #".
Move	The hand is moved. (Only while holding down the button.) The same operation as time when the EHMov instruction was executed is done based on a set value of the "Speed" and "Point #".
Hold	The hand holding operation is executed. (Only while holding down the button.) The same operation as time when the EHHold instruction was executed is done based on a set value of the "Speed", "Force" and "Point #".
Origin	The moving to the origin point is executed. (Only while holding down the button.) The same operation as time when the EHOrg instruction was executed is done.
Hand Servo Off	The servo power of the Electric Hand is turned off. As a result, it is possible to move the hand manually and teach directly.

Note) When the value of speed or force (grip force) is set that is smaller than the smallest setting value of the operated hand, the hand moves at the smallest setting value.



CAUTION

It is possible to turn off the servo power supply of the Electric Hand only by the Hand Servo Off operation of T/B.


It is possible to turn off the servo power supply of the Electric Hand only by the Hand Servo Off operation of T/B.

In the following cases, the power supply of the electric hand is not turned off.

- When the robot is stopped in an emergency state.
- When the high-level error of the robot occurs.
- When the servo power supply of the robot is turned off.



The servo power supply of the Electric Hand is turned on automatically when the operation instruction is executed.

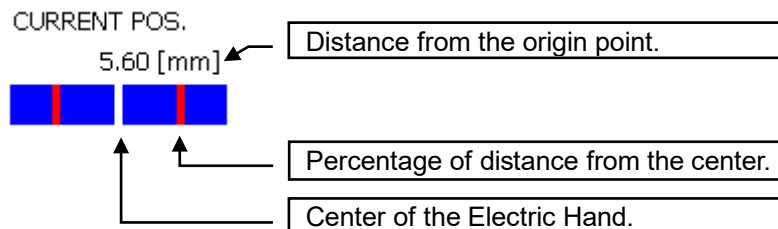The explanation of "CURRENT POS "<f> is as follows.



The explanation of "HAND"<g> is as follows.

Table 9-4 The explanation of the state of the Electric Hand.

Status	Explanation	
	 (*1)	 (*2)
Ready	Preparation is completed.	During the preparation.
Servo	Servo ON	Servo OFF
Origin	Moving to the origin point is completed.	Moving to the origin point is not completed.
Busy	Operating.	Stopping
InPos	Reached to the target position.	Unreached to the target position.
Hold	Holding the works.	Not holding the works.
Zone	The hand is in the zone specified by EHOOpen instruction or EHCclose instruction.	The hand is not in the zone specified by EHOOpen instruction or EHCclose instruction.

(*1) In this software version 3.1 or later, the background color of the status becomes aqua.

(*2) In this software version 3.1 or later, the background color of the status becomes black.


9.15.2. Operation of the Normal Hand

Push the [HAND] button (<a>) of T/B and display the hand operation screen.

When the Electric Hand operation screen is displayed, the Normal Hand operation screen can be displayed by tapping the lower right [Normal] key <f> of the screen. The Electric Hand operation screen is available from this software version 2.5 or later.

The current hand opening-and-closing state is displayed on the hand operation screen. Although the first screen displays even the hand numbers 1-6, if the [Change] button () of the screen is tapped, the hand numbers 7 and 8 will be displayed.

If the [+] button (<c>) corresponding to the hand number is pushed, the correspondence hand will open, and if the [-] button (<c>) is pushed, it will close.

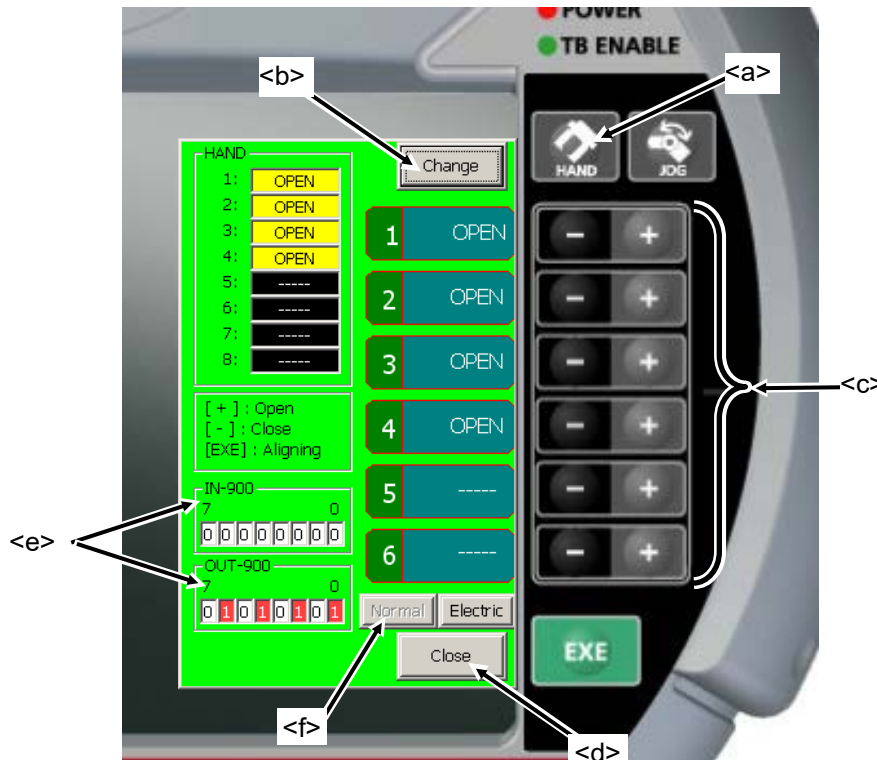

The state of hand I/O signal is displayed from Ver.2.3 or later of this software. <e>

Moreover, when the multi hand tool is connected with the robot by using remote Input/Output signals, the signal numbers are displayed as follows.

Kind of the hand	signals	Content of display
Normal Hand	IN-900 to 907 (Input signals 900 to 907)	ON : "1" is displayed and the background color becomes red. OFF : "0" is displayed and the background color becomes white.
	OUT-900 to 907 (Output signals 900 to 907)	
Multi-Hand	IN-716 to 731 (Input signals 716 to 731)	OFF : "0" is displayed and the background color becomes white.
	OUT-716 to 723 (Output signals 716 to 723)	

If it finishes, tap the [Close] button (<d>) of the T/B screen and close the hand operation screen.

9.16. Return to the Home position

Return the robot to the Home position that set beforehand. The robot is initiated a joint interpolation movement to the position set by the parameter "JSAFE". The speed is determined by the override setting. This function is available with Ver.2.3or later of this software.




CAUTION

Only when MELFA-BASIC V or MELFA-BASIC IV is set to the robot program language used, the Home position return function can be used. The Home position return function cannot be used by the MOVEMASTER command.

Please refer to “17.4.13 Home position” of the parameter for the setting of the safe position.

The Home position return is operated according to the following procedures.

- (1) Set the mode of the controller to “MANUAL”.
- (2) Push the [TEACH] switch (<a>) of T/B, and confirm that the [TEACH] switch and the [TB ENABLE] lamps light.
- (3) Select the model of the operated robot.
When the multi-mechanism control is used, select the model of the operated robot by the combobox of the model selection in the upper part of the screen. If the multi-mechanism control is not used, you don't have to select the model.

- (4) The [JOG] button () is pushed, and the JOG operation screen is displayed.
- (5) In the condition that the enable switch is pushed, press the [SERVO] button (<c>) of T/B, and the servo of robot is turned ON. Please confirm the [SERVO] lamp lights.
- (6) In the condition that the enable switch is pushed, press the [HOME] button (<d>) of T/B.
When the enable switch or the [HOME] button is detached, the robot stops.



10. USB memory stick

USB memory stick




Note) The operation method is the same although the photograph shown below differs from the actual product slightly.

10.1. Plug-in the USB memory stick

CAUTION

Never unplug the USB memory stick during accessing (read / write operations). It causes the failure.

Please shut the cover surely after unplugging the USB memory stick. Otherwise the foreign body enters the connector, and it causes the malfunction.

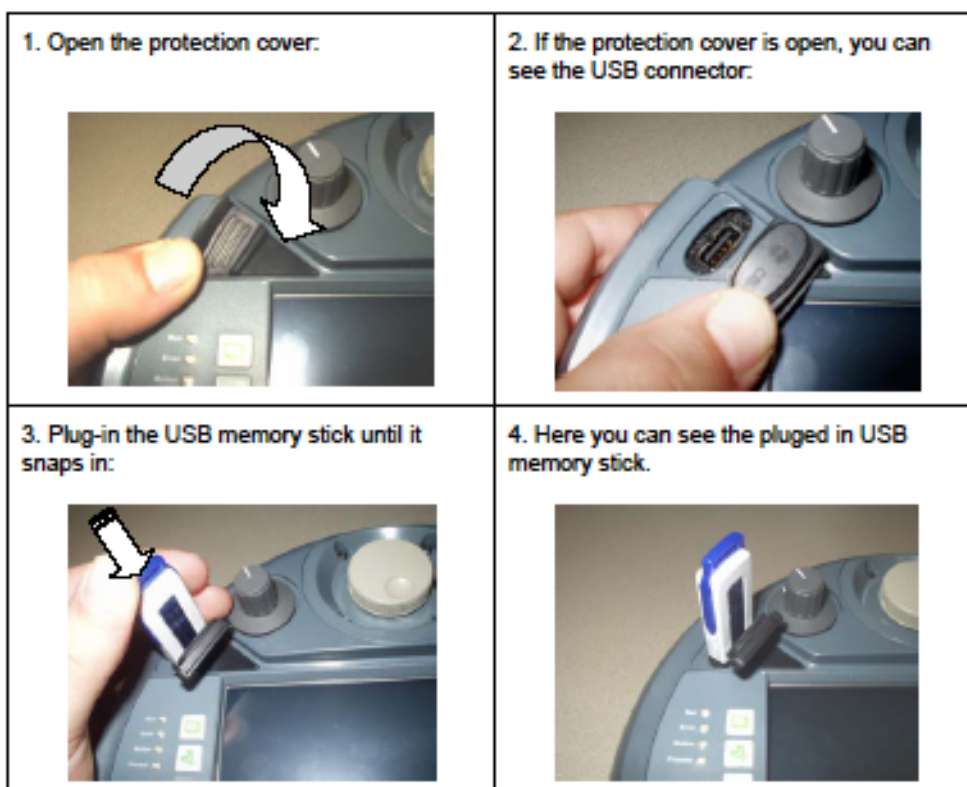

*This picture is sample.


The USB memory stick will be detected immediately and will be shown as Hard Disk.

10.2. Unplug the USB memory stick

CAUTION

Never unplug the USB memory stick during accessing (read / write operations). It causes the failure.

Please shut the cover surely after unplugging the USB memory stick. Otherwise the foreign body enters the connector, and it causes the malfunction.

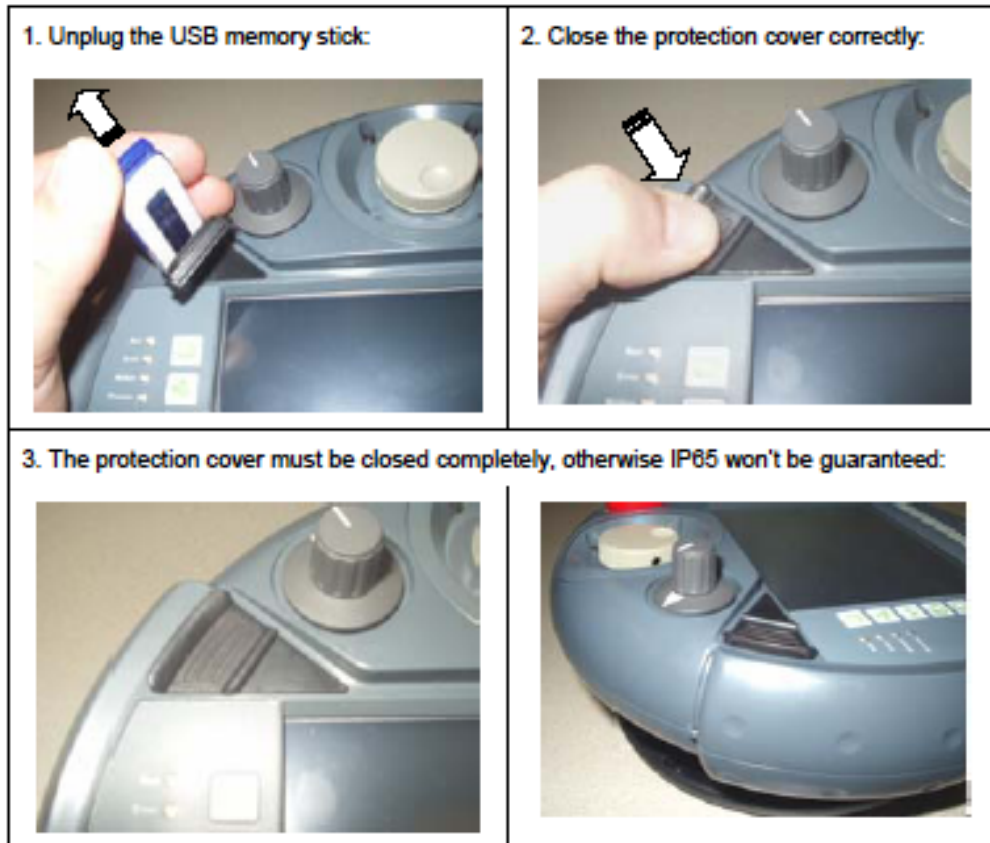


*This picture is sample.

11. Program edit


11.1. Edit of program

11.1.1. Open an edit display (new creation)


1) Tap the [MENU] button (<a>) of a T/B screen and display menu panel.

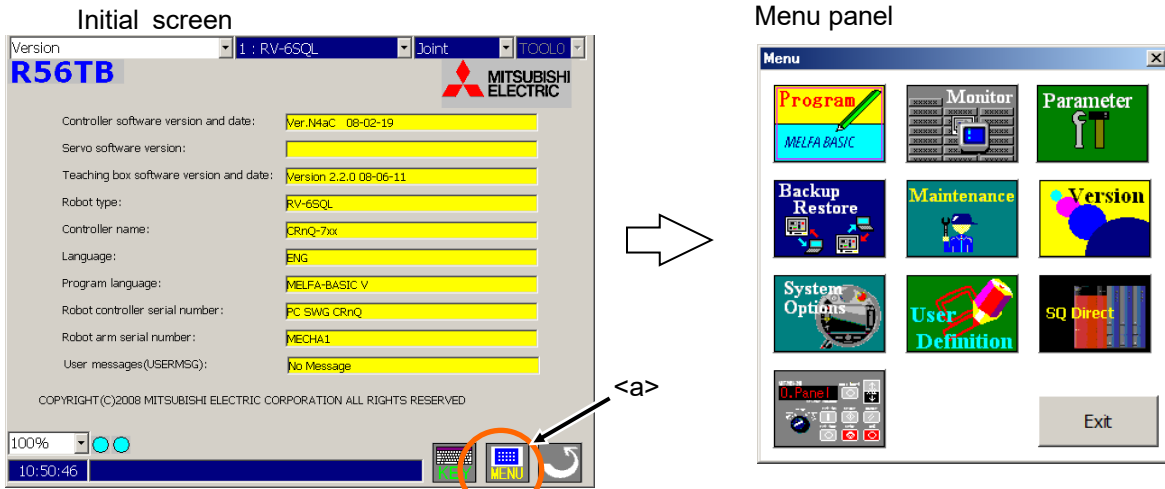

2) [Program] button () is tapped and a program list is displayed. At this time, if it creates newly to a robot controller, the [Robot] radio button (<c>) is checked. If it creates newly to a USB memory, the [USB] radio button (<c>) is checked.

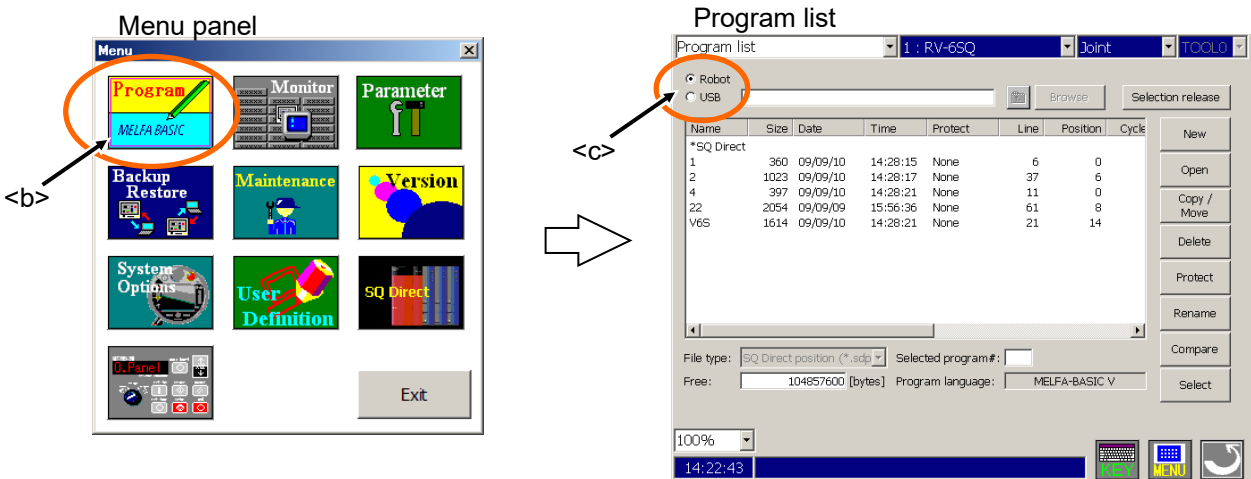


3) [New] button (<d>) is tapped and a keyboard is displayed.

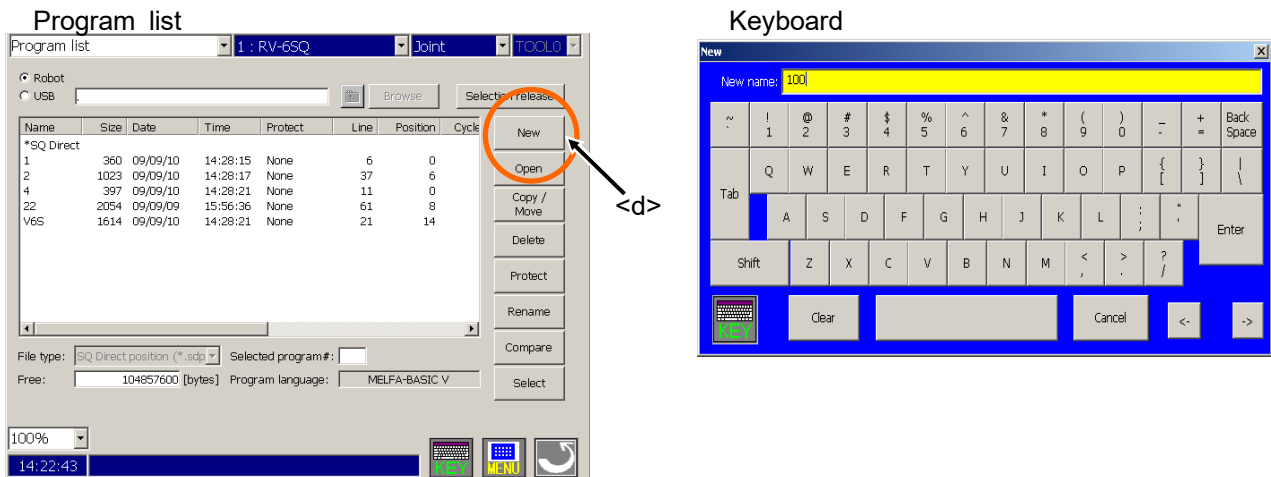


- 4) If a program name is inputted by the keyboard of a screen and the [Enter] key (<e>) is tapped, a command edit screen will be displayed.
The inputted character is displayed on "Program"

Keyboard

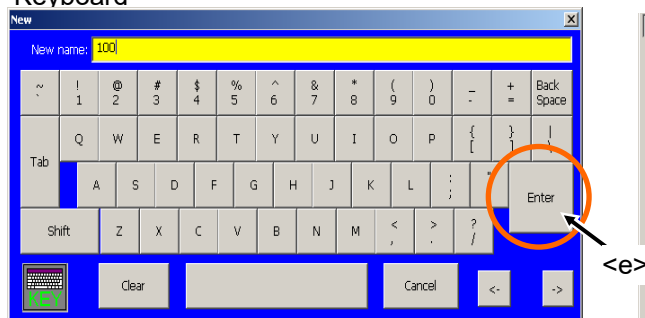


Command edit screen

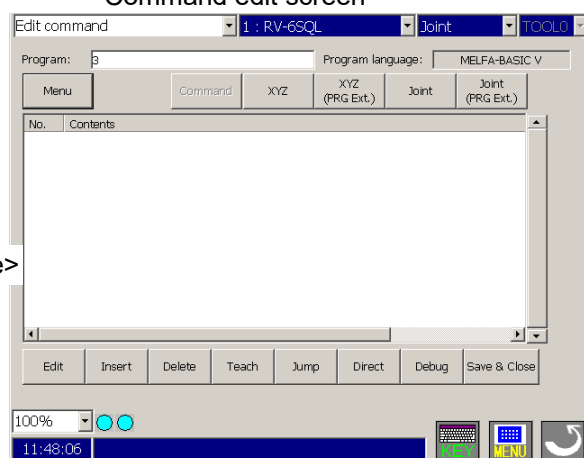

(Creates to the robot controller)

Command edit screen

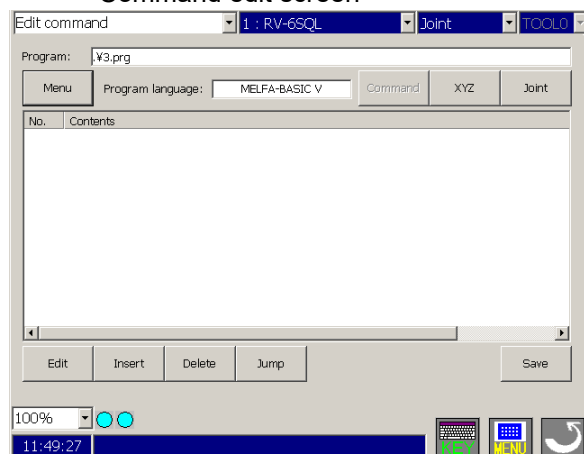

(Creates to the USB memory)

Advice

The buttons displayed differ by the case where the edit screen targets the robot controller and the case where the edit screen targets the USB memory. The functions, which can be executed, also differ.


The edit screens include the command editing screen and the position editing screen.

The command editing screen will be displayed first.


If the [XYZ], [XYZ(Global)], [Joint], or [Joint(Global)] button is tapped, the display will be changed to the position edit screen. And, if the [Command] button is tapped, the display will be changed to the command editing screen.

11.1.2. Open an edit display (read of the existing program)



- 1) Tap the [MENU] button (<a>) of a T/B screen and display menu panel.

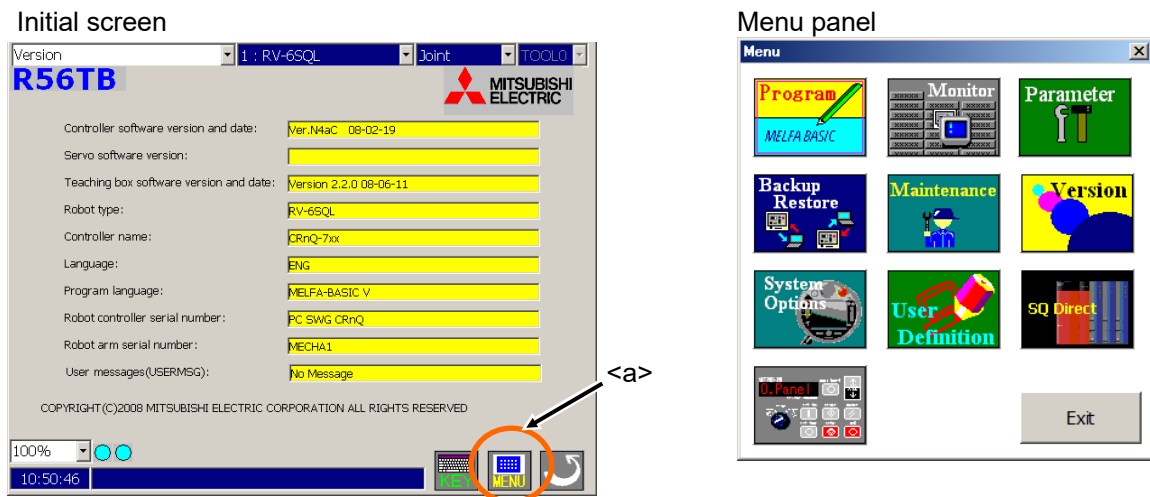


- 2) [Program] button () is tapped and a program list is displayed. At this time, if it creates newly to a robot controller, the [Robot] radio button (<c>) is checked. If it creates newly to a USB memory, the [USB] radio button (<c>) is checked.

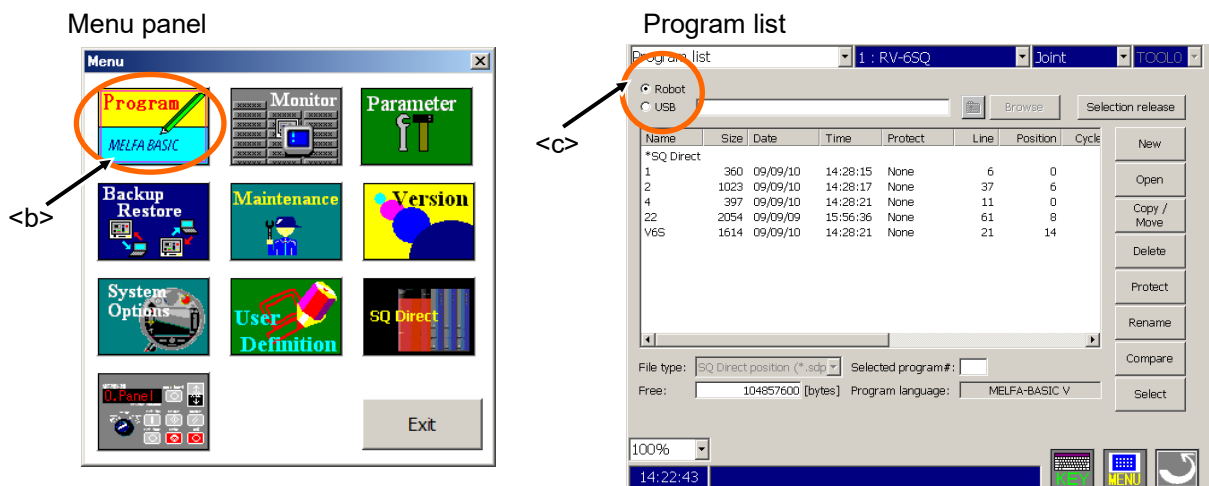

- 3) Select the program to read <d> and tap the [Open] button. (<e>) The command edit screen is displayed. Even if it double taps the program to read <d>, the command edit screen is displayed.

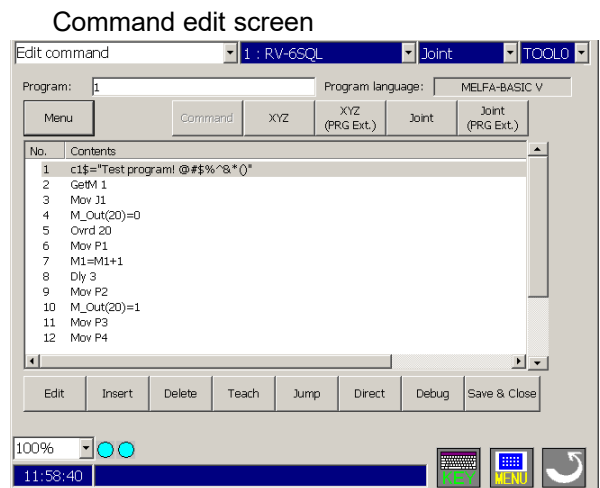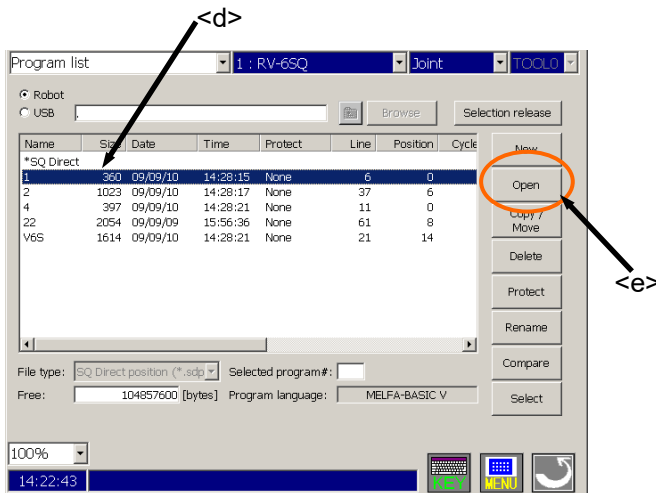

(Reads from the robot controller)

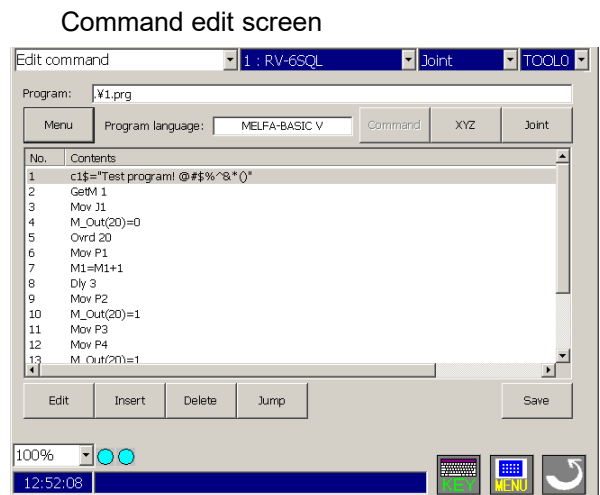

(Reads from the USB memory)




Advice

The buttons displayed differ by the case where the edit screen targets the robot controller and the case where the edit screen targets the USB memory. The functions, which can be executed, also differ.

11.1.3. Save (robot controller)

Tap the [Save & Close] button (<a>) of the edit screen.

During the save, the screen is displayed during communication, () and if it completes, it will return to the program list<c>.

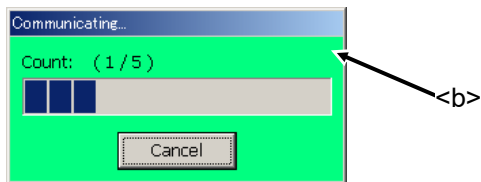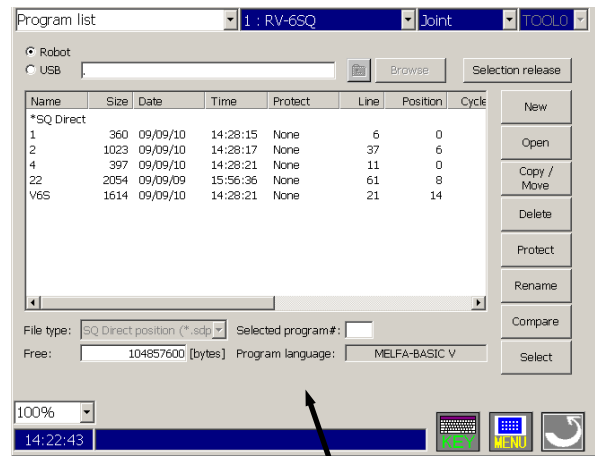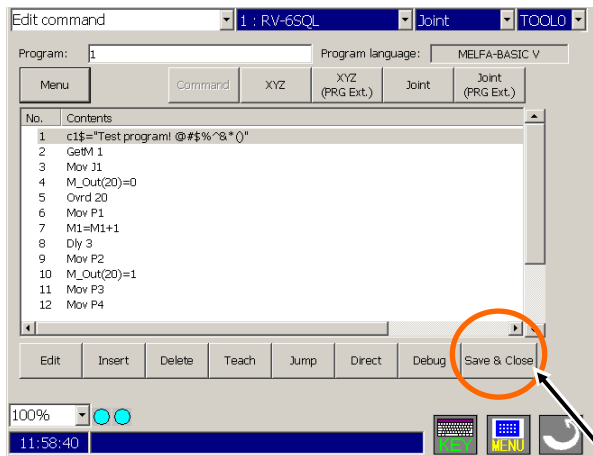



Advice

The buttons displayed differ by the case where the edit screen targets the robot controller and the case where the edit screen targets the USB memory. The functions, which can be executed, also differ. The save of the program can be executed even in the command editing screen or the position editing screen.

11.1.4. Save (USB memory)

Tap the [Save] button (<a>) of the edit screen.

Since the confirmation screen is displayed, the [Yes] button () is tapped if it saves. The [No] button () is tapped if it does not save. During the save, if the sandglass is displayed and it completes, it will return to the original edit screen.


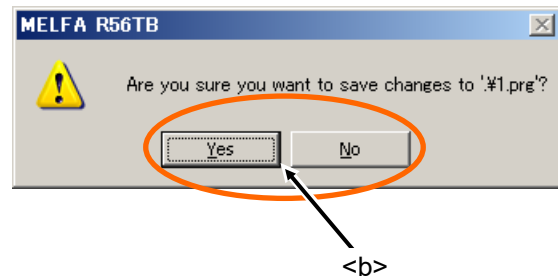
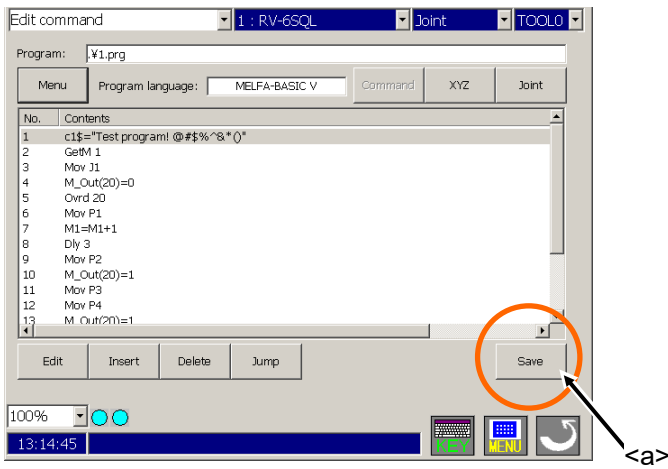


Advice


The buttons displayed differ by the case where the edit screen targets the robot controller and the case where the edit screen targets the USB memory. The functions, which can be executed, also differ. The save of the program can be executed even in the command editing screen or the position editing screen.

11.1.5. Close the edit screen

Tap the [RETURN] button (<a>) at the lower right of the T/B screen. It returns to the program list display.

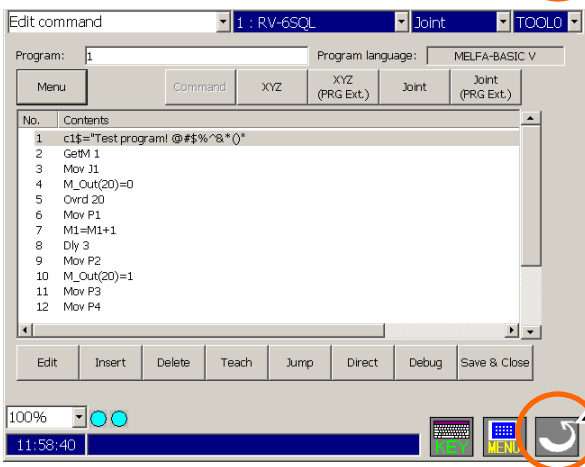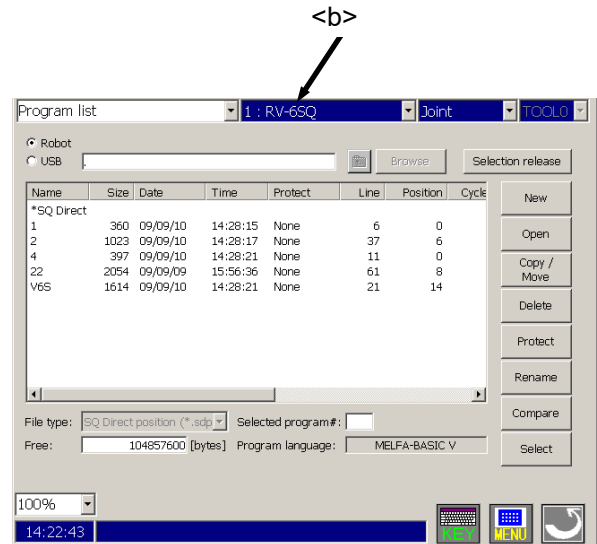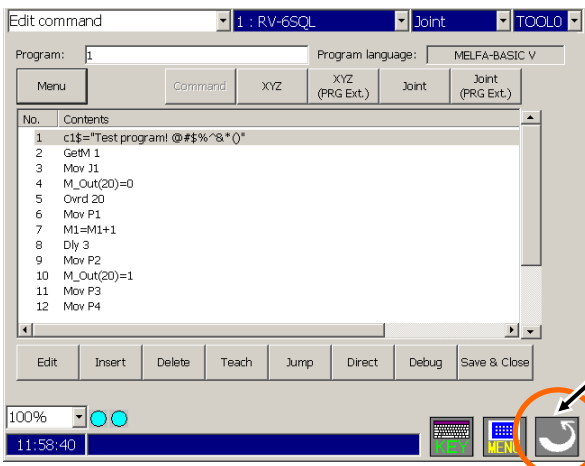

At this time, if the command and the position variable are edited and save operation is not performed, display the message of the confirmation.

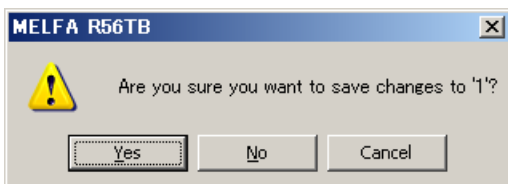

- If saved [Yes]
 - If not saved [No]
 - If it returns to the edit screen . [Cancel]
- Tap each button.



Advice

If the [MENU] button at the lower right of the T/B screen is tapped with the edit screen displayed, it can also progress to each menu directly.



11.1.6. Add the command line

Operation of adding the line of code to new or the existing program in the command edit screen is shown.

1) Taps of the [Add] button (<a>) of the command edit screen will display the keyboard.

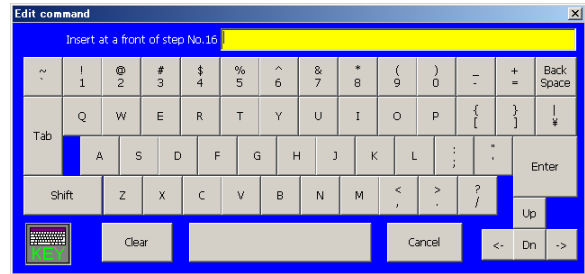
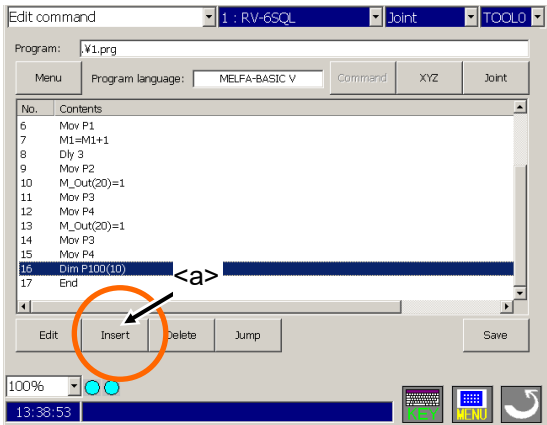


2) Input the line of code from the keyboard and tap the [Enter] key. () The inputted line of code is added in order of the row number. When the [Cancel] key (<f>) is tapped, the keyboard is closed.

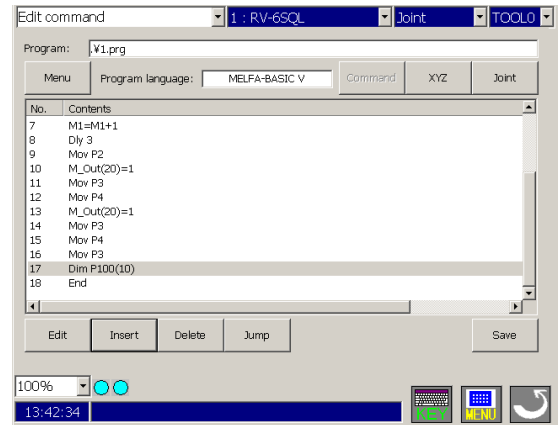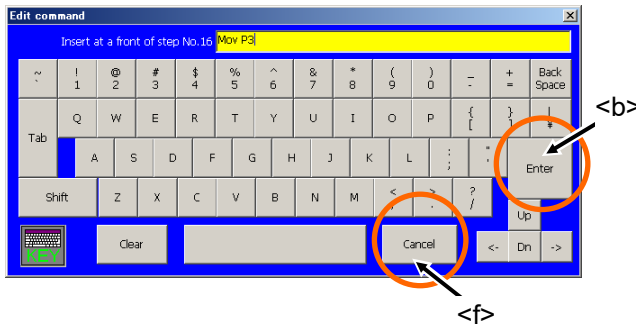

If it corrects the inputted character, delete by the [Back Space] key. (<c>)

Move the cursor to the right side of the character mistaken by the cursor key of [<-] and [->] (<d>), and tap the [Back Space] key. If the [Clear] key (<e>) of the keyboard is tapped, package erasure can be carried out and the inputted character can be inputted again. Moreover, a tap of the [Cancel] key (<f>) will stop input operation.

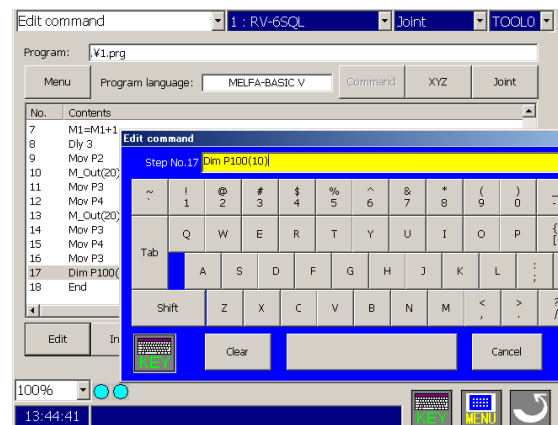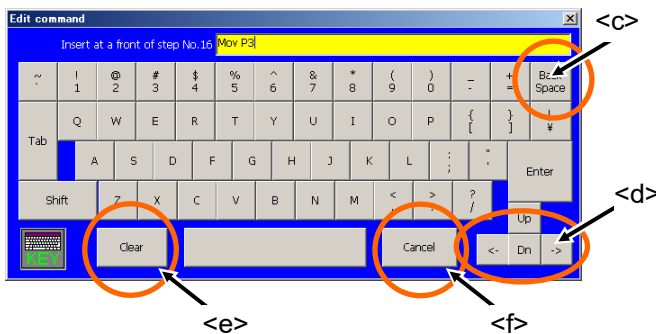



Advice

The keyboard is displayed even if it double taps the parts where the line is not selected, such as the right end on the program list. And, if the keyboard covers the program list and does not appear, the keyboard is shifted rightward, the program list is displayed and the [KEY] button is tapped, the small keyboard will be displayed and the input of the line of code can be done also from here.



11.1.7. Delete the command line

Operation of deleting the line of code or the position variable is shown.



- 1) Select the line to delete or the position variable. Two or more lines can be selected. (<a>)

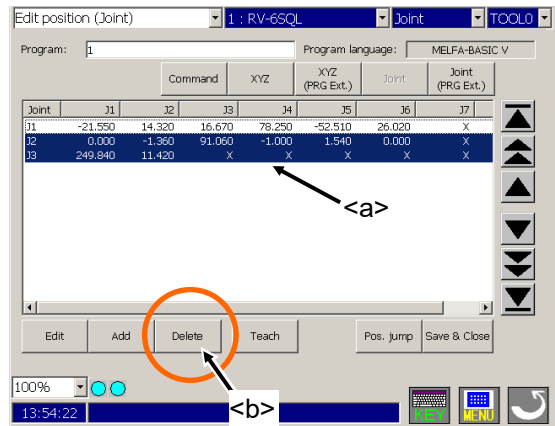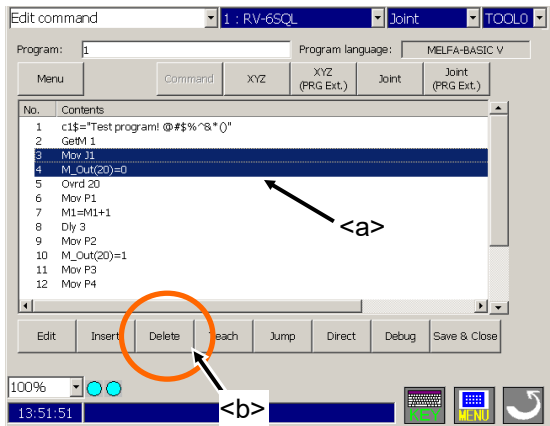

- 2) Tap the [Delete] button (), the selected line of code or the position variable will be deleted.

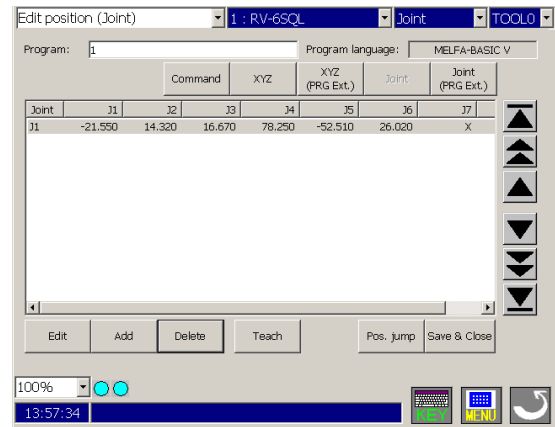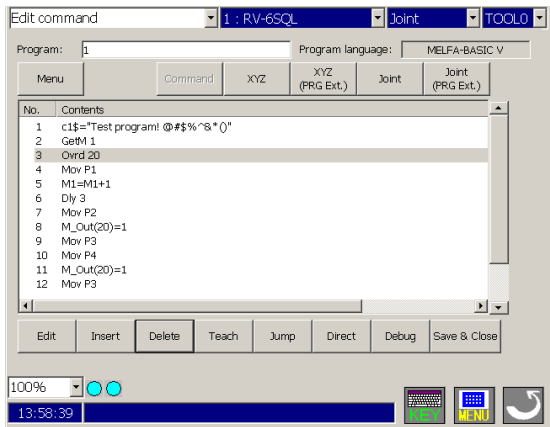

It becomes the error when it is going to delete the position variable currently used by the line of code while editing the program of the robot controller. Push the [RESET] button of T/B. Since the message of confirmation is displayed, tap the [OK] button. (<c>)

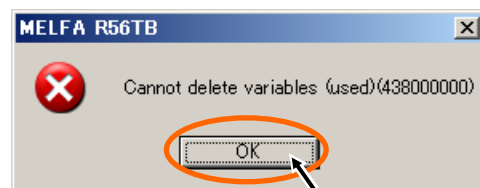
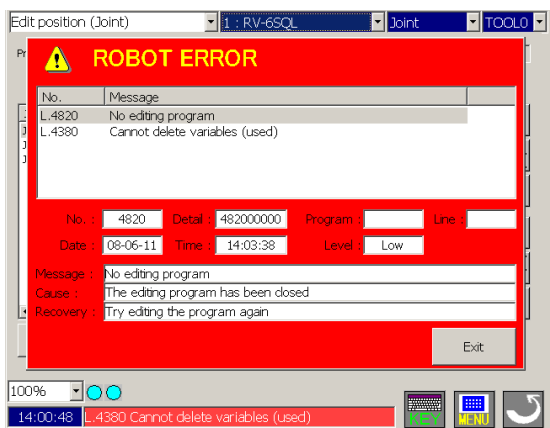


<c>



11.1.8. Undo the edited contents

When editing the command line of the program in the USB memory, the editing operation can be returned to the last state only once.

If the [Menu] button of the command edit screen is tapped and "Undo" (<a>) is tapped after the mistaken operation, the operation done last time will return.

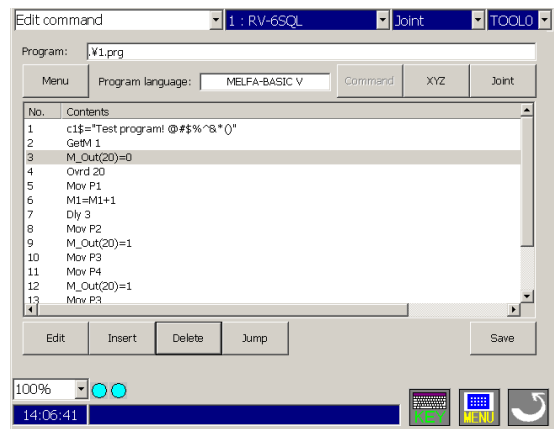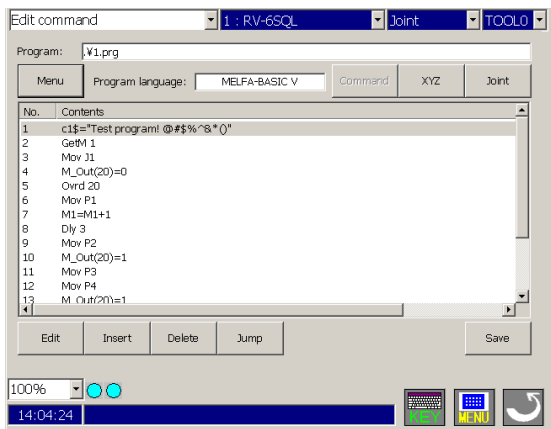

If "3 Mov J1" has been deleted incorrectly.

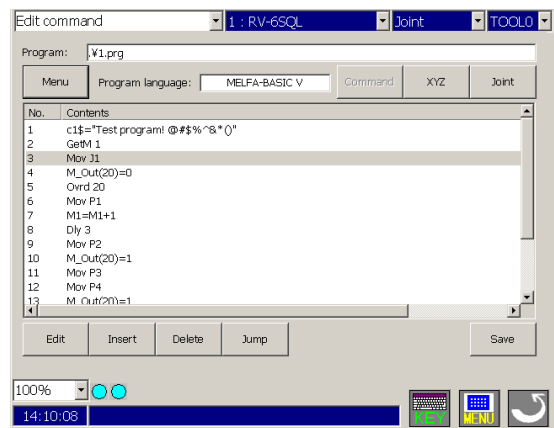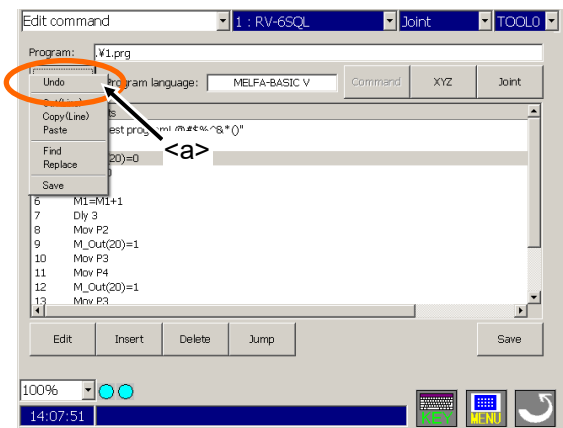

"3 Mov J1" is return.

Advice


Only last one operation is valid to undo. All cannot be returned if two or more operations have been mistaken. In this case, it is necessary to finish program edit, without saving and to do over edit from the start.

To prevent such a situation, we recommend you to copy the program before edit beforehand and to reserve separately.


11.1.9. Cut, Copy and Paste

The specified line of code can be cut, past or copy.



- 1) Select the line to cut or copy. Two or more lines can be selected. (<a>)

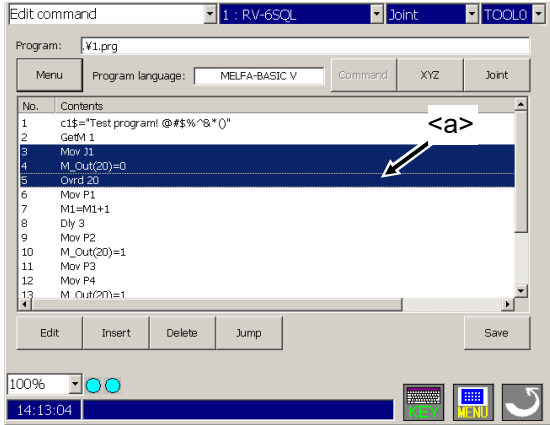



- 2) Tap the [Menu] button of the command edit screen, and if it move, tap the "Cut (Line)." () or if it copies, tap the "Copy".

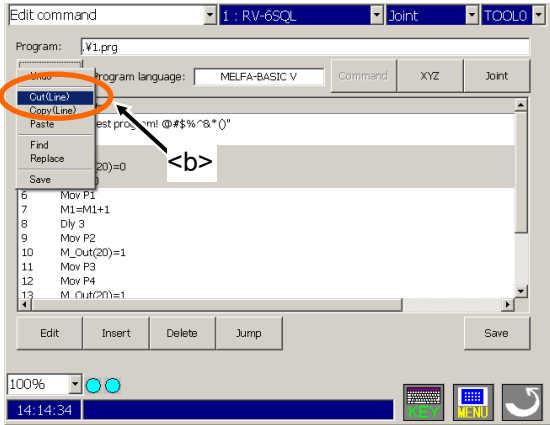



- 3) Select just before the line of paste (<c>), tap the [Menu] button of the command edit screen, and tap "Past". (<d>)

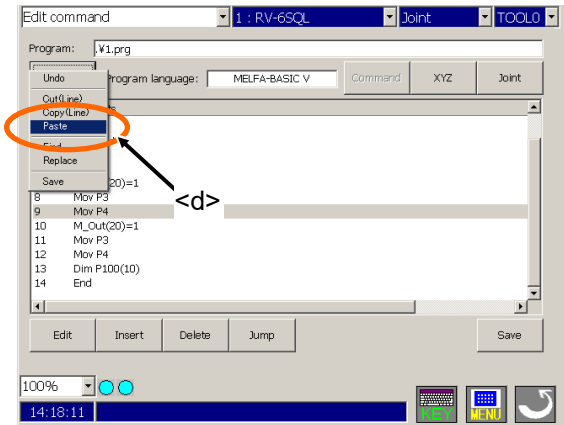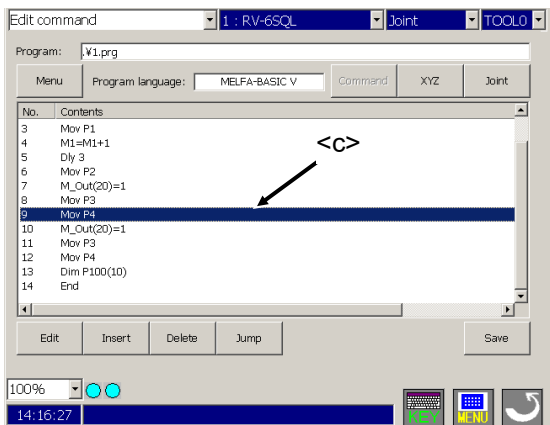


- 4) The screen <a> which confirms the putting part in the destination of the movement or the copy is displayed. Select ahead or after of the line for pasting, and tap [OK] key <c>. And the command line is added to the selected part <d>

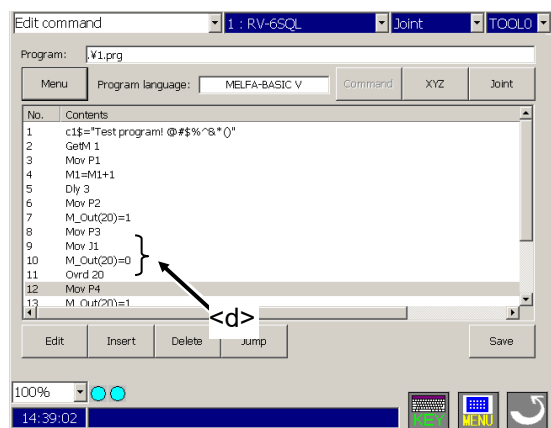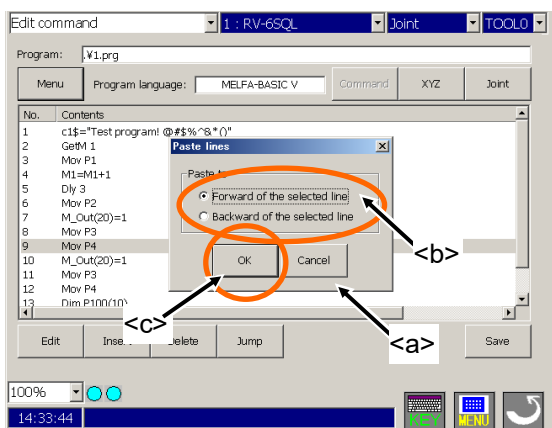

- 5) When MELFA-BASIC IV is used, the screen <a> which confirms the line number and the line interval at the copy destination is displayed. Please change the line number if necessary in the keyboard screen displayed by tapping [edit] key . Please set the first line number for the newly moved or copied to "Line# to paste to:". The line interval (at the movement or the copy of two or more lines) is set. <c> The cursor of both input boxes moves with [Tab], [<<], and the [>>] key. <d> When input ends, tap the [OK] key<e> of the keyboard.

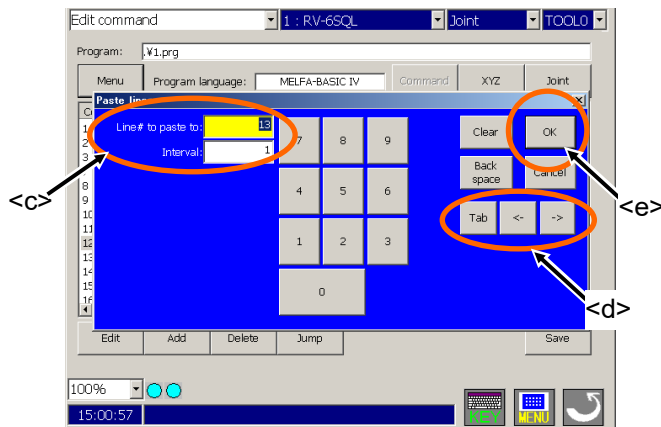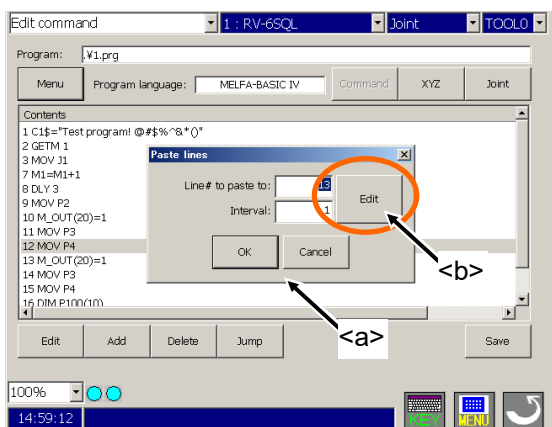


- 6) It returns to the Paste lines screen. Tap [OK] button<h> if the setup is completed, [Edit] button<f> for setting up again, [Cancel] button<i> for stop pasting.

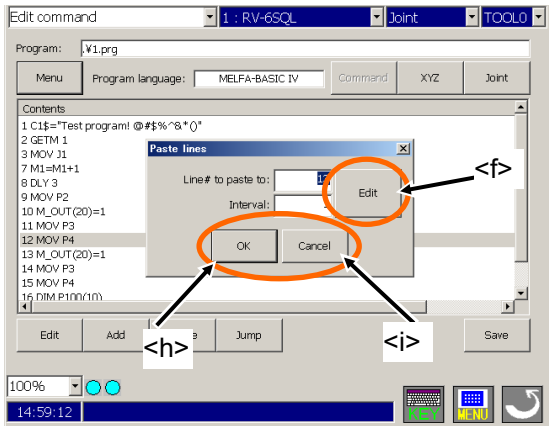

CAUTION

If the new line number of past replace (copy place) has already existed, the existing line of code is overwritten. Moreover, if the existing row number does not exist, the existing line of code and the new line of code will be mixed.

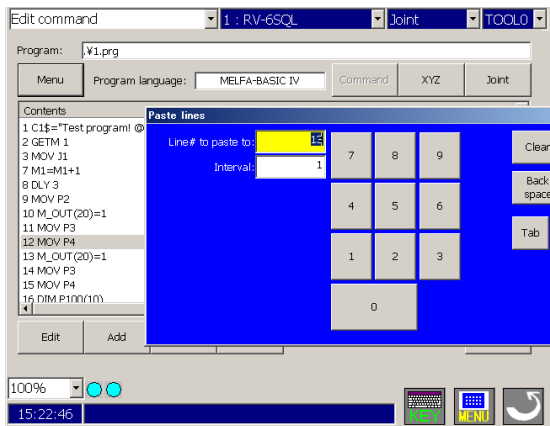

Please check securely the new row number when pasting, and the line pitch. Especially if pasting two or more lines, please be careful. The program list can be looked as shifting the keyboard (ten key).



At the time of the mistaken place, if it is immediately after, it can return to the origin.

Moreover, we recommend you to copy the original program beforehand and to reserve separately.



11.1.10. Renumber

The renumbering function can only be used with MELFA-BASIC IV. The row number of the existing program can be reassigned. When the program is changed several times and the margin has been lost to the line pitch, it can utilize effectively. All lines of code and the range can be specified.



- 1) Tap the [Menu] button of the command edit screen and tap the "Renumber". (<a>) The setting screen will be displayed.

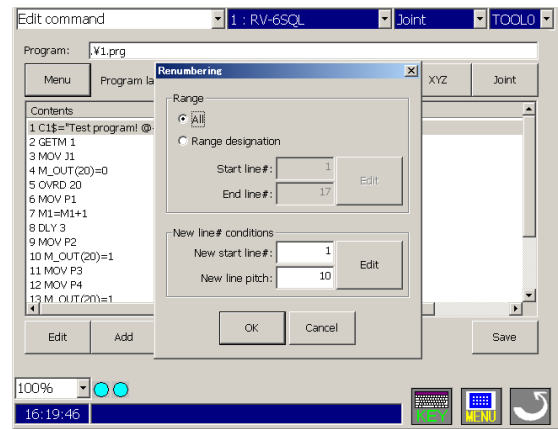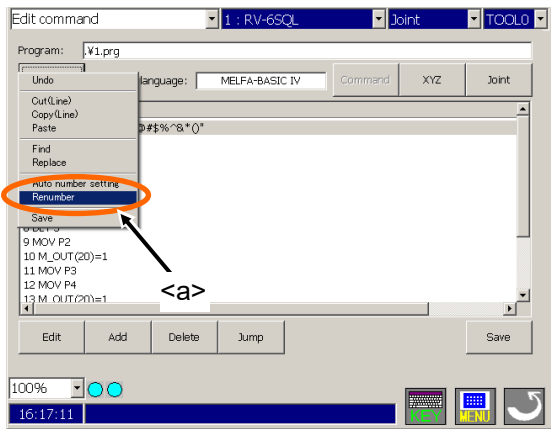



- 2) Checks the radio button of "All" () if all lines are renumbered. Checks the radio button of "Range designation" () if the line of the specification range is renumbered. And specify the target range by the start row number inputted into "Start line#", also the end row number inputted into "End line#". The input operates the keyboard (ten key) which taps the [Edit] button (<c>) and is displayed. Taps the [OK] key (<d>) of the keyboard (ten key) if input is completed.

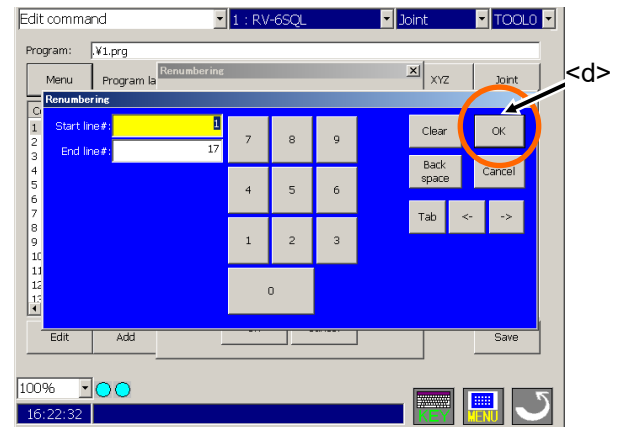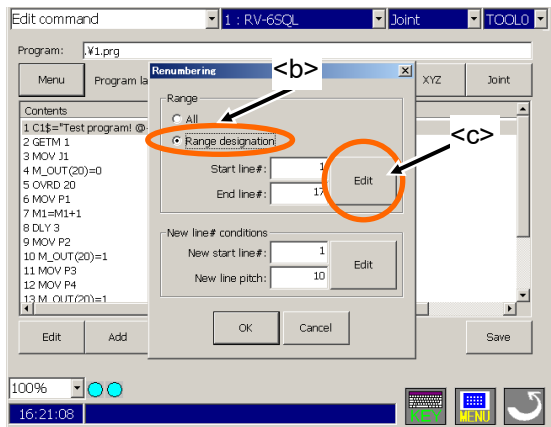


- 3) Input the start row number after renumbering into "New start line#", and also input the line pitch into "New line pitch." The input operates the keyboard (ten key) which taps the [Edit] button (<e>) and is displayed. Taps the [OK] key (<f>) of the keyboard (ten key) if input is completed.

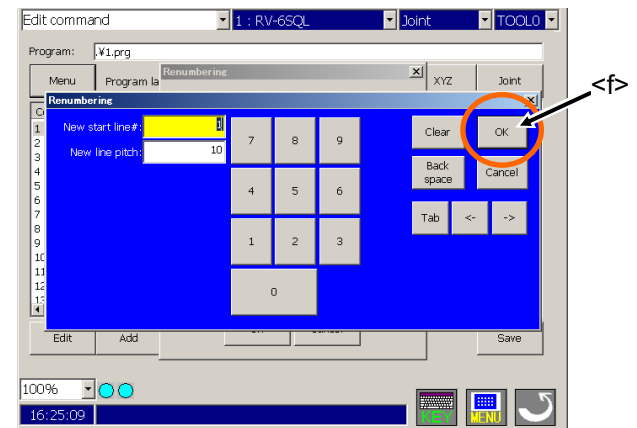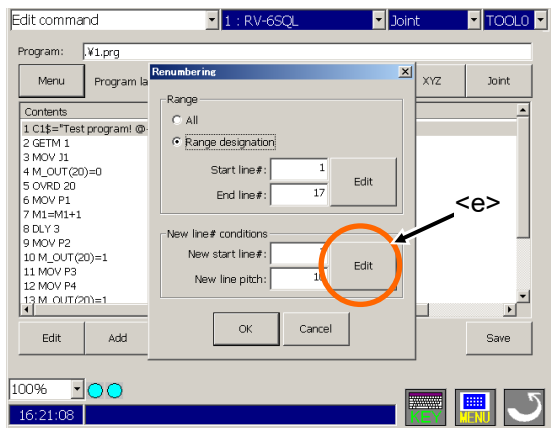

4) Renumber will be executed if you tap the [OK] button (<h>) of setting screen.

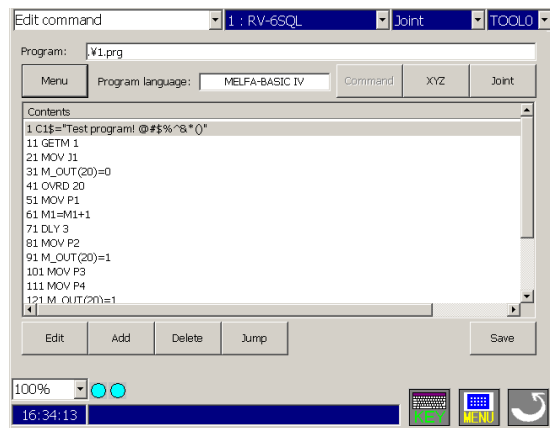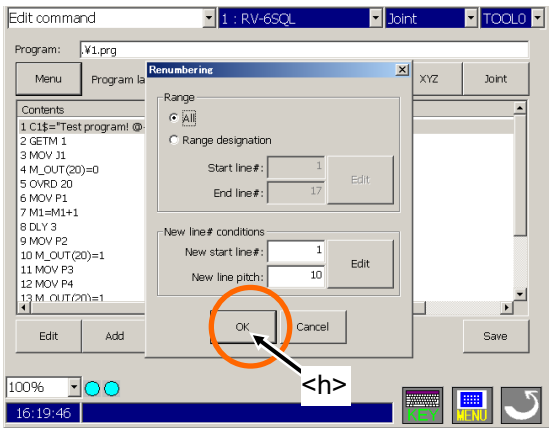

If the object range is specified, display the message that the row number after the renumber has already existed. In this case, the renumber is not executed. Tap the [OK] button. (<j>)

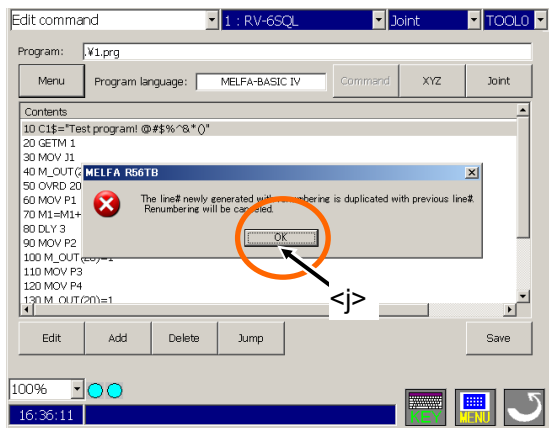

Advice



Even if row number not existing is specified to the range, it executes within the limits.
32767 can also be specified as "End line#" to execute to the last line of the program.

11.1.11. Automatic numbering



When MELFA-BASIC IV is used, the line number can be generated by the automatic operation in the command edit screen.

This function automatically displays the next line number each time the edit command dialog is displayed. The start line No. and line pitch can be designated with the setting dialog.



- 1) The setting dialog will appear when "Auto Number setting" (<a>) is selected under the [Menu] button of the command edit screen.

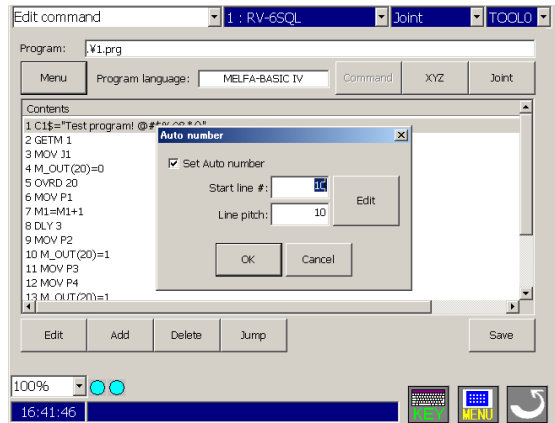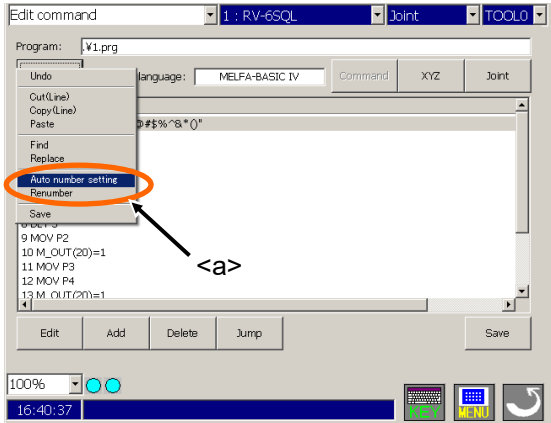

- 2) Input start Line number into "Start line#". Line pitch into "Line pitch". Inputs from the keyboard which taps the [Edit] button () and is displayed.

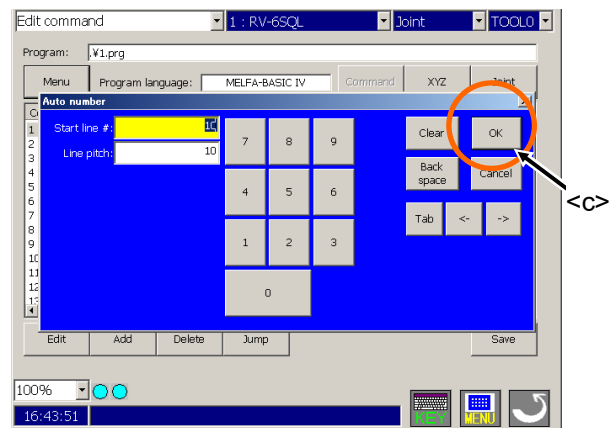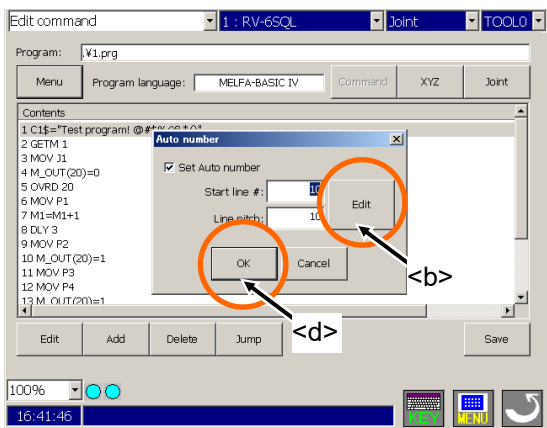



- 3) Preparation will be completion, if the input is completed, the [OK] key (<c>) of the keyboard (ten key) will be tapped and the [OK] button (<d>) of the setting screen of the automatic row number will be tapped. After this, the row number is set up automatically when [Add] button (<e>) is tapped. (<f>) When creating the program newly, display the start row number set up by above-mentioned "2)." Display the next of the last row number during the existing program edit.

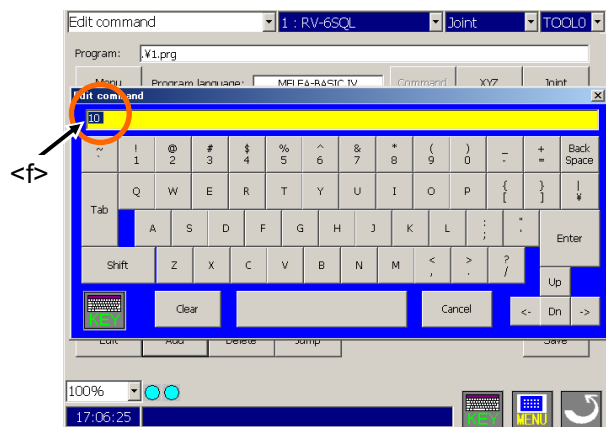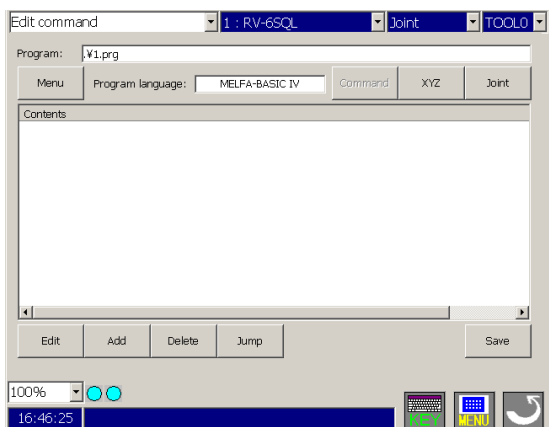



11.1.12. Search

If the program of the USB memory is being edited, the specification character string can be searched with command edit. It can be specified whether the capital letter/small letter is differentiated or not.


- 1) Taps the [Menu] button and select the "Find" (<a>) of the command edit screen, the setting screen will be displayed.
The line of code selected beforehand is inputted into "Find what" as a specification character string.

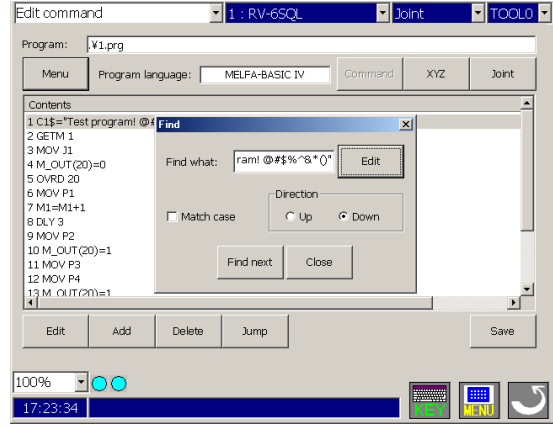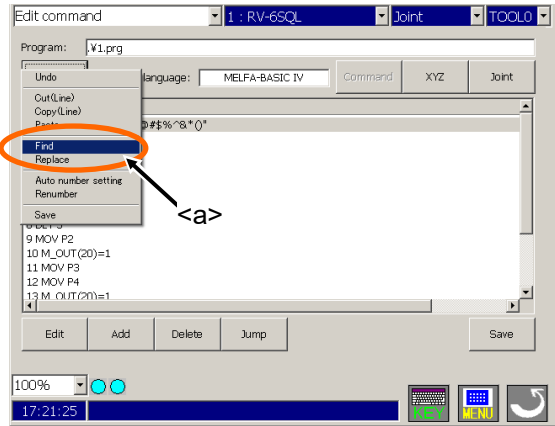



- 2) The input of the character string to search, taps the [Edit] button (), and keyboard displayed is used.
The inputted character is displayed on "Find what". (<c>)
Tap the [Enter] key (<d>) of the keyboard to finish the input.

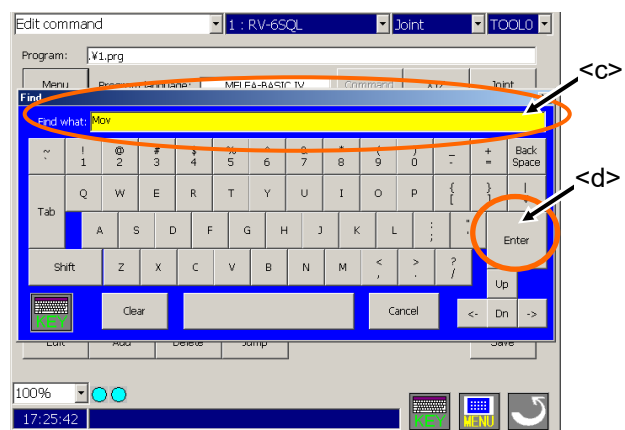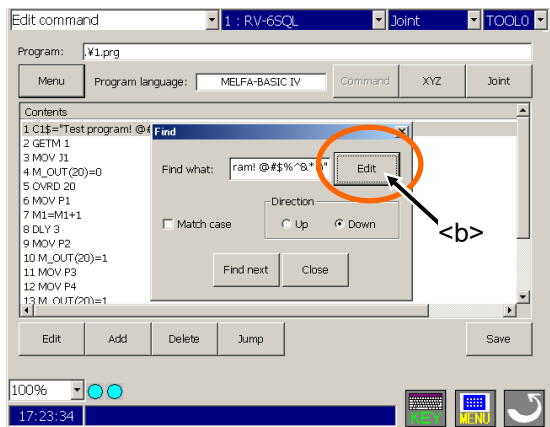



- 3) Tap the [Find next] button (<e>) to start search of the character string. If the specified character string is found, indicate the line by the highlight.

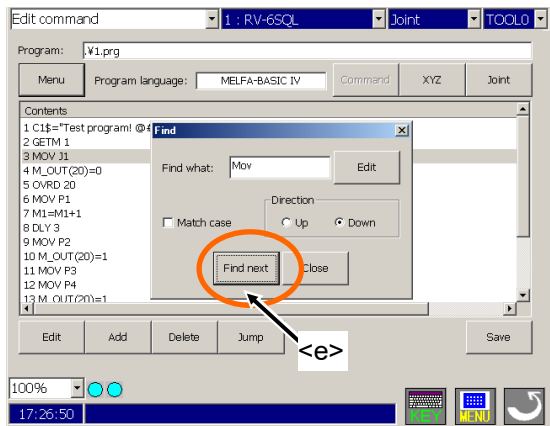

If the "Match case" (<f>) is checked at this time, the capital letter and the small letter will be differentiated. Moreover, the search direction can be specified with checking Up/Down. (<g>)
 Display the message, if the character string is not found. Taps the [OK] button. (<h>)

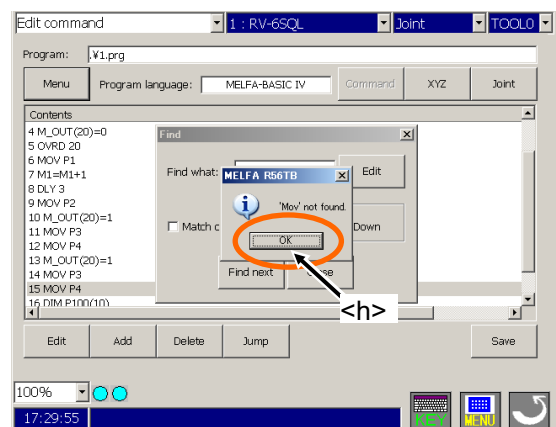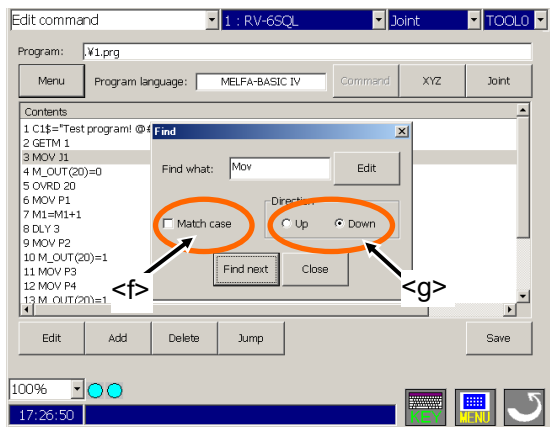

4) Tap the [Close] button (<j>) to finish.

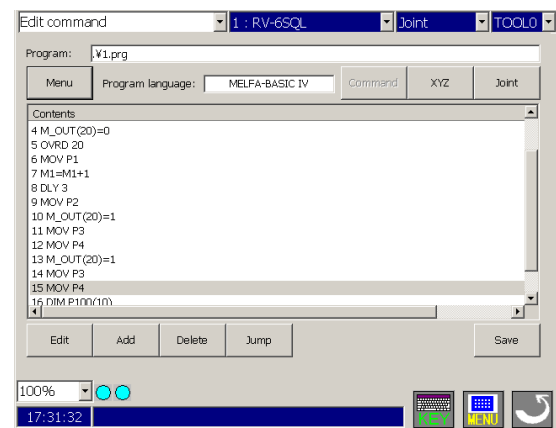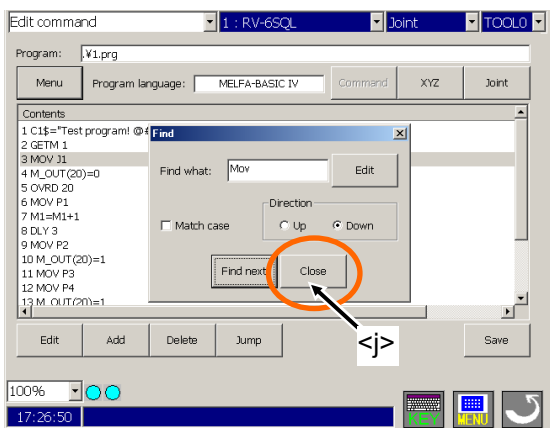

Advice

The row number is also the target of search.
 If it edits the line of code, please close the specified screen of the search string.
 The function to replace the character string is shown in "13) Replace."



11.1.13. Replace

If the program of the USB memory is being edited, the specification character string can be replaced by command edit.



It can be specified whether the capital letter/small letter is differentiated or not.

- 1) Taps the [Menu] button and select the "Replace" (<a>) of the command edit screen, the setting screen will be displayed.

The line of code selected beforehand is inputted into "Find what" as a specification character string.

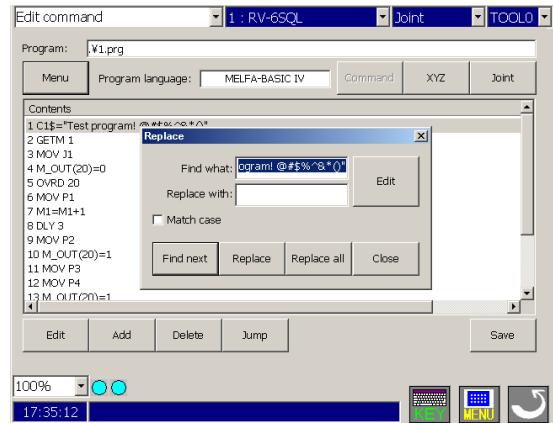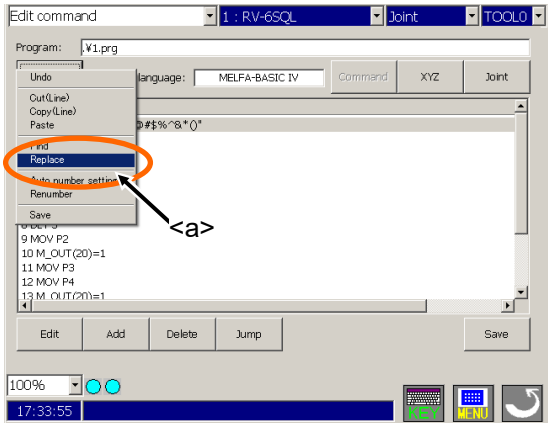

- 2) The input of the character string to search or replace, taps the [Edit] button (), and uses the keyboard that displayed. The character strings of searching are specified as "Find what", and of replacement are specified as "Replace with". (<c>) The cursor is movable by the [Up]/[Down] key (<d>) of the keyboard. Tap the [Enter] key (<e>) of the keyboard to finish the input.

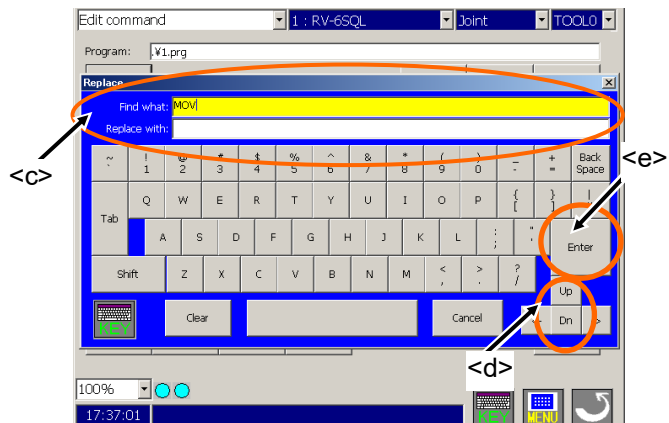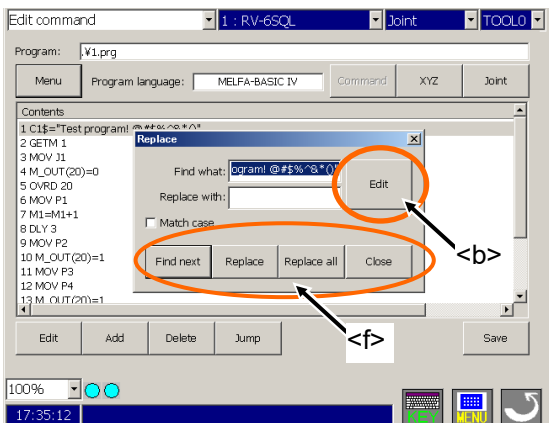


- 3) If each button of the replacement character string specified screen is tapped, it will operate as follows. (<f>)
 - [Find next]button Search of the character string
 - [Replace]button..... Replace the one place and search the next.
 - [Replace all]button Replace all the searched character strings.
 - [Close]button Finish. Close the screen.

If the "Match case" is checked at this time, the capital letter and the small letter will be differentiated.



CAUTION

When executing replacement, the message of confirmation does not display.
 The character strings of the line selected will be replaced, if you tap the [Replace] button.
 All character strings to the last of program will be replaced, if you tap the [Replace all] button.
 Please check that the specified character string is correct before executing replacement.

Display the message, if the character string to search is not found. Tap the [OK] button. (<g>)

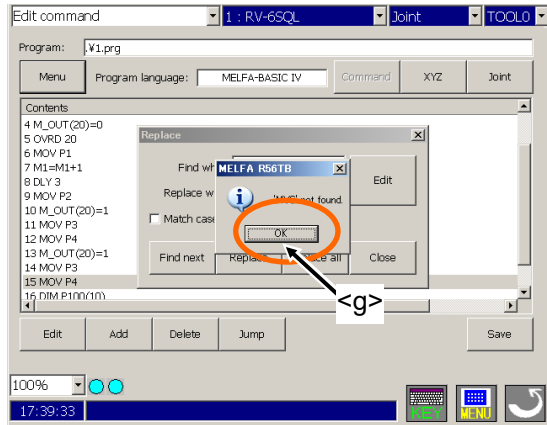

4) Tap the [Close] button (<h>) to finish.

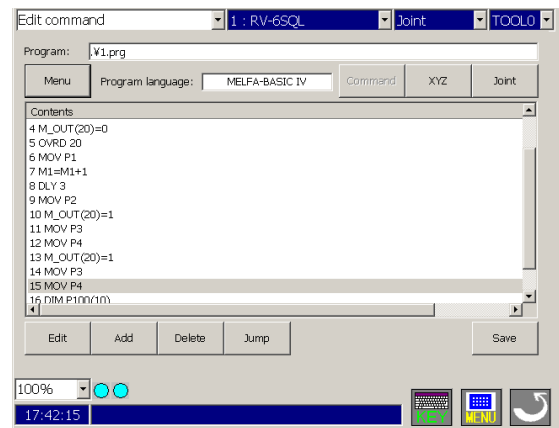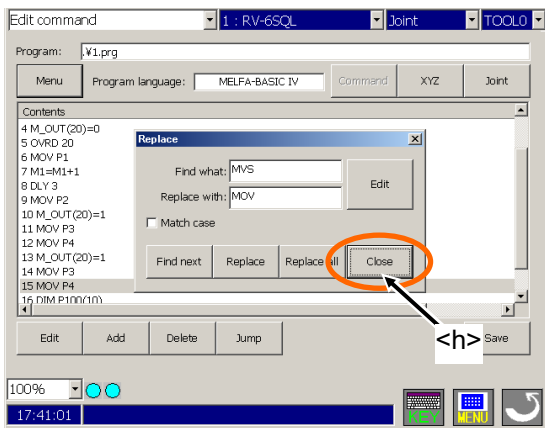



Advice

Only last one operation is valid to undo. All cannot be returned if two or more operations have been mistaken. In this case, it is necessary to finish program edit, without saving and to do over edit from the start. To prevent such a situation, we recommend you to copy the program before edit beforehand and to reserve separately.



11.1.14. Jump

The program jumps to the designated label or line number. To carry out jumping, tap the [Jump] button.



1) Tap the "Jump" button (<a>) of the command edit screen. The setting screen will be displayed.

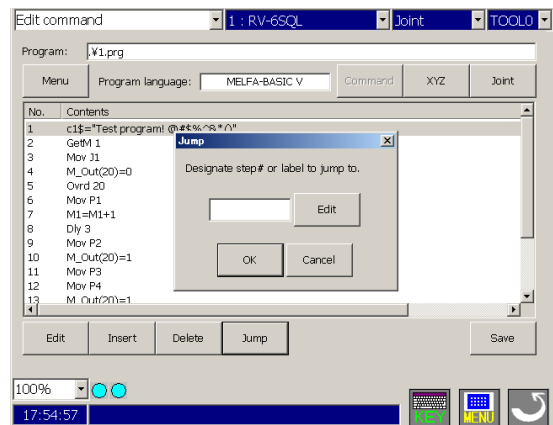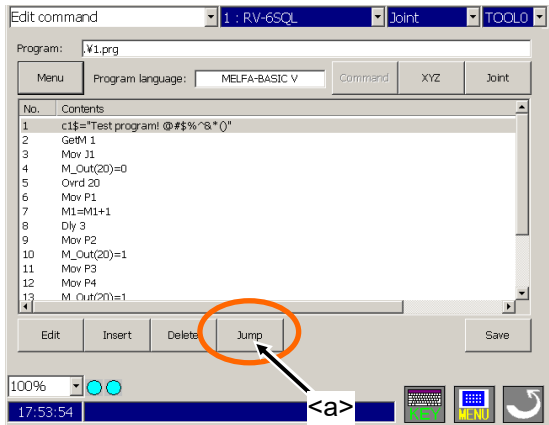


2) To input the label or line number, tap the [Edit] button (), and uses the keyboard that displayed. Tap the [Enter] key (<c>) of the keyboard to finish the input.

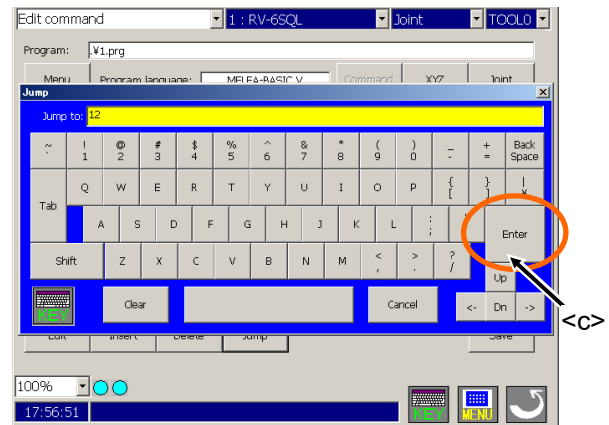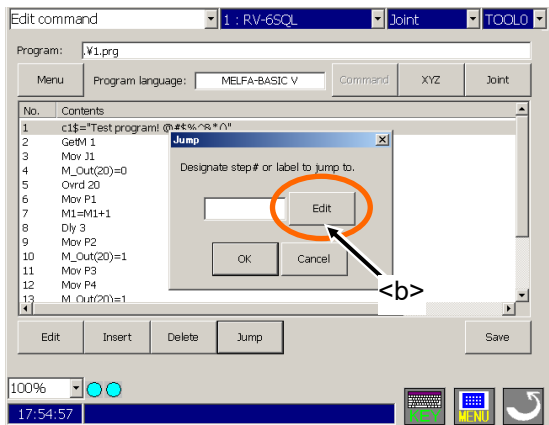

3) Tap the [OK] button (<d>) to jump to the specified line or label.

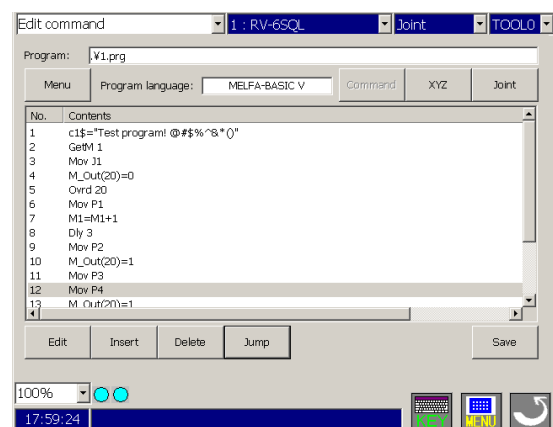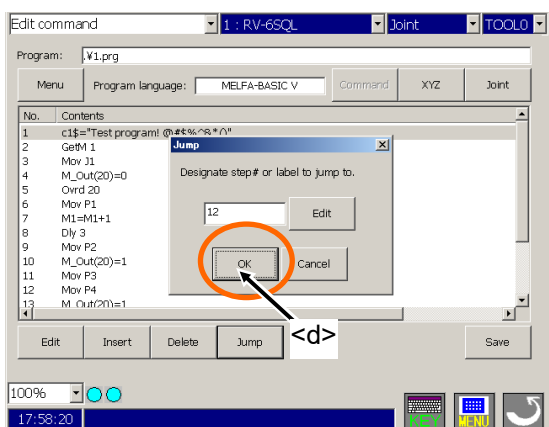


If the specified row number does not exist, jump to the near place. Display the error message, if the specified label does not exist. Tap the [OK] button (<e>), close the error message window, and try again.

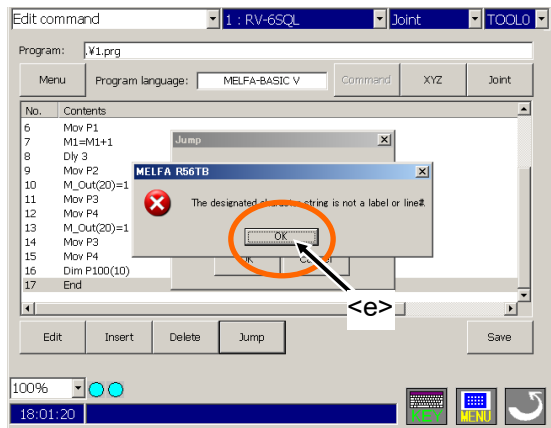


11.2. Editing the position variable

Edit the position on the position edit screen. Push the [XYZ], [XYZ (Global)], [Joint], or [Joint (Global)] button.
 (<a>) The position editing screen will appear.

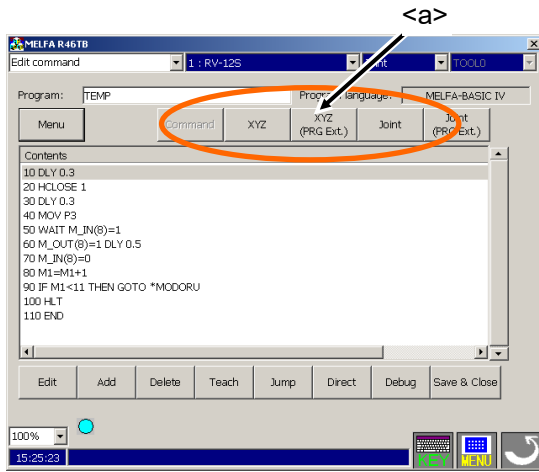

(Position type variable)


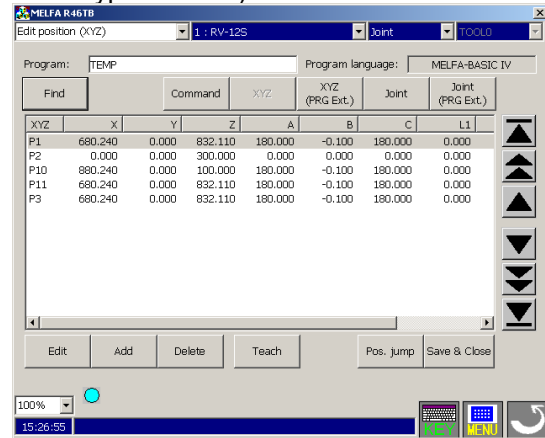


- [XYZ] Position type variable
- [XYZ (Global)] Position type variable (System variable)
- [Joint] Joint type variable
- [Joint (Global)] Joint type variable (System variable)



11.2.1. Registering the current position data

The procedure of registering the robot's current position is shown.



- 1) By jog operation, move the robot to the teaching position beforehand.
- 2) Select the variable of teaching and tap the [Teach] button (). The current position can be taught.
 If you want to teach after confirming the current position data, tap the [Edit] button (<a>) and display the data edit screen.

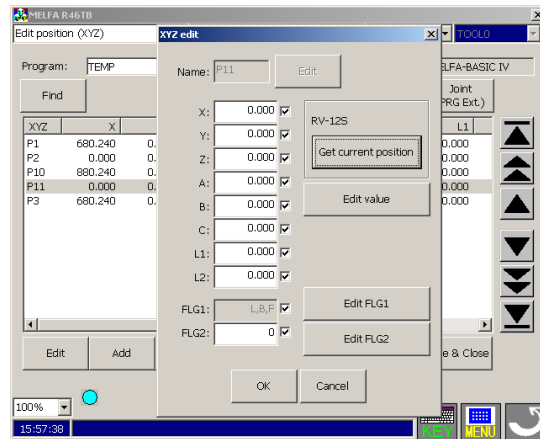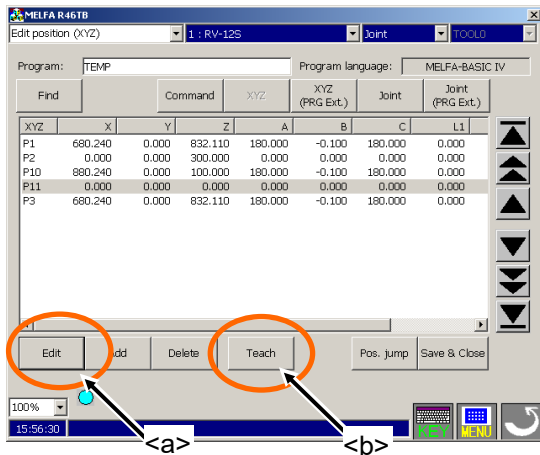

3) If the [Get current position] button (<c>) of the data edit screen is pushed, will take in the robot's current coordinate value.

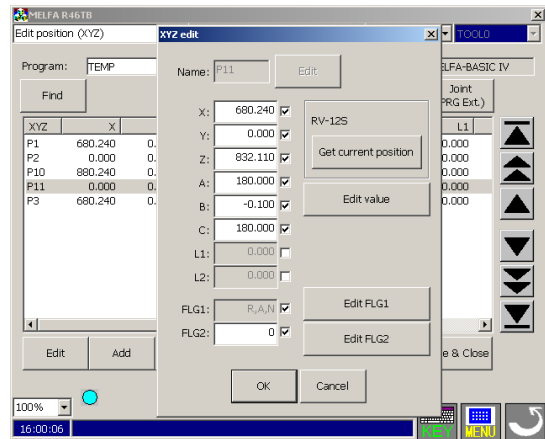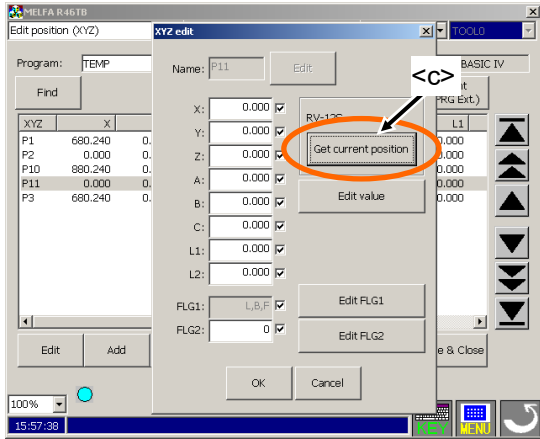



4) Tap the [OK] button (<d>) and register the data.

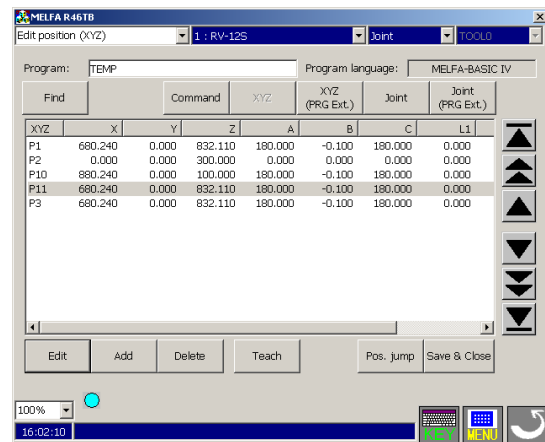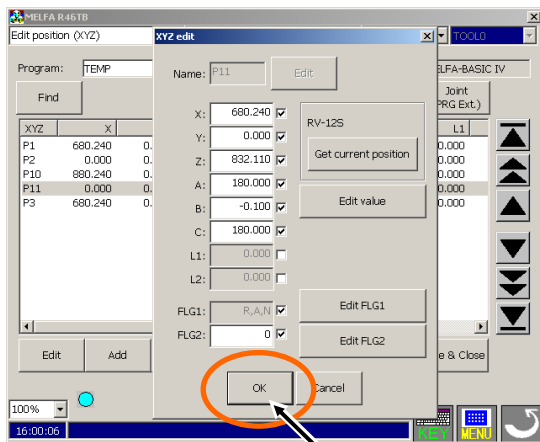



11.2.2. Edit of position data

The procedure of direct input of the numerical value is shown.



- 1) Select the variable of editing and tap the [Edit] button. (<a>) The data edit screen is displayed.

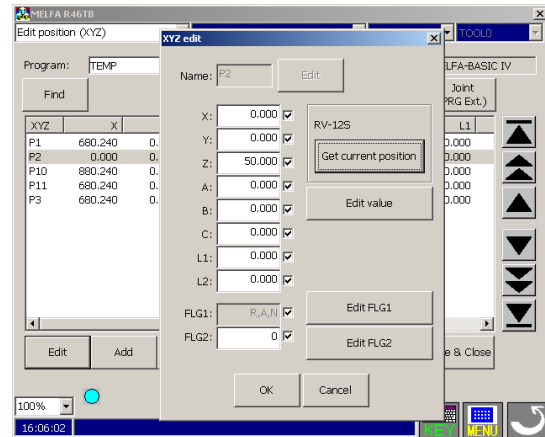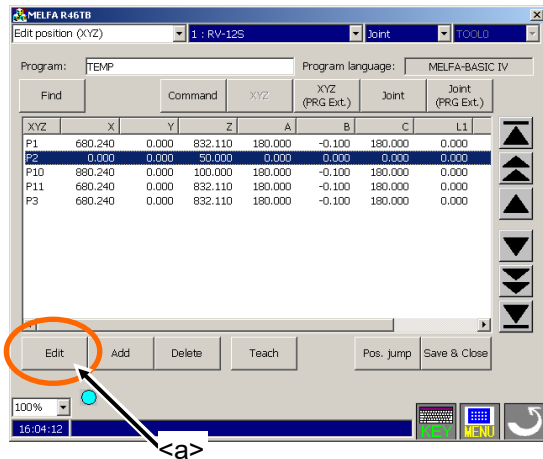



- 2) Tap the [Edit value] button. () The data input screen is displayed.

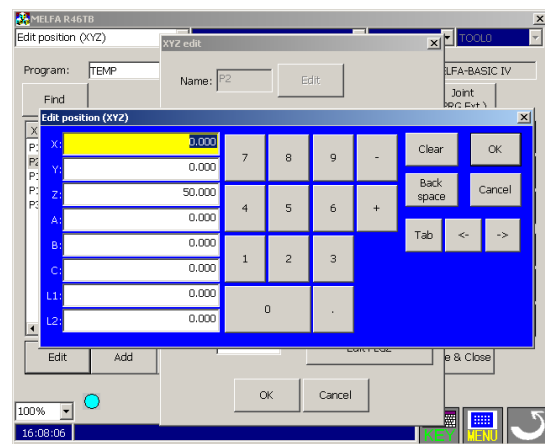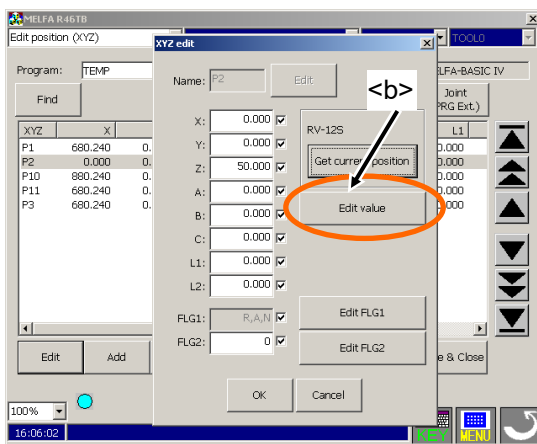



- 3) The data is inputted into each coordinate value, tap the [OK] key (<c>), and finish the data input.

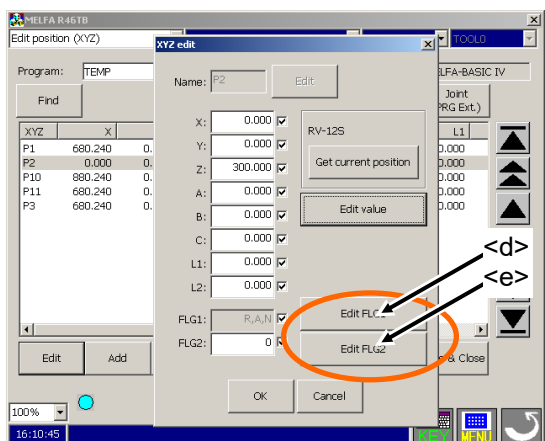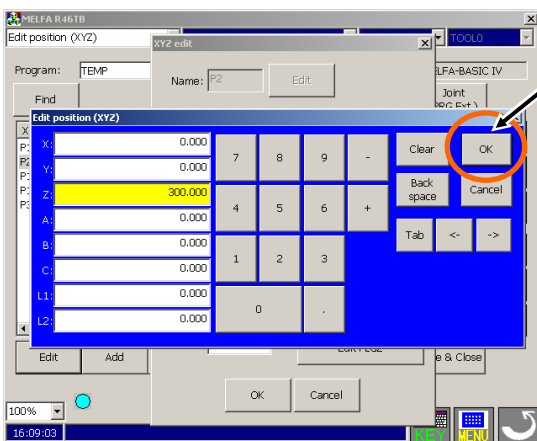

- 4) The structure flag can be edited by the [Edit FLG1] button. (<d>)
 The multi-rotation flag can be edited by the [Edit FLG2] button. (<e>)
 Tap the [OK] button, (<f>) will fix the data.

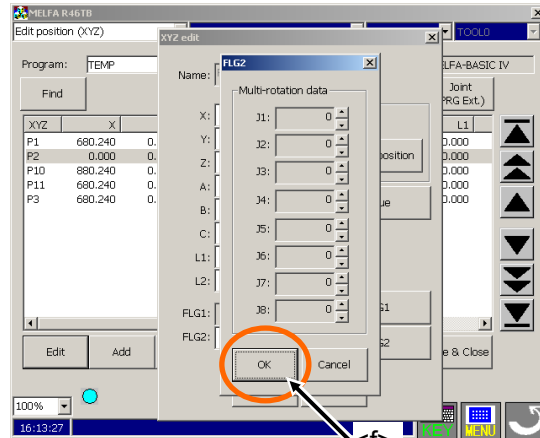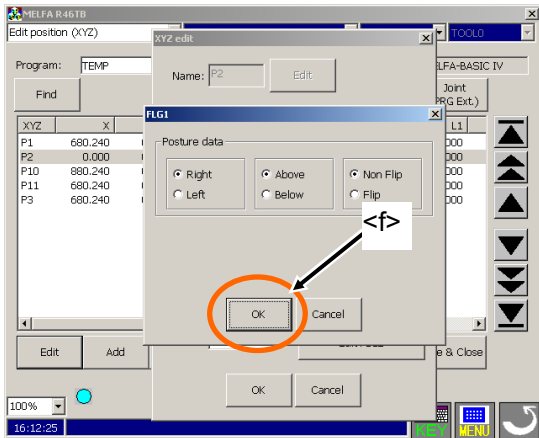



- 5) The [OK] button (<g>) will be tapped if edit of all the data is completed. The position variable data is registered.

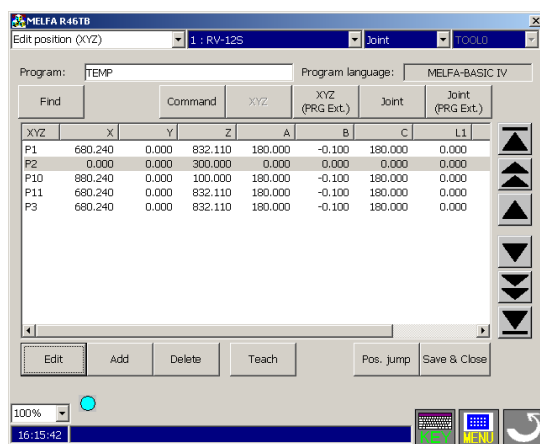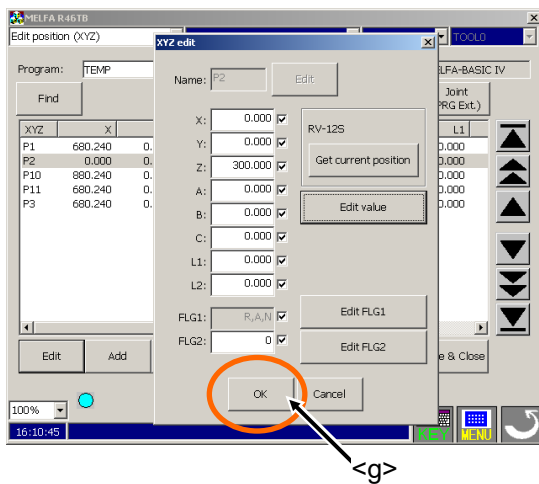



11.2.3. Addition of position data

Although the position variable used by the command line is displayed on the screen, it can add newly.

- 1) Tap the [Add] button. (<a>) The position edit screen is displayed.

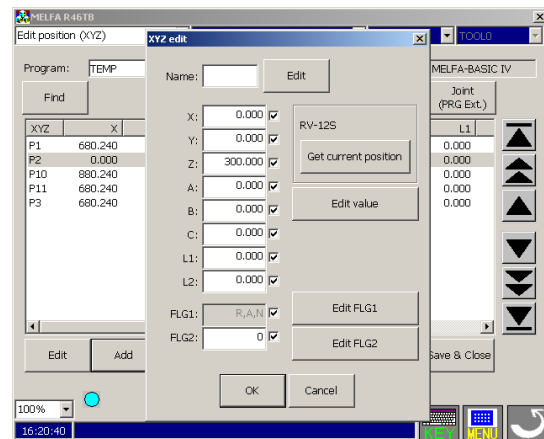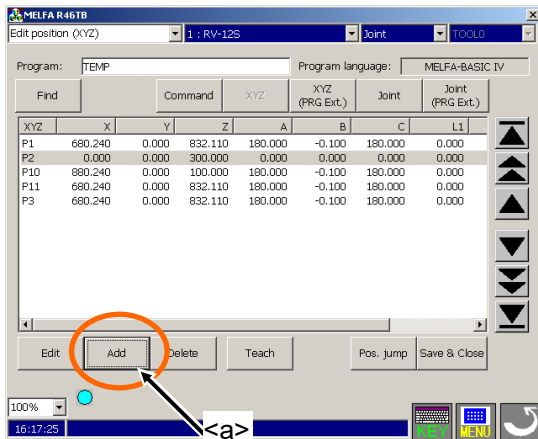

- 2) The [Edit] button () is tapped and input the variable name from the keyboard displayed, and tap the [Enter] button (<c>) to fix it.

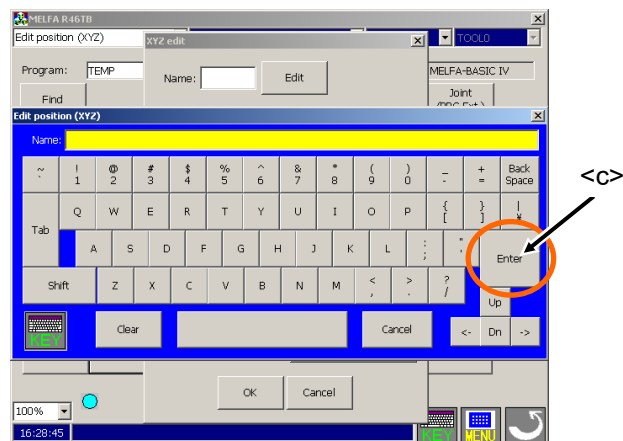
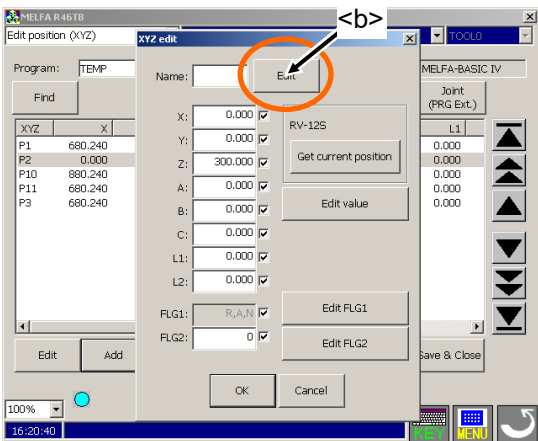


- 3) Input the each coordinate value, the structure flag and multi-rotation data.
 One method is taking the current position of robot. And another method is direct input of the numerical value.
 If you wish to take the current position of robot, refer to "(1) Registering the current position data."
 If you wish to input the numerical value, refer to "(2) Edit of position data."


11.2.4. Deletion of position data

The procedure of deletion of position data is shown.
The variable currently used by the command line cannot be deleted.

Select the variable of deleting and tap the [Delete] button. (<a>) The selected position variable is deleted.

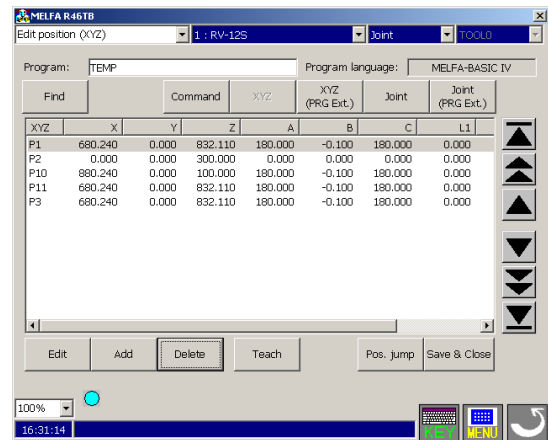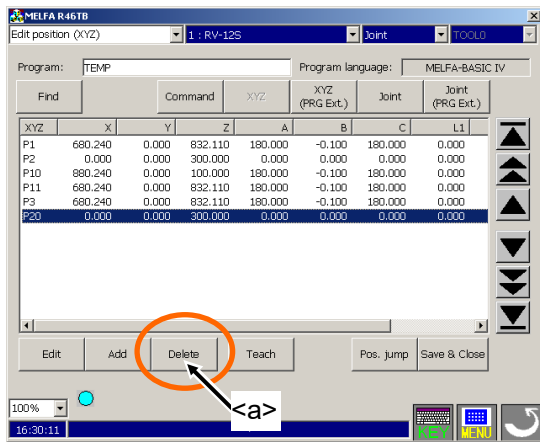



The position variable currently used by the command line cannot be deleted. The error occurs.
Push the [RESET] button () to cancel the error.

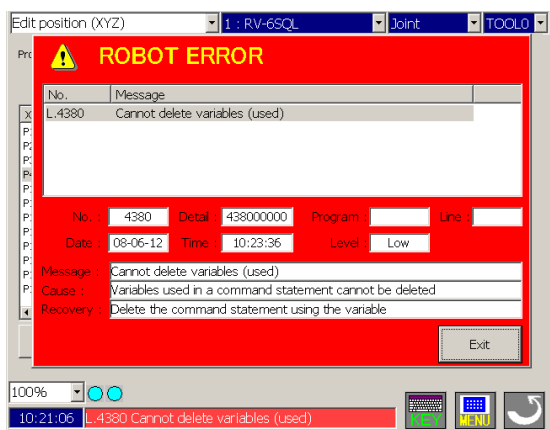

11.2.5. Confirming the position data (Position jump)

The robot can be moved to the teaching position and the position can be checked.
The interpolation method is the current jog mode.

- 1) By jog operation, move the robot to the safe position beforehand.
- 2) Select the target position variable and tap the [Pos. jump] button. (<a>) The confirmation screen is displayed. Please tap [Cancel] key (<e>) when discontinuing it.

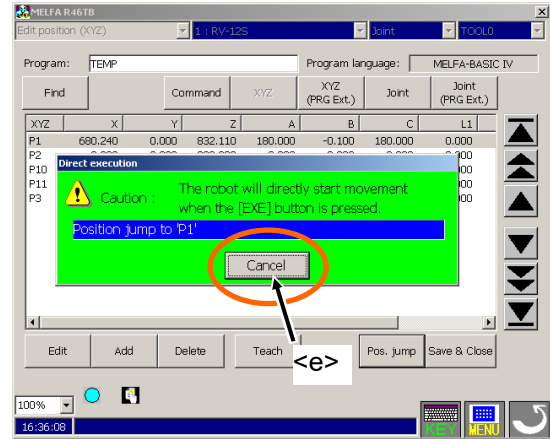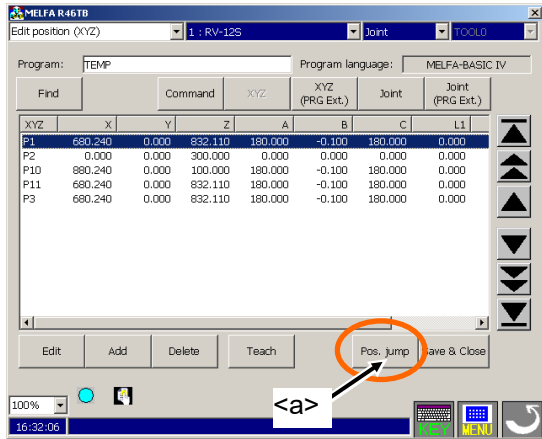

- 3) The servo will turn ON when the [SERVO] button () pushed, in the condition that the enable switch (<c>) is pushed. When the servo turns on, LED (green) of the [SERVO] button lights up.
- 4) Only while the enable switch is pushed and the [EXE] button (<d>) is pushed, the robot will move. Displayed and icon by turns at the lower left of the T/B screen during movement, and when the target position is reached, changes to icon. When the [EXE] button (<g>) is released after reaching the target position, the confirmation screen (<c>) closes.







CAUTION

By jog operation, move the robot to the safe position beforehand and do this movement.
Failure to do so could lead to interference with the work piece or peripheral devices.
The key is separated to stop the robot or the enable switch is separated or it strongly pushes it.

4) Tap the [OK] button. (<d>) The variable to find is displayed.

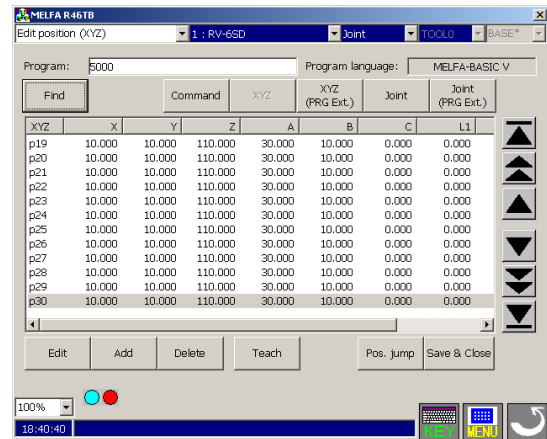
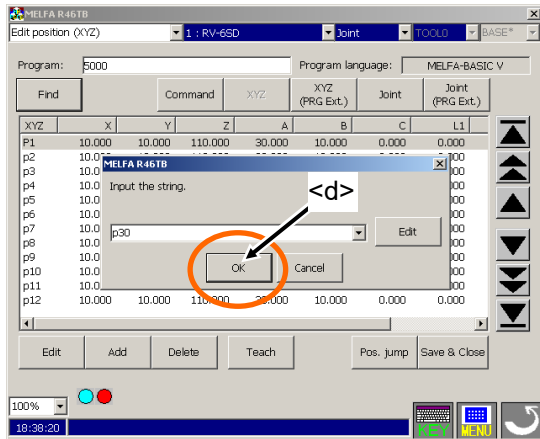


11.3. Editing the position for SQ Direct Function

The SQ Direct Function (PLC Direct Function) is available with Ver.2.3 or later of this software. And this function is available with Ver.P8 or later of CRnQ-700 series controller software. However, the setting of controller's parameter is needed to use this function. Refer to the "iQ Platform Supporting Extended Function Instruction Manual" for details.

The position data that can be used is only the Position type variable. And the position No. is special, 1 to 999, and 999 points are always prepared. These variables are treated as external variable P_DM(1) to P_DM(999) in the controller. Moreover, the name of the file for SQ Direct Function is fixed as "**SQ Direct" in the controller.

- 1) When T/B is connected to the controller which can be used the SQ Direct Function, the [SQ Direct] button is displayed in the Menu panel.
- 2) Tap the [SQ Direct] button (<a>) of the Menu, the [SQ Direct position edit] screen is displayed. And the 999 points of position data, 1 to 999, in the controller which can use the SQ Direct Function are displayed in the list.

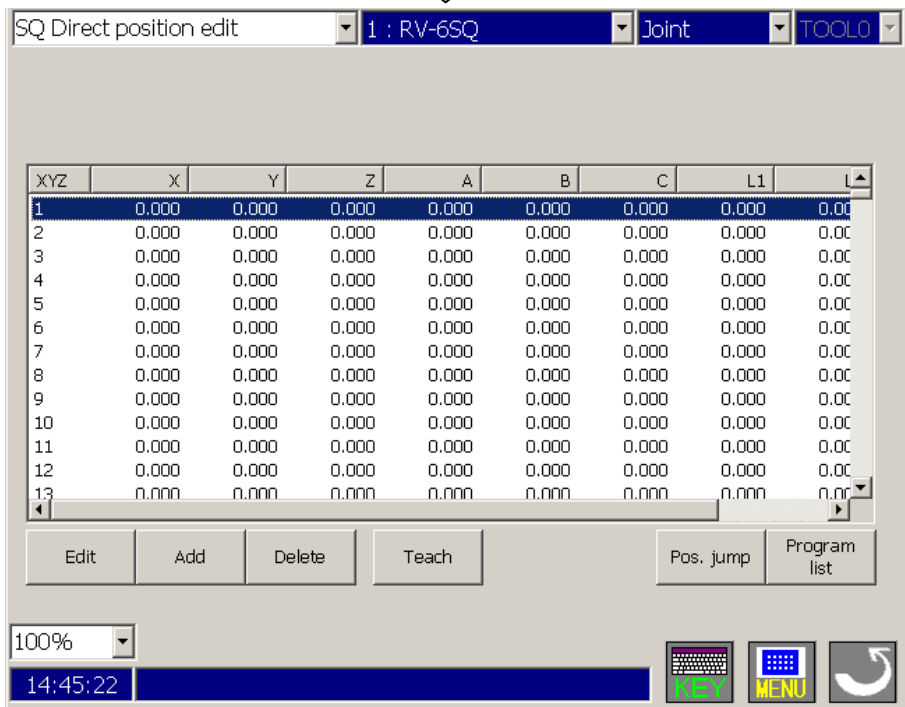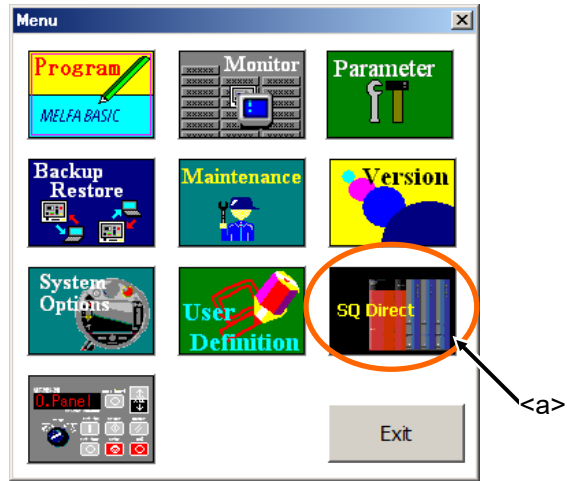


CAUTION

In the SQ Direct Function, the position data that can be used is only the Position type variable.

11.3.1. Registering the current position data for SQ Direct Function

The procedure of registering the robot's current position is shown.

- 1) By jog operation, move the robot to the teaching position beforehand.
- 2) Select the position data to teach (<a>) and tap the [Teach] button (). The current position can be taught.
In the same time, the position data is written to the controller.
When you want to teach after confirming the current position data, tap the [Edit] button (<c>) and display the data edit screen (<d>).
- 3) When the [Get current position] button (<e>) of the data edit screen is pushed, the robot's current coordinate value will be taken in.
- 4) Tap the [OK] button (<f>) and register the edited position data to the controller.

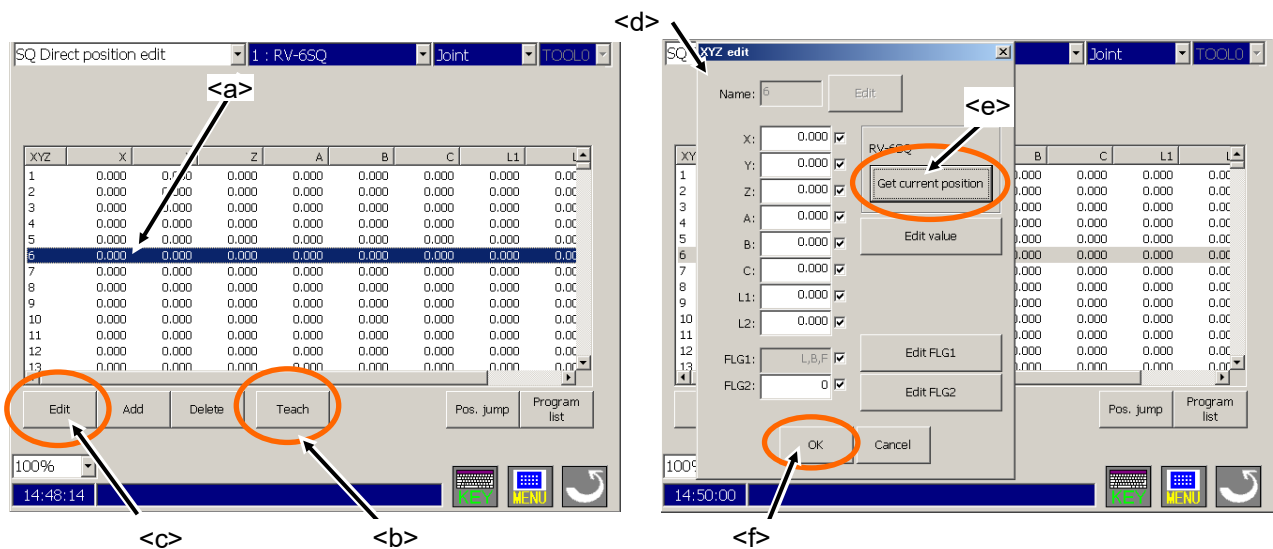





CAUTION

When the [Teach] button of the SQ Direct position edit screen or the [OK] button of the data edit screen is tapped, the position data of the selected position data is written to the controller.

11.3.2. Edit of position data for SQ Direct Function

The procedure of direct input of the numerical value is shown.

- 1) Select the position data to edit (<a>) and tap the [Edit] button (). The data edit screen is displayed. (<c>)
- 2) Tap the [Edit value] button (<d>). The data input screen is displayed. (<e>)
- 3) The data is inputted into each coordinate value, tap the [OK] key (<f>), and finish the data input.
- 4) The structure flag can be edited by the [Edit FLG1] button (<g>). The multi-rotation flag can be edited by the [Edit FLG2] button (<h>).
- 5) Tap the [OK] button (<j>) if edit of all the data is completed. The selected position data is registered to the controller.

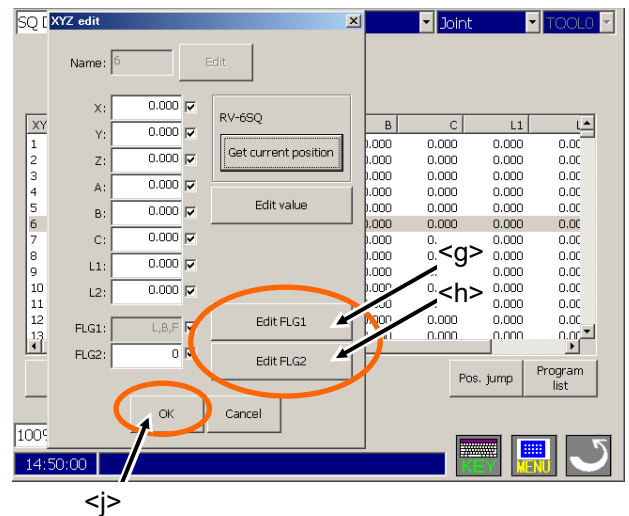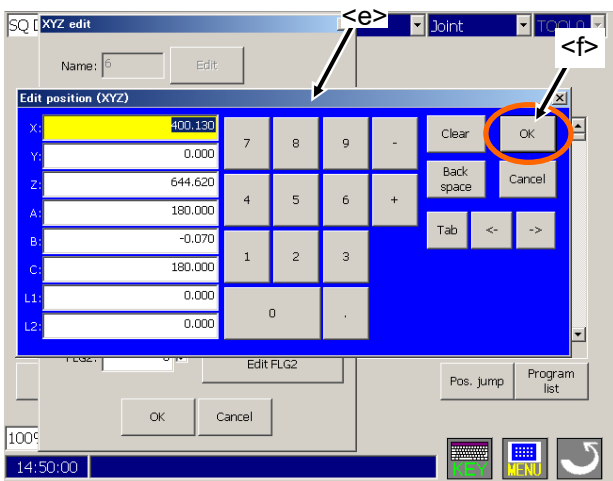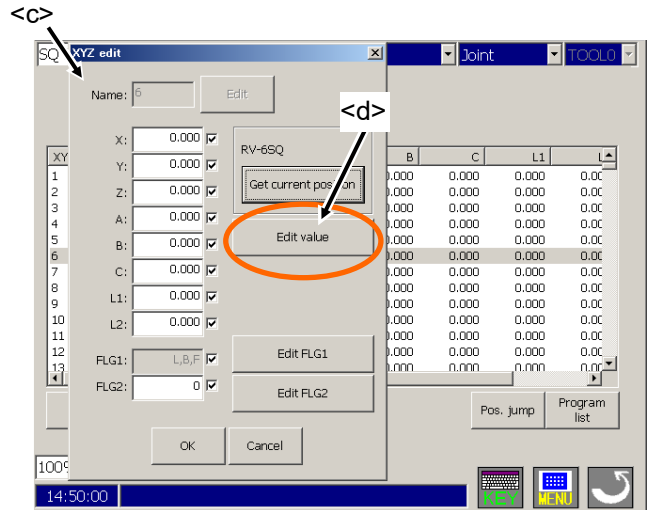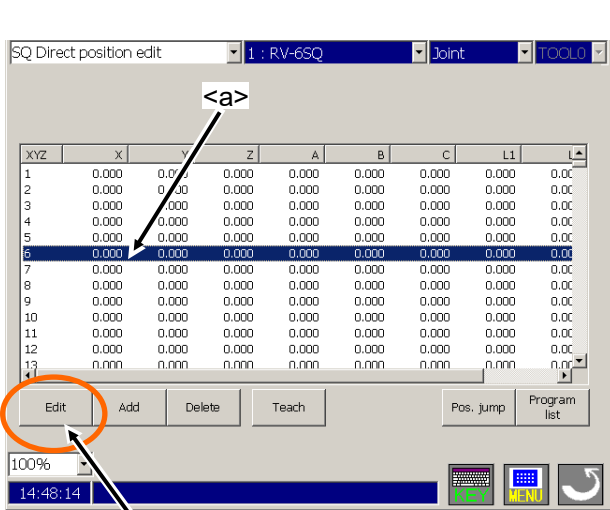


CAUTION

When the [OK] button of the data edit screen is tapped, the selected position data is written to the controller.

11.3.3. Addition of position data for SQ Direct Function

The 999 points of position data, 1 to 999, in the controller which can use the SQ Direct Function are displayed in the list. When position data other than selected one is edited, use the [Add] button of the SQ Direct position edit screen.

- 1) Tap the [Add] button (<a>). The position edit screen is displayed.
- 2) The [Edit] button (<c>) is tapped and input the position No. from the keyboard (<d>) displayed, and tap the [OK] key (<e>) to fix it.
- 3) Input the each coordinate value, the structure flag and multi-rotation data.
One method is taking the current position of robot. And another method is direct input of the numerical value.
If you wish to take the current position of robot, refer to "11.3.1 Registering the current position data for SQ Direct Function".
If you wish to input the numerical value, refer to "11.3.2 Edit of position data for SQ Direct Function".

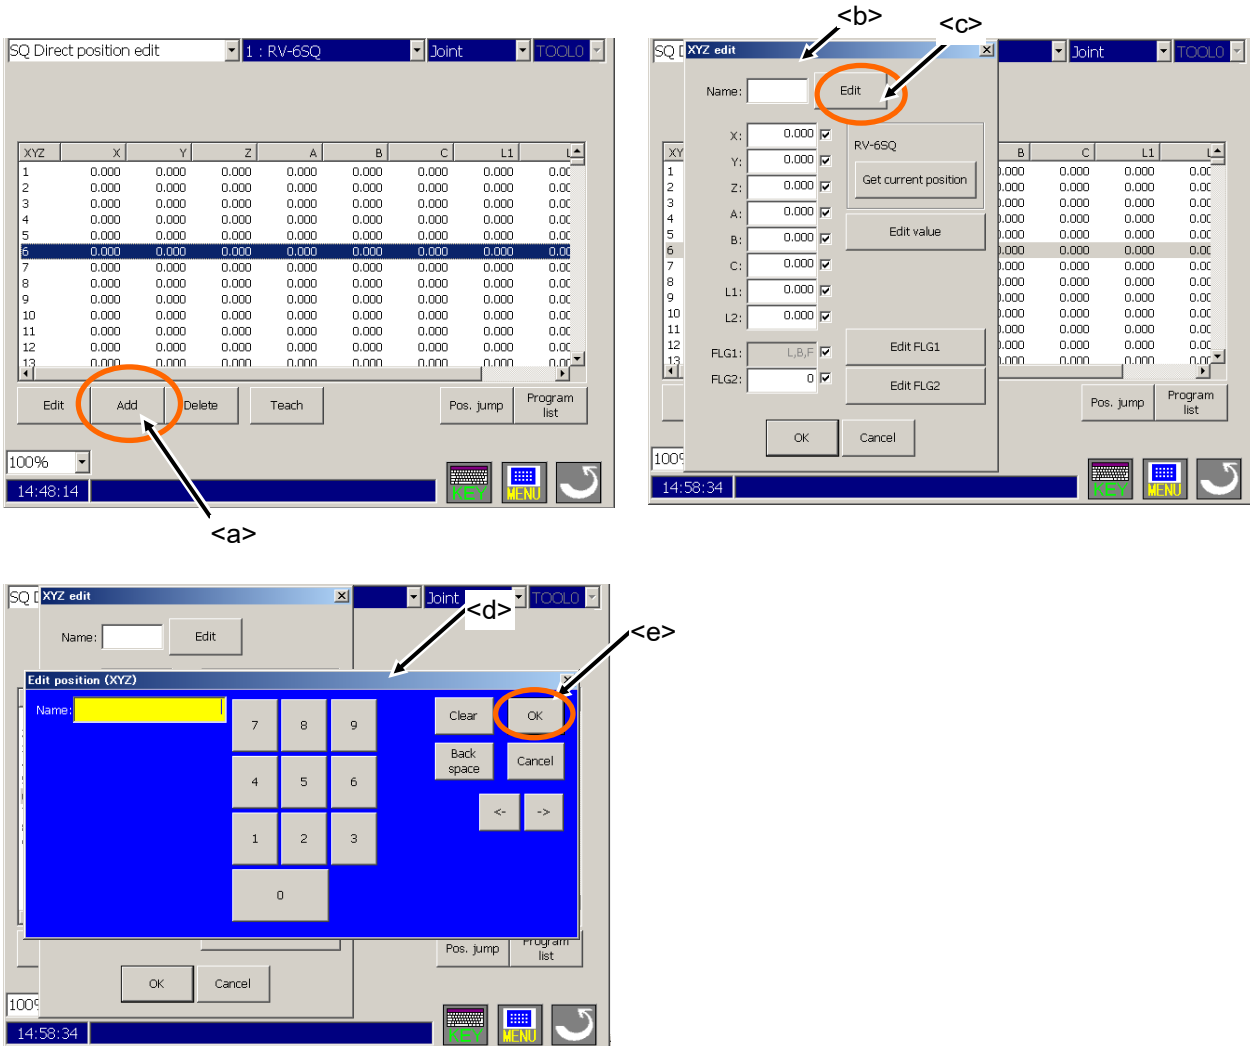


CAUTION

When the [OK] button of the data edit screen is tapped, the position data of the selected position variable is written to the controller.

11.3.4. Initialization of position data for SQ Direct Function

Select the position data to initialize (<a>), and tap the [Delete] button (). The confirmation message is shown up, after that tap the [Yes] button. The values of selected position data are initialized.

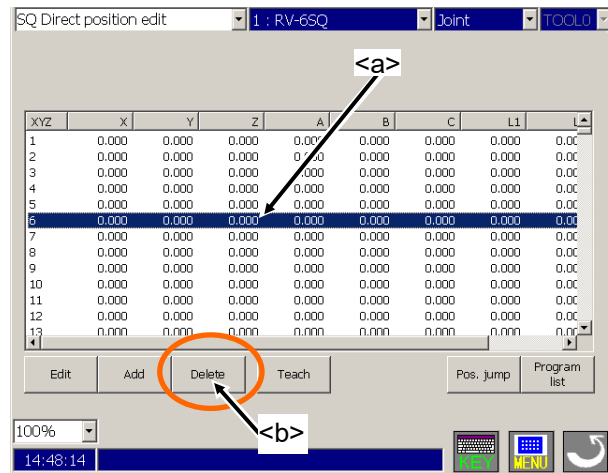

CAUTION

When the [Yes] button of the confirmation message is tapped, the position data of the selected position variable are initialized (cleared) in the controller.

11.3.5. Confirming the position data for SQ Direct Function (Position jump)

The robot can be moved to the teaching position and the position can be checked. Please refer to “11.2.5 Confirming the position data (Position jump)” for detail operation.

11.3.6. Saving the position data for SQ Direct Function to USB




Position data for SQ Direct Function cannot be saved to the USB memory from the SQ Direct position edit screen of controller.

Tap the [Program list] button, display the Program list screen and use the copy function. Please refer to “11.3.7 Copy position data for SQ Direct Function from controller to USB” for details.

11.3.7. Copy position data for SQ Direct Function from controller to USB

Since this software Ver.2.3, “*SQ Direct” is displayed in the top of the program list when connecting with controller which can use the SQ Direct Function.

- 1) Select the [Robot] in the Program list screen, select the “*SQ Direct” (<a>) in the list, and tap the [Copy/Move] button (). The Copy/Move screen will appear.
- 2) Confirm that “*SQ Direct” is selected in the [Source] list, select the [USB] (<c>) as the destination and tap the [Copy] button (<d>).
- 3) “Setting for copy” screen will appear. The position data for SQ Direct Function needs to change its file name to copy. Tap the [Edit] button, and input the saved file name. (<e>)
Tap the [OK] button (<f>), the position data for SQ Direct Function is saved on the USB memory as a file.

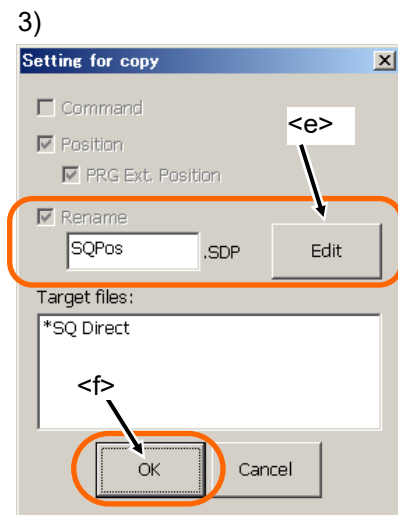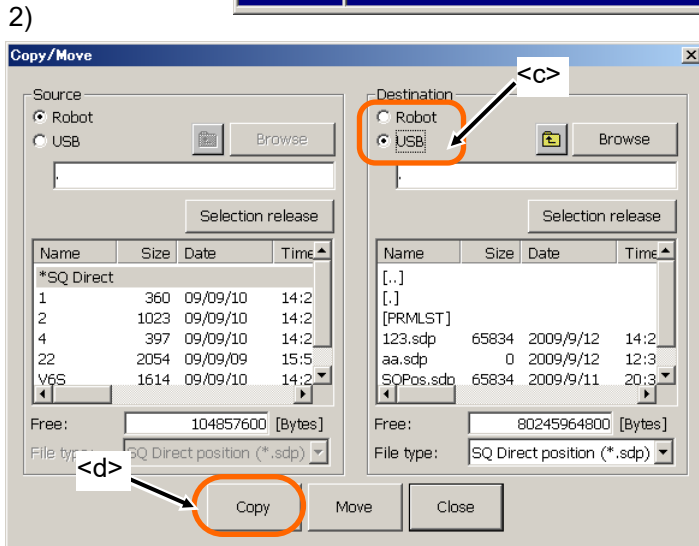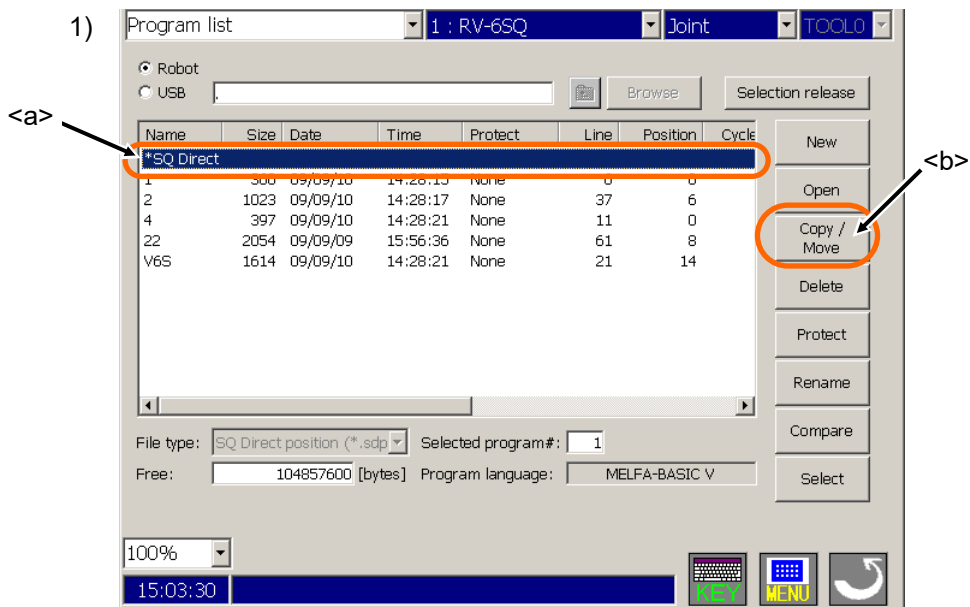

CAUTION




Do not write-protect the USB memory when you do the operation as write to it.

Even if it seems to have been able to write it without the error occurring by the operation copy and delete etc., when write-protection of USB memory is released, all operation is canceled. And an empty (size 0) file might be generated.

The position data for SQ Direct Function in the controller cannot move to the USB memory. Only copy operation is available.

11.3.8. Copy position data for SQ Direct Function from USB to controller

- 1) Select the [USB] in the Program list screen, select the file of position data for SQ Direct Function (<a>) in the list, and tap the [Copy/Move] button (). The Copy/Move screen will appear.
The files of position data for SQ Direct Function are saved as extension “sdp”. By using the [File type] (<c>), only the files of position data for SQ Direct Function can be displayed.
- 2) Confirm that the file of position data for SQ Direct Function in USB memory is selected in the [Source] list, select the [Robot] (<d>) as the destination and tap the [Copy] button (<e>).
- 3) “Setting for copy” screen will appear.
Tap the [OK] button (<f>), the position data for SQ Direct Function in the USB memory is saved on the controller.

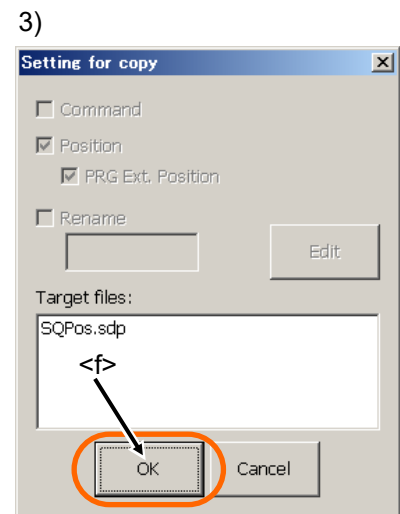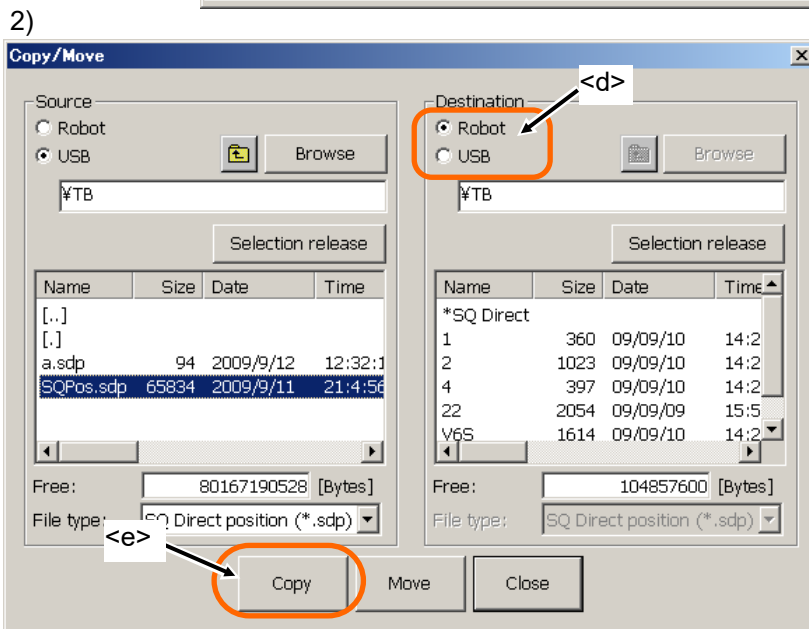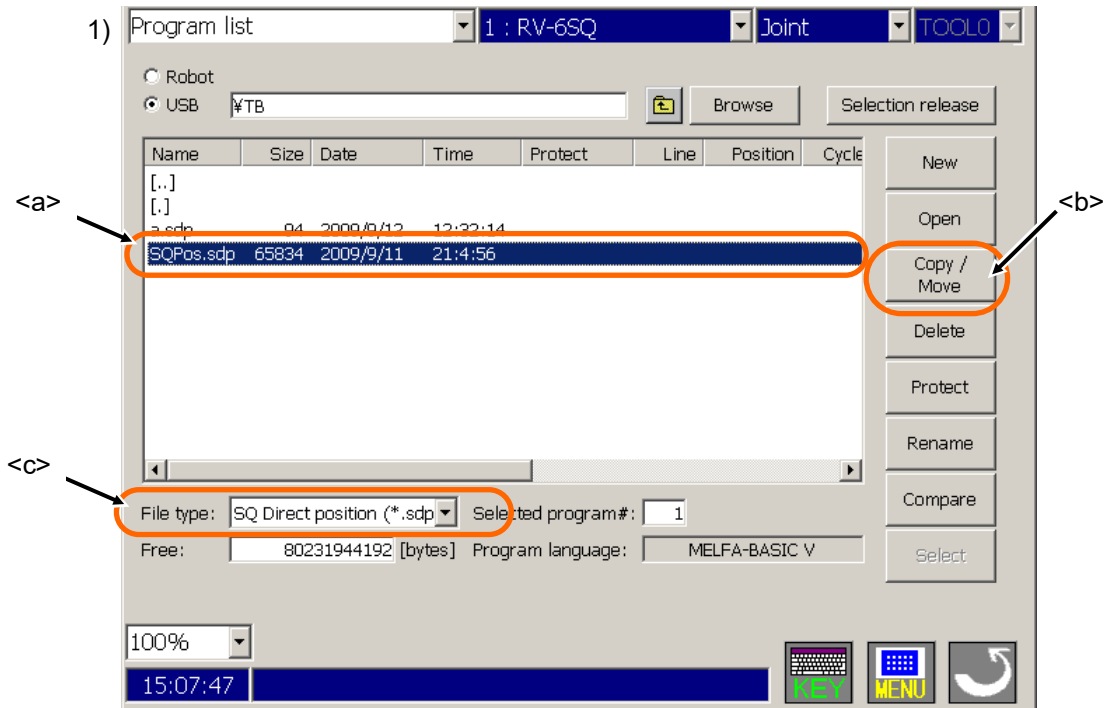


CAUTION

The position data for SQ Direct Function in the USB memory cannot move to the controller. Please copy to the controller and delete the file in the USB memory.

11.3.9. Edit of position data for SQ Direct Function in the USB memory

- 1) Select the [USB] in the Program list screen, select the file of position data for SQ Direct Function edited (<a>) in the list, and tap the [Open] button ().
- 2) The SQ Direct position edit screen is displayed. The procedure of editing position data for SQ Direct Function is the same as case of editing in the controller. Please refer to “11.3.1 Registering the current position data for SQ Direct Function”, “11.3.2 Edit of position data for SQ Direct Function”, “11.3.3 Addition of position data for SQ Direct Function” and “11.3.4 Initialization of position data for SQ Direct Function” for detail.
- 3) Tap the [Save] button (<c>) if edit is completed. And the file in the USB memory is overwritten.

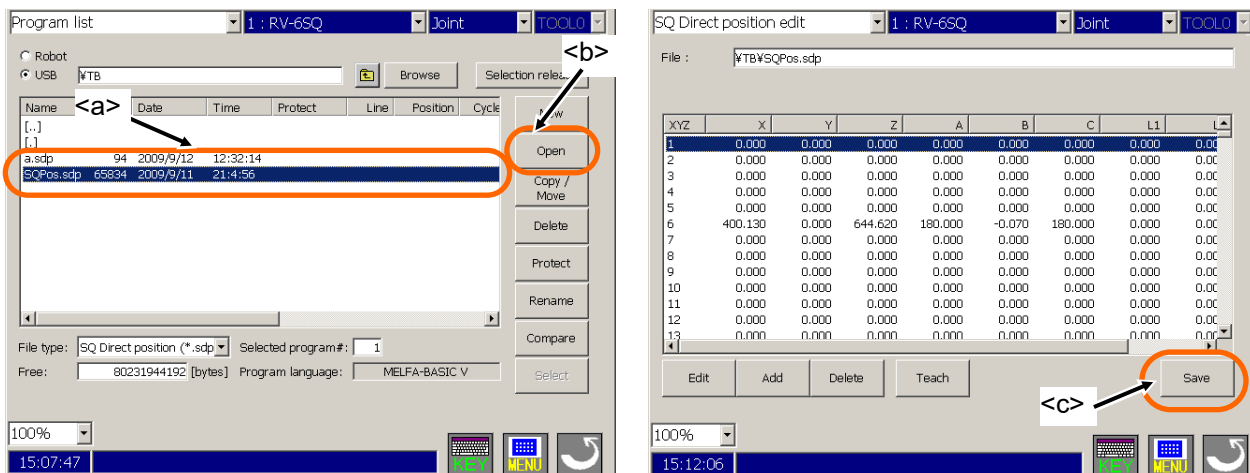

CAUTION

Do not write-protect the USB memory when you do the operation as write to it.

Even if it seems to have been able to write it without the error occurring by the operation copy and delete etc., when write-protection of USB memory is released, all operation is canceled. And an empty (size 0) file might be generated.



CAUTION

Please tap the [Save] button after changing (edit, add, delete, and teach) the position data for Sequencer Direct function in the USB memory.

In the case of the position data for Sequencer Direct function in the controller, the value in the controller is changed when the value is changed by each operation; edit, add, delete and teach. But otherwise in the case in the USB memory, please execute the save operation by the [Save] button after value changed by edit, add, delete and teach. When the screen is switched without saving, the changed value is not written in the file.

12. Debugging

Debugging refers to testing that the created program operates correctly, and to correcting errors if an abnormality is found. These can be carried out by using the T/B's debugging function. Always carry out debugging after creating a robot program, and confirm that the program runs without error.


12.1. Starting the step operation

The "Debugging" window is shown from the "Edit command" window (editing in the robot controller) or the "Program monitor" window.



Tap the "Debug" button (<a>) in these windows, and the "Debugging" window will appear at the right of T/B as follows.

When operating it, push the sheet-key "+" key corresponding to the position of this window.

"Program monitor" window

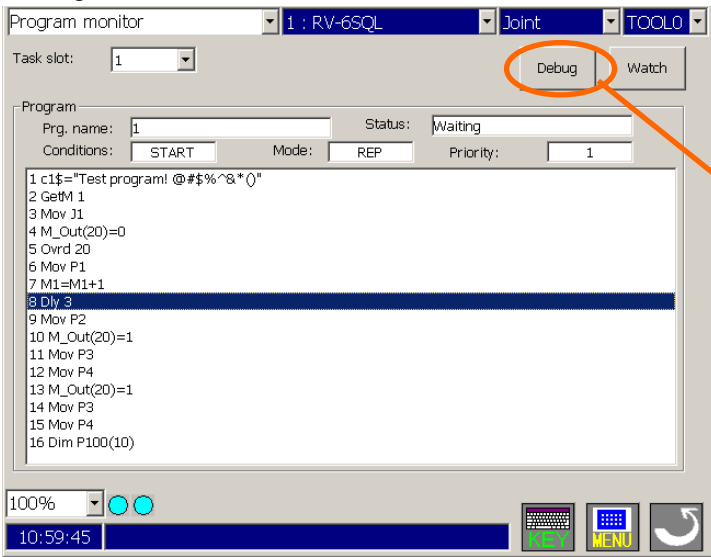

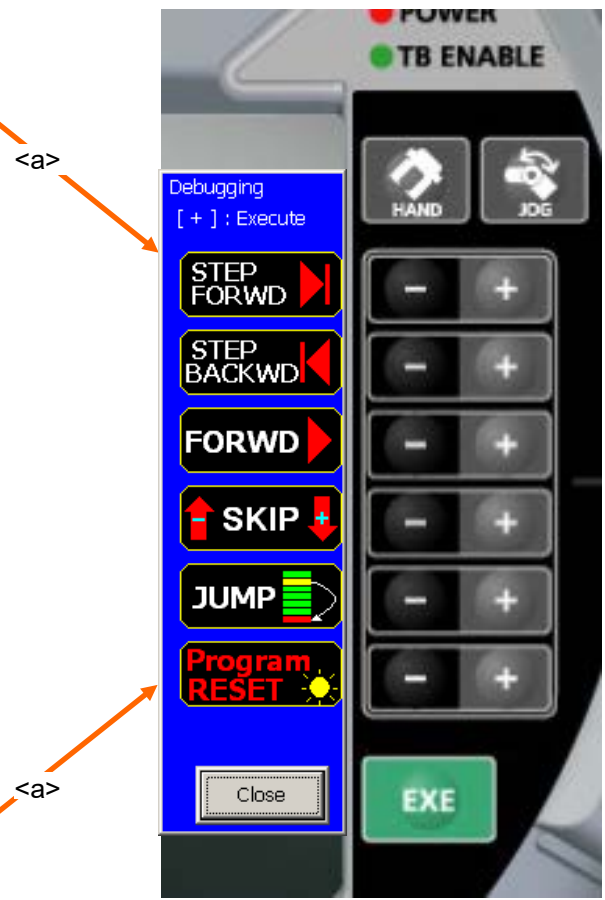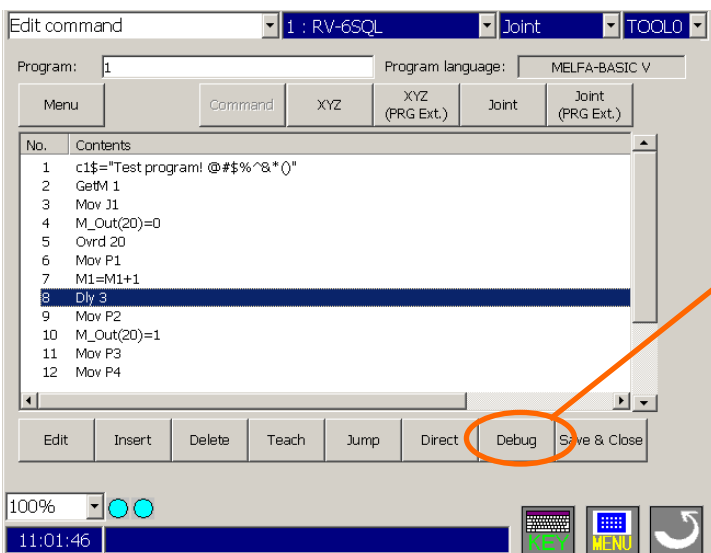


"Edit command" window



(Note) "SKIP" function is supported by Ver.2.3 or later of this software.

12.2. Step operation

"Step operation" executes the program line by line. The operation speed is slow, and the robot stops after each line, so the program and operation position can be confirmed.

During execution, displayed  and  by turns at the lower left of the T/B screen, and if execution is completed, displayed  at there.

Push the [TEACH] switch (<a>) of T/B, confirm that the [TEACH] switch and the [TB ENABLE] lamps light, and execute the step operation.



Perform the operations which moves the robot while pushing lightly on the enable switch of the T/B after the servo has been turned on.

CAUTION

Take special care to the robot movements during operation. If any abnormality occurs, such as interference with the peripheral devices, release the "+" key or enable switch, or press the enable switch with force and stop the robot.

Immediately stopping the robot during operation

- * Press the [EMG. STOP] (emergency stop) switch.
The servo will turn OFF, and the moving robot will immediately stop.
To resume operation, reset the error, turn the servo ON, and start step operation.
- * Release or forcibly push the "enable" switch.
The servo will turn OFF, and the moving robot will immediately stop. Error 2000 will occur.
To resume operation, reset the error, lightly push the "enable" switch, press the "SERVO" key to turn ON the servo, and then start step operation.
- * Release the "+" key.
The step execution will be stopped. The servo will not turn OFF.
To resume operation, press the "+" key.

12.2.1. Step forward

Push continually the sheet-key "+" key corresponding to the "STEP FORWD".

The program is run one line at a time in the forward direction. The program is run in line order from the head or the designated line.

If the "+" button is released during this step, the running one line is stopped.

12.2.2. Step Backward

Push continually the sheet-key "+" key corresponding to the "STEP BACKWD".

The line of a program that has been stopped with step forward or normal operation is returned one line at a time and executed. This can be used only for the interpolation commands. Note that only up to 4 lines can be returned.

If the "+" button is released during this step, the running one line is stopped.

12.2.3. Continuous Execution

Push continually the sheet-key “+” key corresponding to the “FORWD”.
This executes the program continuously from the current line.

12.2.4. Skip

This function is available with Ver.2.3 or later of this software.

Push the sheet-key “+” key corresponding to the “SKIP”, and the executing line of the program that has been selected now can be put forward by one line without run. Moreover, push the sheet-key “-” key, and the executing line of the program that has been selected now can be put backward by one line



The skip function is available even if the Enable switch is not pushed or the servo is OFF.


Even if the “+” key or the “-“ key is kept pushing, it is not possible to skip continuously.
Anything doesn’t operate even if the “-“ key of the SKIP is pushed at the top of the program. Similarly, anything doesn’t operate even if the “+“ key of the SKIP is pushed at the end of the program.

When the step operation is executed after skip, the step execution is restart from the selected line.

12.2.5. Step forward in another slot

When checking a multitask program, use with the “Program monitor” window, it is possible to do step operation in another slot.

1. In the “Program monitor“, select the slot with “task slot”. (<a>)
2. Tap the “Debug” button. ()
3. The “Debugging” window will appear, so operate the step forward / backward for the selected slot.

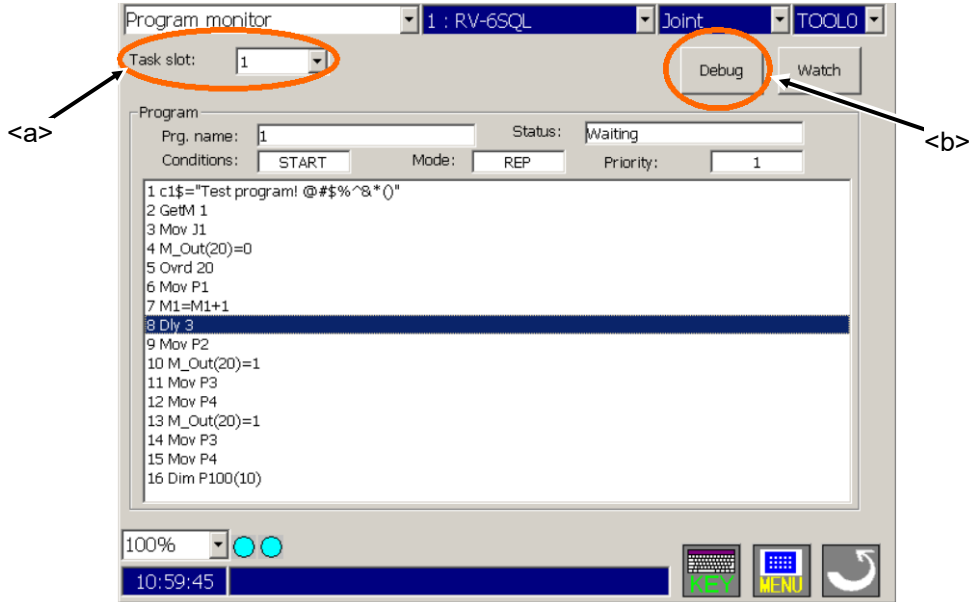


12.2.6. Step jump

It is possible to change the start line.

1. Push the sheet-key “+” key corresponding to the “JUMP”, the “Line#” window will appear.
2. Set the line number and tap the “OK” button. (<a>)
3. The start line is changed.

However, an undefined error or similar will occur if lines for initialization of variables, etc. are skipped.

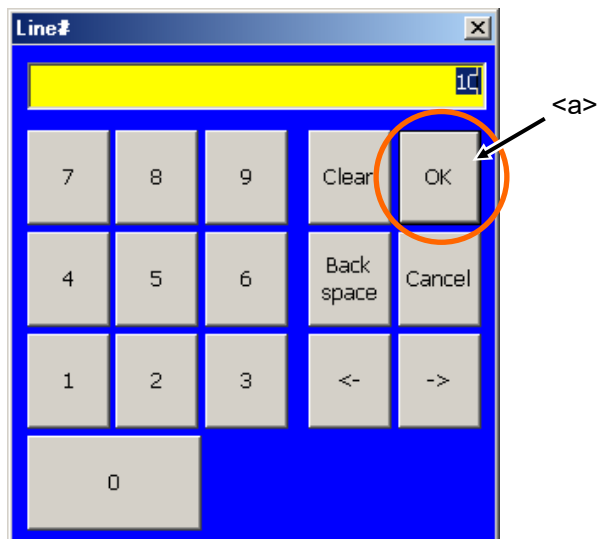

12.3. Program reset

It is possible to reset the program.

Push the sheet-key “+” corresponding to the “Program RESET”.

The start line is changed to top of the program.

12.4. Setting and deleting breakpoints

You can set breakpoints in the Command editing screen when editing the program in the Robot controller. If you set a breakpoint, you can stop the program at the line while executing the Continuous execution. After stops, you can execute the program continuously.
(This function corresponds to the R56TB Ver.2.1 or later.)

Breakpoints can be set up to 128. Moreover, when the program is quitted, every breakpoint is deleted. There are the following two types of breakpoints.

- Permanent breakpoint : After stopping, the breakpoint keeps being set.
- One-time breakpoint : After stopping, the breakpoint is automatically deleted at the same time as stopping..





CAUTION

Breakpoints can only be used with MELFA-BASIC V/VI.

(1) Set a Breakpoint


The breakpoint is set according to the following procedure.

- 1) Select the command line where breakpoint is set, then tap on [menu] button <a>, and tap on [Set a Breakpoint] .

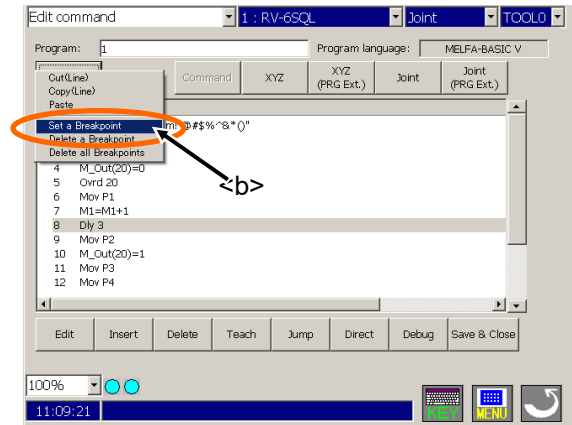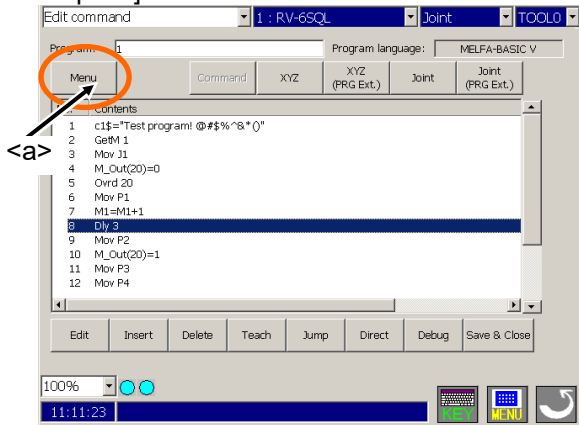


- 2) The breakpoint setting screen is displayed.

Select the type of breakpoint to set, and then tap the [OK] button. The breakpoint is set at the specified command line.

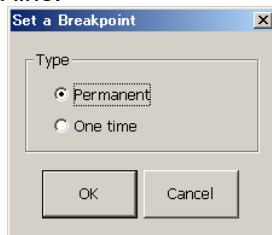

- 3) "●" is displayed at the left of command lines at which breakpoints are set.

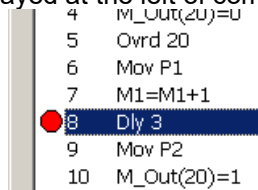

(2) Delete a Breakpoint

To delete a breakpoint, select the command line with the breakpoint to be deleted, then tap on "Delete a breakpoint" of [menu] button.

To delete all the breakpoints set in this program, tap on "Delete all Breakpoints" of [menu] button.


13. Program management

The program files can be copied, moved, deleted, protected, renamed and the contents compared.

13.1. Starting

Select the "Program" from the menu, and program list shown below appears.

Since this software Ver.2.3, "*SQ Direct" is displayed in the top of the program list when connecting with controller which can use the SQ Direct Function. This is the file which position data for SQ Direct Function is saved. The position data for SQ Direct Function can be edited / operated by operating the file "*SQ Direct".

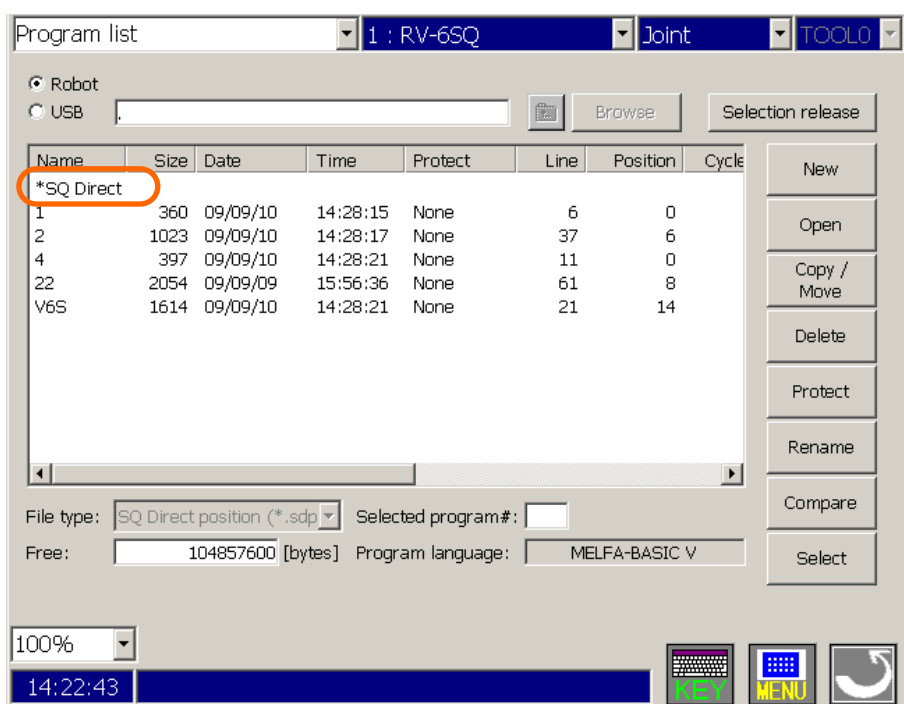

CAUTION

The targets of any operations in this function are the Robot program files.

CAUTION

Do not write-protect the USB memory when you do the operation as write to it.

Even if it seems to have been able to write it without the error occurring by the operation copy and delete etc., when write-protection of USB memory is released, all operation is canceled. And an empty (size 0) file might be generated.

CAUTION

There are some restrictions of operating the files for SQ Direct Function. Proprieties of operation are as follows.

The name of the file for SQ Direct Function is fixed as “*SQ Direct” in the controller. In the USB memory, the file name can be set free. However, the extension is “sdp”.

o : Can be operated. x : Cannot be operated


Function	Proprieties of operation	
	In the controller	In the USB memory
New	x	x
Open	o	o
Delete	x	o
Protect	x	x
Rename	x	o
Compare	o	o
Select	x	x

Function		Proprieties	Remarks
Copy	Controller -> Controller	x	
	Controller -> USB	o	It's only possible to copy with rename. Selected multiple files cannot be copied.
	USB -> Controller	o	The file name in the controller is fixed as “*SQ Direct”. Selected multiple files cannot be copied.
	USB -> USB	o	
Move	Controller -> Controller	x	
	Controller -> USB	x	
	USB -> Controller	x	
	USB -> USB	o	The moving to another folder is possible.

13.2. Program list


The lists of the program files are displayed.

For programs in the robot controller, the "Name", "Size", "Date", "Time", as well as the "Protect information", "No. of lines", "No. of position variables", "Latest cycle time", "Average cycle time", "Operation time", "No. of cycles" and "Comment" are displayed.

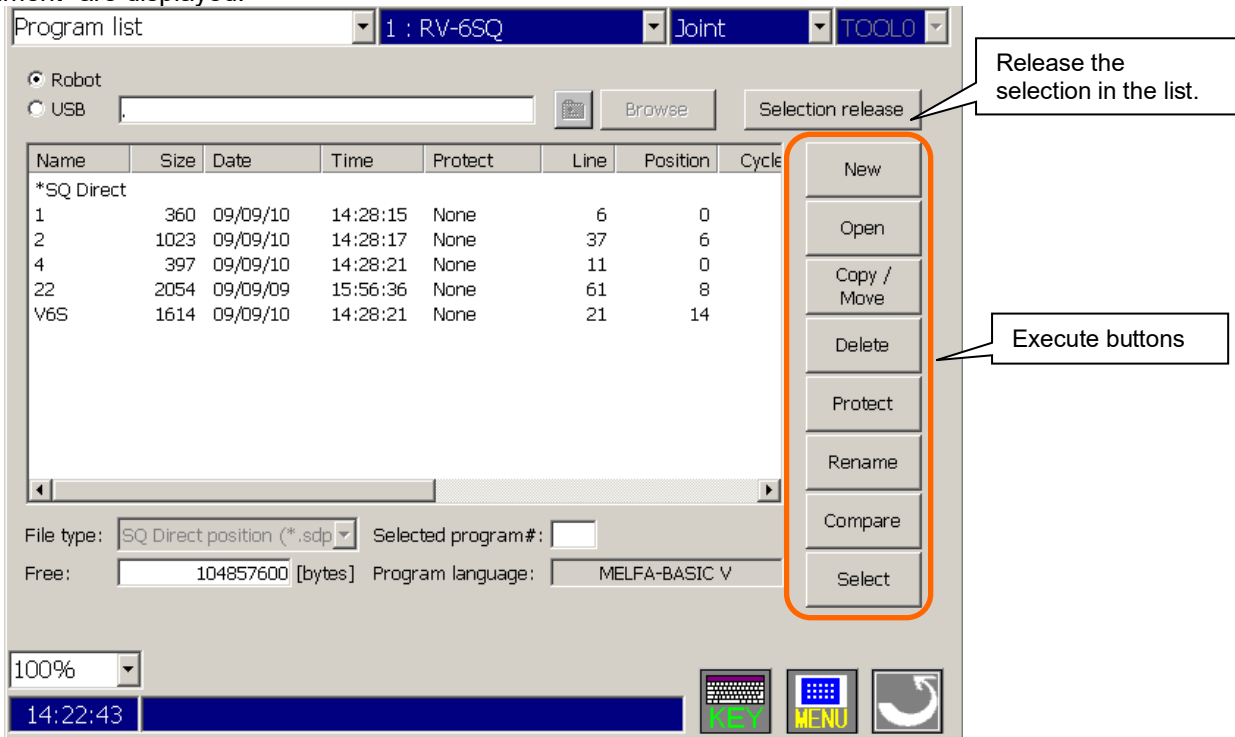

(Note) Program select function of the Program list is available with Ver.2.3 or later of this software.

* As for the program files in the USB memory and in the controller, when even the contents are the same, the program sizes are different.

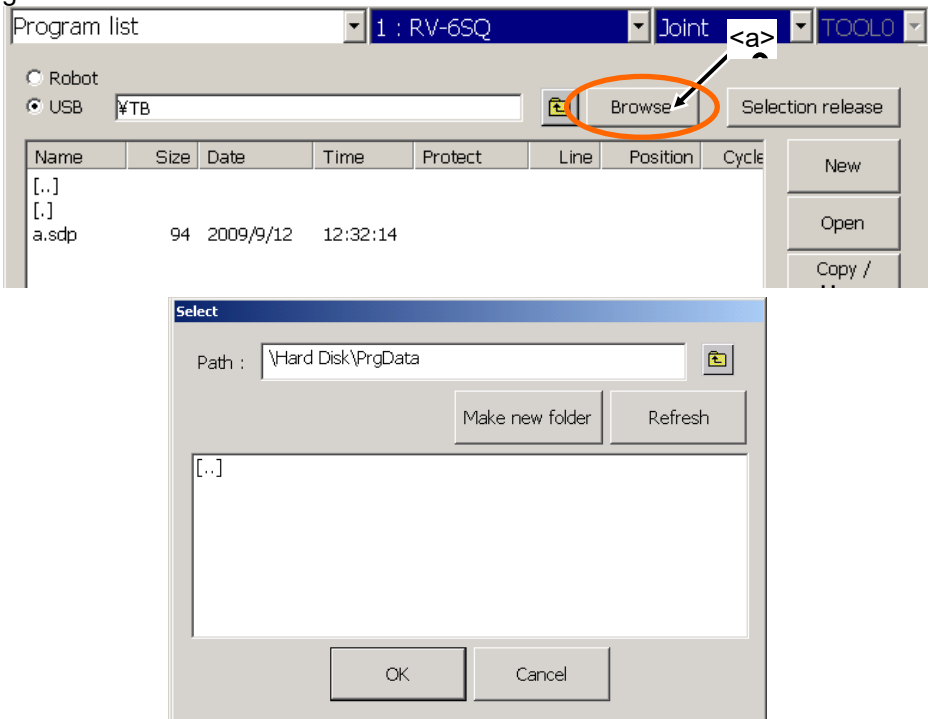


Select "USB", and tap on the "Browse" button (<a>) and select folder, and the folder in the USB memory can be shown.

13.3. Copy

The program files are copied.


Copying of the entire program file or only the command statements or only the position variables is possible.

Tap the [Copy / Move] button on "Program list window", and "Copy / Move" window will appear.

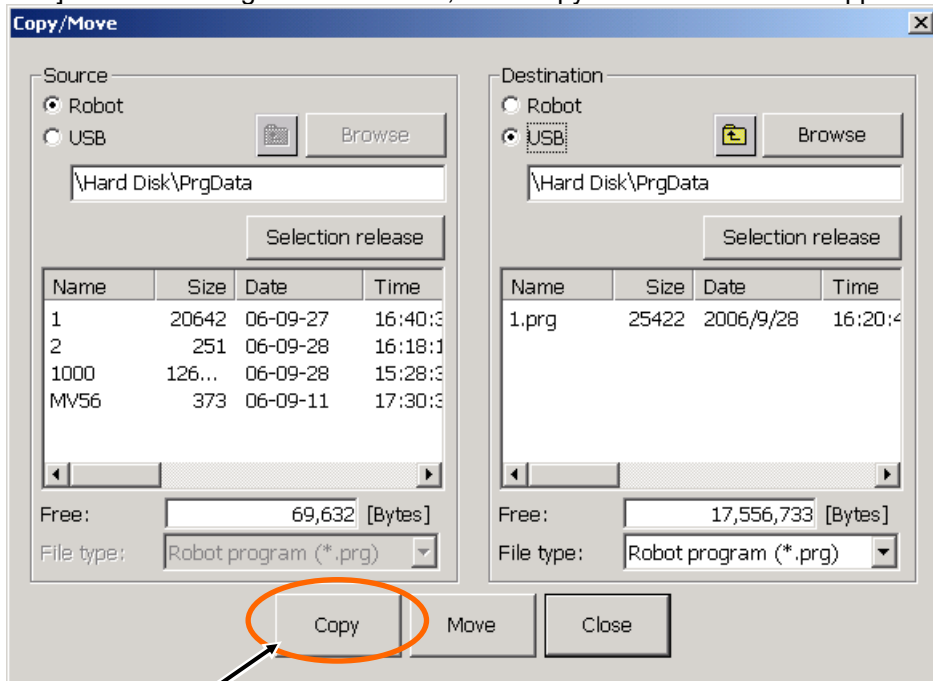


<a>

- 1) Select the program files to copy from the "Source" list, and designate the destination (robot or folder in the USB memory) at the "Destination" to copy to.
The multiple program files can be selected at the same time, but for copying with changing its name, only ONE program must be selected.
- 2) Tap the [Copy] button (<a>), and "Setting for copy" window will appear.
- 3) Set the condition of the copy, and tap the [OK] button. ()

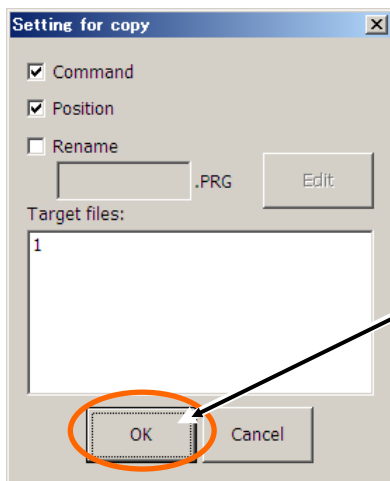

(Ver.2.1 or earlier)

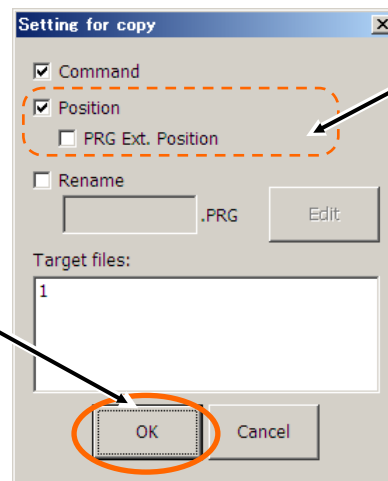

(Ver.2.2 or later)


(Note1)

(Note 1) Copy of [PRG Ext. Position] is supported by version 2.2 or later of this software.

13.4. Move

The program files can be moved.

Tap the [Copy / Move] button on "Program list window", and "Copy / Move" window will appear.

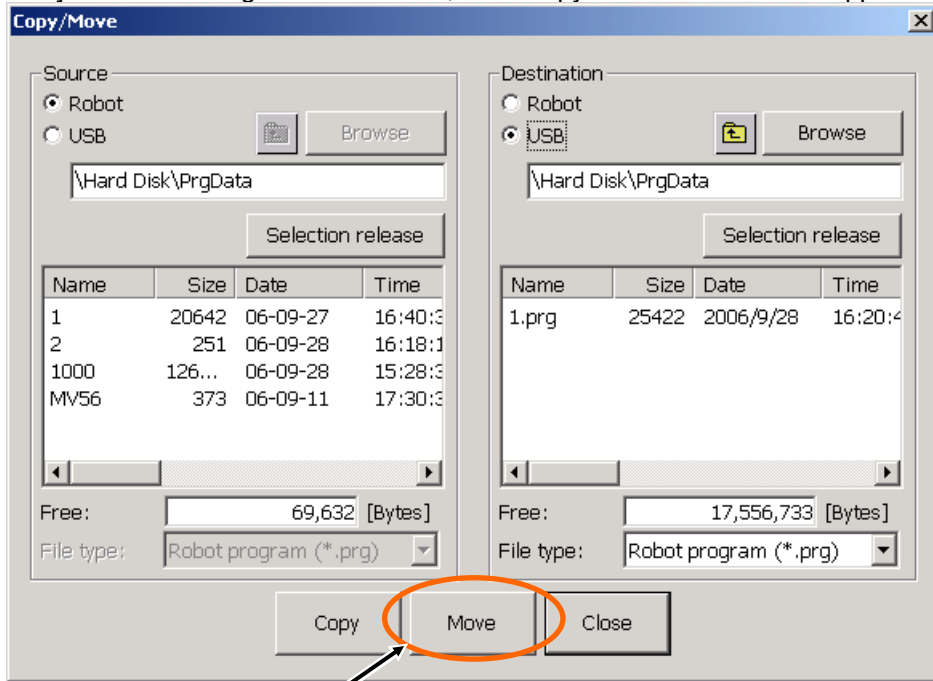

- 1) Select the program files to move from the "Source" list, and designate the destination (robot or folder in the USB memory) at the "Destination" to move to.
The multiple program files can be selected at the same time.
- 2) Tap the [Move] button. (<a>)

13.5. Delete

The program files can be deleted.

- 1) Select the program files to delete from the list. The multiple program files can be selected at the same time.
- 2) Tap the [Delete] button on "Program list window".



CAUTION


Note that once the program files are deleted, they cannot be recovered.

13.6. Protect

The program files in the robot controller can be protected.

The entire program file can be protected, or just the command statements or position variables can be protected.


- 1) Select the program files to be protected from the lists. The multiple program files can be selected at the same time.
- 2) Tap the [Protect] button on "Program list window", and "Setting for protect" window will appear.
- 3) Set the condition of the protect, and tap the [OK] button. (<a>)

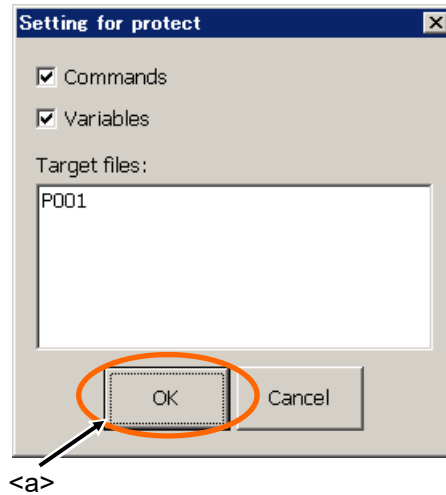

13.7. Rename

A program file name is renamed.

- 1) Select the name of the only one program file to be renamed from the list.
- 2) Tap the [Rename] button on "Program list window", and "Rename" window will appear.
- 3) Set the new file name, and tap the [Enter] button. (<a>)

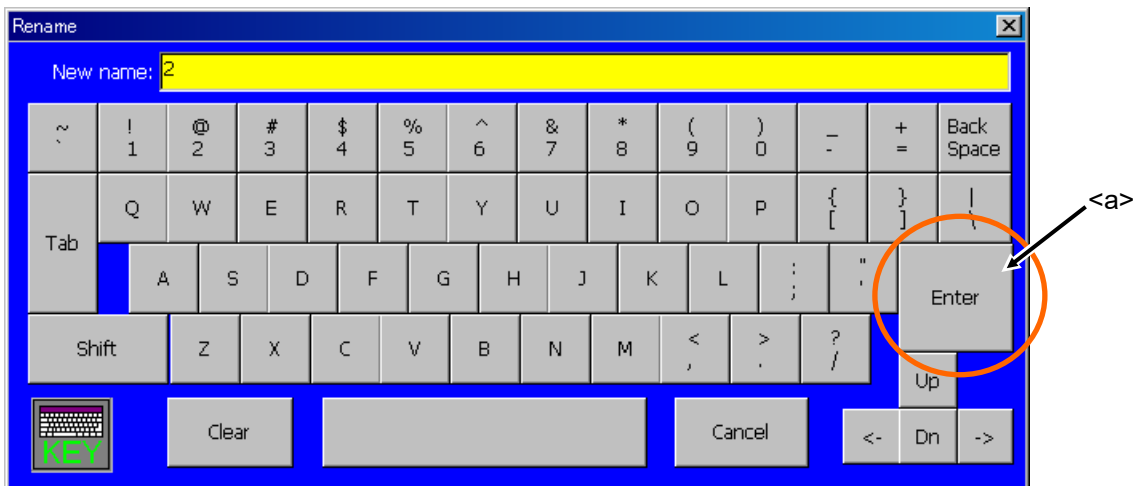


13.8. Compare


The program files can be compared.

Compare of only the command statements or only the position variables is possible.

Tap the [Compare] button on "Program list window", and "Compare" window will appear.

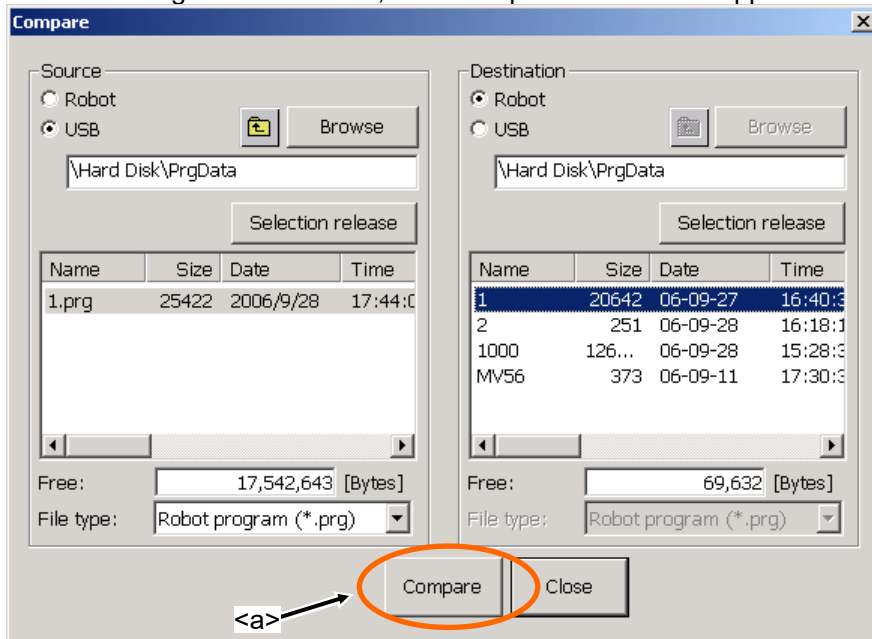

- 1) Select the program files to be compared from the left and right lists.
- 2) Tap the [Compare] button (<a>), and "Setting for compare" window will appear.
- 3) Set the condition of the compare, and tap the [OK] button. ()
- 4) The "Compare result" window will appear.
- 5) It ends tapping the [Close] button.

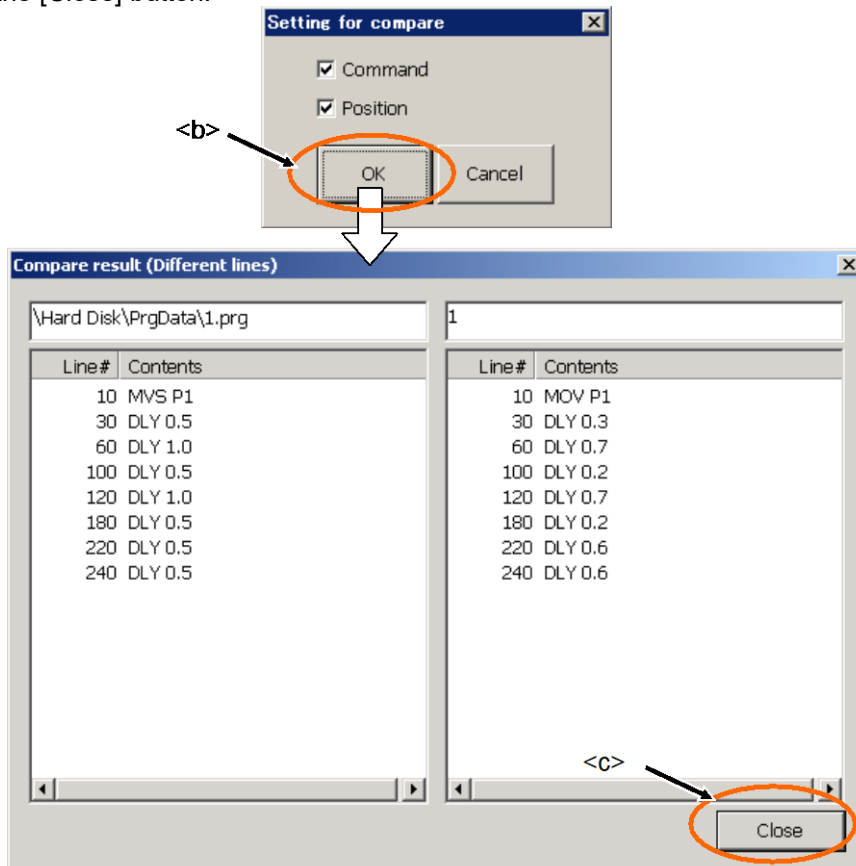



CAUTION

The method of comparing position variables is changed since this software Ver.2.3.


When comparing the programs by Ver.2.2 or before of this software, position variables were judged different if the expression of value of each elements are different as follows. Since Ver.2.3, it is changed to judge the same position variable when the value of each element of a position variable is coincides.

No.	Example of variable of object of comparison
1	P1=(1.00,2.00,3.00,4.00,5.00,6.00)(7,0) P1=(1.000,2.000,3.000,4.000,5.000,6.000)(7,0)
2	P1=(1.00,2.00,3.00,4.00,5.00,6.00)(7,0) P1=(+1.00,+2.00,+3.00,+4.00,+5.00,+6.00)(7,0)
3	P1=(1.00,2.00,3.00,4.00,5.00,6.00)(7,0) P1=(1.00, 2.00, 3.00, 4.00, 5.00, 6.00)(7, 0)

13.9. Select program

Even the controller which the operation panel is not installed can select the program from this T/B. This function is available with Ver.2.3 or later of this software.

- 1) Set the mode of the controller to "AUTOMATIC".
- 2) Make the T/B enable.
(Push the [TEACH] switch of T/B, and confirm that the [TEACH] switch and the [TB ENABLE] lamps light.)
- 3) Select the program used for automatic operation from the program list. (<a>)
- 4) Tap the [Select] button. () The confirmation message will be displayed. Tap the [Yes] and the state of the program can be operated automatically.

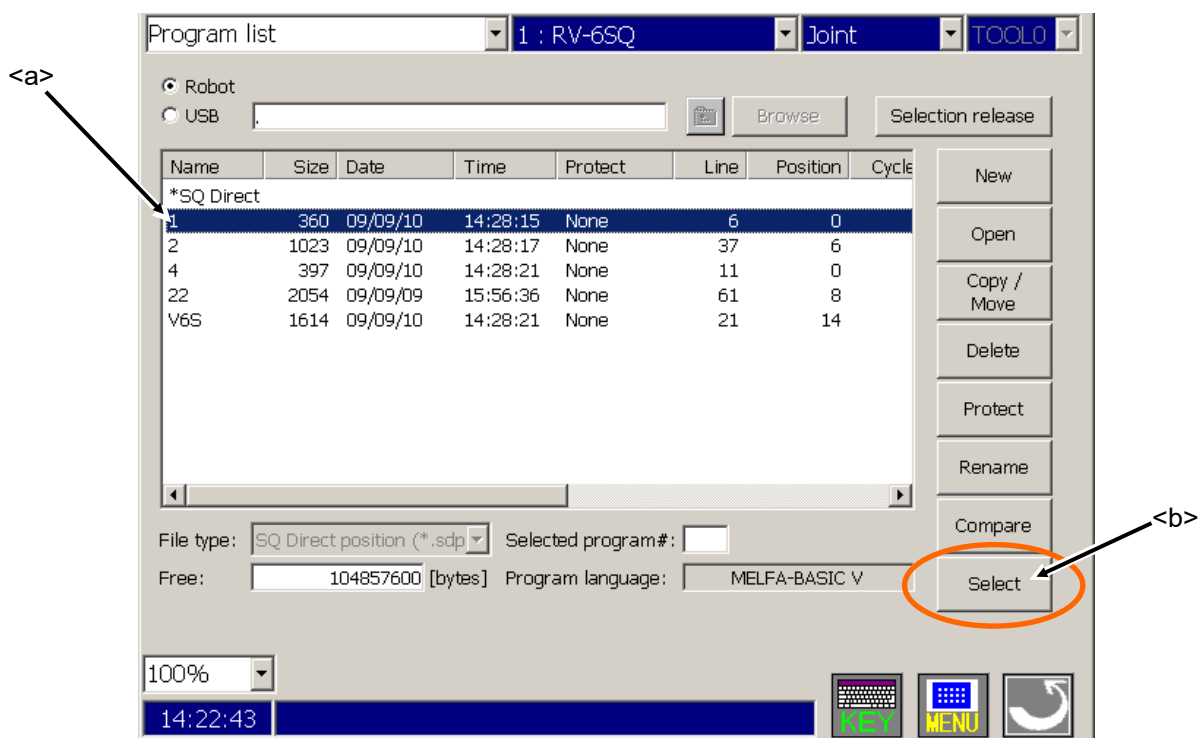


14. Backup/Restore

The information on the robot controller can be backed up to the USB memory, or the backup information saved on the USB memory can be restored to the robot controller.

Backup (Robot -> USB memory)	Saves the backup data on the robot controller to the USB memory.
Restore (USB memory -> Robot)	Transfers the backup data saved on the USB memory to the robot controller.


14.1. Starting

Select [Backup/Restore] from the menu. The following "Backup/Restore" window appears.

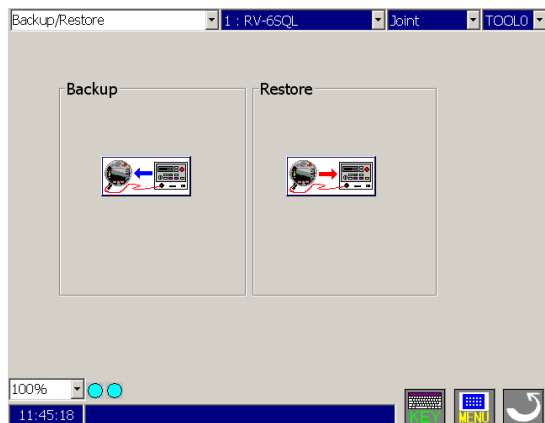

14.2. Backup (Robot -> USB memory)

Save the information on the robot controller to a file on the USB memory.
Tap the [Backup] button. The following window appears.

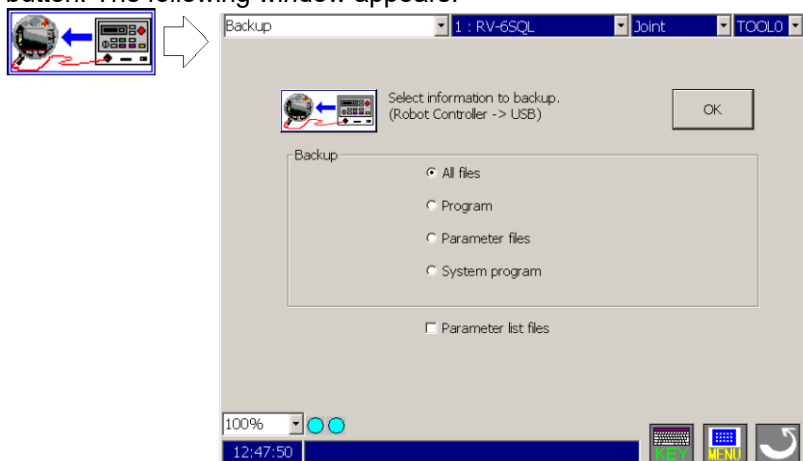

<< Backup >>

- All Files** : Saves all files (robot program, parameter files, etc.) in the robot controller into the designated folder.
- Program** : Saves the robot program file into the designated folder.
- Parameter Files** : Saves the parameter files into the designated folder.
- System Program**: Saves the system base program file into the designated folder.

Note that this Save (Robot -> USB memory) is intended to back up the robot controller, so the program cannot be edited using the program editing tool.

[Parameter List Files] This is used to edit the parameter information saved by backup in offline mode of RT ToolBox, and is not required for backup. If this is not checked, the time required to save all files will be shortened.


BKUP.SYS and MECHA.SYS files are automatically created in the designated folder. These files contain the saved mechanical information of the robot controller and describe the save format. Also, the backup files of operating information, maintenance forecast, preventive maintenance / predictive maintenance (only for compatible models) is created when [All Files] or [Parameter Files] is backed up. If these files are deleted or overwritten, please note that offline data editing and data transfer to the robot controller cannot be performed.

Precaution for Backup

When backing up the values of the robot (system) status variables and the values of the program external variables, reset the power to the robot controller first, and then perform a backup operation.

14.3. Restore (USB memory -> Robot)

The backup data saved in the USB memory is transmitted to the robot controller. Tap the [Restore] button. The following window appears.

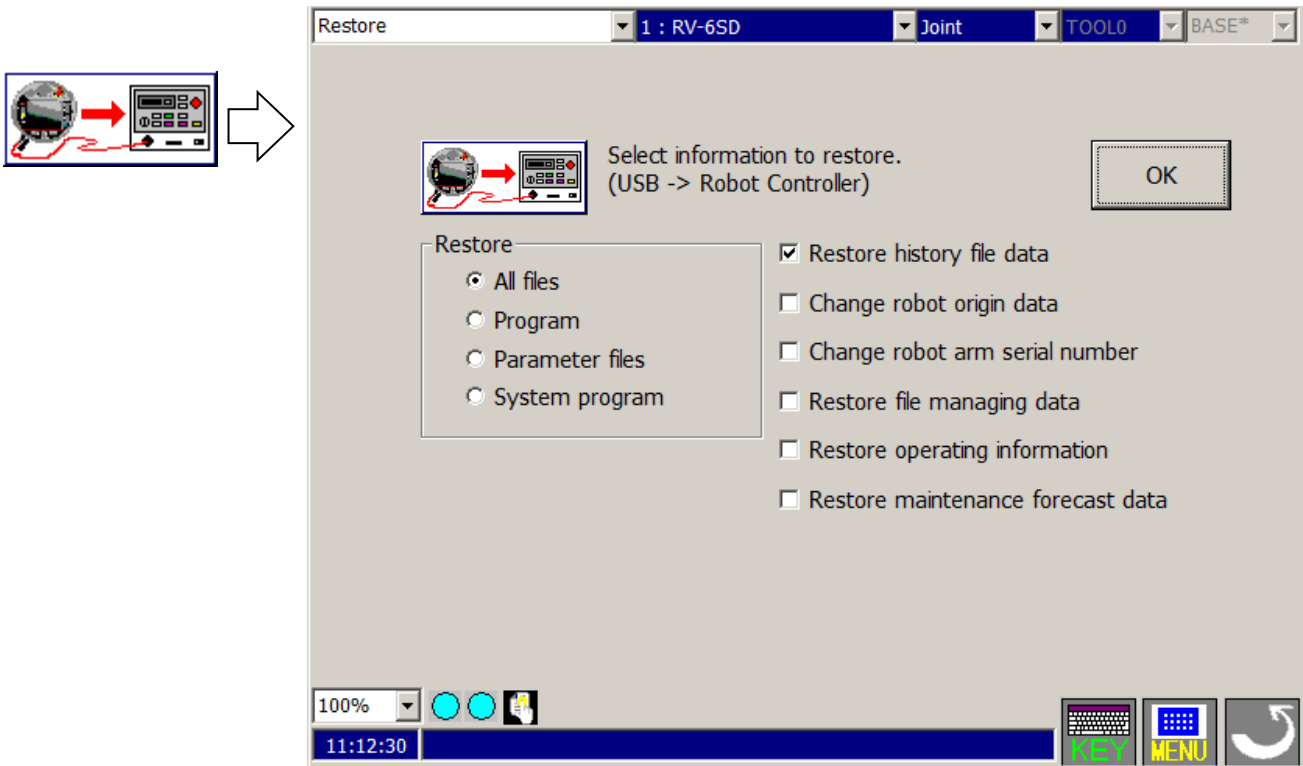

<< Restore >>


- All Files** : Transfers all files (except BKUP.SYS and MECHA.SYS) in the designated folder to the robot controller after all information in the robot controller is cleared (initialized).
- Program** : Transfers the robot program file in the designated folder to the robot controller.
- Parameter Files** : Transfers the parameter file in the designated folder to the robot controller.
- System program** : Transfers the system base program file in the designated folder to the robot controller.


[Restore history file data] Valid only when [All Files] is selected under [Backup].

- If checked** : Replaces the error history in the robot controller with the contents of the error history file to be transferred.
- If not checked** : The backed up error history files are not transferred.

[Change robot origin data] Valid only when [All Files] or [Parameter Files] is selected under [Backup].

- If checked** : Replaces the origin information in the robot controller with the contents of the mechanical parameter file to be transferred.
- If not checked** : Loads the origin information from the robot controller, transfers the information in the designated folder, and then returns the origin information that has been loaded to the robot controller.

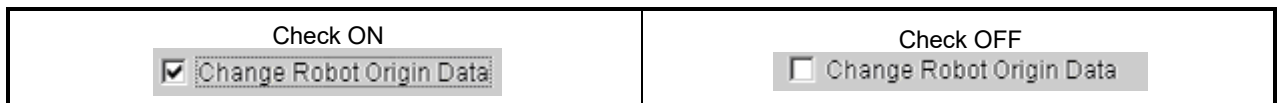

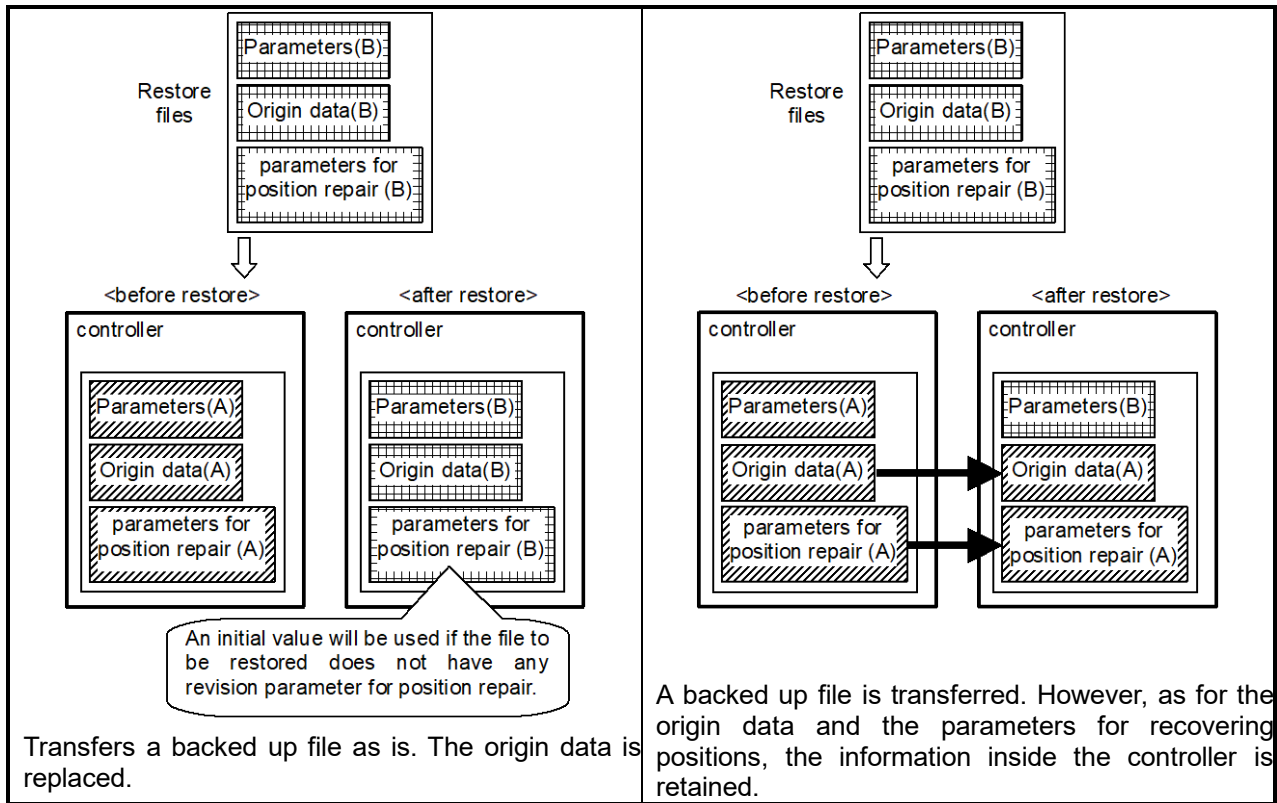

[Change robot arm serial number] Valid only when [All Files] or [Parameter Files] is selected under [Backup].

If checked : Replaces serial number of the robot arm in the robot controller with the contents of the mechanical parameter file to be transferred.

If not checked : A backed up file is transferred. However, the serial number of the robot arm is retained the information inside the controller.

[Restore file manager's data] Valid only when [All Files] is selected under [Backup].

If checked : The files stored in the NG folder are transferred, and will be replaced.

If not checked : The files stored in the NG folder are not transferred.

[Restore Operating Information] Valid only when [All Files] or [Parameter Files] is selected under [Backup].

If checked : Replaces the operating information in the robot controller with the contents of the operating information to be transferred.

If not checked : The backed up operating information files are not transferred.

[Restore maintenance forecast data] Valid only when [All Files] or [Parameter Files] is selected under [Backup].

If checked : Replaces the information on the maintenance forecast, preventive maintenance / predictive maintenance (only for compatible models) in the robot controller with the contents of the maintenance forecast, preventive maintenance / predictive maintenance files to be transferred.

If not checked : The backed up maintenance forecast, preventive maintenance / predictive maintenance (only for compatible models) files are not transferred.

If communication is cancelled during a series of restore processing, please note that the origin data may have been changed.



CAUTION


Precaution for Restore

When a program is running or the ALWAYS program is set up

If a batch restoration or a program restoration is executed when the program is being started, the program will automatically be stopped.

At this time, if there is an error in the controller, the program in operation cannot be stopped, and the message shown on the below will be displayed.

Although a restoration process can be executed even in such a case, the program currently selected or the program that is started by ALWAYS cannot be re-written. If it is possible to remove the cause of the error, reset the error and execute the restoration process again.

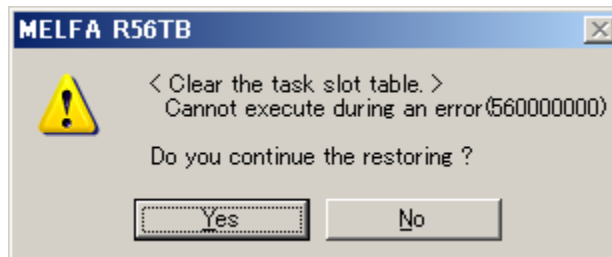


14.4. Power Reset of the Robot Controller

To make the restored information effective, it is necessary to power on the robot controller again.

If connecting to the CR800-D/CR750-D/CR751-D/CRnD-700 series controller, the power reset of the robot controller can be performed from the T/B.

If connecting to the CR800-R/CR800-Q/CR750-Q/CR751-Q/CRnQ-700 series controller, please reset the power by switch of the robot controller.

After restoring, the power reset conformation screen appears. To immediately reset the power, select [Yes].

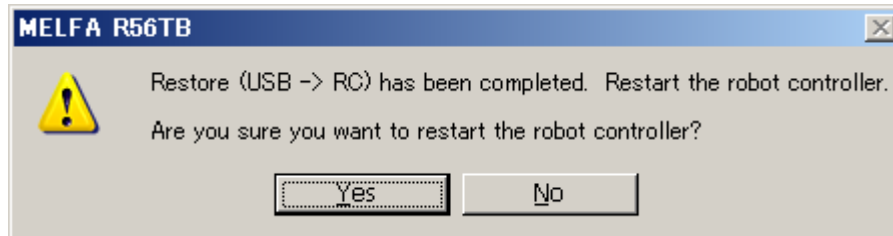


15. Monitor

With the monitor, all of the information in the currently connected robot controller can be constantly displayed.

15.1. Starting

Select the "Monitor" from the Menu. The "Monitor menu" shown below will appear.

After selecting the robot you want to monitor, tap an item. The monitor window for selected robot appears.

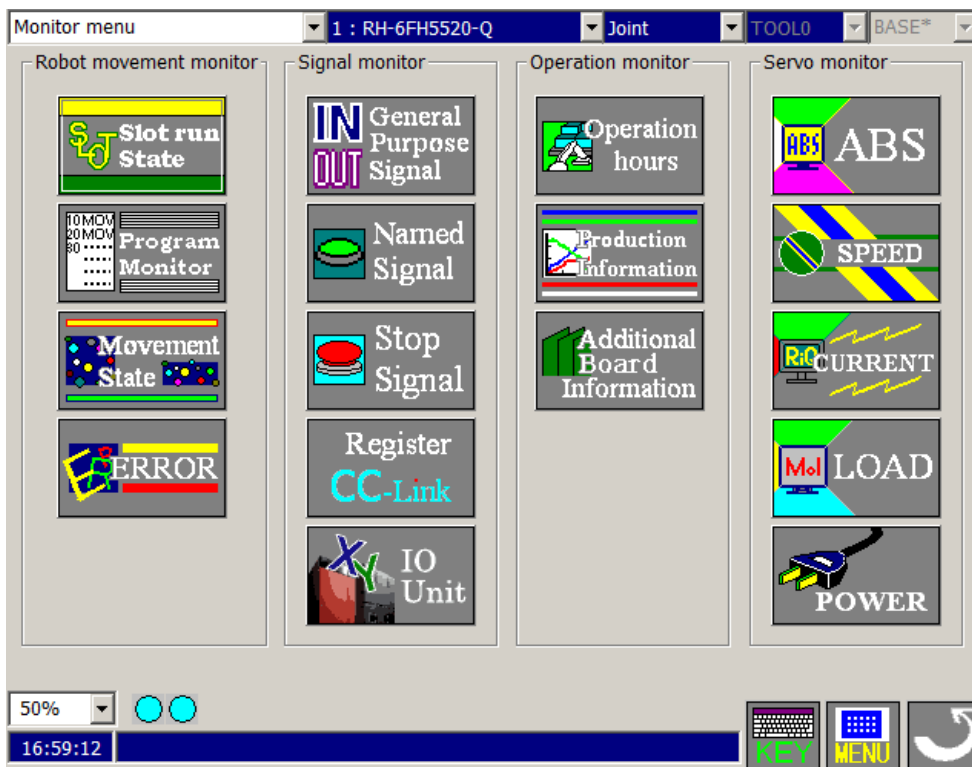

15.2. Outline of each function and starting methods

15.2.1. Outline of each function

Each monitor function is explained briefly in this section. The monitor functions are largely classified into the following three groups.

1. Robot movement monitorItems related to robot movement are monitored.
2. Signal monitorItems related to the state of the signal is monitored.
3. Operation monitorItems related to the robot's operation are monitored.
4. Servo monitor.....The robot's servo system information is monitored.

	Monitor name	Explanation
Robot movement monitor	Slot run state	The operation state of each slot can be confirmed.
	Program monitor	The program execution line set for each slot, the contents of the variable used in the program, and the robot current position, etc., can be confirmed.
	Movement State	The current position information and hand open/close state of each connected mechanism can be confirmed.
	Error	The currently occurring error can be confirmed. The history of the errors that have occurred can be confirmed.
Signal monitor	General-purpose signal	The state of the signal input from an external device to the robot controller / output from the robot controller to an external device can be confirmed.
	Named signal	The status can be checked by naming the status of the dedicated I/O signal that has been set in the robot controller, as well as each bit or within the range of 32 bits of the general-purpose signal. The signals are set via parameter setting (Parameter editor).
	Stop signal	The stop signal input into the robot controller can be confirmed.
	Register	The input registers in the CC-Link function can be monitored and pseudo-input, and the output registers in the CC-Link function can be monitored and forcibly output.
	I/O unit monitor	The XY devices of I/O unit can be monitored.
Operation monitor	Operating hours	The robot operation time (power ON, etc.) can be confirmed.
	Production information	The operating time of the program in the robot controller and the No. of program cycles can be confirmed.
	Additional board information	Information on the option card mounted on the robot controller can be referred to.
Servo monitor	Servo monitor position, speed, current, load, power	The servo system information can be monitored.

15.3. Each monitor function

Each monitor function is explained in this section.

15.3.1. Robot movement monitor

15.3.1.1. Slot run state

The state of the slots in the robot controller can be monitored.

The No. of displayed slots is determined with the parameters.

No.	Status	Program	Robot	Conditions	Mode	Priority
1	Program selection possible	A1		START	REP	1
2	Operating	12		ALWAYS	REP	1
3	Program selection possible			START	REP	1
4	Program selection possible			START	REP	1
5	Program selection possible			START	REP	1
6	Program selection possible			START	REP	1
7	Program selection possible			START	REP	1
8	Program selection possible			START	REP	1


It is possible to stop all slots for which the start condition is "ALWAYS" by tapping [Stop All Program] button with Version 2.4 or later of software.

It is necessary to stop all slots to edit the program for which the start condition is "ALWAYS".

15.3.1.2. Program monitor

Information of the running program can be monitored.

1) Program monitor

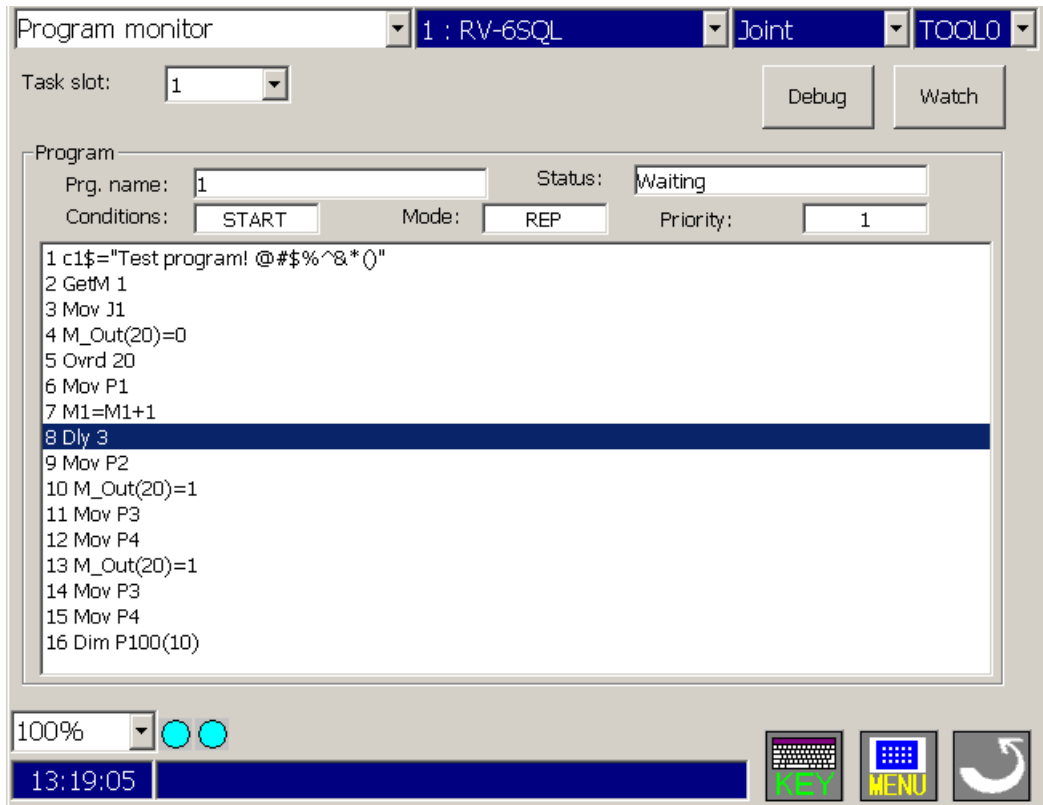

[Watch] : The constant display window for the variables used in the running program is displayed.


[Debug] : The "Debugging" window will appear at the right of T/B.

For debugging, please refer to the "12 Debugging".

2) Watch monitor

With the watch monitor, the variables to be constantly displayed can be selected.

When the [Watch] button on "Program monitor window" is tapped on, the watch monitor window and a window for selecting the variables to be displayed will appear.

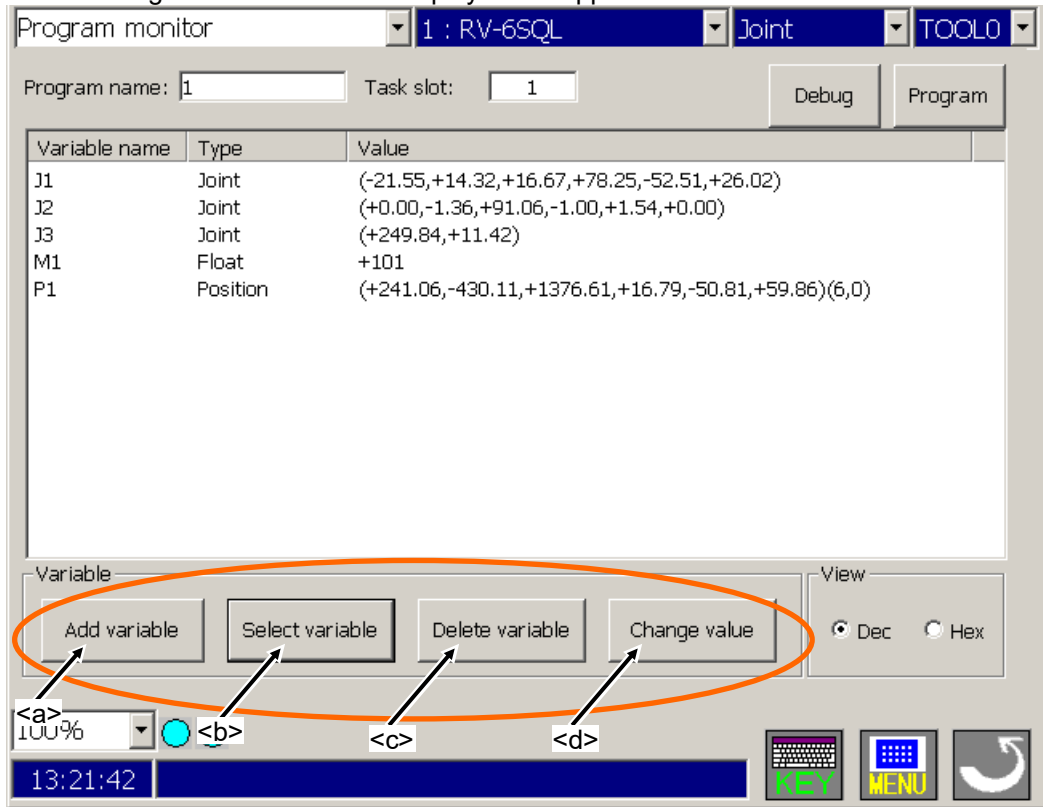


[Select variable] The watched variable can be selected from the variable list used by the program.

 When [Select value] button () is tapped, the following screen is displayed.


[Add] button (<e>) is tapped after the variable watched on this screen is selected, and the variable monitored to "Displayed variables" is selected. If all the variables to wish are selected, tap the [OK] button. (<f>)

The variable, which is not displayed here can be specified by the [Add variable] button. (<a>)

When the [Update] button (<g>) is tapped, the variable of the program loaded into the task slot is acquired again.

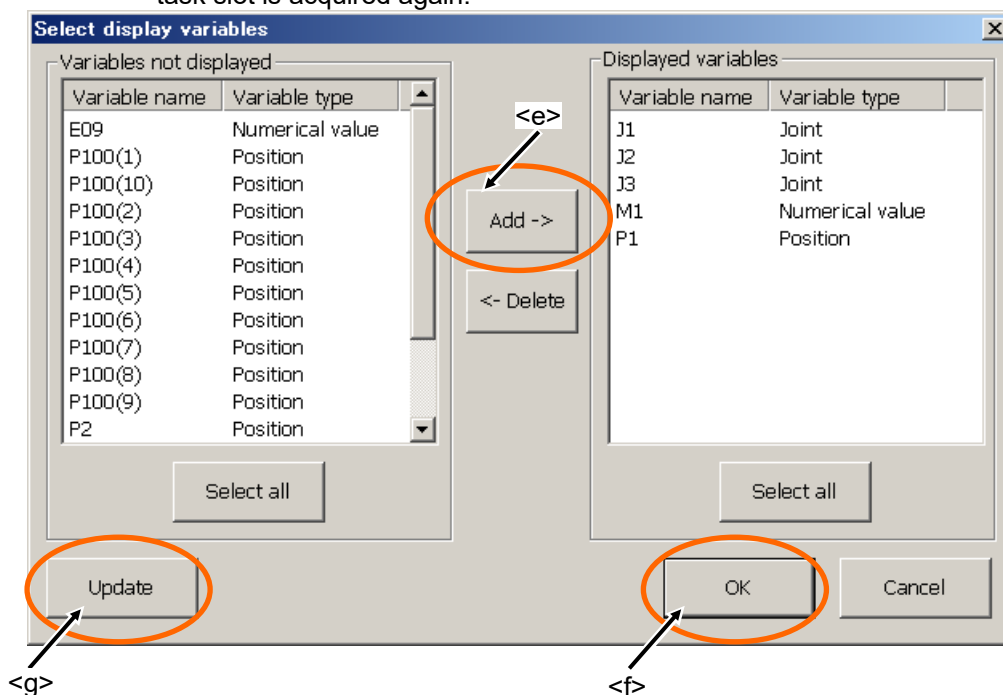

[Add Variable] The variables to be monitored can be designated.
 <a> Input the variable in Variable Name, select the variable type, and then tap on the [OK] button. (<h>)

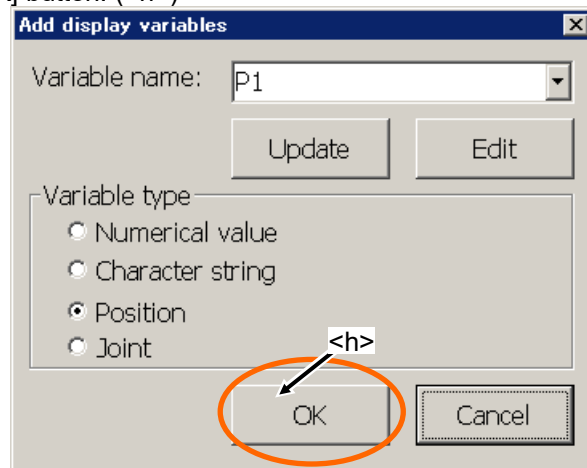


[Change value] The value of the variable being watched now is changed. Variable identifier to which the value is changed is double tapped or [Change value] button (<d>) is tapped while selected. Variable value change window is displayed.


CAUTION

Please note that the movement of the robot might change by the change enough when you change the value.

When the variable name is selected and the [Change value] button (<d>) is tapped on, the window for making changes will appear.

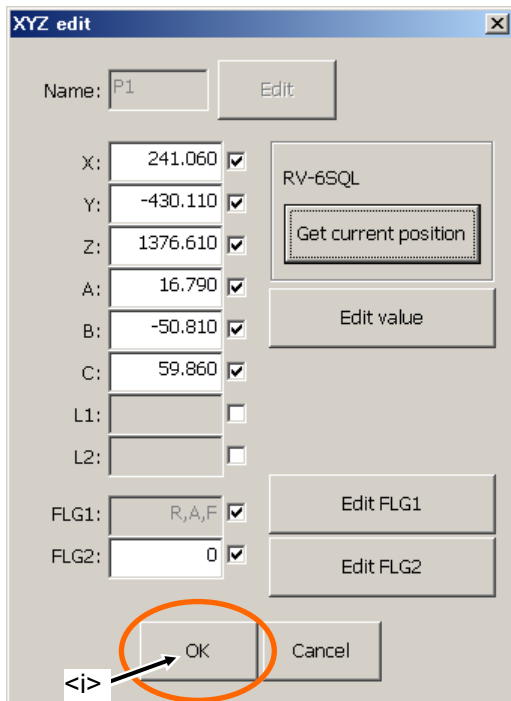

(Location)

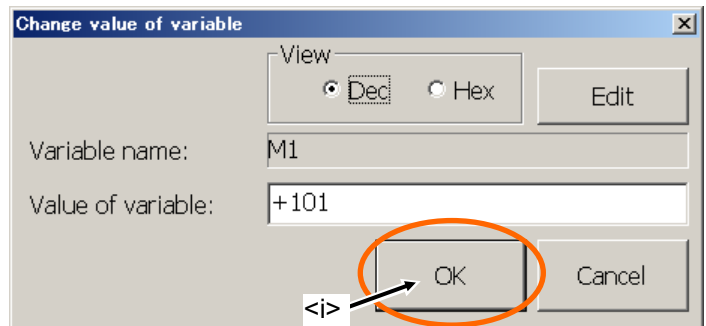

(Integer, Float, String)

Please tap [OK] button (<i>) after changing the value. However, please note that the movement of the robot might change by the change enough when you change the value.

[Delete variable] The value of the variable being watched now is changed. Variable identifier to which the value is changed is tapped double or [Change] button is tapped while selected. Variable value change window is displayed.

About the hexadecimal number display

The variable displayed with "Watch monitor" and "Change value of variable" can be switched to the hexadecimal number / the decimal number.

Please select the type, which wants to be displayed with "View" on each screen.


Please refer to the following for the variable, which can be displayed by the hexadecimal number.

Integer	The displayed variable can be switched to the hexadecimal number/the decimal number.
Float	When it is 0 below the decimal point, it is possible to switch to the hexadecimal number/the decimal number. However, the value is the one within the range of -9999999-9999999.
String	The hexadecimal number is not displayed.
Location	The hexadecimal number is not displayed.

As for the value displayed by the hexadecimal number, &H is added to the head of the value.

15.3.1.3. Movement State

With the operation confirmation, the robot's movement range, current position and hand open / close state, etc., can be confirmed.

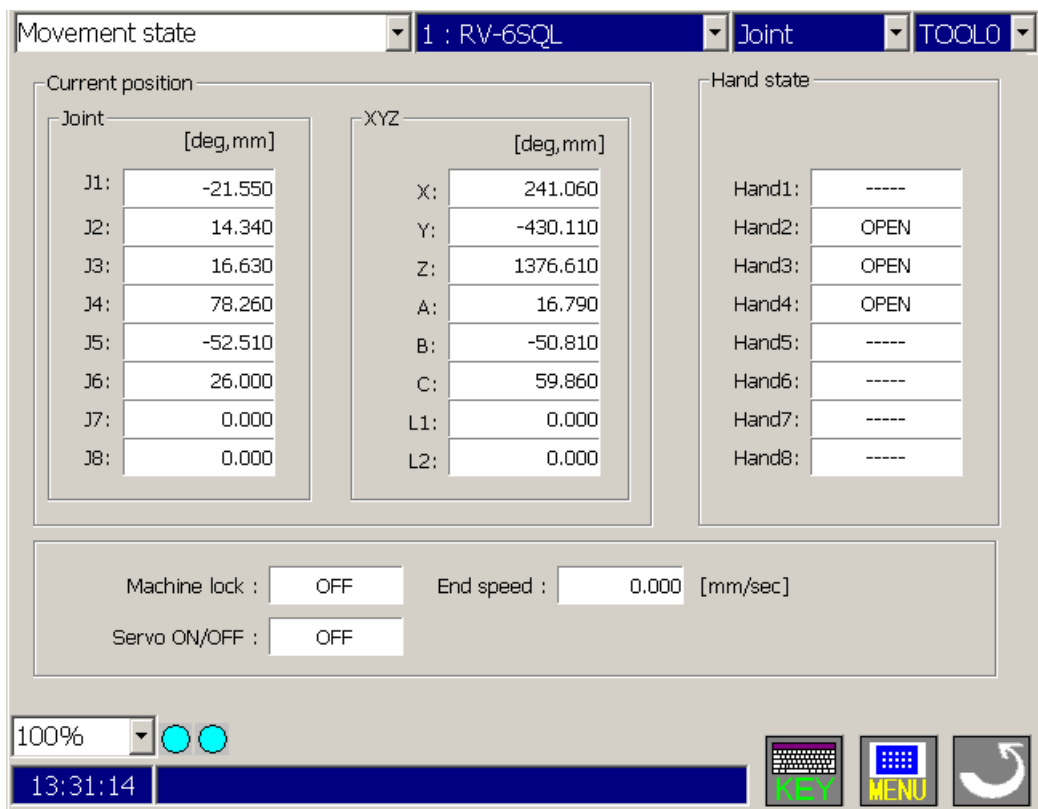

15.3.1.4. Error

The errors currently occurring in the robot controller are displayed.

1) Currently occurring errors

The Error monitor window displays a table of error messages. The table has columns for No., Error message, Date, Time, Level, Program, and Line. A single error is listed: No. 5000, Error message 'TB Enable key is ON', Date 08-06-12, Time 13:44:30, Level High, Program, and Line 0.

No.	Error message	Date	Time	Level	Program	Line
5000	TB Enable key is ON	08-06-12	13:44:30	High		0

Below the table are buttons for 'Details' and 'History'. A status bar at the bottom shows '13:42:02 H.5000 TB Enable key is ON' and icons for 'KEY', 'MENU', and a refresh symbol.

Detailed information (cause and recovery) of the occurring error can be confirmed.

The history of the errors that have occurred in the past can be referred to.

The Error detail dialog box shows the following information:

- Error #: 500000000 TB Enable key is ON
- Cause: The TB Enable key was ON in the AUTO mode
- Recovery: OFF the TB Enable key, or enter the TEACH mode

A 'Close' button is located at the bottom right.

The Error level dialog box contains the following options:

- Select a source or a error level.
- Read from RC:
 - Select all
 - High level error
 - Low level error
 - Caution
- Read from file:
 - History file

Buttons for 'OK' and 'Cancel' are at the bottom.

The "Error history" can be confirmed for each level.

The "Error history" window is displayed.

2) Error history

The history of errors that have occurred in the past can be referred to.
This display is not shown at all times.

Error history

1 : RV-6SQL Joint TOOL0

Error level

- Select all
- High level error
- Low level error
- Caution

Tabulation information

Start date: 08-02-28

Start time: 17:49:32

Count of registered items: 493

No.	Error message	Date	Time	Level	Program	Line
5000	TB Enable key is ON	08-06-12	13:44:30	High		0
5000	TB Enable key is ON	08-06-12	13:44:20	High		0
5000	TB Enable key is ON	08-06-12	13:43:30	High		0
5000	TB Enable key is ON	08-06-12	13:42:12	High		0
5000	TB Enable key is ON	08-06-12	13:41:10	High		0
	e.Check ori...	08-06-12	13:37:36	Low		0
	e.Check ori...	08-06-12	13:37:36	Low		0
	e.Check ori...	08-06-12	13:37:36	Low		0
	e.Check ori...	08-06-12	13:37:36	Low		0
	Pos. data disagree.Che					

Details Save

100%

13:55:55

KEY MENU

Detailed information can be confirmed.

Error history is preserved in the text file.

15.3.2. Signal monitor

15.3.2.1. General-purpose signal

The status of the input / output signals can be monitored.


When the [Pseudo-input] button is tapped on, the robot controller will enter the "pseudo-input mode, and the following window will appear.

CAUTION

To cancel the pseudo-input mode, the robot controller power must be turned ON again.

1) General-purpose signal monitor


With the general-purpose signal monitor, monitoring can be carried out by designating the head signal No. and number of signals to display. Please tap the [Monitor setting] button. ()

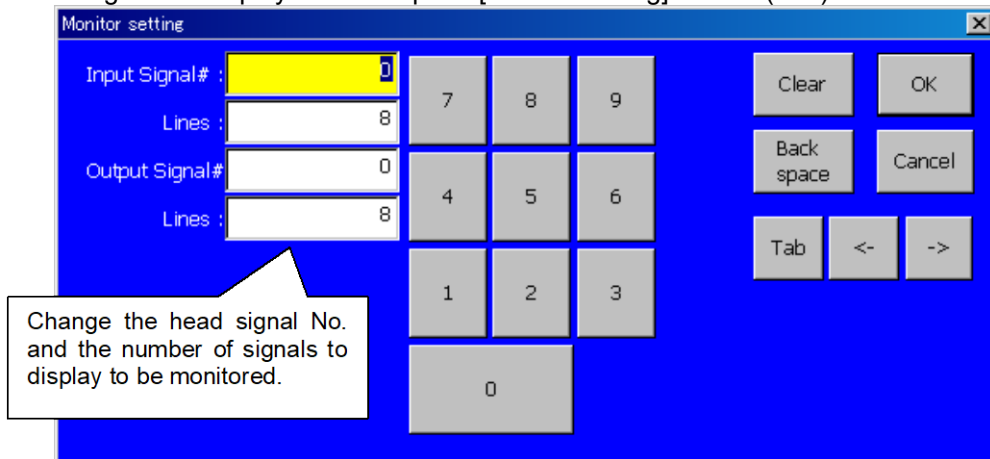

2) Pseudo-input

In the pseudo-input mode, the state input from the following window is interpreted as the input signal instead of the robot controller general-purpose input signals.

Tap on the [Pseudo input] button. (<a>)

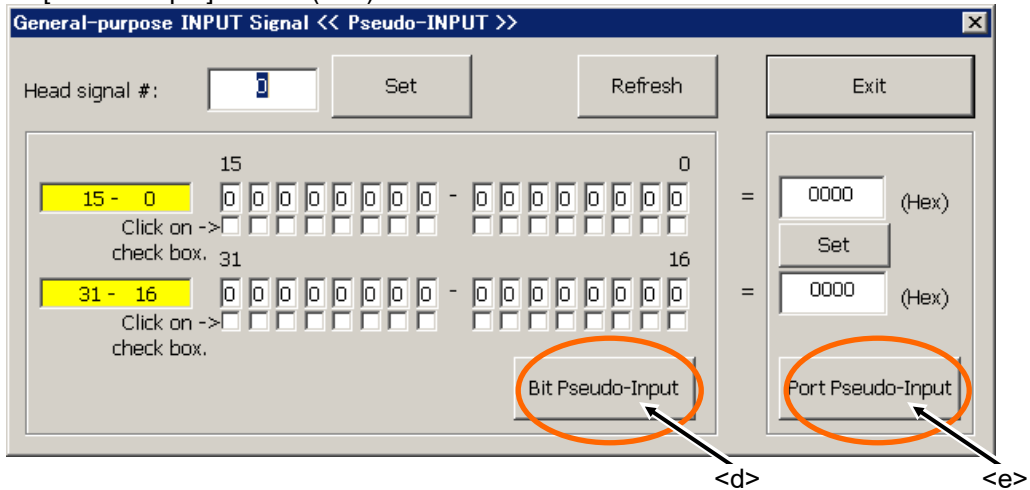


- i) First the signal to be pseudo-input signal is read. 16 signals can be set simultaneously. Input the head No. of the signal to be read, and then tap on the "Set" button.
- ii) The input state of the 16 signals is displayed with the designated signal at the head. Set the pseudo-input state, and then tap on the [Bit Pseudo-Input] button. (<d>)
- iii) 16 signals from the No. designated as the head can be forcibly output as a hexadecimal. Input the hexadecimal value, and then tap on the [Port Pseudo-Input] button. (<e>)

The pseudo-input mode is canceled when this button is closed.

3) Forced output

The robot controller's general-purpose signals can be forcibly output.

Tap on the [Forced output] button. (<c>) A window for forcibly outputting the signal will appear.

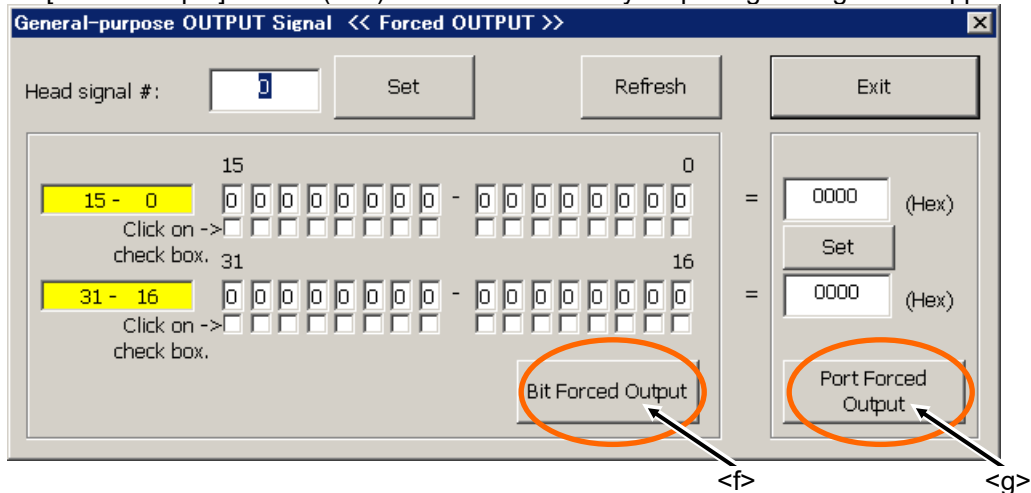


- i) First, read out the signal to be forcibly output.
16 signals can be output simultaneously. Input the head No. of the signal to be read, and then tap on the "Set" button.
- ii) The output state of the 16 signals is displayed with the designated signal at the head. Set the output state, and then tap on the [Bit Forced Output] button. (<f>)
- iii) 16 signals from the No. designated as the head can be forcibly output as a hexadecimal.
Input the hexadecimal value, and then tap on the [Port Forced Output] button. (<q>)

CAUTION

- The signal Nos. assigned (used) with the dedicated output signal cannot be forcibly output.
- Forced output is possible in the [TEACH], [AUTO (OP)] and [AUTO (EXT.)] states, but if even one program is running, output is not possible. (Excluding the ALWAYS program.)


15.3.2.2. Named signal

The status can be checked by naming the status of the dedicated I/O signal that has been set in the robot controller, as well as each bit or within the range of 32 bits of the general-purpose signal. The signal file in the robot controller is loaded at startup. If, however, it is not found, the previously used file is loaded. The signals are set via parameter setting (Parameter editor).

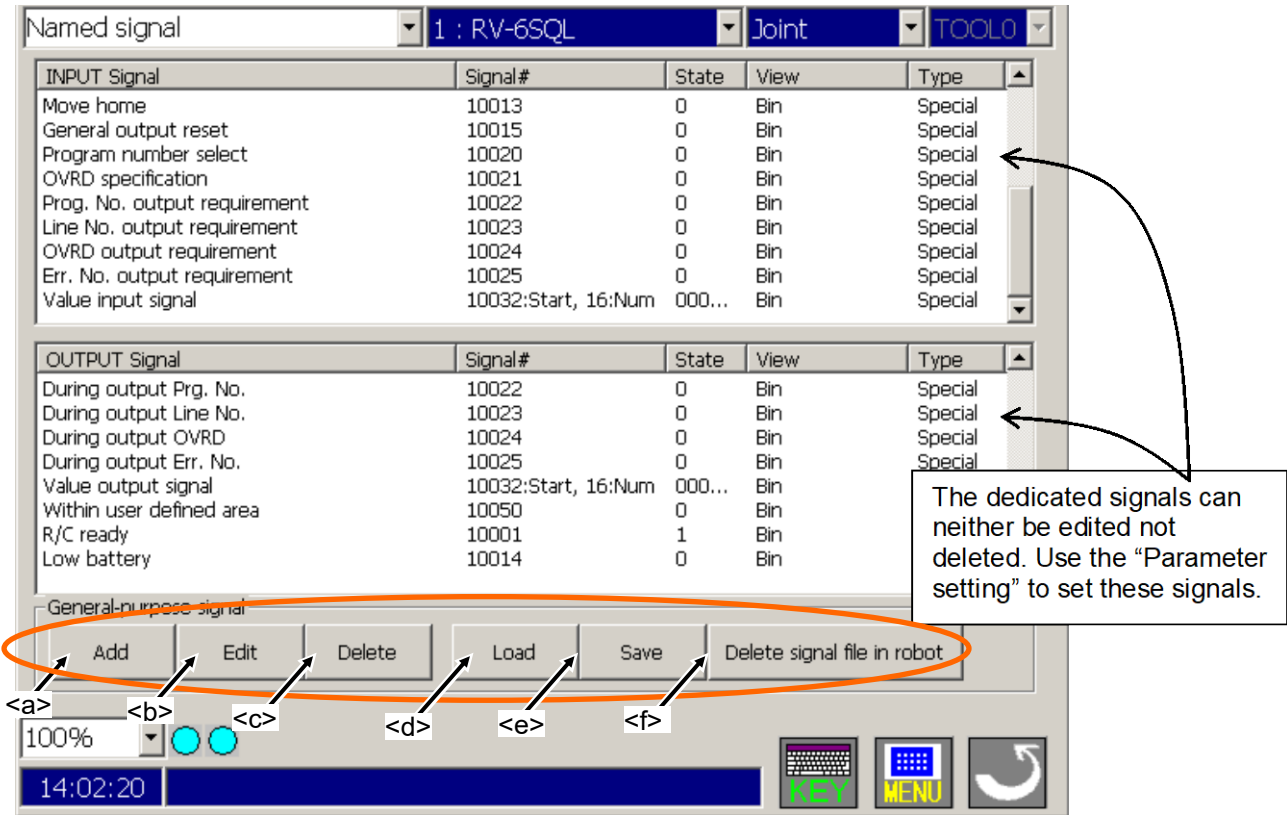

[Add] / [Edit] / [Delete]

<a> <c>

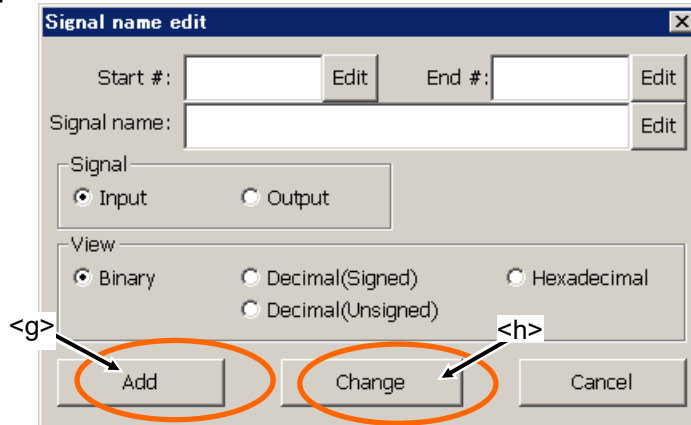

The I/O signals you want to monitor can be added or edited.

Enter the range of the signals you want to monitor in the "Start #" and "End #" boxes, and name it. If the signal you want to monitor is one bit, enter only the start No. For multiple bits, enter the numbers so that the start No. is smaller than the end No. (If reversed, an error will occur.)

Binary, decimal or hexadecimal notation can be selected as the display method. For decimal notation, signed display using the most significant bit as a signed bit can also be performed.

Once the entry is finished, tap the [Add] / [Change] button. (<g>/<h>)

If the [Add] button (<g>) is tapped when a signal name is being selected, it is inserted to the selected line.

If a signal name is not being selected, it is added at the end of the list.

You can delete unwanted signal names from the list by selecting them and tapping the [Delete] button. (<c>)

[Load] / [Save] / [Delete signal file in robot]
<d> <e> <f>

The edited result can be saved on or loaded to a personal computer or robot controller. Specify the save destination / load destination and tap the [OK] button. If the save destination is a personal computer, a file name can be specified. However, if the save destination is a robot controller, the result will be overwritten on the previous information.

The file can be deleted with the [Delete signal file in robot] button. (<f>)




CAUTION

If the I/O signal name is not displayed, update the parameter list from the parameter edit screen and restart the robot controller.

15.3.2.3. Stop signal

The state of the stop signal (stop, emergency stop) input into the robot controller can be referred to.

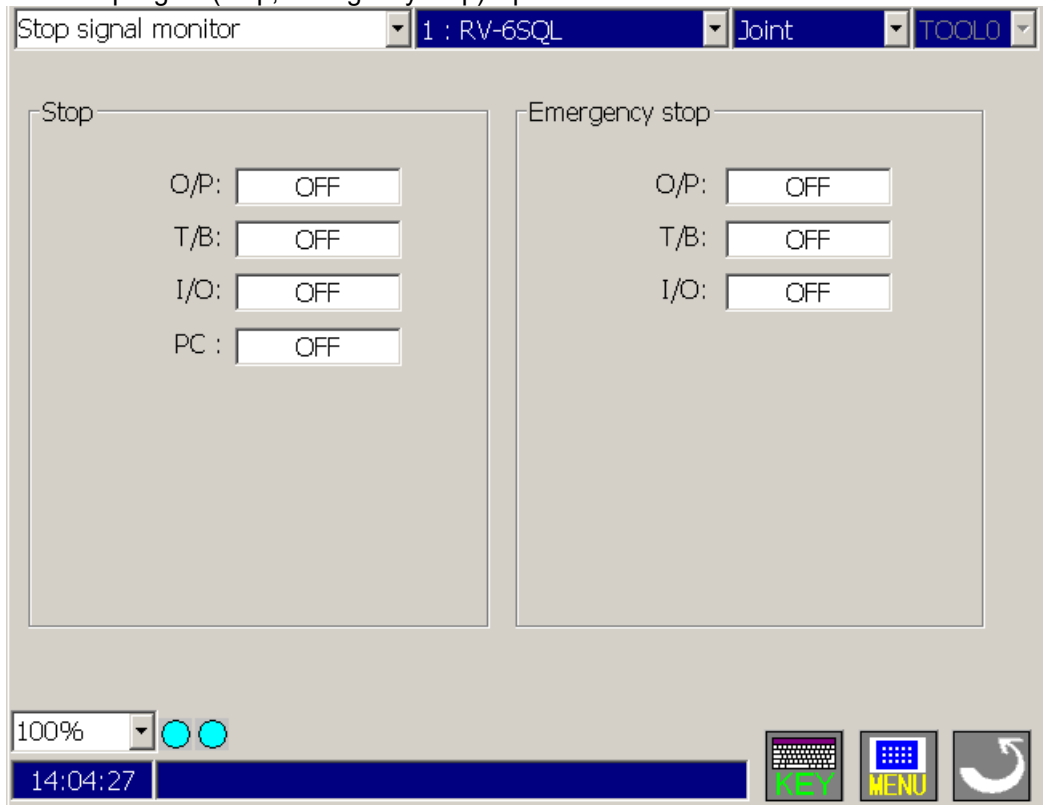

If the I/O signal name is not displayed, update the parameter list from the parameter edit screen and restart the T/B.

15.3.2.4. Register

This screen cannot be referred to if the CC-Link option card is not mounted on the robot controller.

The values of the CC-Link function input registers can be monitored.

1) Monitor setting


The register to be monitored can be changed. Please tap the [Monitor setting] button. ()

Caution

When a large amount of information is monitored, the communication size with the robot controller will increase, and it may take time to update the information. It is recommended to monitor only the required registers with the monitor setting.

2) Pseudo-input

With the pseudo-input mode, the values input from the following window will be interpreted as the input register values instead of the registers input from an external source.

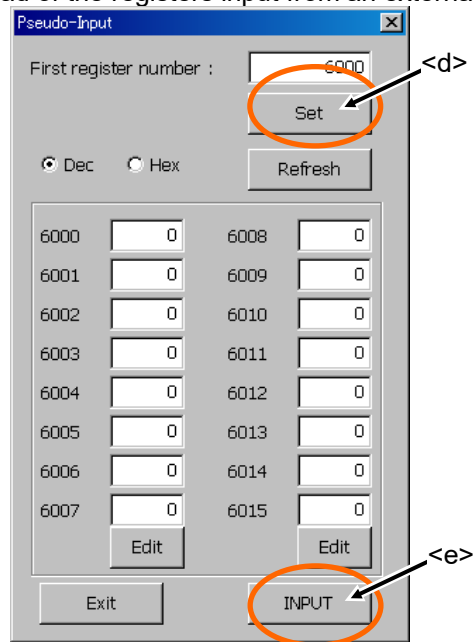


- i) First, read out the registers to be pseudo-input. Up to 16 sequential registers can be set simultaneously.
Input the head No. of the register to be read and the number of registers to read, and then tap on the [Set] button. (<d>)
- ii) The values of the designated number of registers will appear with the designated register at the head.
- iii) Set the register value, and tap on the [INPUT] button. (<e>)

The pseudo-input mode is canceled when this window is closed.

3) Forced output

The registers can be forcibly output.

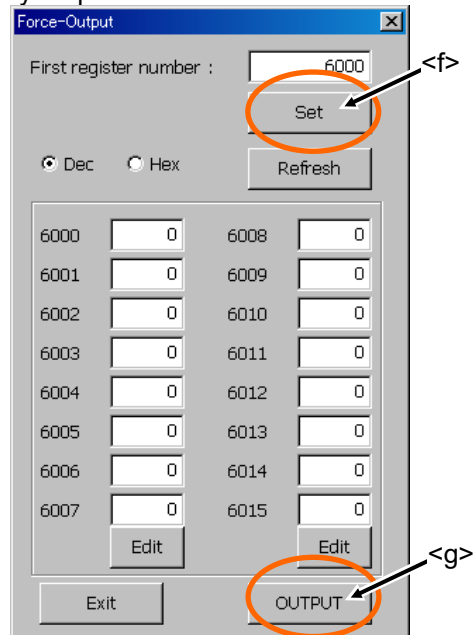

- i) First, read out the registers to be forcibly output. Up to 16 sequential registers can be output simultaneously.
Input the head No. of the register to be read and the number of registers to read, and then tap on the [Set] button. (<f>)
- ii) The designated number of registers will appear with the designated register at the head.
- iii) Set the register value, and tap on the [OUTPUT] button. (<g>)

15.3.2.5. I/O unit monitor

The XY device variables of I/O unit can be monitored.


The status of input signals are displayed on the upper table, and the status of output signals are displayed on the lower table.

The signal values can display a 16-bit integer with a mark, or 32-bit integer with a mark by the decimal number or the hexadecimal number.

The signals to display can set up the continuous range freely with [Monitor setting].

This function can be used with Version R3 or later of CR750-Q/CRnQ-700 robot controllers and Version 3.0 or later of this software.

This function can be used with all versions of CR800-D/R/Q.

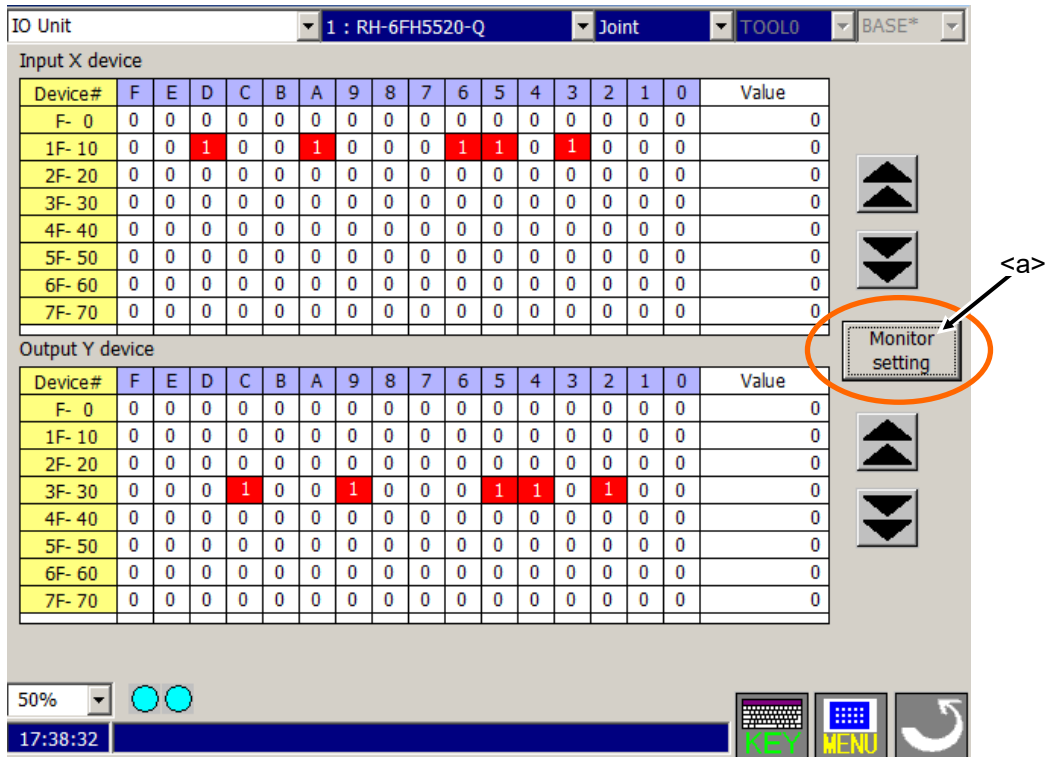


(1) Monitor setting

Tap the [Monitor setting] <a> button. The setting screen of PLC I/O unit monitor is displayed.

Set the starting number of each device and set the number of lines to display. And, set the data size in display singles and the display method.


After setting, tap the [OK] button.

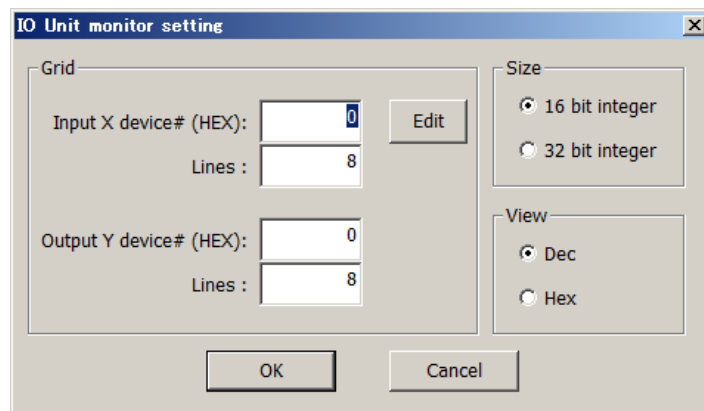

15.3.3. Operation monitor

15.3.3.1. Operating hours


The robot operating time, and battery usage time, etc., can be confirmed.

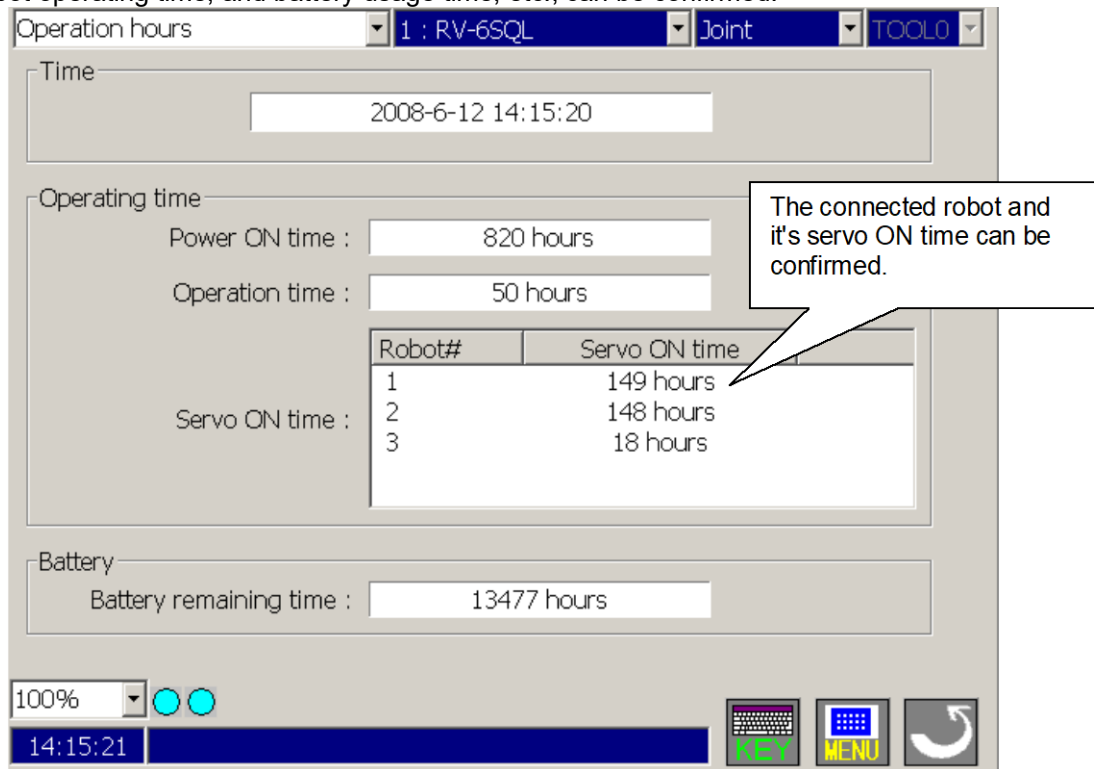

15.3.3.2. Production information

The latest cycle, operation time, No. of cycles and average cycle time for each program in the robot controller can be confirmed.


The production information is not constantly displayed. Tap on the [Refresh] button (<a>) as necessary.

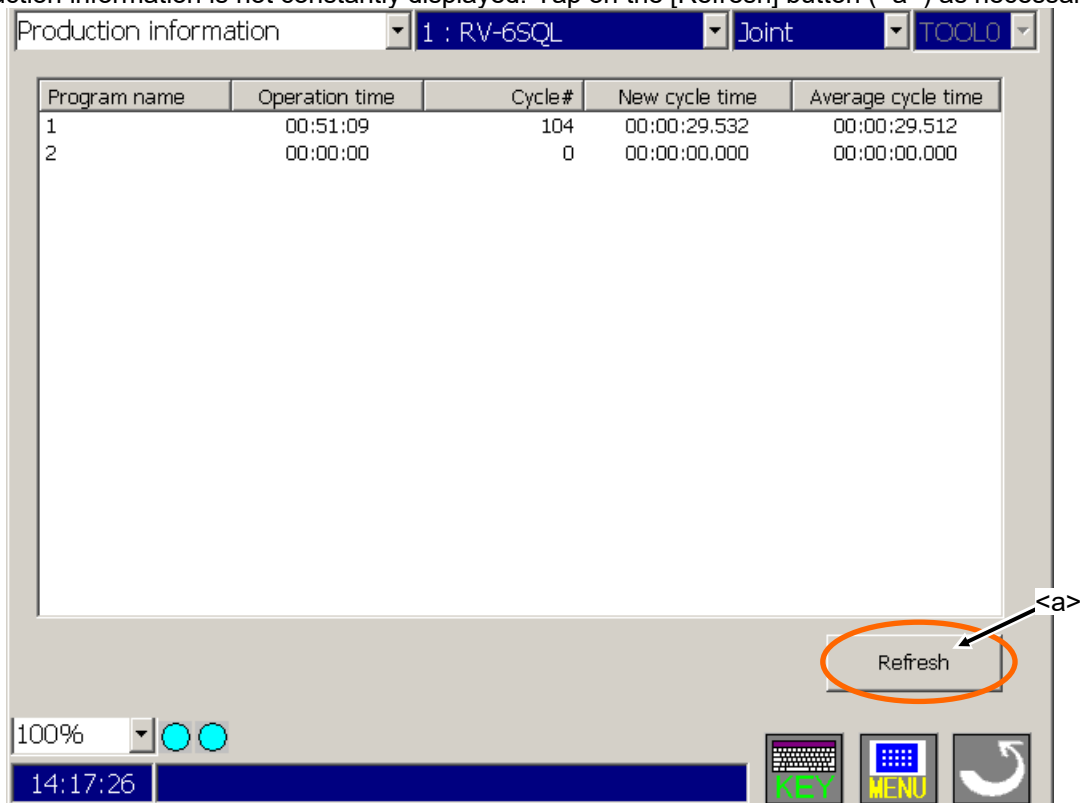

15.3.3.3. Additional board information

Information on the option card mounted on the robot controller can be confirmed.

Note that this screen cannot be referred to if robot controller is not provided with a slot for mounting the option card.

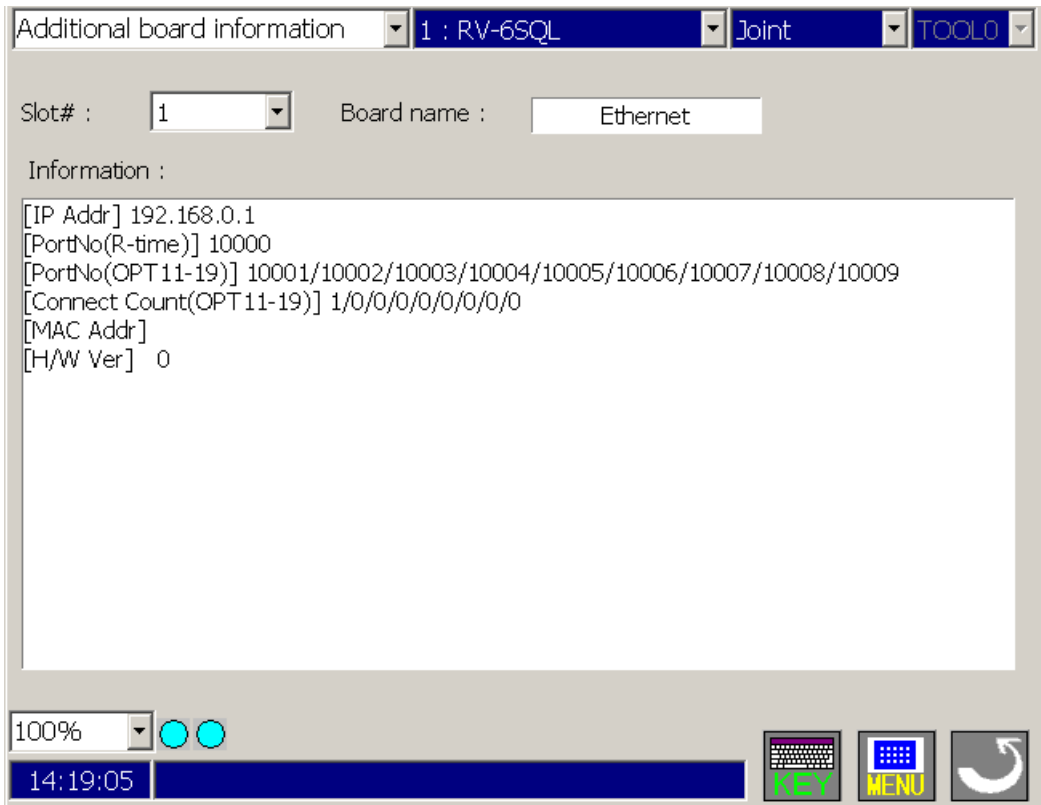

15.3.4. Servo monitor

The servo system is monitored.


When the [Reset] button is tapped of each screen, the maximum value and the minimum value of all monitoring servo information of position, speed, current, load and power are reset by the batch.

15.3.4.1. Position (ABS)

Data concerning the position of each axis motor can be monitored.

The following data can be monitored.

- Position feedback
Current motor rotation position is displayed by the pulse value of the encoder.
- Position in 1 rotation
Present position in one rotation of the encoder is displayed.
(It is not displayed in the CR800/CR750/700 series controller. It always becomes 0.)
- Fdt command
The amount of the change of the position command between the control cycles is shown.
(It is not displayed in the CR800/CR750/700 series controller. It always becomes 0.)
- Position droop
The amount of deflection at the motor rotation position to a position command is shown.
- Max. position droop
The maximum value of position droop after robot controller's power supply is turned on is displayed.
When the [Reset] button on the screen is tapped, this value is reset in 0.
- Position command
The command of the motor rotation position for the servo is displayed by the pulse value.

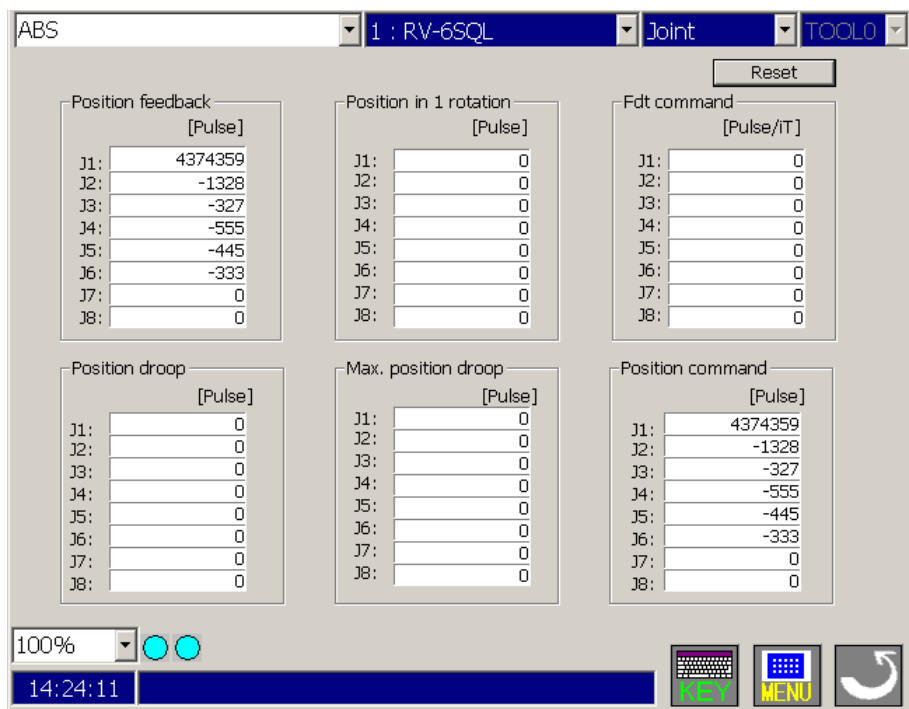

15.3.4.2. Speed

The following data concerning the rotational speed of each axis motor can be monitored.

- Speed feedback
A present motor speed is displayed by the unit of rpm.
- Speed MAX.
The maximum value of the speed feedback after robot controller's power supply is turned on is displayed.
When the [Reset] button on the screen is tapped, this value is reset in 0.
- Speed command
The command of the motor speed is displayed by the unit of rpm.

Speed feedback [rpm]	amount of feedback / MAX.	Speed MAX. [rpm]	Speed command [rpm]
J1: 0.00		J1: 0.00	J1: 0.00
J2: 0.00		J2: 0.00	J2: 0.00
J3: 0.00		J3: 0.00	J3: 0.00
J4: 0.00		J4: 0.00	J4: 0.00
J5: 0.00		J5: 0.00	J5: 0.00
J6: 0.00		J6: 0.00	J6: 0.00
J7: 0.00		J7: 0.00	J7: 0.00
J8: 0.00		J8: 0.00	J8: 0.00

15.3.4.3. Current

Data concerning the current value of each axis motor can be monitored.

The displayed data changes by tapping the [Current1] button (<a>) and the [Current2] button () on the screen.


The following data can be monitored in the [Current1].

- Current cmd
The current command of the motor is displayed.
- Max. current cmd1
The maximum value of the current command after robot controller's power supply is turned on is displayed. When the [Reset] button on the screen is tapped, this value is reset in 0.
- Max. current cmd2
The maximum value of the current command for the last 2 seconds is displayed.

The following data can be monitored in the [Current2].

- Current feedback
A present value of the motor current is displayed.
- Tolerable cmd-/+
The limitation value of the minus side and the plus side of the current command set to the motor is displayed.
- RMS current
Present RMS value of the motor current is displayed.

Current1

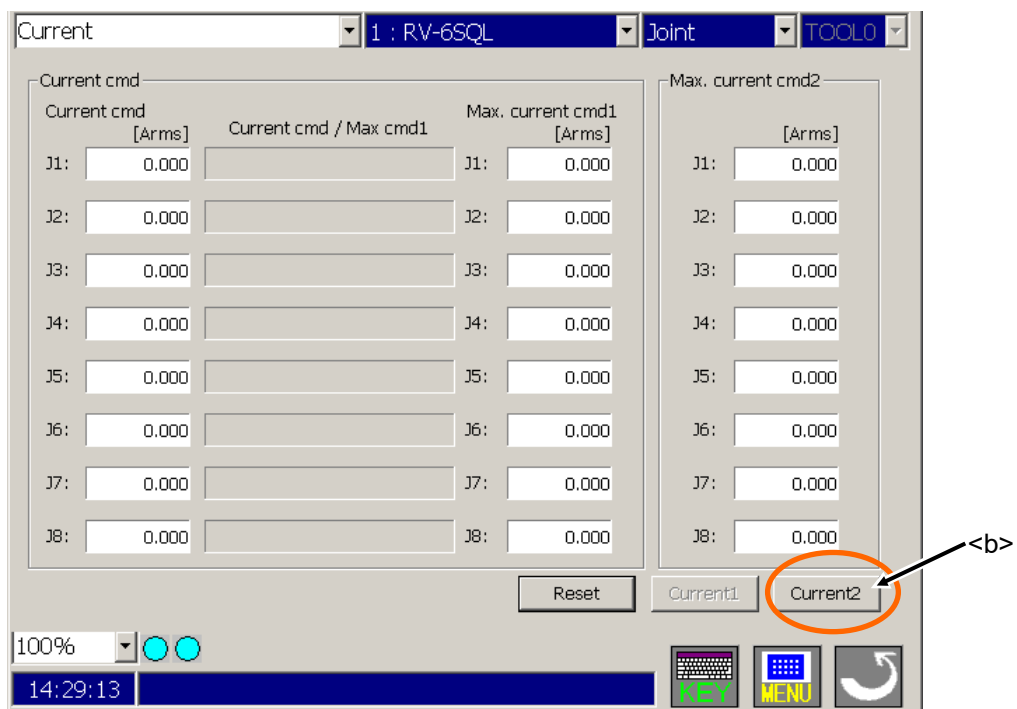





Current2

Current 1 : RV-6SQL Joint TOOL0

Current feedback				RMS current			
Current feedback [Arms]		- / Current feedback / +	Tolerable cmd- [Arms]	Tolerable cmd+ [Arms]	RMS current [Arms]		
J1:	0.000		J1: 0.000	J1: 0.000	J1:	0.000	
J2:	0.000		J2: 0.000	J2: 0.000	J2:	0.000	
J3:	0.000		J3: 0.000	J3: 0.000	J3:	0.000	
J4:	0.000		J4: 0.000	J4: 0.000	J4:	0.000	
J5:	0.000		J5: 0.000	J5: 0.000	J5:	0.000	
J6:	0.000		J6: 0.000	J6: 0.000	J6:	0.000	
J7:	0.000		J7: 0.000	J7: 0.000	J7:	0.000	
J8:	0.000		J8: 0.000	J8: 0.000	J8:	0.000	

Reset Current1 Current2

100%  <a>   

14:31:37

15.3.4.4. Load

The load state of each axis motor and the temperature of the encoder (Only the robot that corresponds to the function of the encoder temperature) can be monitored.

The following data can be monitored.

- Axis load level
A preset load ratio of each motor is displayed as an alarm level.
The overload error occurs when this value reaches 100%.
- Max. axis load level
The maximum value of the axis load level after robot controller's power supply is turned on is displayed.
When the [Reset] button on the screen is tapped, this value is reset in 0.

Encoder temperature is not displayed with the software before version 3.0. Moreover, the software version of the controller which can use this function is as follows.


Controller	S/W Ver. of the controller
CR750-D/CRnD-700	Ver.S3 or later
CR750-Q/CRnQ-700	Ver.R3 or later
CR800-D/R/Q	Can be used with all versions

The screenshot shows a software interface for monitoring robot load. At the top, there are dropdown menus for 'Load' (set to '1 : RH-6FH5520-Q'), 'Joint', 'TOOL0', and 'BASE*'. Below these, the ambient temperature is displayed as '40' degrees Celsius with a 'Reset' button. The main area is divided into two sections: 'Axis load level' and 'Encoder temp. [deg C]'. The 'Axis load level' section has two columns: 'Axis load level [%]' and 'Max. axis load level [%]', with rows for axes J1 through J8. All values are currently 0.0. The 'Encoder temp.' section has two columns: 'Cur.' and 'Max.', with rows for axes J1 through J8. All values are currently 0. At the bottom left, there is a '50%' dropdown, two blue indicator lights, and a timestamp '09:52:28'. At the bottom right, there are icons for 'KEY', 'MENU', and a refresh symbol. A callout box points to the encoder temperature section with the text: 'When the encoder of all axes doesn't correspond to the temperature function, it is not displayed.'

15.3.4.5. Power

The following data concerning robot controller's main circuit power supply can be monitored.


- Motor power voltage
A present power-supply voltage value is displayed.
- Motor power voltage (MAX)
The maximum value of the motor power voltage in servo ON is displayed.
When the [Reset] button on the screen is tapped, this value is reset in 0.
- Motor power voltage (MIN)
The minimum value of the motor power voltage in servo ON is displayed.
When the [Reset] button on the screen is tapped, this value is reset in 0.
- Regeneration level
The regenerative current value of each axis is displayed as an alarm level.
The excessive regeneration error occurs when this value reaches 100%.

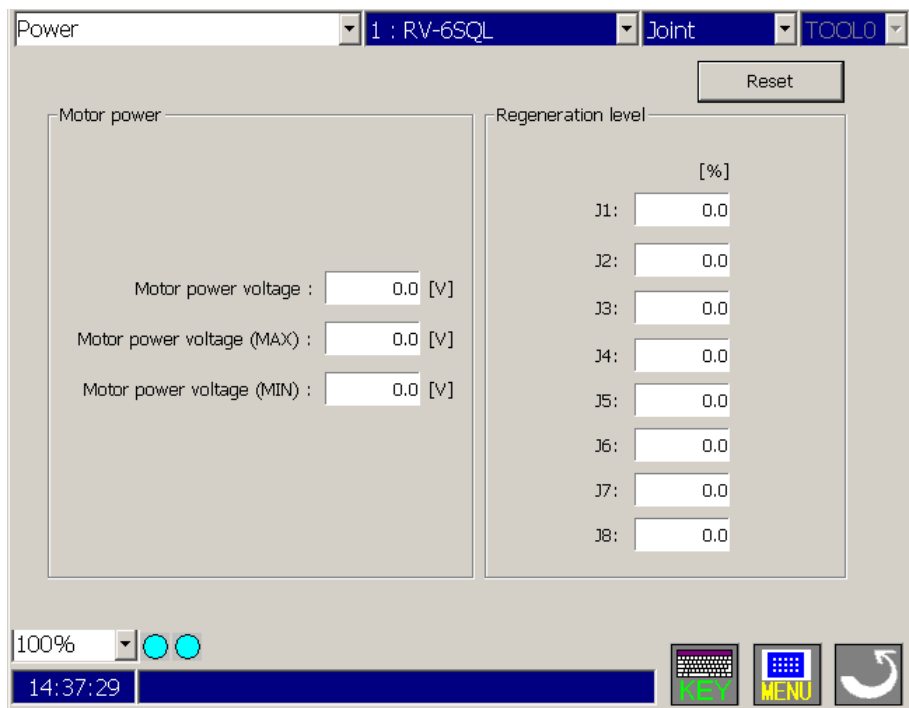


16. Maintenance

There are functions of concerning the system construction of the robot in "Maintenance" menu. Maintenance menu is shown by following operation.

Version

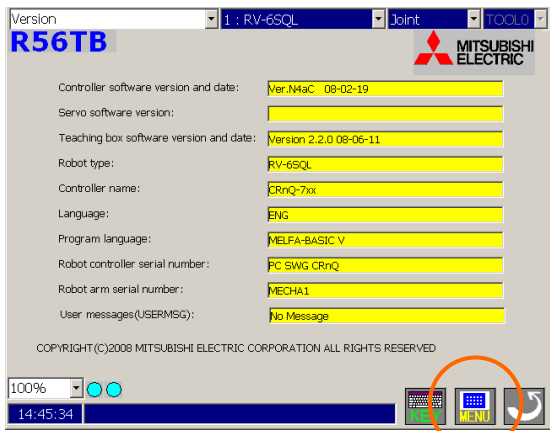

Menu

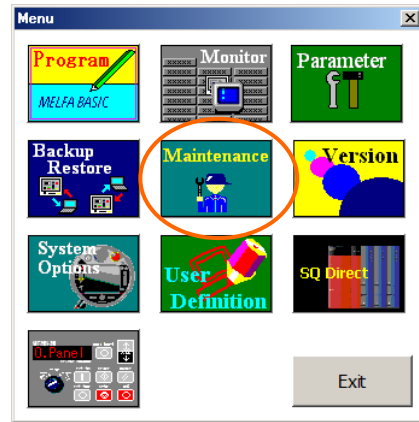

Maintenance menu




16.1. Origin data


The origin is set so that the robot can be used with a high accuracy. After purchasing the robot, always carry out this step before starting work. The origin must be reset if the combination of robot and controller being used is changed or if the motor is changed causing an encoder area. This operation not be required for the FR series (CR800).

Refer to the separate manual: "Robot arm setup & maintenance" for details on the operation.

Maintenance menu

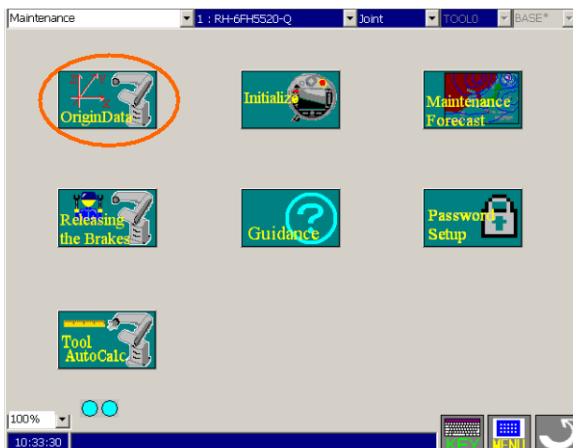


Origin data menu

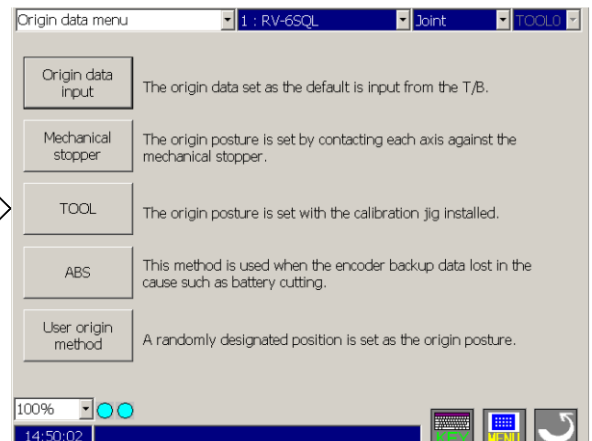

16.1.1. Origin data input


The origin data to be input is noted in the origin data sheet enclosed with the robot arm, or on the origin data history table attached to the back side of the robot arm cover.

“DJNT” value is used by the position repair tool in RT ToolBox.

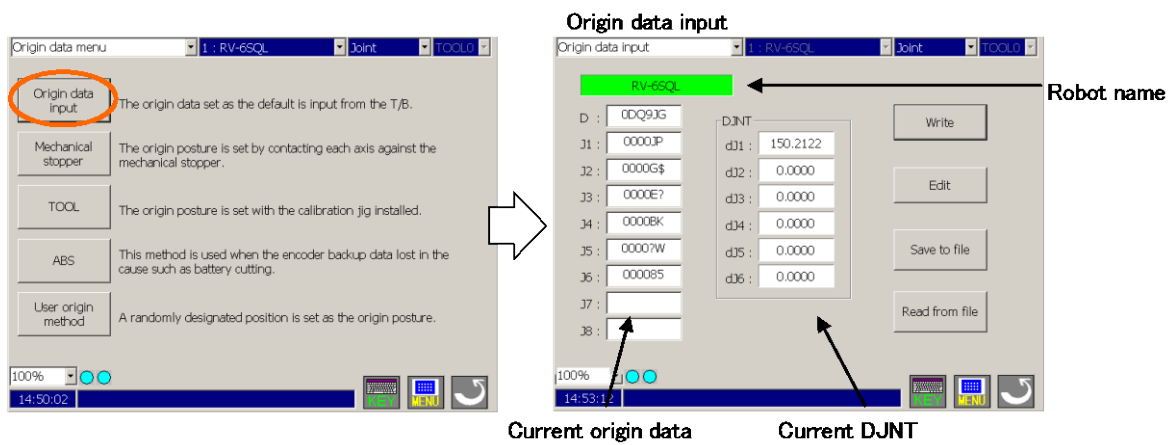


(1) Edit origin data

If origin data is changed, tap [Edit] button (<a>) and shown the following window.

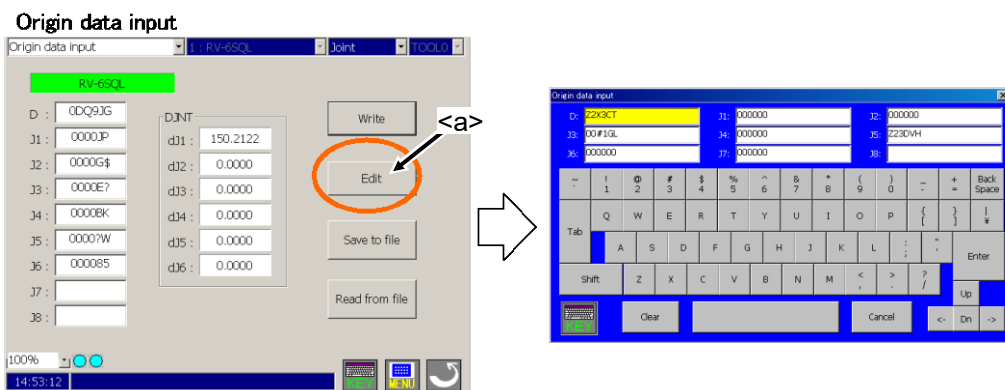

(2) Write origin data to the controller


Tap [Write] button (<a>) and tap [Yes] button () on the confirmation dialog, and the current origin data is written to the controller.

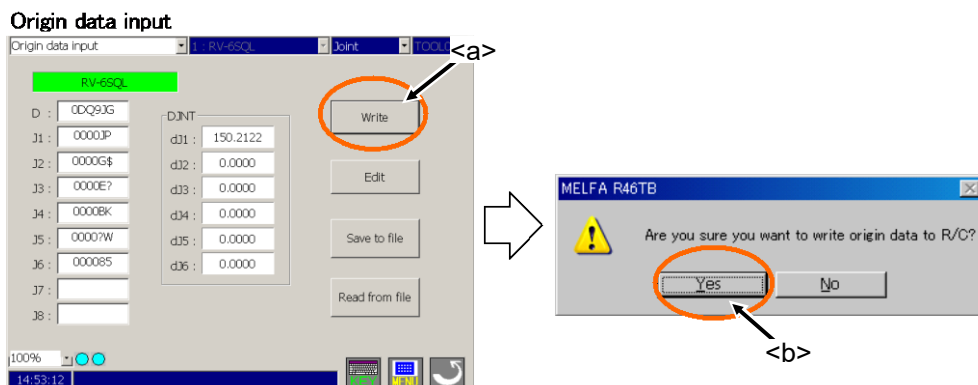

(3) Save to file, Read from file in T/B

Tap [Save to file] button (<a>), the current origin data is saved into the designated file.


Tap [Read from file] button (), the origin data in the designated file is loaded.

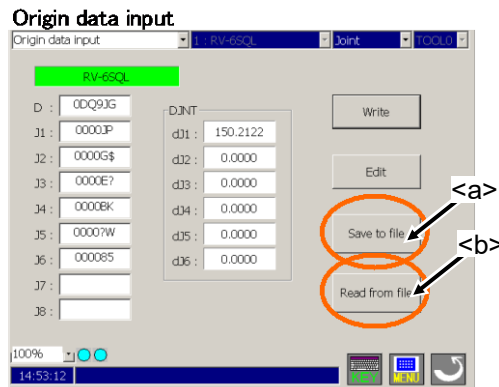

16.1.2. The others (Mechanical stopper, TOOL, ABS, User origin method)


These origins set way is shown almost the same screen, and do the same operation.

In the following, explain "Mechanical stopper" as an example.

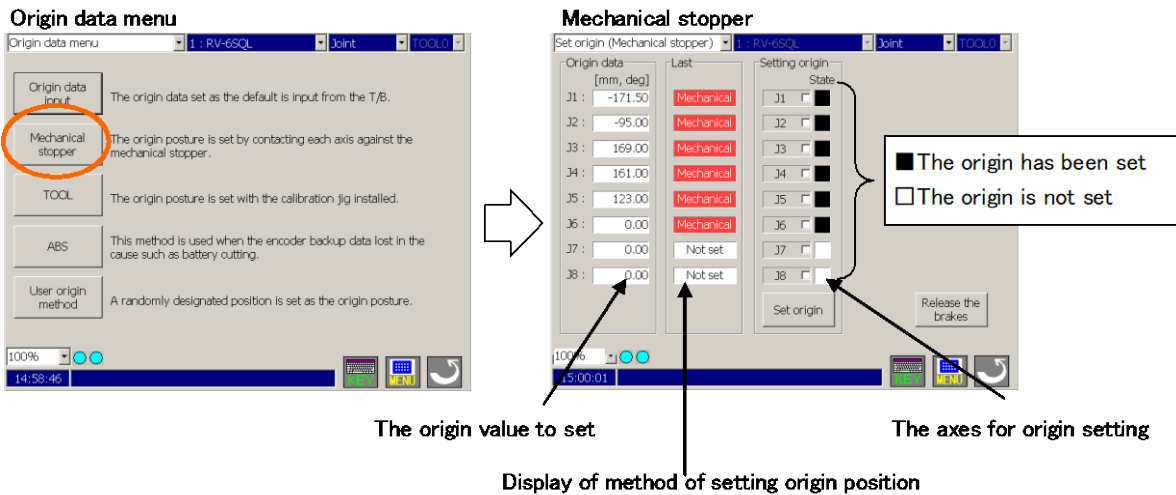


(1) Select the axes for origin setting

Tap the axis string (ex. "J1", "J2", ...), and the selection is switched.

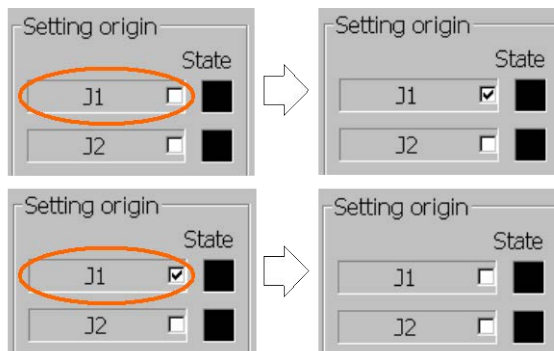


- (2) Display of method of setting origin position
 The method of origin position set last time is displayed.
 (This function corresponds to the R56TB Ver.2.1 or later.)

Tool	Green
ABS	Light blue
User origin method	Yellow
Mechanical stopper	Red

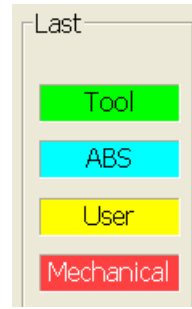


- (3) Release the brakes

If you need move axis with brake by the hand, please release the break and work by two people.
 Tap [Release the brakes] button (<a>), the Release the brakes screen is displayed.
 See chapter "16.4 Releasing the brakes". Refer to the separate manual: "Robot arm setup & maintenance" for the direction axis is moved.

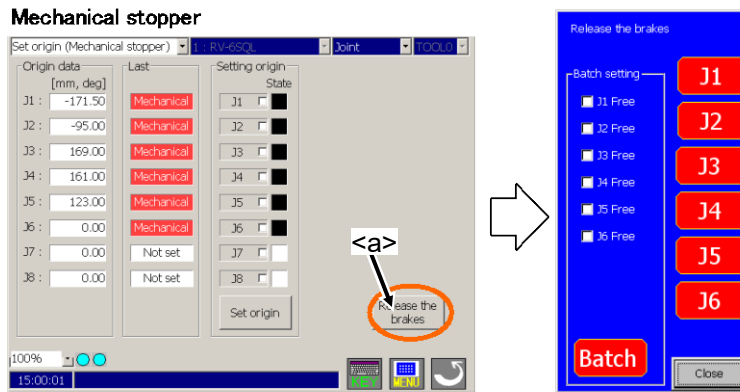

- (4) Execute the origin setting


Tap [Set origin] button (<a>) and tap [Yes] button () on the confirmation dialog, and the origin of selected axes is set at the current robot position.

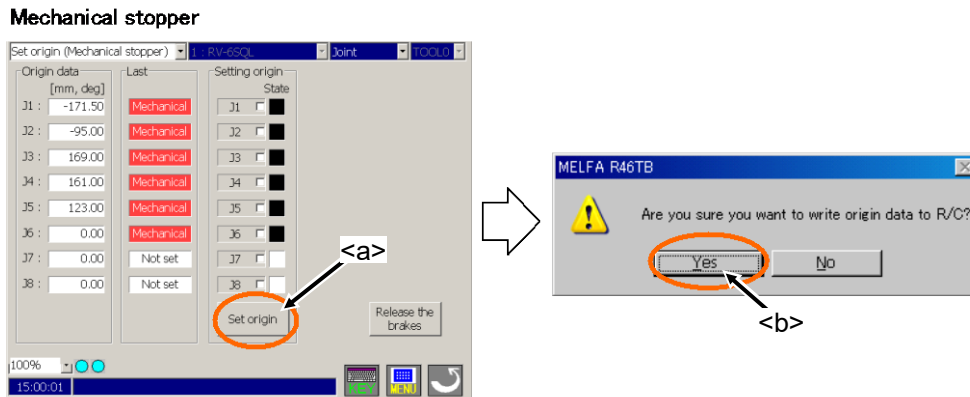

16.2. Initialize


“Initialize” has four functions.

1. Setting the controller's date and time.
2. Erase all programs in the controller.
3. Initialize the battery remaining time.
4. Set a serial number

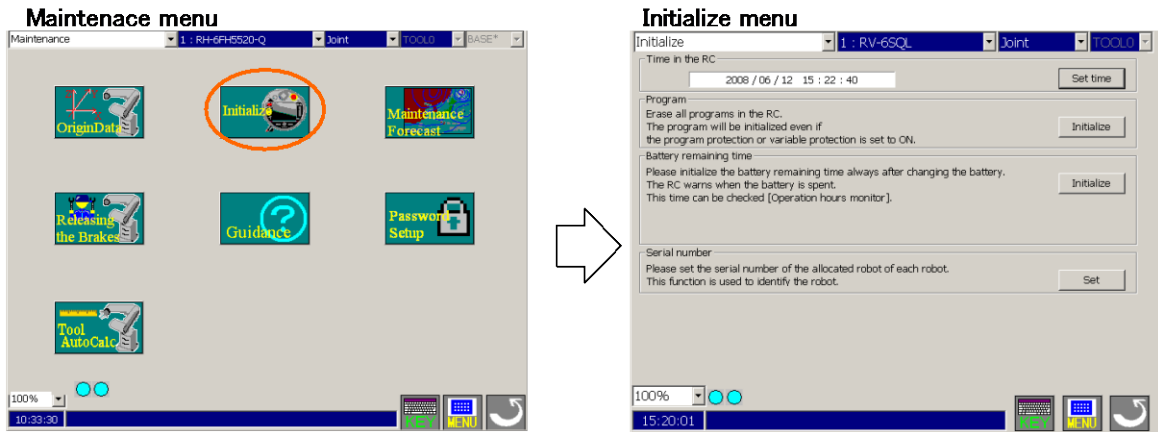

16.2.1. Setting the controller's date and time

Tap the [Set time] button (<a>). Set the present date and time, and tap the [OK] button.

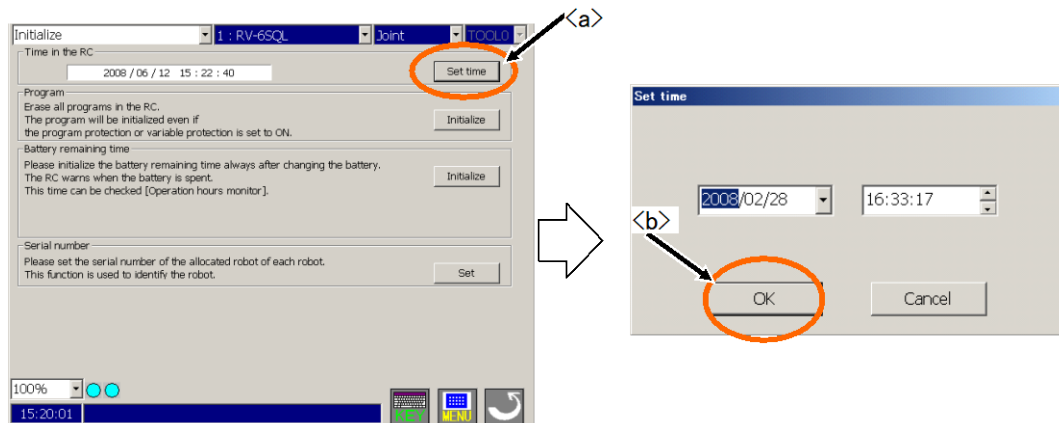


16.2.2. Erase all programs in the controller

To delete all programs, follow the procedure below.

- (1) Tap the [Initialize] button<a> of "program".
- (2) Tap the [Edit] button of the confirmation screen.
- (3) Input "YES" with the keyboard, and tap the [Enter] key.
- (4) Tap the [OK] button<c> of the confirmation screen.

All programs in the robot controller are deleted by operating the above-mentioned.

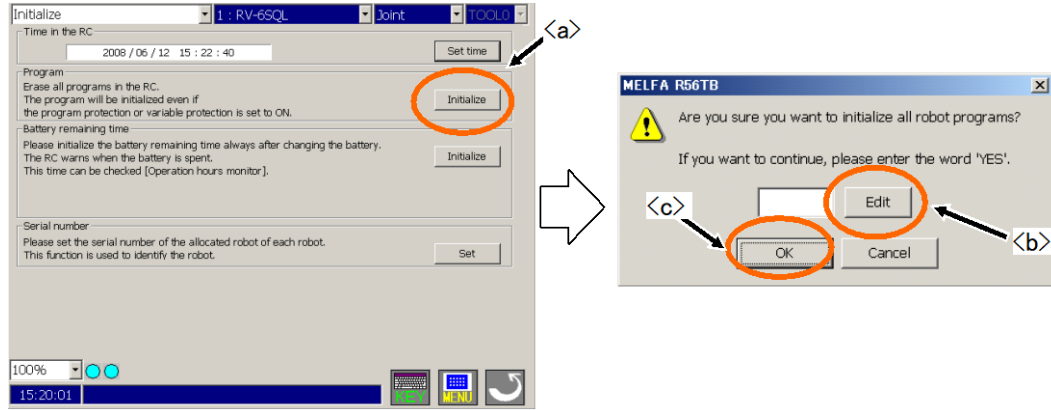


16.2.3. Initialize the battery remaining time

To initialize the battery remaining time, follow the procedure below. This function can not be used when connected to the CR800 series robot controller.

- (1) Tap the [Initialize] button of "battery remaining time".
- (2) Tap the [Edit] button of the confirmation screen.
- (3) Input "YES" with the keyboard, and tap the [Enter] key.
- (4) Tap the [OK] button<c> of the confirmation screen.

The battery remaining time is initialized by operating the above-mentioned.


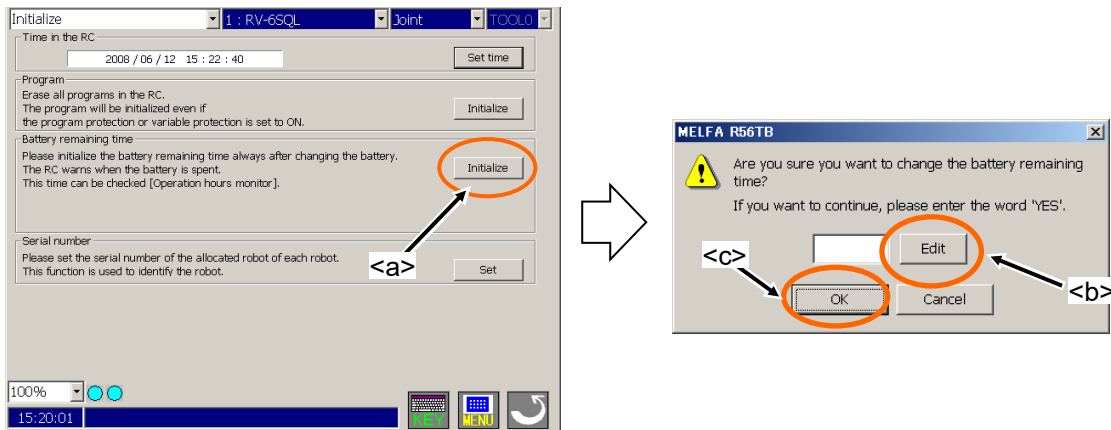


16.3. Serial number



The serial number of the robot arm is set (Each mechanism can be set). The serial number of the robot arm has been put on the back of the body of the robot base.

16.3.1. Serial Number setting


- (1) Tap on [Set] button <a > of the Serial number.

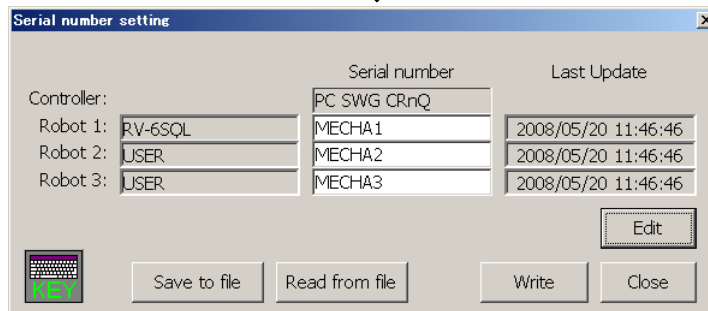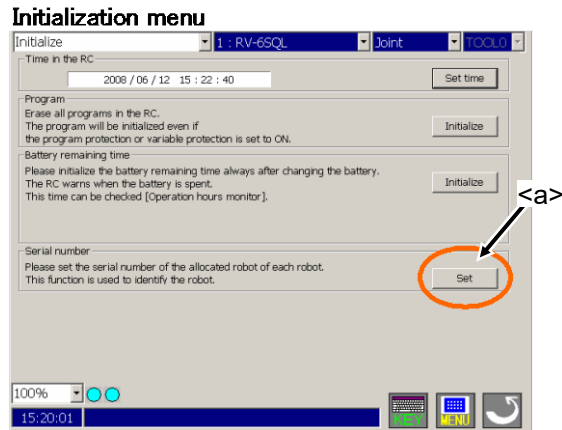


(2) Tap on [Edit] button of the serial number setting. Input the serial number from the displayed keyboard.

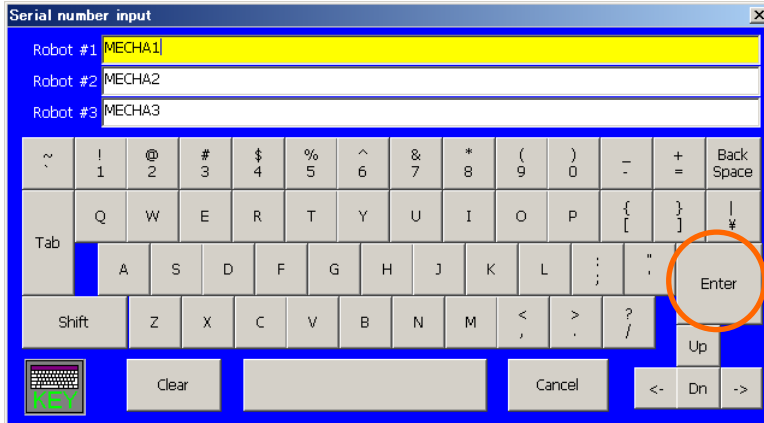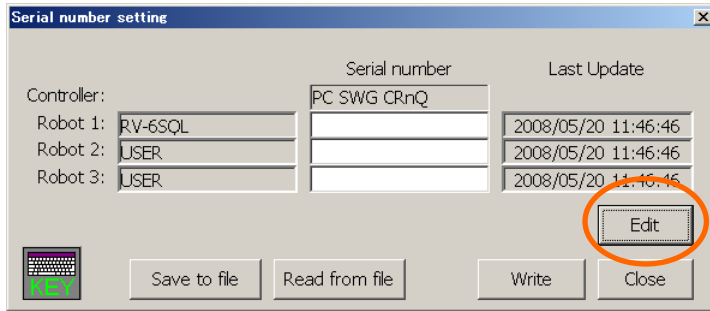

After the serial number is input, tap on [Enter] key of the keyboard.

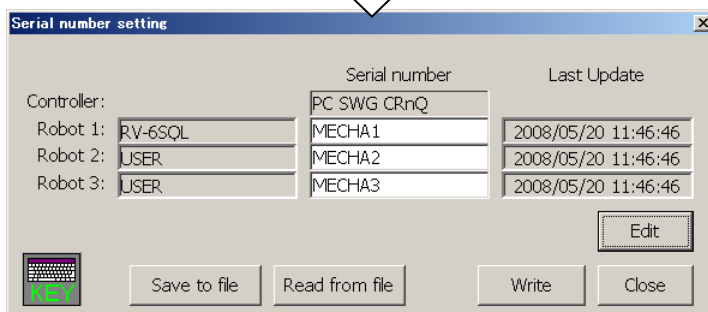


(3) Tap on [Write] button to write into the controller. After writing, last updated date and time is updated.

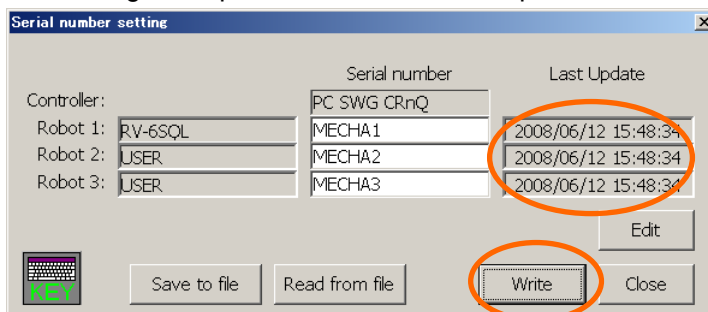

Setting serial number ends above.

16.3.2. Save serial number to file

- (1) Tap on [Save to file] button of the serial number setting.

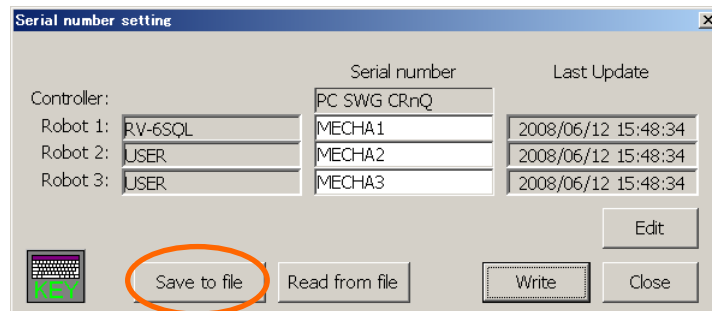


- (2) When [Save] button is tapped specifying the file name, serial number is saved in a specified file.

Save serial number to file ends above.

16.3.3. Write serial number in a file to the controller

- (1) Tap on [Read from file] button of the serial number setting.

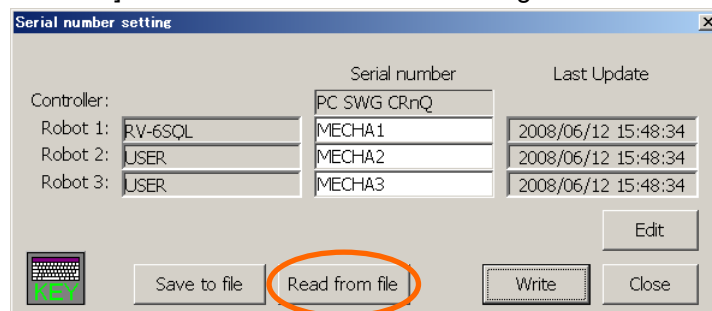


- (2) When [Open] button is tapped specifying the file name, serial number is read from a specified file.

- (3) Tap on [Write] button to write serial number into the controller.

Write serial number in a file ends above.

16.4. Releasing the brakes

This function releases the servomotor brakes when the servo is OFF.
This function is used to directly move the robot arm by hand, etc.

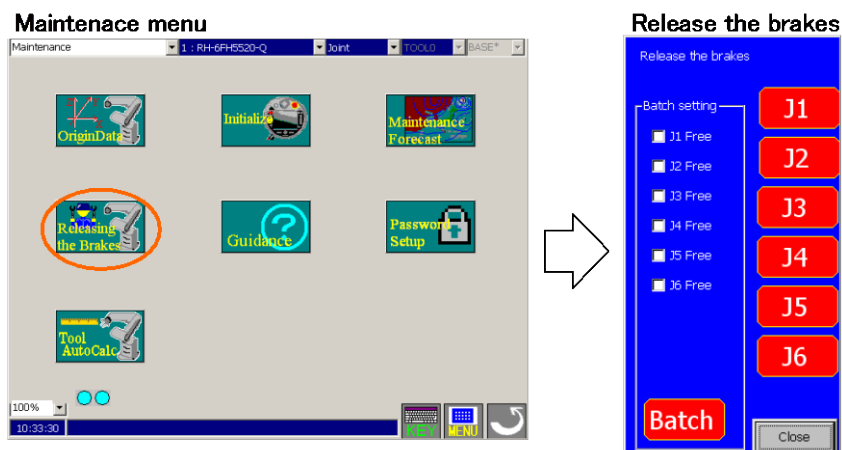

CAUTION

Due to the robot configuration, when the brakes are released, the robot arm will drop with its own weight depending on the released axis.

Always assign an operator other than the T/B operator to prevent the arm from dropping. This operation must be carried out with the T/B operator giving signals.

16.4.1. Preparation for releasing the brakes

Before releasing the brakes, it is necessary to do the following operation.

1. Set the mode of the controller to “MANUAL”.
2. [TEACH] button is set to ON.



3. Push the enable switch.




4. Press the CAUTION button. Another person supports the Robot arm which releases brake.



16.4.2. Releasing the brake of one axis

For releasing the brake of one axis, press [+] button of J1~J6 after doing (1) operation.
The brake is released only while the button is being pressed.

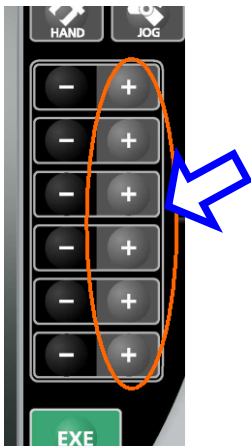

16.4.3. Releasing the brakes of two or more axes

For releasing the brakes of two or more axes, do following operation after doing (1) operation.

1. Select axes to release the brakes.



2. Press [EXE] button. The brake is released only while the button is being pressed.



If [Close] button to the brake release screen is tapped, the brake release operation is ended.

16.5. Maintenance Forecast

In Maintenance Forecast, the parts replacement (grease replenishment, battery and belt replacements) times can be checked from the up-to-date operating data collected inside the controller.




CAUTION

The results of calculations in Maintenance Forecast merely show reference values.

Please execute the daily inspection and the periodic inspection to prevent the breakdown beforehand, and to secure safety.


16.5.1. Start

Tap [Maintenance Forecast] button on Maintenance menu. The Maintenance Forecast window appears.

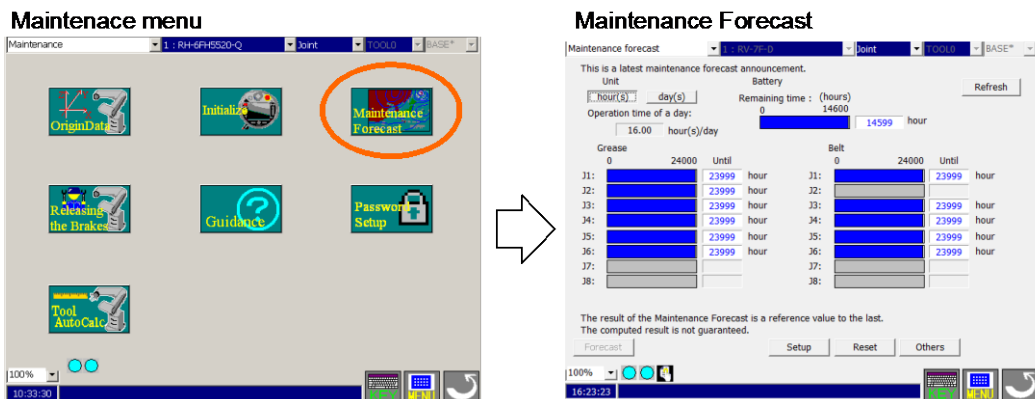

16.5.2. Forecast (Battery)

When the information for Maintenance Forecast has been loaded from the controller, the following window appears.

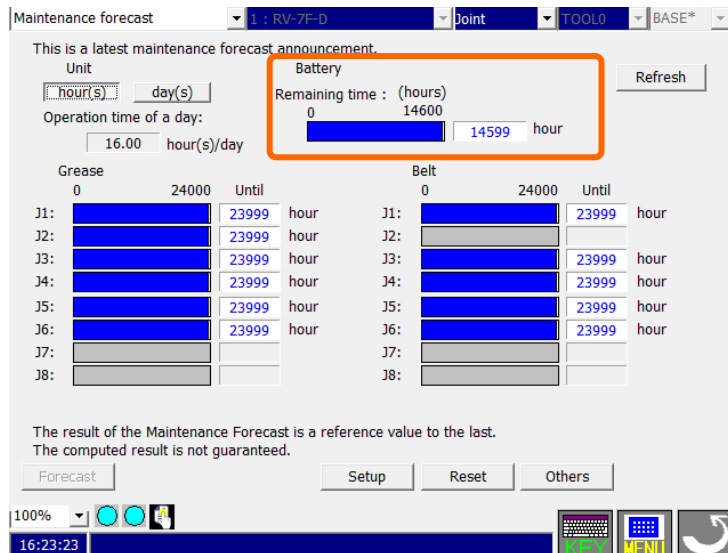

If the battery remaining time has reached
 $(\text{Remaining time}) < [\text{The remainder days until presumed maintenance time}] \times (24 - [\text{Operation time of a day}])$

, the hours and bar graphs are displayed in orange.


(The battery replacement time is calculated during the time when the controller's power is not on.)

This item is not displayed when connecting with CR800 series robot controller.

When the [Refresh] button is tapped on in upper-right corner of the window, the information about the maintenance is acquired again from the controller.

16.5.3. Forecast (Grease)

When [Grease] is seen in Item, the "hours until grease replenishment time" can be checked for each axis.

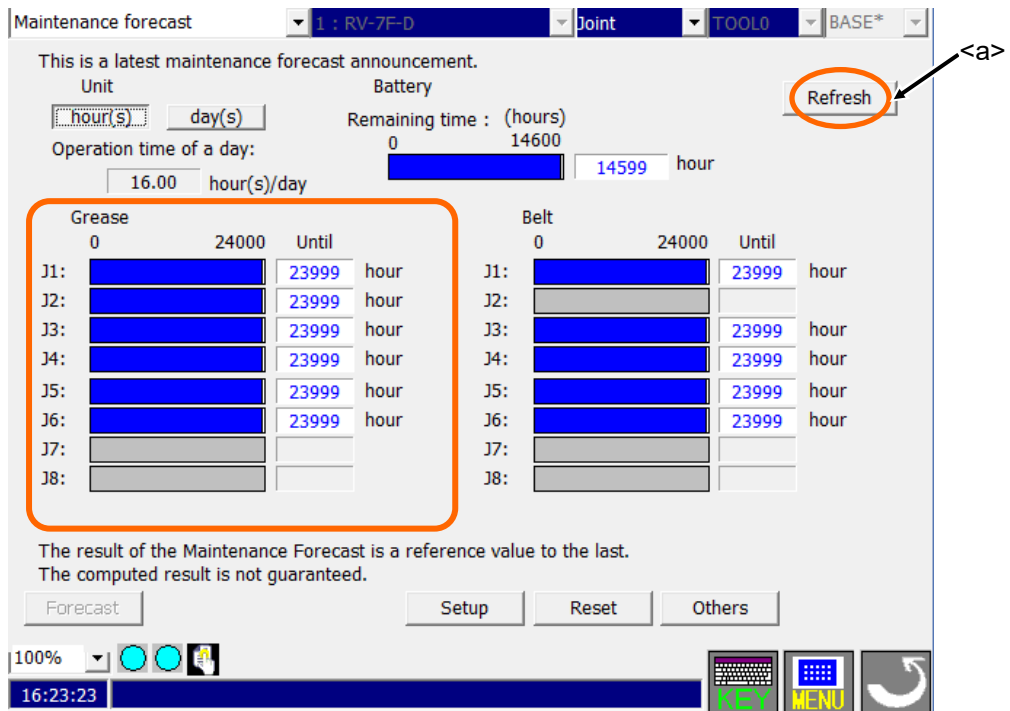

If the hours until replenishment time has reached
 (Hours until replenishment time)
 $< ([\text{The remainder days until presumed maintenance time}] \text{ on the Setup screen})$
 $\times ([\text{Operation time of a day}]),$
 the hours and bar graphs are displayed in orange.


The display unit setting can be switched between time and day.

If day is selected in the display unit setting, the display will show the number of days in operation based on the operating hours per day.

When the [Refresh] button (<a>) is tapped on in upper-right corner of the window, the information about the maintenance is acquired again from the controller.

16.5.4. Forecast (Belt)

When [Belt] is seen in Item, the "hours until belt replacement time" can be checked for each axis.

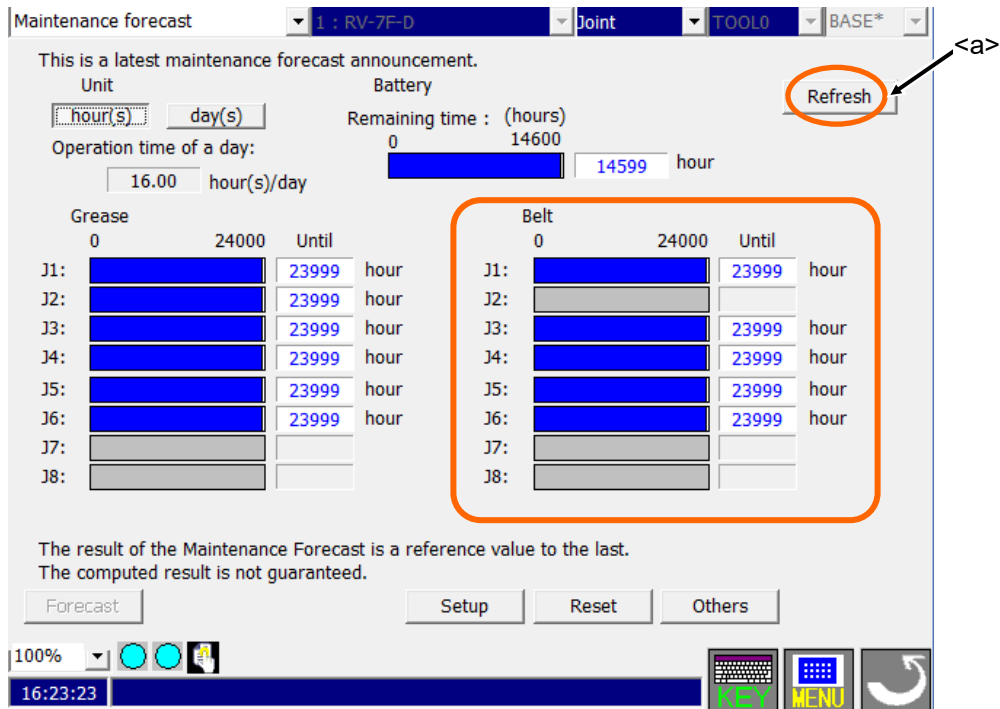


If the hours until belt replacement time has reached
(Hours until belt replacement time)
< ([The remainder days until presumed maintenance time] on the Setup screen)
x ([Operation time of a day]),
the hours and bar graphs are displayed in orange.

The display unit setting can be switched between time and day.
If day is selected in the display unit setting, the display will show the number of days in operation based on the operating hours per day.

When the [Refresh] button (<a>) is tapped on in upper-right corner of the window, the information about the maintenance is acquired again from the controller.

16.5.5. Gear

You can refer to "time until reduction gear reducer". This screen can be displayed only when connected to the CR800 series robot controller.

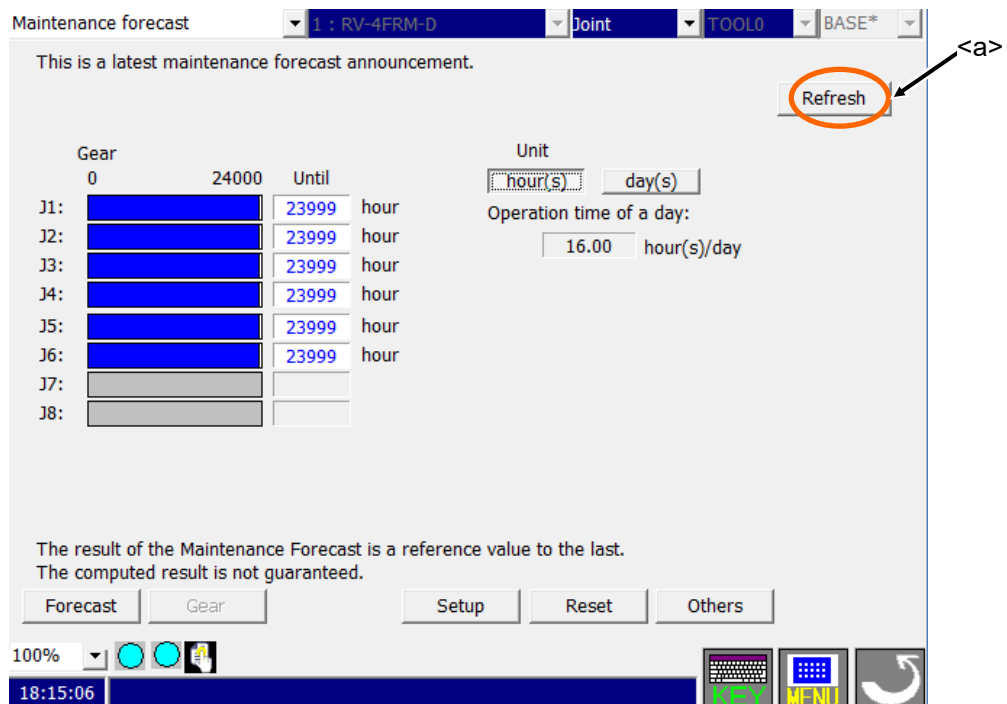

If the hours until replenishment time has reached
(Hours until replenishment time)
< ([The remainder days until presumed maintenance time] on the Setup screen)
x ([Operation time of a day]),
the hours and bar graphs are displayed in orange.


If day is selected in the display unit setting, the display will show the number of days in operation based on the operating hours per day.

When the [Refresh] button (<a>) is tapped on in upper-right corner of the window, the information about the maintenance is acquired again from the controller.

16.5.6. Setup

Tap the Setup button.

Here, the timing to collect the information for Maintenance Forecast, the notification method and other items can be set up.

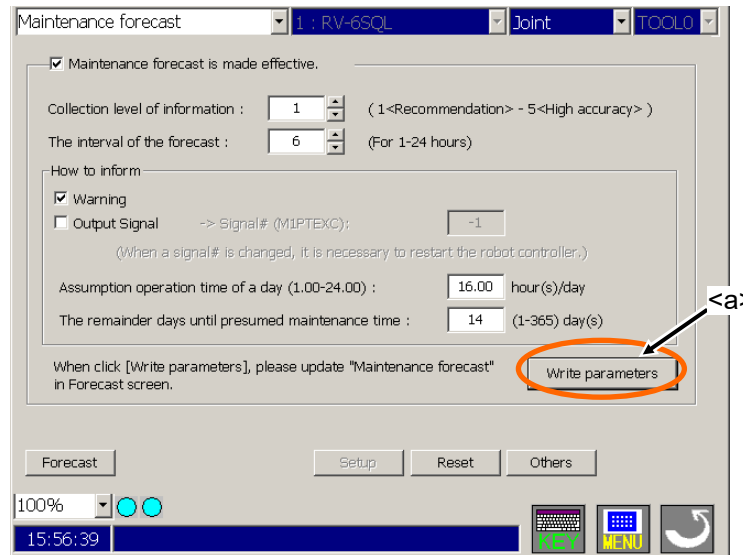

When the [Write Parameters] button (<a>) is tapped after setting each item, the setting values are written into the controller. All items other than the signal numbers of dedicated outputs take effect after they are written into the controller. If a dedicated output signal has been changed, it is necessary to power on the controller again.


For more information about the setup items, see “Tab. Setup Screen”



CAUTION

Information needed to “Maintenance Forecast” is not accumulated while the Maintenance forecast is being invalidly set.

Factory preset value is invalidity. When the Maintenance Forecast is invalidated, information of Maintenance Forecast is not accumulated. When switched effectively from invalidity again, the reservoir of information is continued from the last value. If you have invalidated the Maintenance Forecast for a long term, the correct maintenance times cannot be calculated.

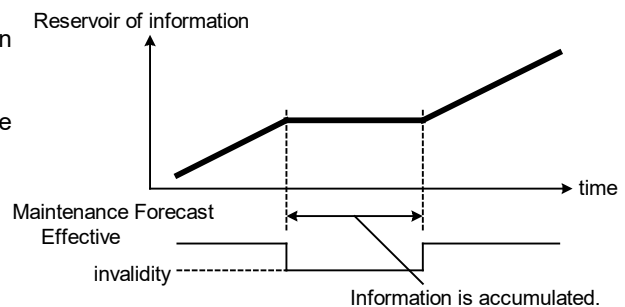

Tab. Setup Screen

Item	Explanation	Factory preset value
(1) Maintenance Forecast is made effective.	If this is checked, the Maintenance Forecast function takes effect. *If a checkmark is removed, the collection of the information for Maintenance Forecast stops, and the correct maintenance times cannot be calculated.	Check ON
(2) Collection level of information	Five levels can be specified to collect the information about the maintenance. *As an information collection level gets higher, the accuracy of the maintenance improves, but it affects the tact time more.	1 (Recommended)
(3) The interval of the forecast	Specify the interval to notify the maintenance time.	6 hours
How to inform	When the grease replenishment, belt replacement and other maintenance times have reached, they can be notified by generating a warning or outputting a dedicated signal. As for the battery replacement time, one of warnings, C7500, C7510 and C7520, is generated, regardless of whether or not [Warning] under [How to inform] is checked. A warning to be generated varies depending on each situation.	
(4) Warning	If this item is checked, the maintenance time is notified as a warning. The warning numbers are listed as follows: Grease : C753* (* is the axis No.) Belt : C754* (* is the axis No.)	Check ON
(5) Output Signal	If this item is checked, signal numbers can be entered. If this item is checked and a signal number is entered correctly, the maintenance time is notified using the output of the designated signal.	Check OFF
(6) Assumption operation time of a day	Enter an estimated robot operation hours per day.	16 hours
(7) The remainder days until presumed maintenance time	Specify the number of days remaining until presumed maintenance time to be used as a reference to notify the maintenance time.	14 days



Memo

Methods for resetting the alarm and alarm signal output

As a method of notifying the replacement time of each part, an alarm (C753* and C754* (* represents the axis number)), or a dedicated output signal (M*PTEXC (* represents the robot number)) will be output.

If both are set up as the notification methods, executing the error reset operation will reset the alarm and end the signal output.


If the "alarm" method is disabled and only the output of the dedicated output signal is selected as the notification method, pushing the reset button on the front side of the controller will not end the signal output. In this case, push the [RESET] key on the teaching pendant or enter the error reset signal (ERRRESET) to end the signal output.

Notification method setting		Notification method	Methods to reset the notification (alarm or dedicated signal output)		
Warning	Output Signal		[RESET] key on the front of the controller	[ERROR RESET] key on the T/B	External error reset signal
<input checked="" type="checkbox"/>	<input type="checkbox"/>	Alarm	Will reset the alarm	Will reset the alarm	Will reset the alarm
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Alarm and dedicated signal output	Will reset the alarm and the dedicated signal output	Will reset the alarm and the dedicated signal output	Will reset the alarm and the dedicated signal output
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Dedicated signal output	Will not reset the dedicated signal output	Will ENABLE reset the dedicated signal output	Will ENABLE reset the dedicated signal output

16.5.7. Reset

When axes were exchanged or replenished by generating warning of the Maintenance forecast function to urge the battery exchange, the grease replenishment, and the belt exchange, the axes which executes the exchange and replenishment should reset information accumulate among controllers.

The information (about battery, grease and belt) for Maintenance Forecast kept in the controller can be reset.

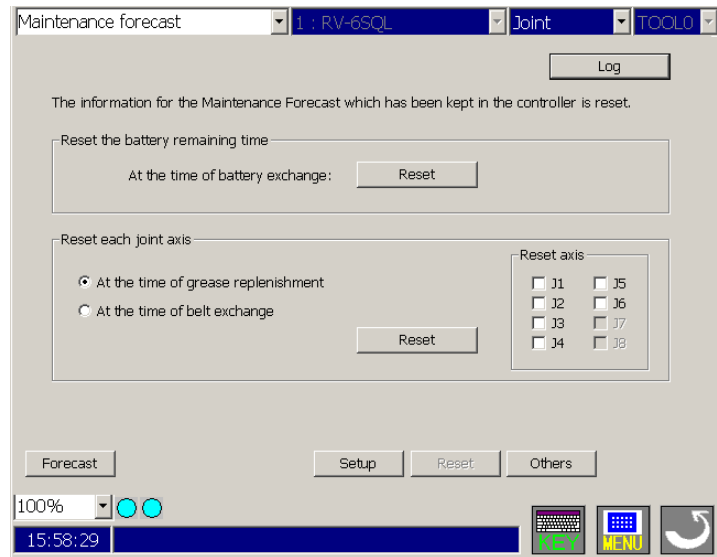

Types of resets	Explanation	Note
At the time of battery exchange	It is used when an alarm urging to replace the batteries (C7500, C7510 or C7520) occurs and the batteries have been replaced. Be sure to reset the battery remaining time after a battery has been replaced.	
At the time of grease replenishment	When an alarm urging to perform periodic inspections and replenish grease (alarm numbers in the 7530s) occurs, replenish the grease and reset the replenished axis.	Axes are reset in units of joint axes. Multiple joint axes can be reset at the same time.
At the time of belt exchange	When an alarm urging to perform periodic inspections and to replace the belt when it is damaged (alarm numbers in the 7540s) occurs, replace the belt and reset the axis for which the belt is replaced.	Axes are reset in units of joint axes. Multiple joint axes can be reset at the same time.

When the [Log] button is tapped in the upper-right corner of the window, the previous reset date/time and reset count can be checked. However, the battery reset count is not displayed. If no reset has not made previously, “----/--/-- --:--:--” is displayed.


The screenshot shows a software window titled "Log of reset". At the top, it displays "Date when measurement began :" with two input fields containing "2006/10/20" and "11:00:16". Below this, it says "The last reset day :" followed by a table. The table has four columns: "Item", an unlabeled column, "date", "time", and "cou". The "Battery" row is empty. The "Grease" row has entries for items J1, J2, J3, J4, J5, and J6. The "Belt" row has an entry for item J5. Some rows show dashes for date and time, indicating no previous reset.

Item		date	time	cou
Battery		2006/10/20	11:27:00	
Grease	J1	2006/10/20	11:26:52	
	J2	2006/10/20	11:26:52	
	J3	2006/10/20	11:26:52	
	J4	----/--/--	--:--:--	
	J5	----/--/--	--:--:--	
	J6	2006/10/20	11:26:52	
Belt	J5	----/--/--	--:--:--	

An "Exit" button is located at the bottom right of the window.

16.5.8. Others

The information for Maintenance Forecast kept in the controller can be backed up and/or restored.

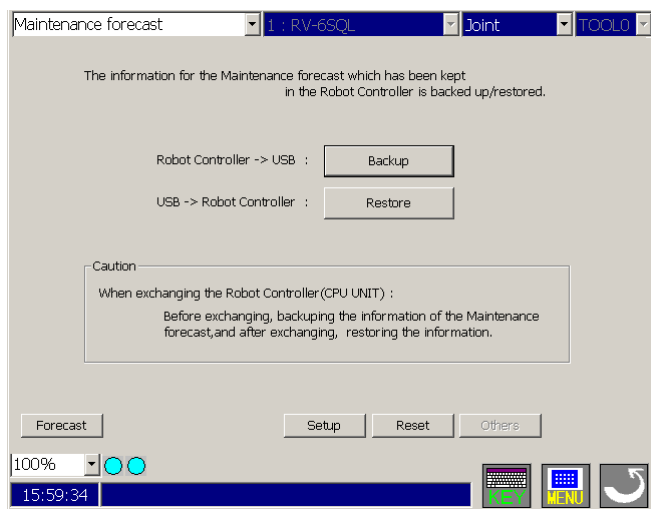

CAUTION

The backup and restore operations are performed when the controller (CPU) is replaced.

When the controller (CPU) is replaced, perform both backup and restore operations in a batch using the Backup/Restore tool. Also, be sure to back up the information for Maintenance Forecast before replacement, and restore the backed up information after replacement.

Please Backup/Restore between controllers of the same version. When the version is different, the error might occur.

After the controller (CPU) has been replaced, if the information for Maintenance Forecast is not restored, or it is restored after a substantial time has elapsed since the time of backup, please note that the reliability of Maintenance Forecast will be degraded.

CAUTION

The data related to preventive maintenance / predictive maintenance is not backed up and/or restored.

Even if the robot controller supports the preventive maintenance / predictive maintenance function, only the maintenance forecast data is backed up / restored on this screen. If you want to backup / restore data for preventive maintenance / predictive maintenance, please do so from the backup / restore screen. For more information, please refer to the "**14 Backup/Restore**".


16.6. Guidance

The guidance screen to do a basic setting to set the origin data to during start the controller first time is displayed.

In this screen, the following three functions are provided.

For more information, please refer to the "**7 Guidance**".

- (1) RC time setting
- (2) Robot serial setting
- (3) Origin data setting

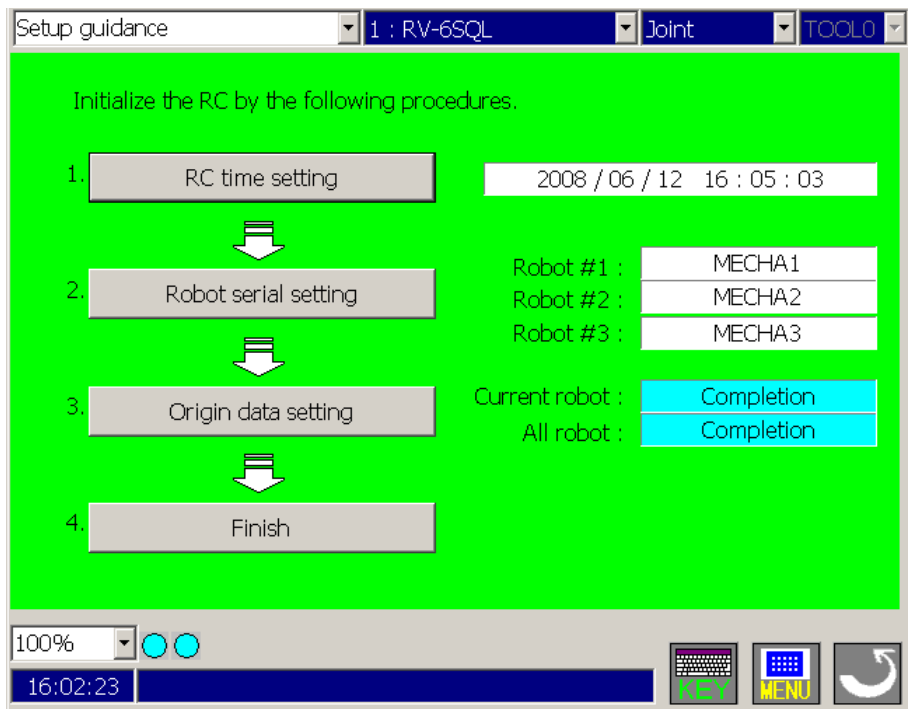

16.7. Security function of the robot controller (Password Setup)

It is possible to forbid accessing the robot programs, parameters and files in the robot controller.

The security function can be achieved by setting the password to the robot controller. This function can be used with Version 3.0 or later of this software. And the software version of the robot controller which can be used is as follows.


Controller	S/W Ver. of the controller
CR750-D/CRnD-700	Ver.S3 or later
CR750-Q/CRnQ-700	Ver.R3 or later
CR800-D/R/Q	Can be used with all versions


The function that the password can be set is as follows. It is possible to setup the password to access of the program, parameters, and files individually. The factory default setting of "Password Setup" is off.


Table Function that access is limited.

Type	Limited functions	Remarks
Program	<ul style="list-style-type: none"> ▪ Writing the programs. ▪ Reading the programs. ▪ Copying the programs. ▪ Renaming the programs. ▪ Deleting the programs. ▪ Writing the position data for SQ Direct. ▪ Reading the position data for SQ Direct. ▪ Deletion of all robot programs. 	/
Parameter	▪ Writing the parameters.	It is possible to read the parameters from the robot controller.
	▪ Position repair function.	It is not possible to write the revision parameter created by "Position repair function" in the robot controller.
	▪ Restore the origin data.	
	▪ Restoring the program information	Program information is correctly restored though < Write the task slot# > error is displayed when program information is restored before this software version 1.8 or earlier.
File	▪ Backup	
	▪ Restore	
	▪ Position repair function	

Tap [Password Setup] button (<a>) on Maintenance menu. The Password Setup window appears.

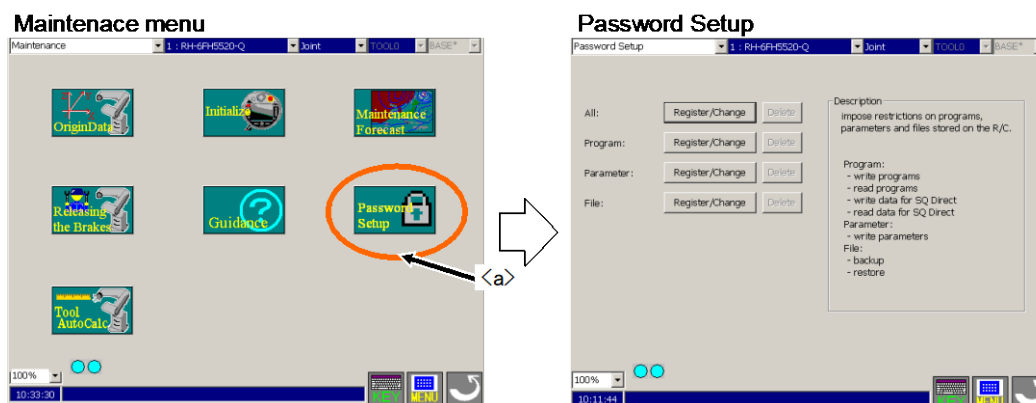

When the security function has been turned on in the controller, the mark  is displayed in the left of the button of the item to which access is forbidden.

(for example:  Register/Change)

16.7.1. Register the Password

The password is registered to the robot controller.

Tap the "Register/Change" button of the item to which register the password in "Password Setup" screen. After inputting the password in the "Register/Change Password" screen, tap the [OK] button. The input password is displayed by "*".

Please input the password by 8 characters or more, and 32 characters or less. The character that can be used is as follows.

Table Character that can be used by password

Character that can be used by password (8 characters or more, and 32 characters or less)	
Number (from 0 to 9)	
Alphabet (from A to Z, and from a to z)	(Notes)The capital letter and the small letter of the alphabet are distinguished.

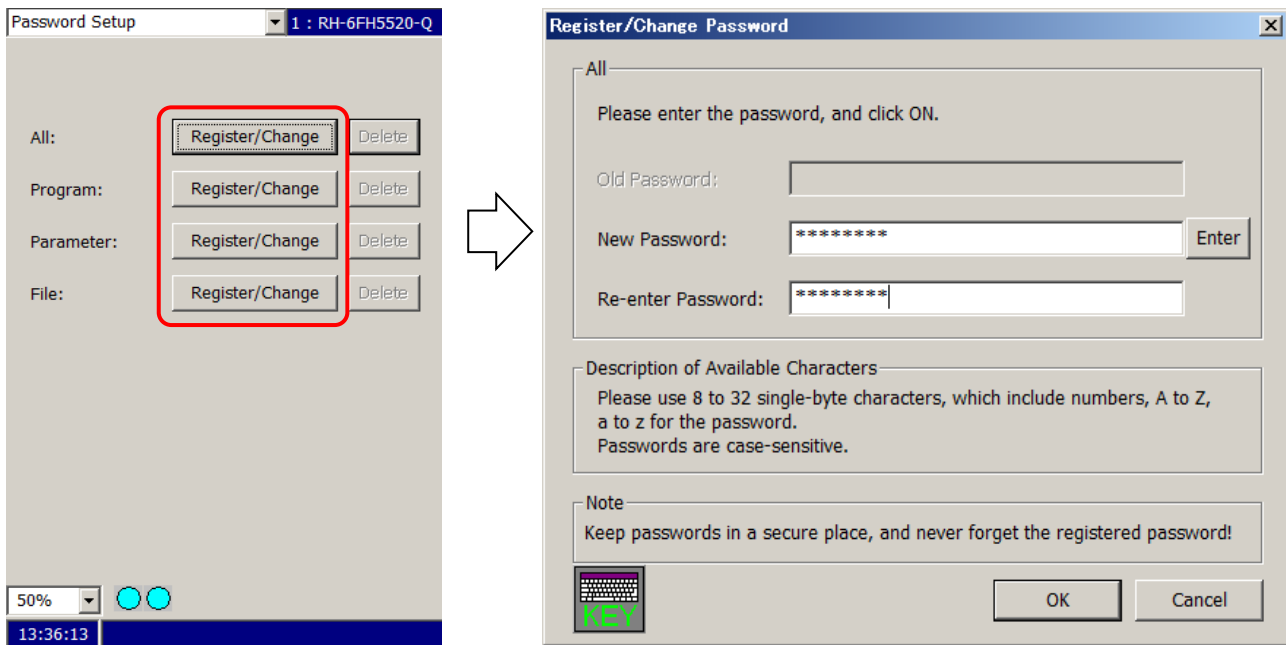


Figure Register Password



Caution

Please note the management of the password enough.

It becomes impossible to release the security function of the robot controller when the password is forgotten. Please note the management of the password enough.

16.7.2. Change the Password

The password being set in the controller is changed.
Tap the "Register/Change" button of the item to which change the password in "Password Setup" screen. After inputting a password set now and a new password in the "Register/Change Password" screen, tap [OK] button.

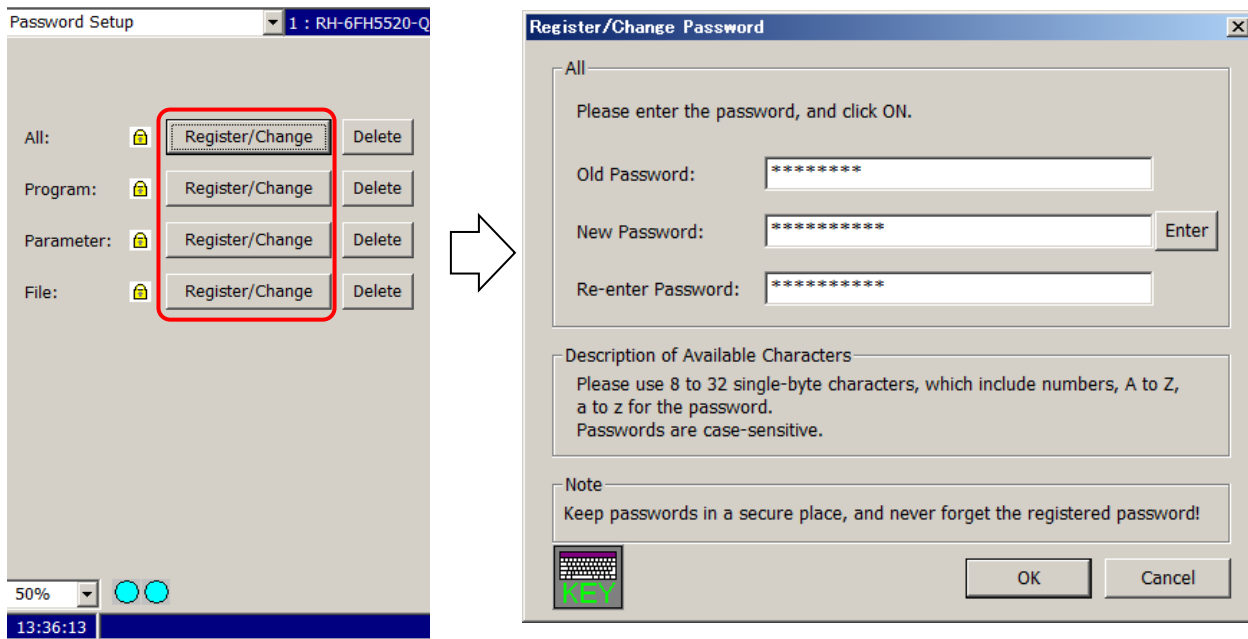


Figure Change Password

When the password is changed by "All" button, it is necessary to register the same password to all items.

16.7.3. Delete the Password

The password being set in the controller is deleted.
Tap the "Delete" button of the item to which delete the password in "Password Setup" screen. After inputting a password set now in the "Delete Password" screen, tap [OK] button.

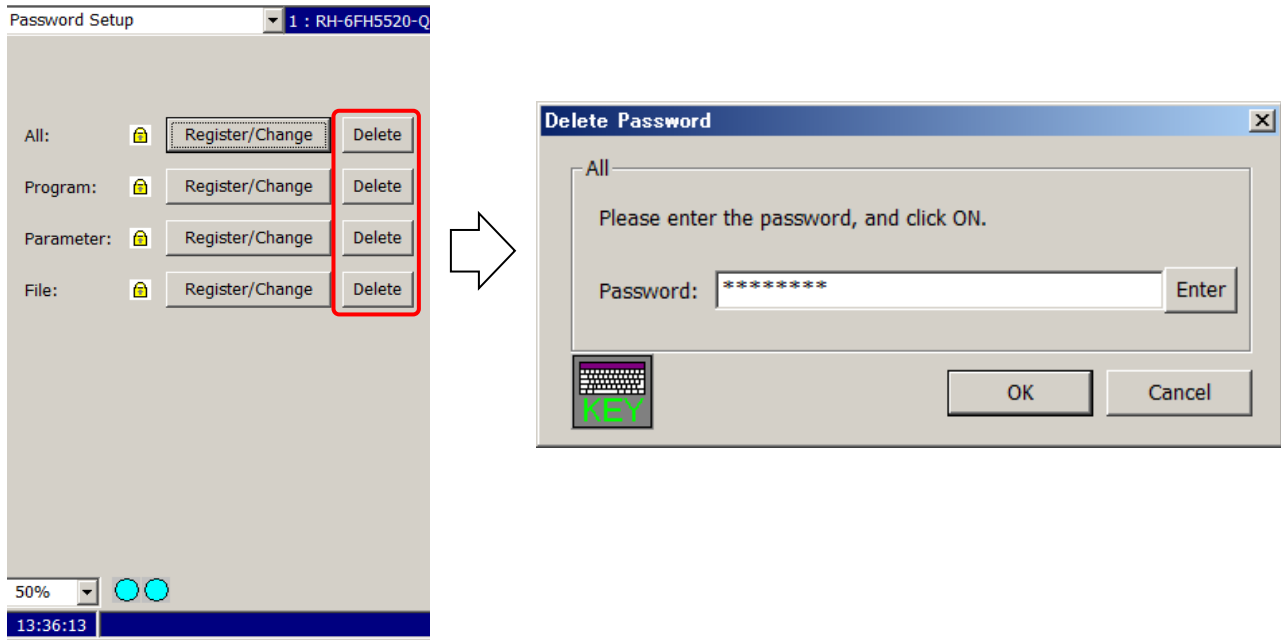



Figure Delete Password

When the password is delete by "All" button, it is necessary to register the same password to all items.

16.8. Tool automatic calculation

With the “Tool automatic calculation”, the tool length is calculated automatically by teaching a same position by 3 to 8 points to the robot that is attaching an actual tool, and the value of a tool parameter (MEXTL) is set up.

This function can be used with Version 2.20W or later of this software. Refer to “Table 16-1 Supported Robot Controllers and Models”.

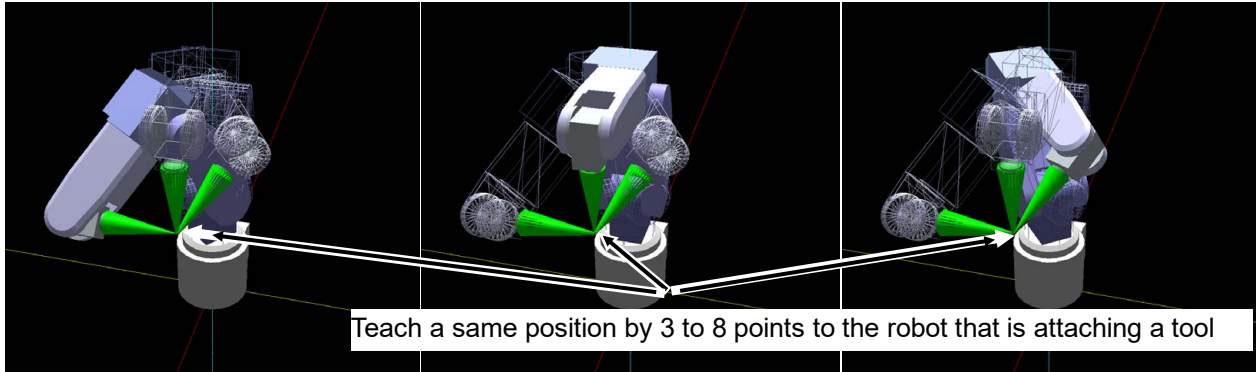

16.8.1. Specifications


The robot models and robot controller versions with which the “Tool automatic calculation” can be used are as follows.

Table 16-1 Supported Robot Controllers and Models


No.	Robot model	CR800/CR750/700 series Robot Controller	CRn-500 series Robot Controller
1	Vertical 6-axis robot	Version R3e/S3e or later	not use
2	Vertical 5-axis robot	not use	
3	Horizontal 4-axis robot	Version R3e/S3e or later	

16.8.2. Start

Tap the [Tool automatic calculation] button (<a>) on Maintenance menu. The “Tool automatic calculation” window appears.

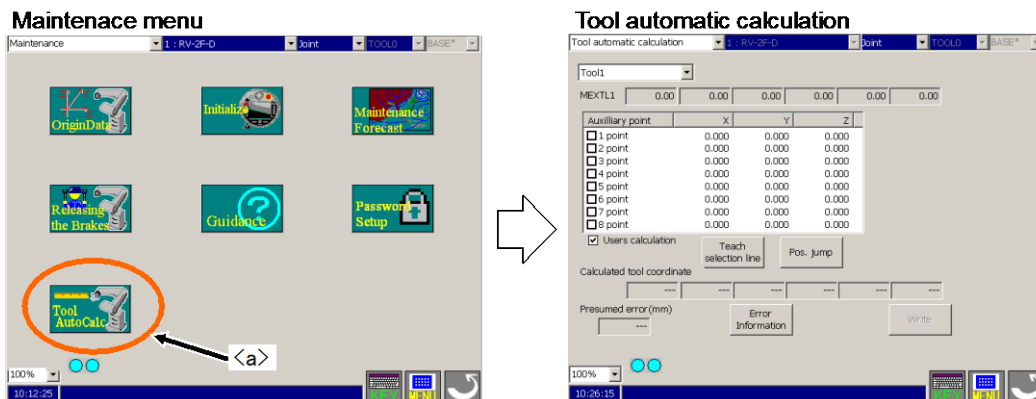

16.8.3. Flow of operations

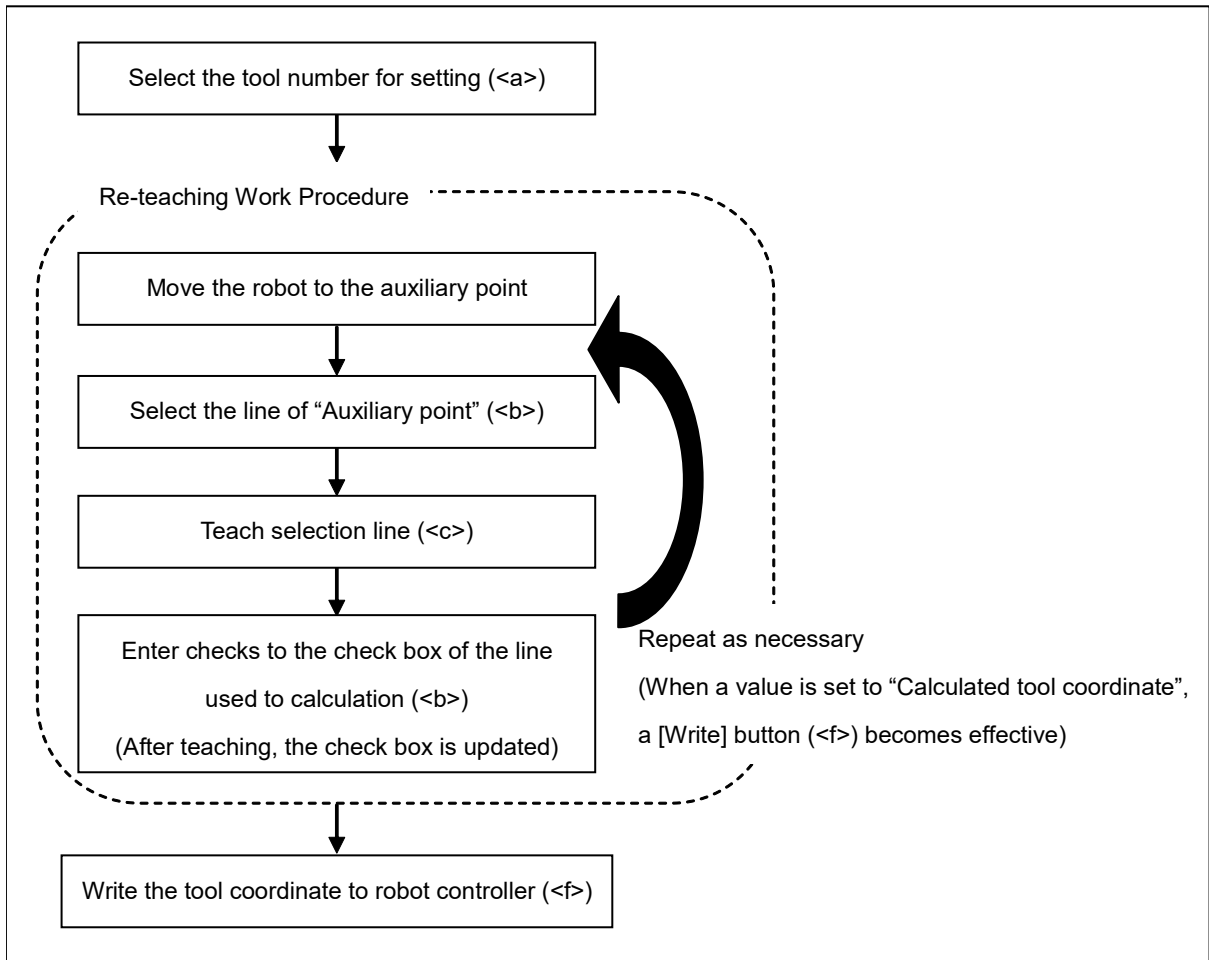

Direct execution

Caution : The robot will directly start movement when the [EXE] button is pressed.
Position jump to '3 point!'

Error Information

Gap from teach point

Auxiliary point	X	Y	Z
1 point	-1.350	0.080	-0.030
2 point	2.520	0.990	0.570
3 point	-1.170	-1.070	-0.540
4 point	0.000	0.000	0.000
5 point	0.000	0.000	0.000
6 point	0.000	0.000	0.000
7 point	0.000	0.000	0.000
8 point	0.000	0.000	0.000

Select the tool number (<a>).

Move the robot which is attaching a tool. After selecting the line of “Auxiliary point” list (), tap a [Teach selection line] button (<c>). Teach a same position by 3 to 8 points with different posture. (When the [Pos. jump] button (<d>) is tapped, the robot can be moved to the selected position and the teaching point can be checked. For the precautions, refer to “11.2.5 Confirming the position data (Position jump)”.)

When a value is set to “Calculated tool coordinate”, a [Write] button (<f>) becomes effective. When the [Write] button (<f>) is tapped, the values of a tool parameter (MEXTL) are written to the robot controller.

When a [Error information] button (<e>) is tapped, it is possible to check the gap from a teaching point.



Caution

Teach the position with greatly different posture of the robot.


If the teaching points look like each other, the tool coordinate might be not computable.
(e.g. when only A axis is different)

17. Parameter editor

The parameter editor can be used to reference and rewrite the parameter information set in the robot controller.

17.1. Starting

Select the "Parameter" from the menu, and parameter editor shown below appears.

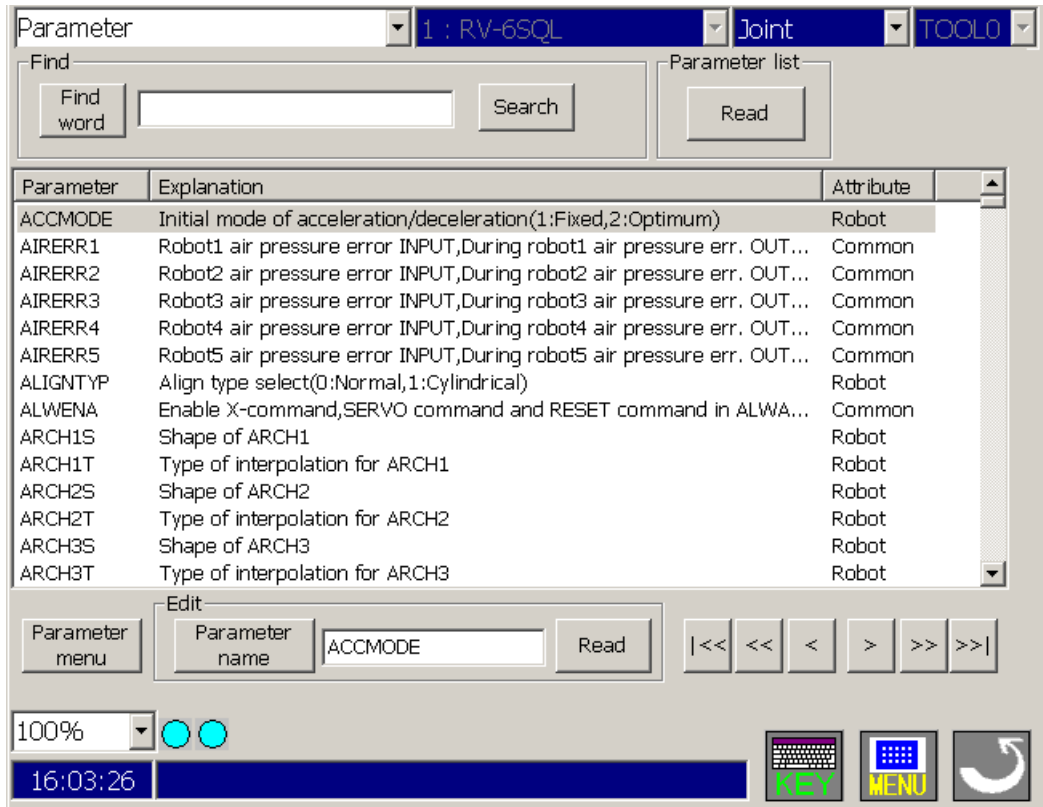

17.2. Downloading the parameter list (Robot controller -> T/B)

The message to confirm whether to download the parameter list when the parameter edit is started might be displayed.

This message will be appeared in the following cases.


- (1) When the parameter list can be read from the robot controller or when the [Read] button (<a>) is tapped on "Parameter window" of T/B.



- (2) When there is no parameter list information in the T/B.
- (3) When the parameter list used in the robot controller is newer than the parameter list already stored in the T/B.

* Although it will takes few minutes to download the parameter list information, using the latest parameter information is recommended.


If the parameter list information is not read out correctly, the following type of window will appear.

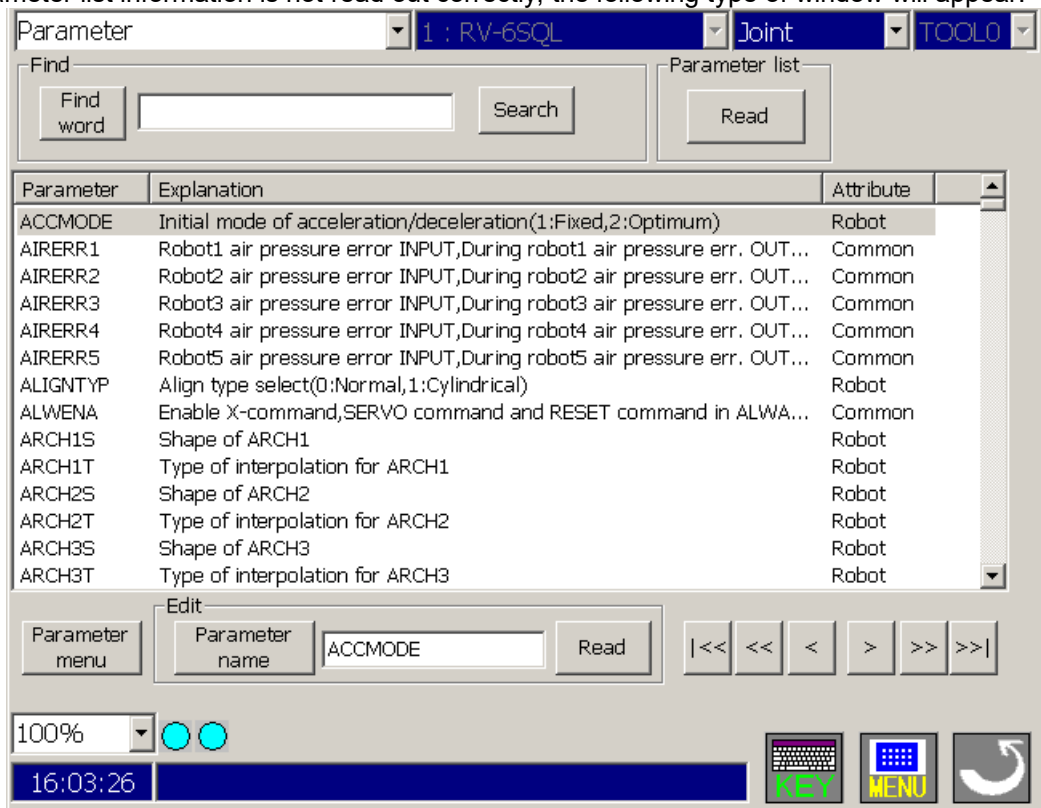

17.3. Changing the parameters

Select a parameter displayed in the list, or input the parameter name and then tap on the [Read] button (<a>) on "Parameter window".

The designated parameter information in the robot controller will be appeared.

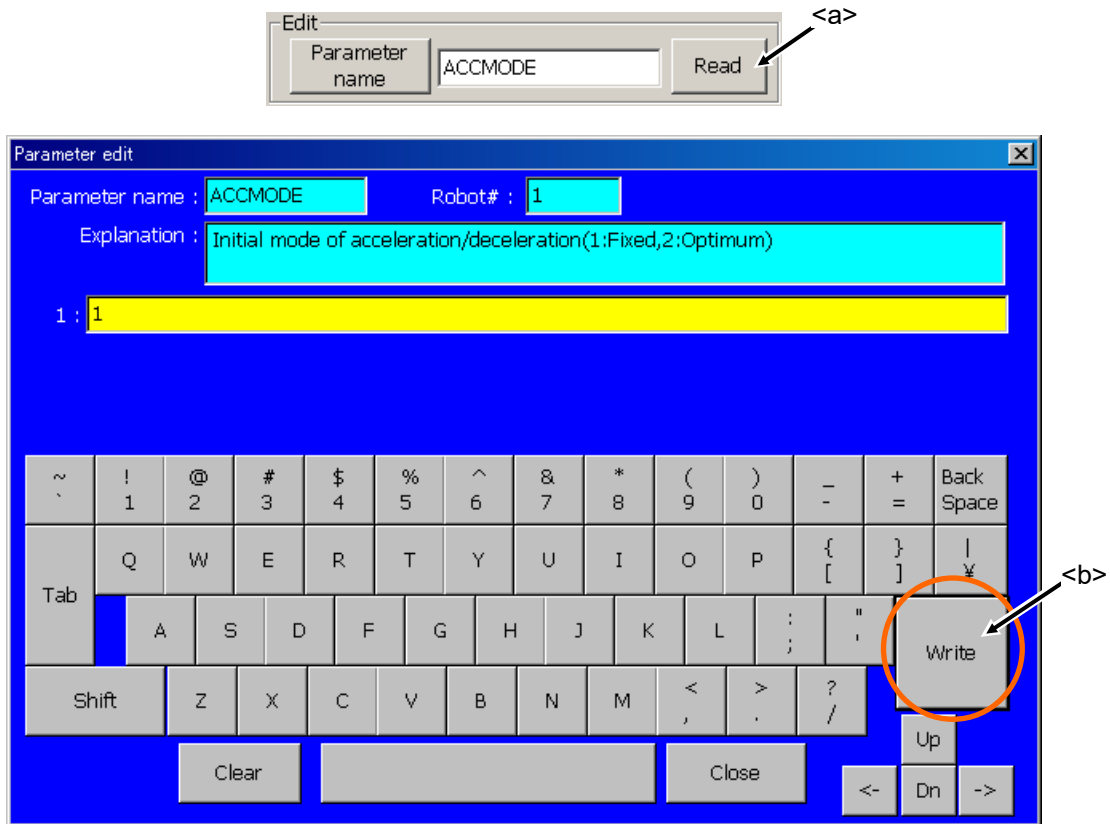

After confirming the parameter, the parameter information in the robot controller can be rewritten by tapping on the [Write] button. ()

CAUTION

Use upper case letters when naming the programs in alphabetic characters.

Lower case alphabetic characters can be used in this parameter setting. Use upper case letters when naming the programs in alphabetic characters for the parameters of the base program (PRGUSR) or slot table (SLT*), etc. All of the program names within the robot controller will be expressed in upper case letters. If lower case letters are used, the programs will not be properly recognized.

CAUTION

To validate the rewritten parameter information in the robot controller, the robot controller power must be turned ON again.

Caution

Operating Modes of the Robot Controller When Writing Parameters


Parameters can be written only in Teach mode.

17.4. Parameter menu

With this tool, parameter panels grouped as windows for each function are prepared.


Select the name of the parameter to be referred to with the [Parameter menu] button (<a>) on "Parameter window".

(1) The T/B version is before 3.2

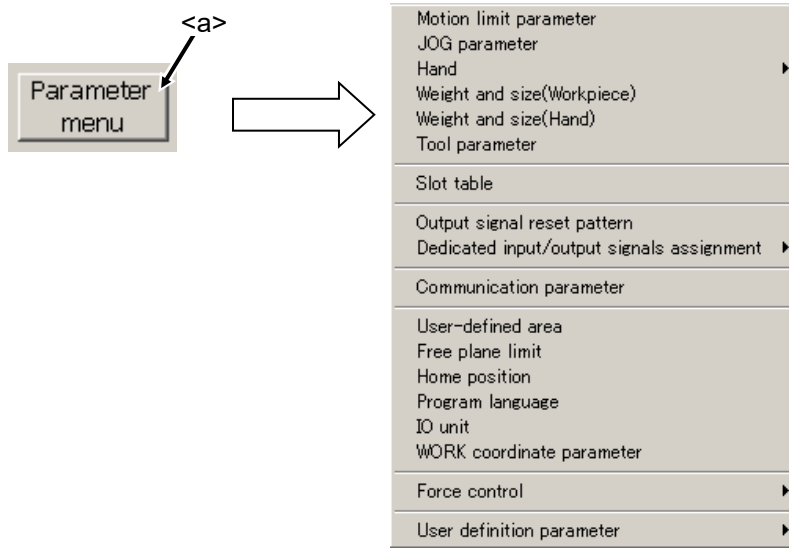

(2) The T/B version is after 3.2 or later

The parameter menu is changed by increasing the parameter menu item.

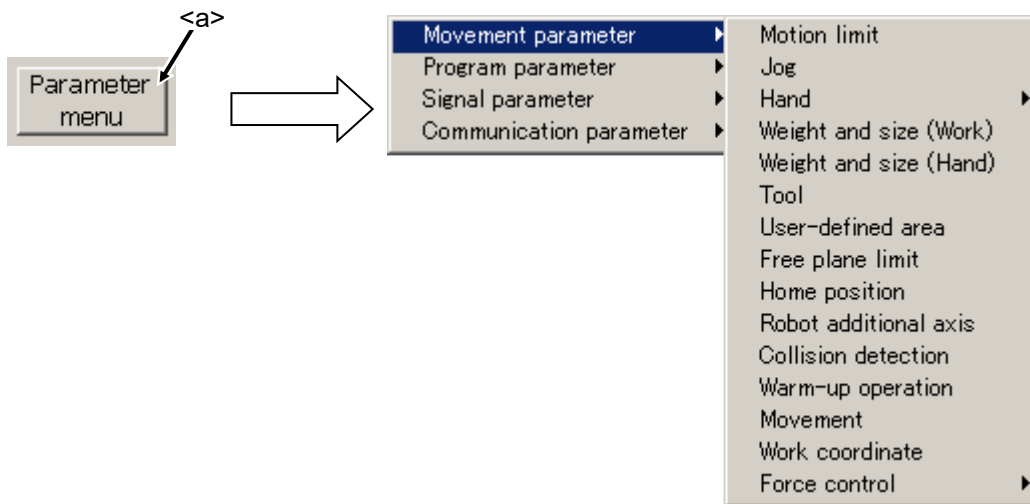

(Note) [WORK coordinate parameter] is available with Ver.2.3 or later of this software. [I/O unit] and [Force control] are available with Ver.3.0 or later of this software. Moreover, there is a restriction of the software version of the controller which can use this function. Please refer to each screen explanation for details.

CAUTION

The program language (MELFA-BASIC IV / MOVEMASTER command) to be used by the controller can be changed with the "Program language" window.

Note that the robot models that can use the MOVEMASTER commands are limited. Refer to the Standard Specifications for the model in use to confirm whether the commands can be used.

17.4.1. Motion limit

Set the operating range of the robot.

Joint limit (MEJAR)		User defined origin (USERORG)		XYZ limit (MEPAR)	
	- [mm,deg]		[mm,deg]		+ [mm]
J1 :	-170.00	J1 :	0.00	X :	-10000.00
J2 :	-92.00	J2 :	0.00	Y :	-10000.00
J3 :	-107.00	J3 :	90.00	Z :	-10000.00
J4 :	-160.00	J4 :	0.00		
J5 :	-120.00	J5 :	0.00		
J6 :	-360.00	J6 :	0.00		
J7 :	-80000.00	J7 :	0.00		
J8 :	-80000.00	J8 :	0.00		

17.4.2. JOG

Set the speeds of joint jog and XYZ jog.

Joint JOG speed (JOGJSP)		XYZ JOG speed (JOGPSP)	
H-Inching :	0.10 [deg/time]	H-Inching :	1.00 [mm/time]
L-Inching :	0.01 [deg/time]	L-Inching :	0.50 [mm/time]
Override :	10.00 [%]	Override :	10.00 [%]

Memo

Override specifies maximum speed. Maximum speed can be suppressed by reducing the value.

17.4.3. Hand

You can set the parameters of the hands which connected to the robot.


"17.4.3.2 Multi-Hand Tool", "17.4.3.3 Multi-Hand Base", "17.4.3.5 Electric hand point", "17.4.3.6 Electric hand" can be used with Version 2.5 or later of this software.

"17.4.3.4 Electric hand table" can be used with Version 3.1 or later of this software.

17.4.3.1. Hand

Set the type of the hand (single solenoid/double solenoid, etc.) and work holding/non-holding when HOPEN* (open hand) and HCLOSE* (close hand) are executed.

The IO-Macro is a function for a special usage. The customer who is using this function must refer to the setting method described in special specifications etc. individually submitted.

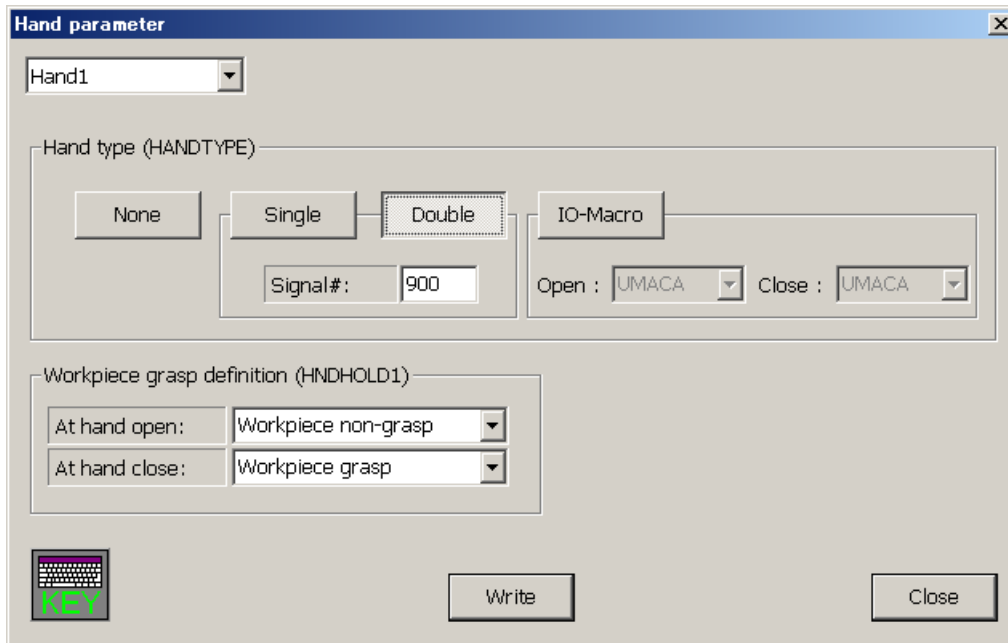

The image shows a software dialog box titled "Hand parameter". At the top, there is a dropdown menu with "Hand1" selected. Below this, the "Hand type (HANDTYPE)" section contains four buttons: "None", "Single", "Double" (which is highlighted with a dotted border), and "IO-Macro". Under the "IO-Macro" button, there is a "Signal#" field with the value "900" and two dropdown menus labeled "Open :" and "Close :", both containing the text "UMACA". The "Workpiece grasp definition (HNDHOLD1)" section has two rows: "At hand open:" with a dropdown menu set to "Workpiece non-grasp", and "At hand close:" with a dropdown menu set to "Workpiece grasp". At the bottom left is a keyboard icon with the word "KEY" in green. At the bottom center is a "Write" button, and at the bottom right is a "Close" button.

17.4.3.2. Multi-Hand Tool

Selects the Hand Base of the Multi-Hand, set the offset value, set the offset value of each hand to the selected Hand Base. The Multi-Hand Tool can be connected to the robot with remote Input/Output signals or parallel Input/Output signals.

When the robot and the controller connected to this software correspond to the function of the 'Multi-Hand', the item concerning the Multi-Hand are displayed in the parameter menu. The robot and the software version of the controller which can use the 'Multi-Hand Tool' are as follows.

Table 17-1 Robot that can use the 'Multi-Hand Tool'

Robot	Connection method		Notes
	Remote Input/Output	Parallel Input/Output	
RV-2SQ/2SD series	○	Not use	
RV-3SQ/3SD series	△	▲	5-axis robot cannot use this parameter.
RV-6SQ/6SD series	△	▲	
RV-12SQ/12SD series	Not use	▲	
RV-2FQ/2FD series	○	Not use	
RV-4FQ/4FD series	○	Not use	
RV-7FQ/7FD series	○	Not use	
RV-2FR series	○	Not use	
RV-4FR series	○	Not use	
RV-7FR series	○	Not use	

○: By using the standard remote Input/Output,


△: By using the special remote Input/Output

▲: By using the air hand interface


Table 17-2 Robot controller that can use the 'Multi-Hand Tool'

Controller	S/W Ver. of the controller
CR750-D/CRnD-700	Ver.S2a or later
CR750-Q/CRnQ-700	Ver.R2a or later
CR800-D/R/Q	Can be used with all versions

This function is available from this software Ver.2.5 or later.

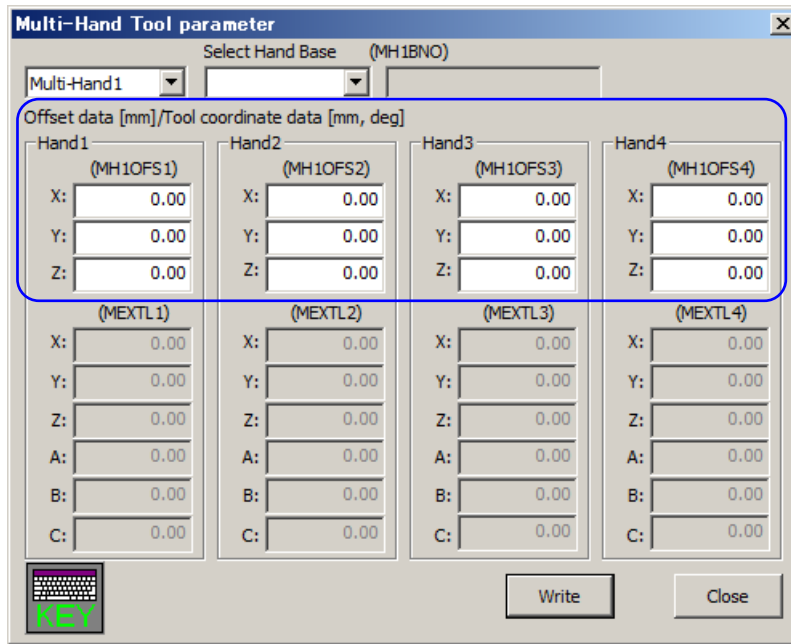

This position (vector) is set as the offset.

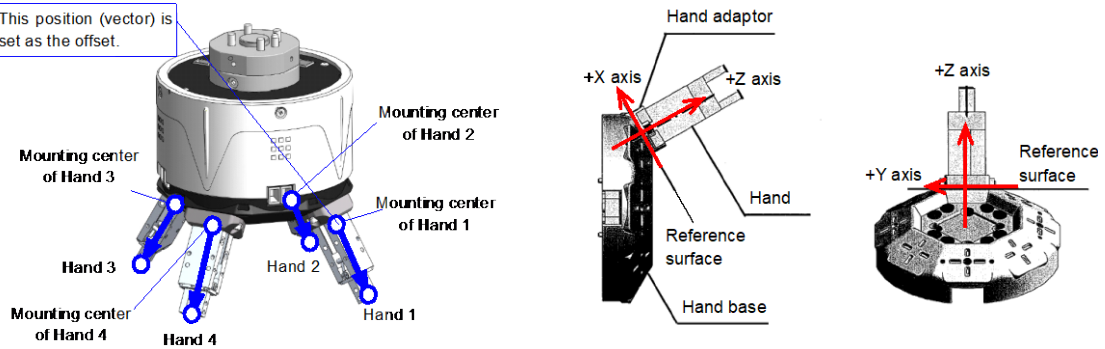



Setting of offset

17.4.3.3. Multi-Hand Base

Set the type name of the hand base for the Multi Hand and the Normal coordinates value of each hand.

When the robot and the controller connected to this software correspond to the function of the 'Multi-Hand' , the item concerning the Multi-Hand are displayed in the parameter menu. Please refer to "Table 17-1 Robot that can use the 'Multi-Hand Tool' ", "Table 17-2 Robot controller that can use the 'Multi-Hand Tool' " for the controller and the robot which can set the parameters about the Multi-Hand.

This function is available from this software Ver.2.5 or later.

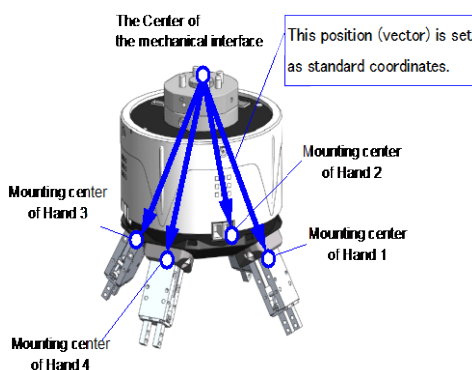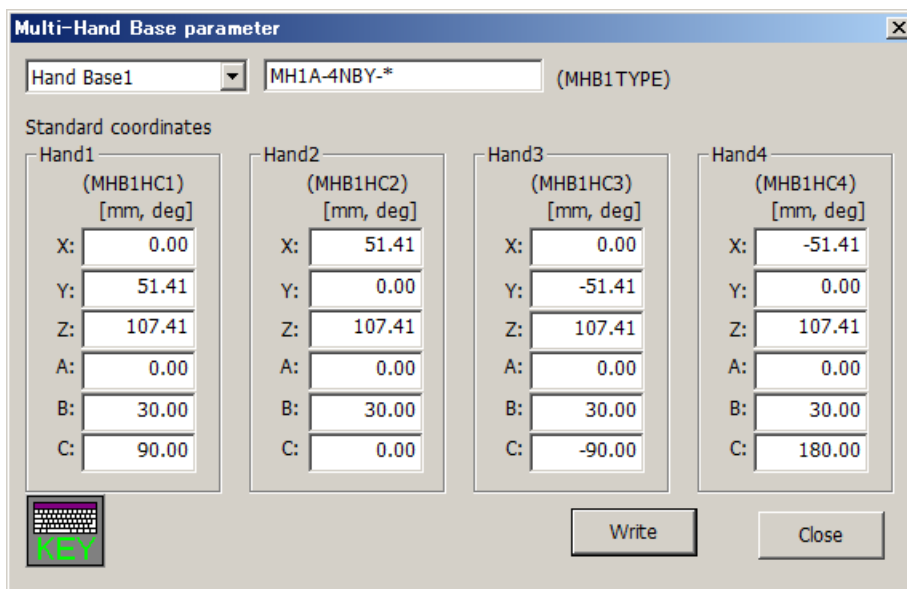

Setting of standard coordinates

17.4.3.4. Electric hand table

Set parameters about the table method of the electric hand.

This function is available from this software version 3.1 or later. And the controller which can set the parameters about the electric hand table is as follows.


Table 17-3 Robot controller which can set the parameters about the electric hand table

Controller	S/W Ver. of the controller
CR750-D/CRnD-700	Ver.S3e or later
CR750-Q/CRnQ-700	Ver.R3e or later
CR800-D/R/Q	Can be used with all versions

When the [Set] button is tapped after selecting the target electric hand and table list, the “Electric hand table setting” screen is displayed. Tap the [OK] button after setting up the contents of the table. The table list of electric hands is updated.

After you change the parameter value, you can rewrite the parameter in the controller by tapping the [Write] button.

When the [Teach] button on the “Electric hand table parameter setting #1” screen is tapped, the target “Electric hand point parameter #1” screen is displayed.

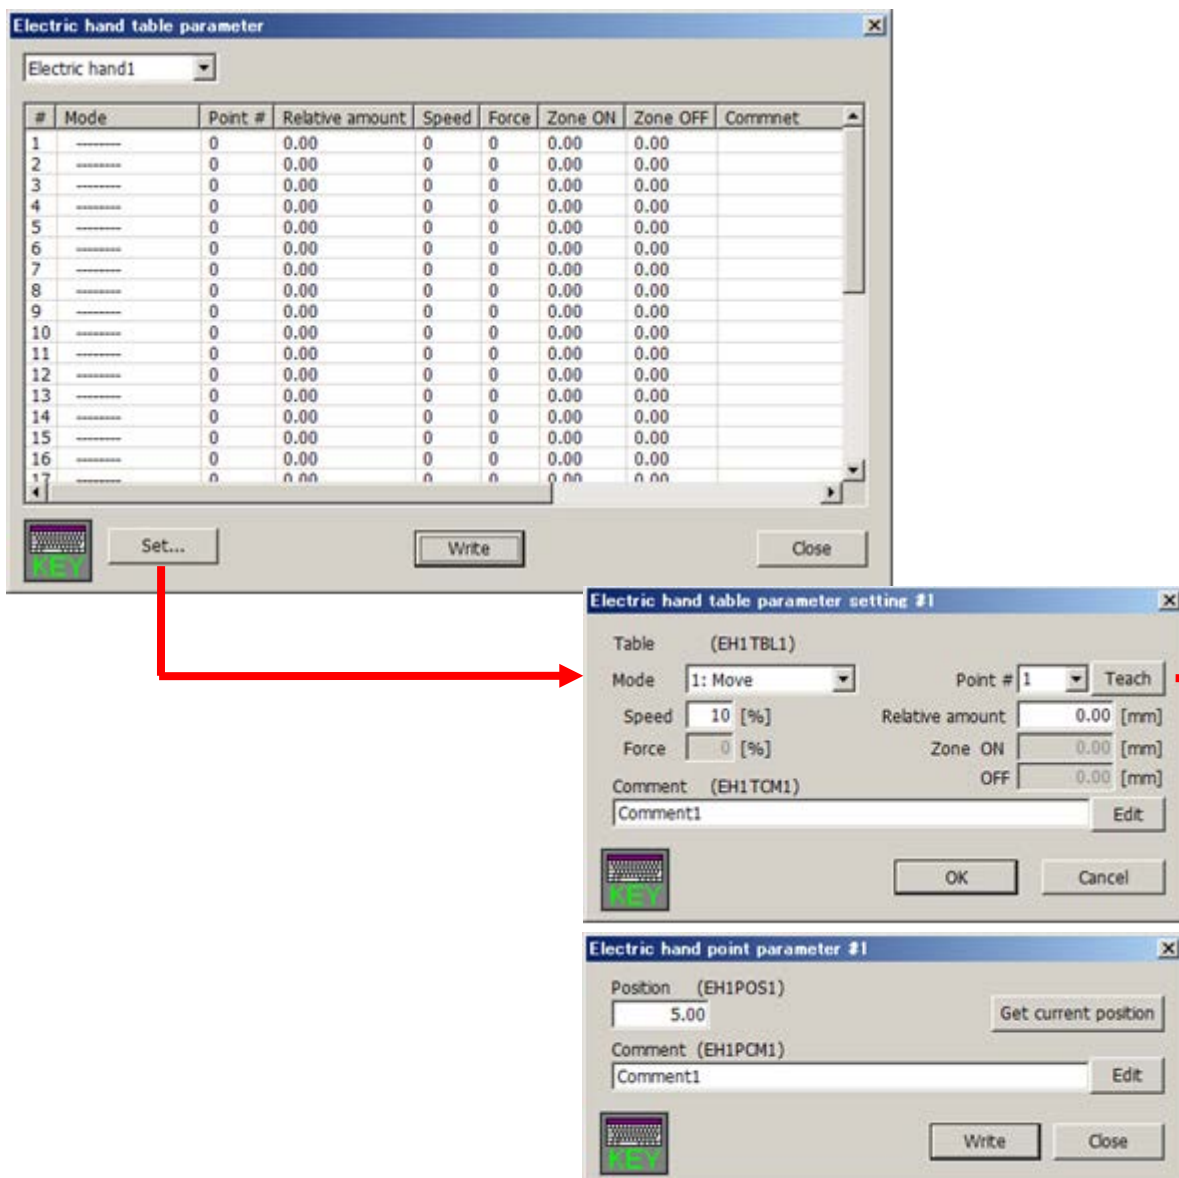

17.4.3.5. Electric hand point

Teach the positions of the electric hand.

This function is available from this software version 2.5 or later. And the controller which can set the parameters about the electric hand is as follows.

Table 17-4 Robot controller which can set the parameters about the electric hand

Controller	S/W Ver. of the controller
CR750-D/CRnD-700	Ver.S2a or later
CR750-Q/CRnQ-700	Ver.R2a or later
CR800-D/R/Q	Can be used with all versions

The “Electric hand teach” screen is different with versions of this software.

(1) In the case of using version 3.1 or later


When the [Get current position] button is tapped, the current position of the electric hand is set to the point number which was selected.

When the [Set] button is tapped after selecting the number in the list, “Electric hand teach setting” screen is displayed. Tap the [OK] button after setting up the value of a position and comment on this screen. The “Electric hand teach” screen is updated. The controller which can set comments is as follows.

Table 17-5 Robot controller which can set the comment parameters about the electric hand teach

Controller	S/W Ver. of the controller
CR750-D/CRnD-700	Ver.S3e or later
CR750-Q/CRnQ-700	Ver.R3e or later
CR800-D/R/Q	Can be used with all versions


After you change the parameter value, you can rewrite the parameter in the controller by tapping the [Write] button.

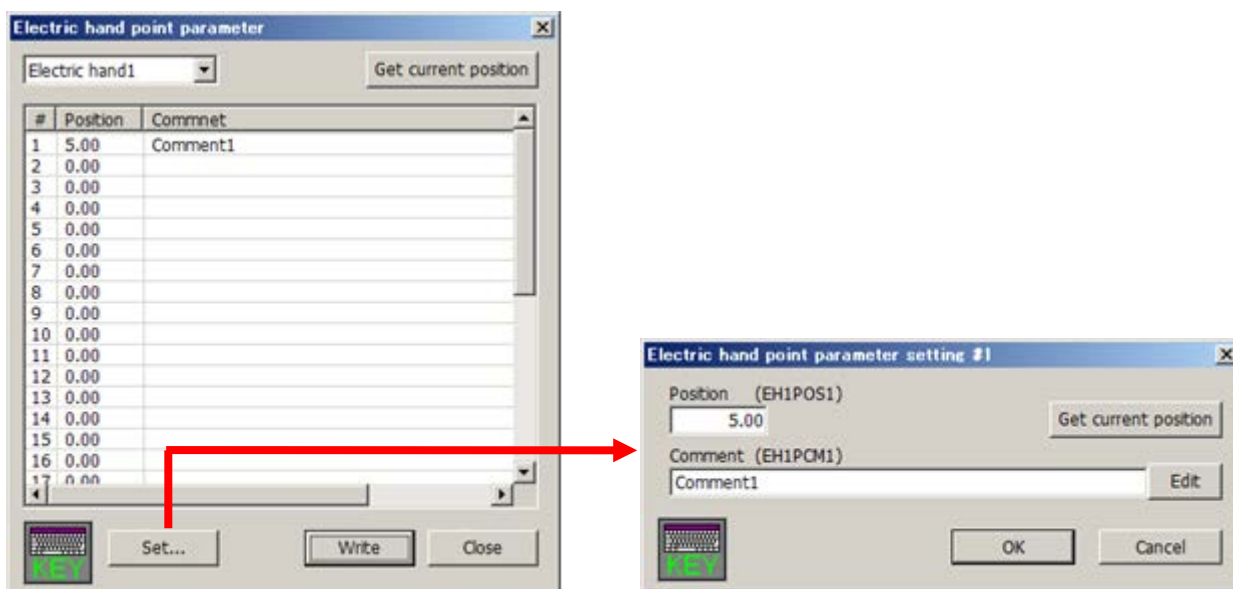

(2) In the case of using version 3.0 or earlier

You can use the [Get current position] button by setting the tick mark (for true) in the checkbox of the electric hand number. The current position of the Electric Hand is set to selected position number of the Electric Hand by tapping the [Get current position] button.

All checkbox are set white space (for false) by tapping the [Release all] button.

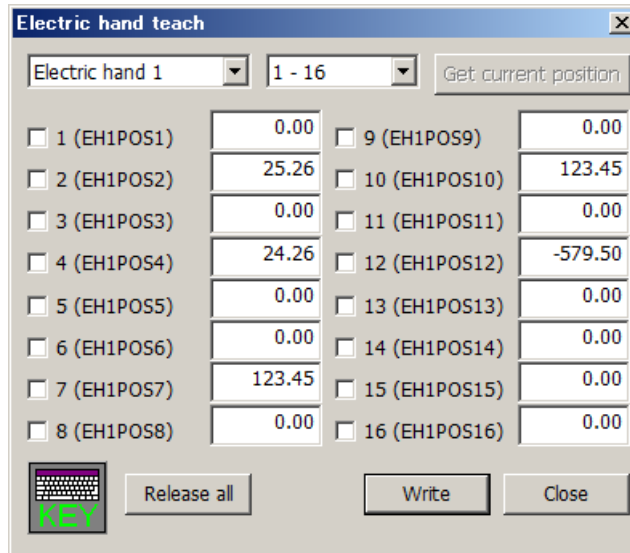


17.4.3.6. Electric hand

Selects the type of the electric hand and set the parameters.

This function is available from this software Ver.2.5 or later. And, please refer to “**Table 17-4 Robot controller which can set the parameters about the electric hand**” for the controller which can set the parameters about the electric hand.

The selected electric hand parameters are initialized by tapping the [Initialize] button.

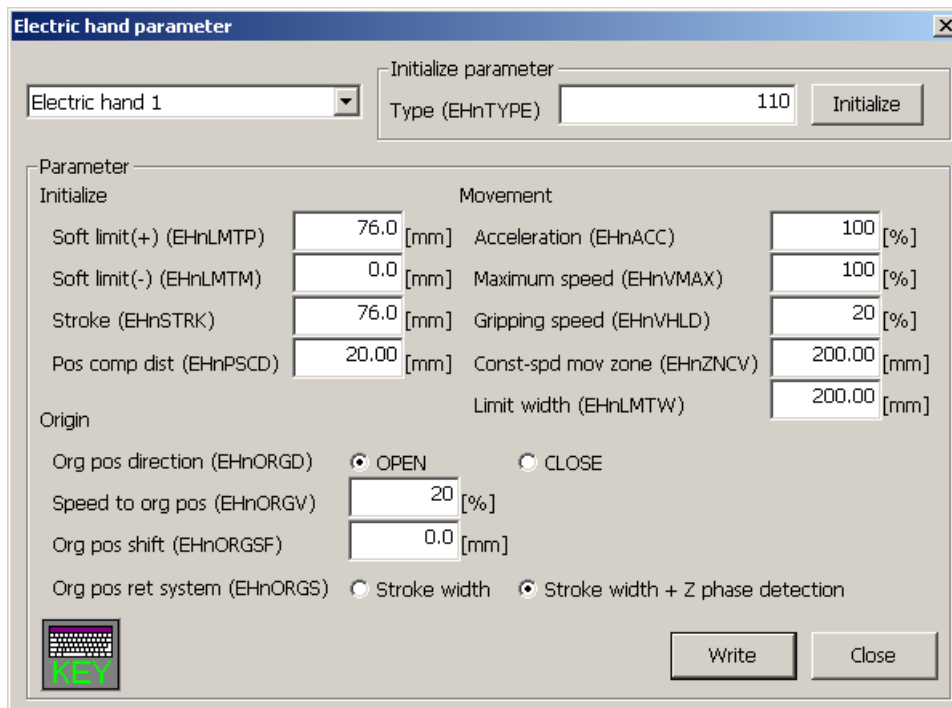


17.4.4. Weight and size (Work)

Set the work conditions.

WRKDAT0 might not be able to set according to the kind of the connected robot. In that case, the row of WRKDAT0 cannot be input.

		WRKDAT0	WRKDAT1	WRKDAT2	WRKDAT3	WRKDAT4	WRKDAT5
Weight	[Kg] :	0.00	0.00	0.00	0.00	0.00	0.00
Size [mm]	X :	0.00	0.00	0.00	0.00	0.00	0.00
	Y :	0.00	0.00	0.00	0.00	0.00	0.00
	Z :	0.00	0.00	0.00	0.00	0.00	0.00
Center of gravity position [mm]	X :	0.00	0.00	0.00	0.00	0.00	0.00
	Y :	0.00	0.00	0.00	0.00	0.00	0.00
	Z :	0.00	0.00	0.00	0.00	0.00	0.00
		WRKDAT6	WRKDAT7	WRKDAT8			
Weight	[Kg] :	0.00	0.00	0.00			
Size [mm]	X :	0.00	0.00	0.00			
	Y :	0.00	0.00	0.00			
	Z :	0.00	0.00	0.00			
Center of gravity position [mm]	X :	0.00	0.00	0.00			
	Y :	0.00	0.00	0.00			
	Z :	0.00	0.00	0.00			




17.4.5. Weight and size (Hand)

Set the hand conditions.

HNDDAT0 might not be able to set according to the kind of the connected robot. In that case, the row of HNDDAT0 cannot be input.

		HNDDAT0	HNDDAT1	HNDDAT2	HNDDAT3	HNDDAT4	HNDDAT5
Weight	[Kg] :	4.00	4.00	4.00	4.00	4.00	4.00
Size [mm]	X :	78.00	0.00	0.00	0.00	0.00	0.00
	Y :	78.00	0.00	0.00	0.00	0.00	0.00
	Z :	90.00	0.00	0.00	0.00	0.00	0.00
Center of gravity position [mm]	X :	0.00	0.00	0.00	0.00	0.00	0.00
	Y :	0.00	0.00	0.00	0.00	0.00	0.00
	Z :	85.00	0.00	0.00	0.00	0.00	0.00
		HNDDAT6	HNDDAT7	HNDDAT8			
Weight	[Kg] :	4.00	4.00	4.00			
Size [mm]	X :	0.00	0.00	0.00			
	Y :	0.00	0.00	0.00			
	Z :	0.00	0.00	0.00			
Center of gravity position [mm]	X :	0.00	0.00	0.00			
	Y :	0.00	0.00	0.00			
	Z :	0.00	0.00	0.00			



17.4.6. TOOL parameter

Set the standard tool coordinates, standard base coordinates and tool number.

When the robot that connects this software corresponds to the Multi-Hand, it is possible to select "Tool 5" or later. This function is available from this software Ver.2.5 or later. The Multi-Hand function is available with the robot controller's software version S2a/R2a or later.

The tool coordinate system (MEXTL) can be entered only when the tool number is "0". Also, when the tool number is changed from non-"0" to "0", the values of the tool coordinate system will all be set to 0. However, if the tool number on the screen is displayed as "0", when it is changed to non-"0" and then return to "0" again, the tool coordinate system will display the value before the changed. It can be used with this software version 4.1 or later


The tool number is displayed in version 4.1 or later.

The switch of the tools is displayed in version 2.5 or later.


STD Base coordinate (MEXBS)		STD Tool coordinate (MEXTL)		Tool coordinate data			
	[mm, deg]		[mm, deg]	MEXTL1	MEXTL2	MEXTL3	MEXTL4
				[mm, deg]	[mm, deg]	[mm, deg]	[mm, deg]
X :	0.0000	X :	0.0000	0.0000	0.0000	0.0000	0.0000
Y :	0.0000	Y :	0.0000	0.0000	0.0000	0.0000	0.0000
Z :	0.0000	Z :	0.0000	0.0000	0.0000	0.0000	0.0000
A :	0.0000	A :	0.0000	0.0000	0.0000	0.0000	0.0000
B :	0.0000	B :	0.0000	0.0000	0.0000	0.0000	0.0000
C :	0.0000	C :	0.0000	0.0000	0.0000	0.0000	0.0000

17.4.7. Slot table

Set the operating conditions of each task slot during multi-task operation.

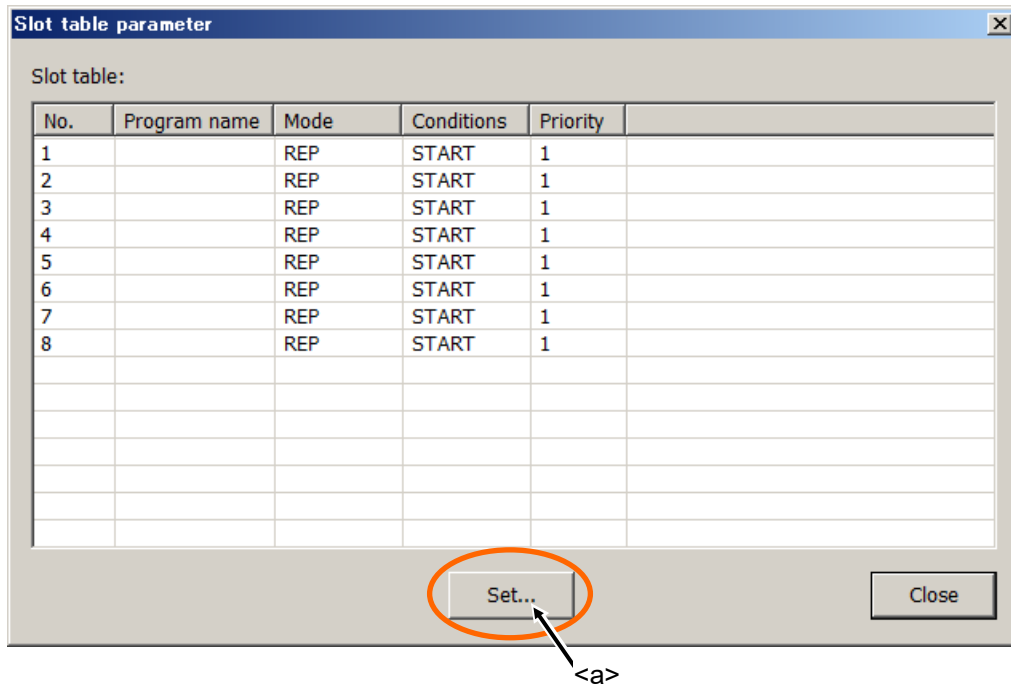


Select the task slot number you are changing and tap the [Set...] button. (<a>)
When the modification window appears, set the program name, operating conditions, startup conditions and task priority, and then tap [Write] button. ()

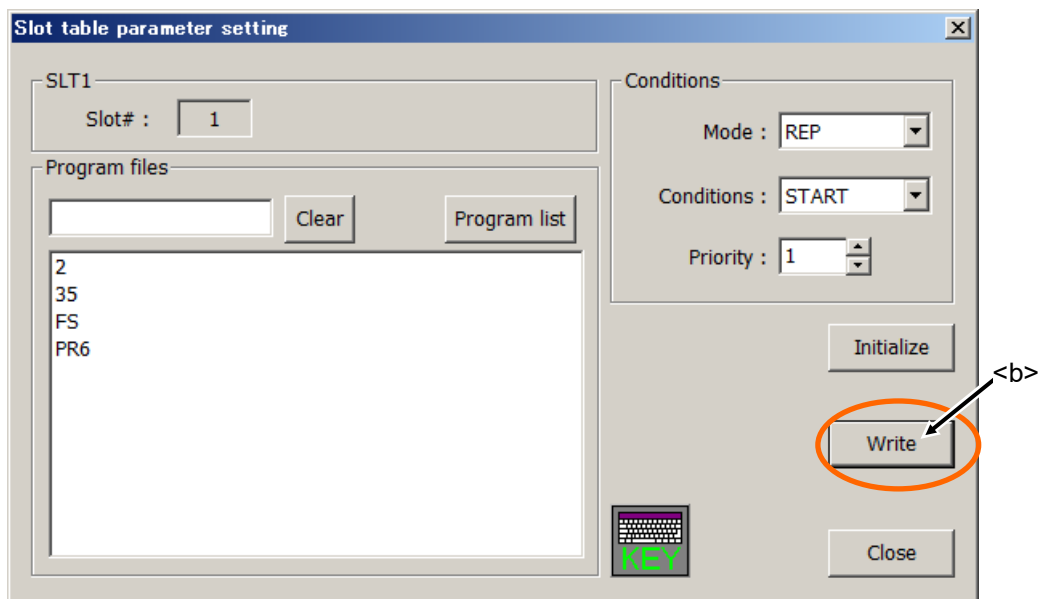

17.4.8. Output signal reset pattern


Set the operation when resetting the general-purpose output signals such as the CLR instruction and dedicated input (OUTRESET).

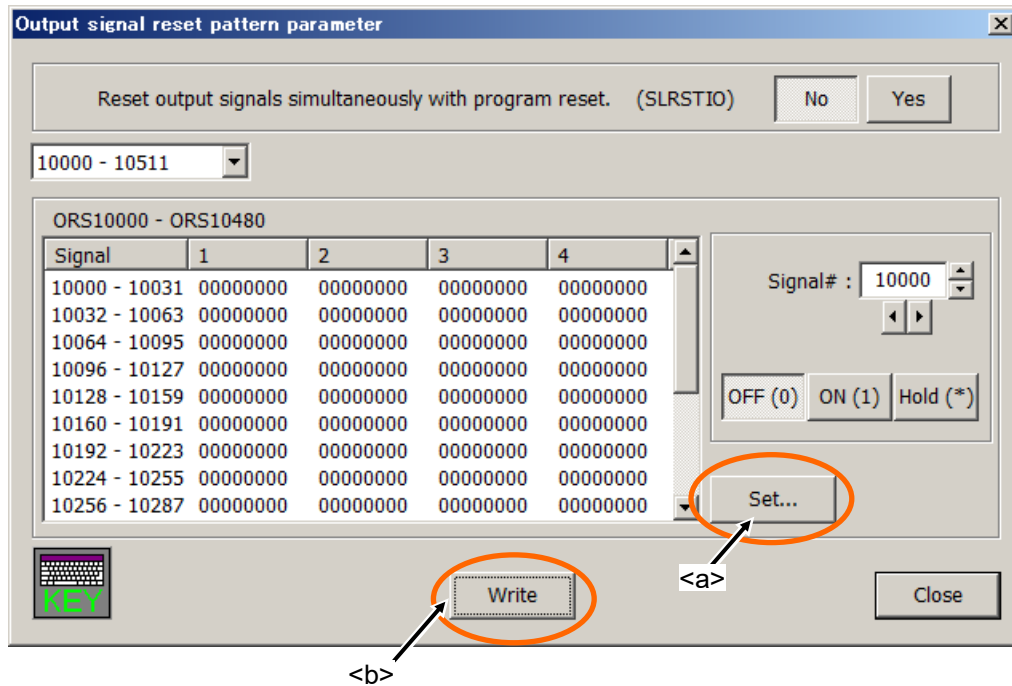

Set a signal number, and then select one from [OFF] / [ON] / [Hold].

The value of the signal having the specified number displayed in the list changes.

Also, selecting a signal group (for example, "0 - 31") and then tapping the [Set...] button (<a>) changes 32 signals at once.

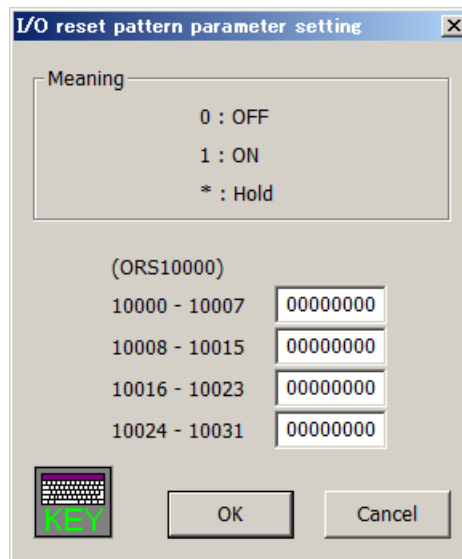


After confirming the signal number and settings of each signal, tap the [Write] button () on the keyboard.

17.4.9. Dedicated input / output signals assignment

Assign signal numbers to functions in order to perform the remote operations to execute and stop robot programs, and display/operate the execution progress information and servo power supply status, etc.


17.4.9.1. General 1

INPUT			OUTPUT		
AUTO enable	AUTOENA		AUTO enable	AUTOENA	
START	START	10006	During execute	START	10006
STOP	STOP	10000	During wait	STOP	10000
STOP2	STOP2		During wait 2	STOP2	
Program reset	SLOTINIT	10008	STOP IN	STOPSTS	10007
Error reset	ERRRESET	10009	Prg select enable	SLOTINIT	10008
Cycle-Stop	CYCLE	10012	During error	ERRRESET	10009
Servo OFF	SRVOFF	10011	During Cycle-Stop	CYCLE	10012
Servo ON	SRVON	10010	Servo ON disable	SRVOFF	10011
Operation enable	IOENA	10005	During servo ON	SRVON	10010
			Operation enable	IOENA	10005


Write
Close


17.4.9.2. General 2

INPUT			OUTPUT		
Move home	SAFEPOS	10013	Moving home	SAFEPOS	10013
General Output reset	OUTRESET	10015			
Machine lock	MELOCK		During Machine lock	MELOCK	
			H-Error	HLVLERR	10016
			L-Error	LLVLERR	10017
			Caution	CLVLERR	10018
			During EMG-Stop	EMGERR	10019
			TEACH-mode	TEACHMD	10003
			AUTO(OP.)-mode	ATTOPMD	10004
			AUTO(EXT.)-mode	ATEXTMD	10002


Write
Close

17.4.9.3. Data

INPUT				OUTPUT			
Program select	PRGSEL	10020					
OVRD specification	OVRDSEL	10021					
				RC ready	RCREADY	10001	
				Low battery	BATERR	10014	
Prog.# output req.	PRGOUT	10022		During output Prog.#	PRGOUT	10022	
Line# output req.	LINEOUT	10023		During output Line#	LINEOUT	10023	
OVRD output req.	OVRDOUT	10024		During output OVRD	OVRDOUT	10024	
Err.# output req.	ERROUT	10025		During output Err.#	ERROUT	10025	
Temp. in RC output req.	TMPOUT			During output Temp. in RC	TMPOUT		
Value input	IODATA	Start	End	Value output	IODATA	Start	End
		10032	10047			10032	10047
				User-defined area	USRAREA	10064	10071




“Temp. in RC output req” and “During output Temp in RC” parameter is available with Ver.2.4 or later of this software. Moreover, the software version of the controller which can use this parameter is as follows.

Controller	S/W Ver. of the controller
CR750-D/CRnD-700	Ver.S1c or later
CR750-Q/CRnQ-700	Ver.R1c or later
CR800-D/R/Q	Can be used with all versions

17.4.9.4. Jog

INPUT				OUTPUT			
JOG mode specification	JOGENA			JOG mode	JOGENA		
JOG(+) specification	JOG+						
JOG(-) specification	JOG-						
JOG mode specification	JOGM			JOG mode	JOGM		
Error disregard at JOG	JOGNER			During error disregard at JOG	JOGNER		



17.4.9.5. Hand

Hand parameter

Hand Output State

		OUTPUT	
		Start	End
1	HNDCTRL1	10048	10055
2	HNDCTRL2		
3	HNDCTRL3		

Hand Input Signal (8)


		OUTPUT	
		Start	End
1	HNDSTS1	10056	10063
2	HNDSTS2		
3	HNDSTS3		

Hand Error

		INPUT	OUTPUT
1	HNDERR1		
2	HNDERR2		
3	HNDERR3		

Air pressure Error

		INPUT	OUTPUT
1	AIRERR1		
2	AIRERR2		
3	AIRERR3		



Write

Close

17.4.9.6. Warm up

Warm up parameter

INPUT

OUTPUT

Warm up mode setting


Robot 1	M1WUPENA	<input type="checkbox"/>
Robot 2	M2WUPENA	<input type="checkbox"/>
Robot 3	M3WUPENA	<input type="checkbox"/>

Warm up mode enable

Robot 1	M1WUPENA	<input type="checkbox"/>
Robot 2	M2WUPENA	<input type="checkbox"/>
Robot 3	M3WUPENA	<input type="checkbox"/>

Warm up mode in progress

Robot 1	M1WUPMD	<input type="checkbox"/>
Robot 2	M2WUPMD	<input type="checkbox"/>
Robot 3	M3WUPMD	<input type="checkbox"/>




Write

Close

17.4.9.7. Start (each slot)

Start (each slot) parameter


	INPUT	OUTPUT		INPUT	OUTPUT		INPUT	OUTPUT			
1:	S1START	<input type="checkbox"/>	<input type="checkbox"/>	12:	S12START	<input type="checkbox"/>	<input type="checkbox"/>	23:	S23START	<input type="checkbox"/>	<input type="checkbox"/>
2:	S2START	<input type="checkbox"/>	<input type="checkbox"/>	13:	S13START	<input type="checkbox"/>	<input type="checkbox"/>	24:	S24START	<input type="checkbox"/>	<input type="checkbox"/>
3:	S3START	<input type="checkbox"/>	<input type="checkbox"/>	14:	S14START	<input type="checkbox"/>	<input type="checkbox"/>	25:	S25START	<input type="checkbox"/>	<input type="checkbox"/>
4:	S4START	<input type="checkbox"/>	<input type="checkbox"/>	15:	S15START	<input type="checkbox"/>	<input type="checkbox"/>	26:	S26START	<input type="checkbox"/>	<input type="checkbox"/>
5:	S5START	<input type="checkbox"/>	<input type="checkbox"/>	16:	S16START	<input type="checkbox"/>	<input type="checkbox"/>	27:	S27START	<input type="checkbox"/>	<input type="checkbox"/>
6:	S6START	<input type="checkbox"/>	<input type="checkbox"/>	17:	S17START	<input type="checkbox"/>	<input type="checkbox"/>	28:	S28START	<input type="checkbox"/>	<input type="checkbox"/>
7:	S7START	<input type="checkbox"/>	<input type="checkbox"/>	18:	S18START	<input type="checkbox"/>	<input type="checkbox"/>	29:	S29START	<input type="checkbox"/>	<input type="checkbox"/>
8:	S8START	<input type="checkbox"/>	<input type="checkbox"/>	19:	S19START	<input type="checkbox"/>	<input type="checkbox"/>	30:	S30START	<input type="checkbox"/>	<input type="checkbox"/>
9:	S9START	<input type="checkbox"/>	<input type="checkbox"/>	20:	S20START	<input type="checkbox"/>	<input type="checkbox"/>	31:	S31START	<input type="checkbox"/>	<input type="checkbox"/>
10:	S10START	<input type="checkbox"/>	<input type="checkbox"/>	21:	S21START	<input type="checkbox"/>	<input type="checkbox"/>	32:	S32START	<input type="checkbox"/>	<input type="checkbox"/>
11:	S11START	<input type="checkbox"/>	<input type="checkbox"/>	22:	S22START	<input type="checkbox"/>	<input type="checkbox"/>				

 Write Close

17.4.9.8. Stop (each slot)

Stop (each slot) parameter

	INPUT	OUTPUT		INPUT	OUTPUT		INPUT	OUTPUT			
1:	S1STOP	<input type="checkbox"/>	<input type="checkbox"/>	12:	S12STOP	<input type="checkbox"/>	<input type="checkbox"/>	23:	S23STOP	<input type="checkbox"/>	<input type="checkbox"/>
2:	S2STOP	<input type="checkbox"/>	<input type="checkbox"/>	13:	S13STOP	<input type="checkbox"/>	<input type="checkbox"/>	24:	S24STOP	<input type="checkbox"/>	<input type="checkbox"/>
3:	S3STOP	<input type="checkbox"/>	<input type="checkbox"/>	14:	S14STOP	<input type="checkbox"/>	<input type="checkbox"/>	25:	S25STOP	<input type="checkbox"/>	<input type="checkbox"/>
4:	S4STOP	<input type="checkbox"/>	<input type="checkbox"/>	15:	S15STOP	<input type="checkbox"/>	<input type="checkbox"/>	26:	S26STOP	<input type="checkbox"/>	<input type="checkbox"/>
5:	S5STOP	<input type="checkbox"/>	<input type="checkbox"/>	16:	S16STOP	<input type="checkbox"/>	<input type="checkbox"/>	27:	S27STOP	<input type="checkbox"/>	<input type="checkbox"/>
6:	S6STOP	<input type="checkbox"/>	<input type="checkbox"/>	17:	S17STOP	<input type="checkbox"/>	<input type="checkbox"/>	28:	S28STOP	<input type="checkbox"/>	<input type="checkbox"/>
7:	S7STOP	<input type="checkbox"/>	<input type="checkbox"/>	18:	S18STOP	<input type="checkbox"/>	<input type="checkbox"/>	29:	S29STOP	<input type="checkbox"/>	<input type="checkbox"/>
8:	S8STOP	<input type="checkbox"/>	<input type="checkbox"/>	19:	S19STOP	<input type="checkbox"/>	<input type="checkbox"/>	30:	S30STOP	<input type="checkbox"/>	<input type="checkbox"/>
9:	S9STOP	<input type="checkbox"/>	<input type="checkbox"/>	20:	S20STOP	<input type="checkbox"/>	<input type="checkbox"/>	31:	S31STOP	<input type="checkbox"/>	<input type="checkbox"/>
10:	S10STOP	<input type="checkbox"/>	<input type="checkbox"/>	21:	S21STOP	<input type="checkbox"/>	<input type="checkbox"/>	32:	S32STOP	<input type="checkbox"/>	<input type="checkbox"/>
11:	S11STOP	<input type="checkbox"/>	<input type="checkbox"/>	22:	S22STOP	<input type="checkbox"/>	<input type="checkbox"/>				


 Write Close

17.4.9.9. Servo ON / OFF (each robot)

Servo ON/OFF (each robot) parameter

Servo OFF		INPUT	OUTPUT
M1SRVOFF	Servo OFF Robot 1	<input type="checkbox"/>	Servo ON disable Robot 1 <input type="checkbox"/>
M2SRVOFF	Robot 2	<input type="checkbox"/>	Robot 2 <input type="checkbox"/>
M3SRVOFF	Robot 3	<input type="checkbox"/>	Robot 3 <input type="checkbox"/>


Servo ON		INPUT	OUTPUT
M1SRVON	Servo ON Robot 1	<input type="checkbox"/>	During servo ON Robot 1 <input type="checkbox"/>
M2SRVON	Robot 2	<input type="checkbox"/>	Robot 2 <input type="checkbox"/>
M3SRVON	Robot 3	<input type="checkbox"/>	Robot 3 <input type="checkbox"/>



17.4.9.10. Machine lock (each robot)

Machine lock (each robot) parameter

		INPUT	OUTPUT
M1MELOCK	Machine lock Robot 1	<input type="checkbox"/>	During Machine lock Robot 1 <input type="checkbox"/>
M2MELOCK	Robot 2	<input type="checkbox"/>	Robot 2 <input type="checkbox"/>
M3MELOCK	Robot 3	<input type="checkbox"/>	Robot 3 <input type="checkbox"/>



17.4.10. RS-232

Set up the communication environment of the RS-232C interface located at the front of the robot controller.
(Only CRnD-750 Controller)

The screenshot shows a dialog box titled "RS-232 parameter" with a close button in the top right corner. Inside the dialog, there is a section labeled "RS-232" containing several dropdown menus for configuration:

- Baud rate (CBAU232) : 9600
- Data : 8
- Parity (CPRTY232) : Even
- Stop bit (CSTOP232) : 2
- Termination (CTERM232) : CR
- Protocol (CPRC232) : Procedural

At the bottom right of the dialog, there are two buttons: "Write" and "Close".

17.4.11. User-defined area

Specify the area (rectangular) defined by two Cartesian coordinate points.


The screenshot shows a dialog box titled "User-defined area parameter" with a close button in the top right corner. The dialog is divided into several sections:

- User-defined area1** (dropdown menu)
- Type (AREA1AT)**: Buttons for "None", "Signal", and "Error".
- Signal# (USRAREA)**: Input fields for "Start:" (10064) and "End:" (10071), with a "Set..." button.
- Robot No.(AREA1ME)**: A dropdown menu showing "1 : RV-4FL-Q".
- Position (AREA1P1)**: A section with a "[mm, deg]" label and input fields for X (0.00), Y (0.00), Z (0.00), A (-360.00), B (-360.00), C (-360.00), L1 (0.00), and L2 (0.00). A "Teach" button is located to the right of the L2 field.
- Position (AREA1P2)**: A section with a "[mm, deg]" label and input fields for X (0.00), Y (0.00), Z (0.00), A (360.00), B (360.00), C (360.00), L1 (0.00), and L2 (0.00). A "Teach" button is located to the right of the L2 field.

At the bottom of the dialog, there is a "KEY" icon on the left and "Write" and "Close" buttons on the right.

17.4.12. Free plane limit


Set the overrun limit used on free planes.

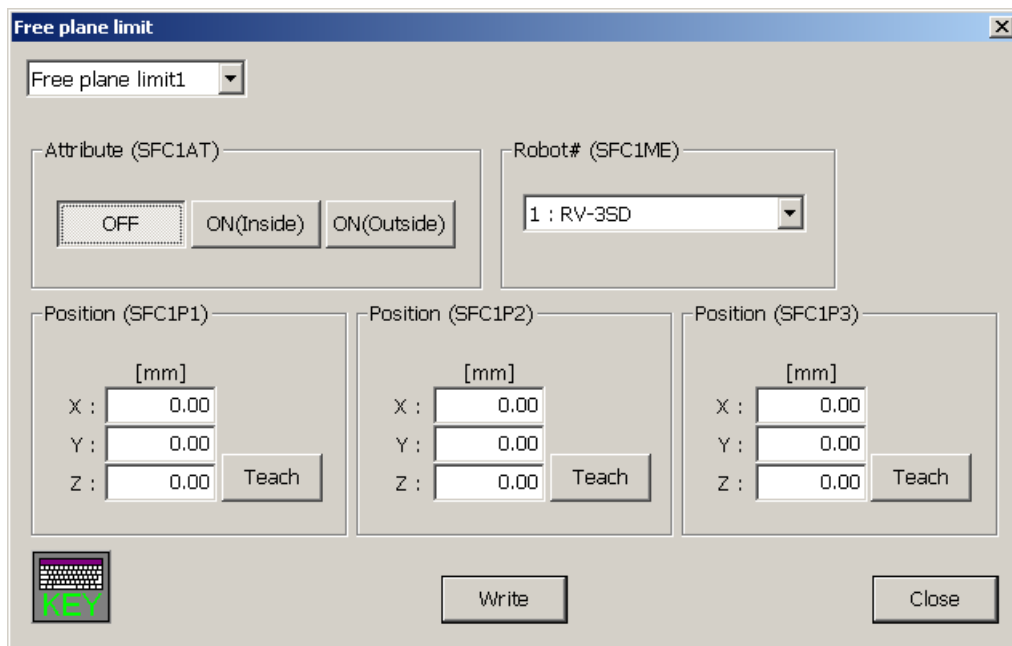

The 'Free plane limit' dialog box is used to configure overrun limits. It features a dropdown menu for 'Free plane limit1' set to 'Free plane limit1'. Below this are two main sections: 'Attribute (SFC1AT)' with buttons for 'OFF', 'ON(Inside)', and 'ON(Outside)'; and 'Robot# (SFC1ME)' with a dropdown menu showing '1 : RV-3SD'. The bottom section contains three 'Position (SFC1P1)', 'Position (SFC1P2)', and 'Position (SFC1P3)' panels, each with X, Y, and Z coordinate inputs (all set to 0.00) and a 'Teach' button. At the bottom left is a 'KEY' icon, and at the bottom right are 'Write' and 'Close' buttons.

17.4.13. Home position

Set the position of the escape point.

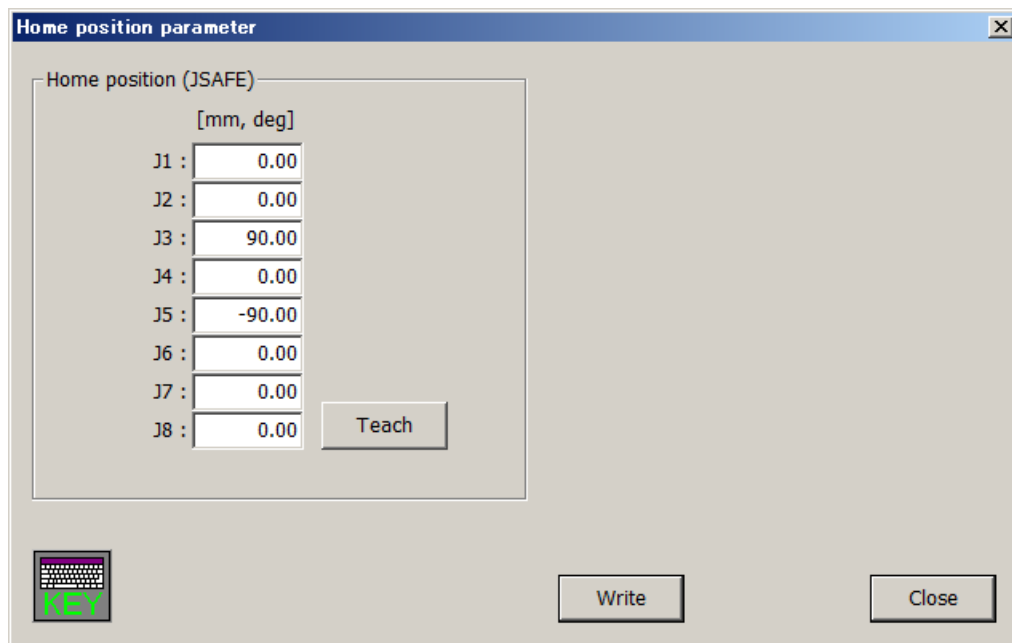


The 'Home position parameter' dialog box is used to set the escape point. It features a 'Home position (JSAFE)' section with a table of joint positions in mm and degrees. The table is as follows:

	[mm, deg]
J1 :	0.00
J2 :	0.00
J3 :	90.00
J4 :	0.00
J5 :	-90.00
J6 :	0.00
J7 :	0.00
J8 :	0.00

Below the table is a 'Teach' button. At the bottom left is a 'KEY' icon, and at the bottom right are 'Write' and 'Close' buttons.

17.4.14. Program language

Set the program language.

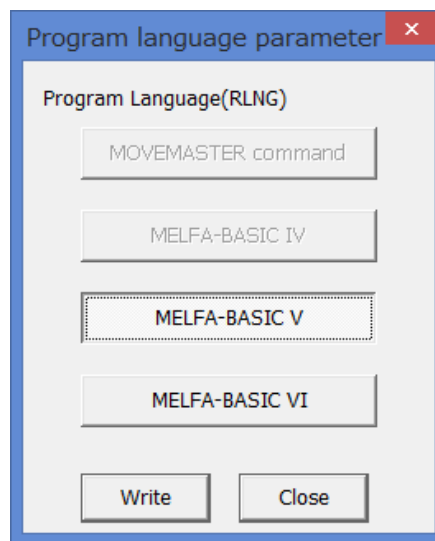

CAUTION


The program language (MELFA-BASIC VI / MELFA-BASIC V / MELFA-BASIC IV / MOVEMASTER command) to be used by the controller can be changed with the "Program language" window.

Note that the robot models that can use the MOVEMASTER commands are limited. Refer to the Standard Specifications for the model in use to confirm whether the commands can be used.

17.4.15. Robot additional axis

You can set information related to addition axes of robots.

This function can be used with Version 3.2 or later of this software.

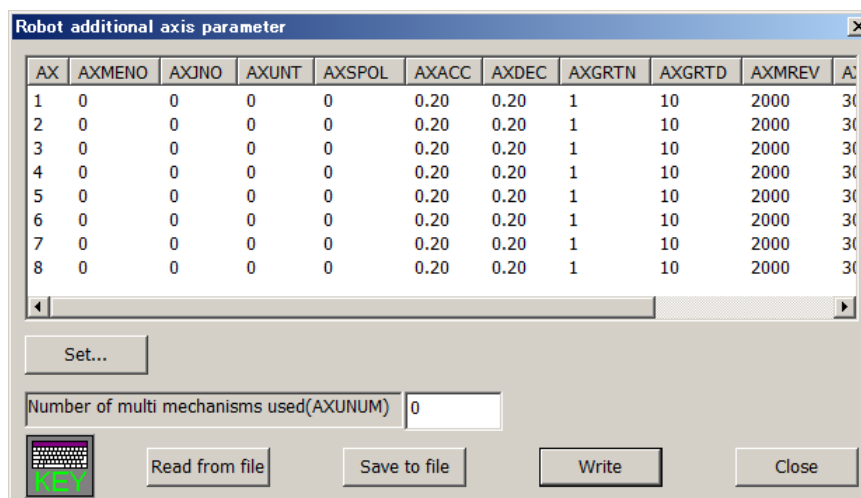


You can read Additional Axis data saved in the file by tapping the [Read from file] button.

You can save Additional Axis parameter to the file by tapping the [Save to file] button.

Select the additional axis information to be edited and double tap or tap [Set...]. The screen for setting information for the additional axis is displayed.


Robot additional axis parameter setting

		AX1
Designation robot #	AXMENO	0
Setting axis #	AXJNO	0
Unit system	AXUNT	0
Rotation direction	AXSPOL	0
Acceleration time	AXACC	0.20
Deceleration time	AXDEC	0.20
Total speed ratio numerator	AXGRTN	1
Total speed ratio denominator	AXGRTD	10
Rated speed	AXMREV	2000
Maximum speed	AXJMX	3000
Encoder resolution	AXENCR	262144
JOG smoothing time constant	AXJOGTS	150.00




17.4.16. Collision detection

You can set information related to the robot's collision detection functions.
This function can be used with Version 3.2 or later of this software.

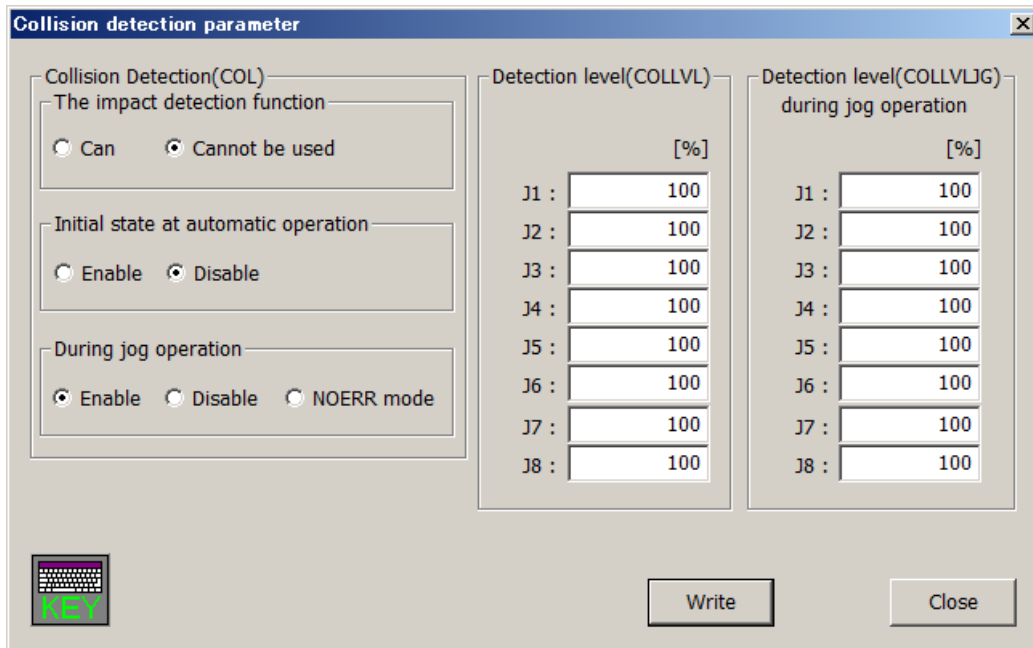

17.4.17. Warm-up operation

You can set information related to the robot's warm-up function.
This function can be used with Version 3.2 or later of this software.

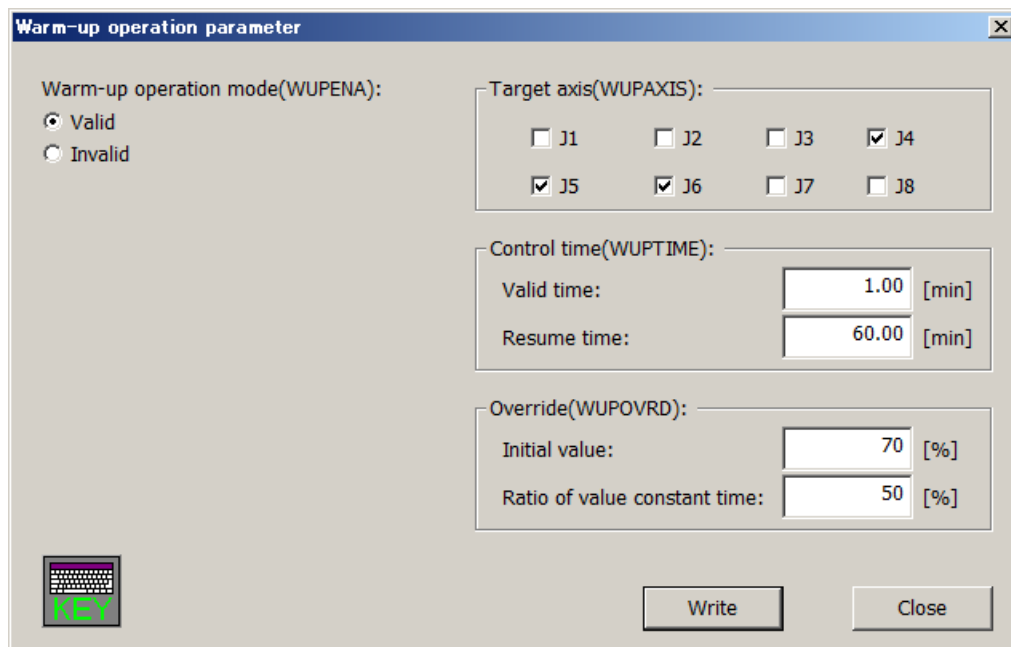


17.4.18. Movement

You can set information related to the optimum acceleration/deceleration for robot operation and set compliance errors.

The information that can be set concerning movement parameters depends on the robot controller connected. This function can be used with Version 3.2 or later of this software. The controller version which can use this function is as follows.


	CR800/75n/700 series	CRn-500 series
Maximum acceleration/deceleration correction ratio	Can be used with all versions	J2 or later
Compliance error function settings		H6 or later
Optimum acceleration/deceleration setting		G1 or later
Direction of gravity		H4 or later

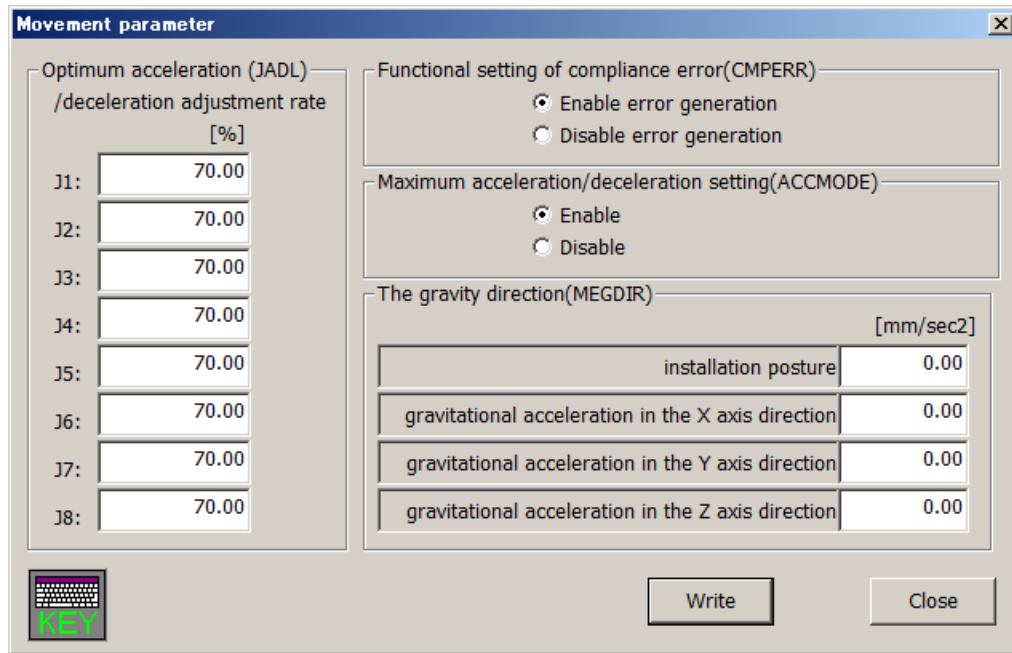

17.4.19. Command


You can set parameters related to robot programs.

This function can be used with Version 3.2 or later of this software.

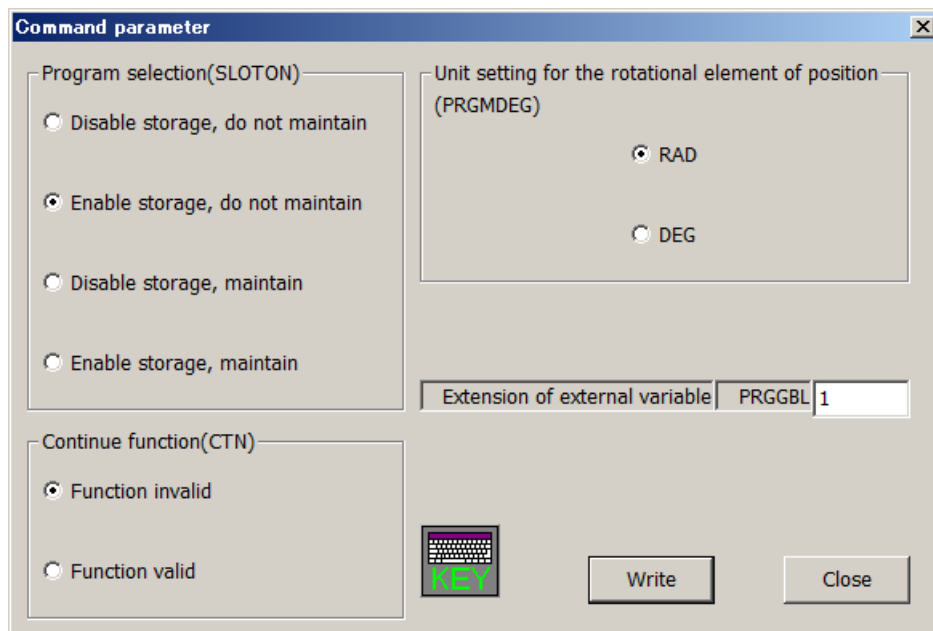


17.4.20. User error

You can set the message, cause, and recovery method for user errors set with a program. This function can be used with Version 3.2 or later of this software.

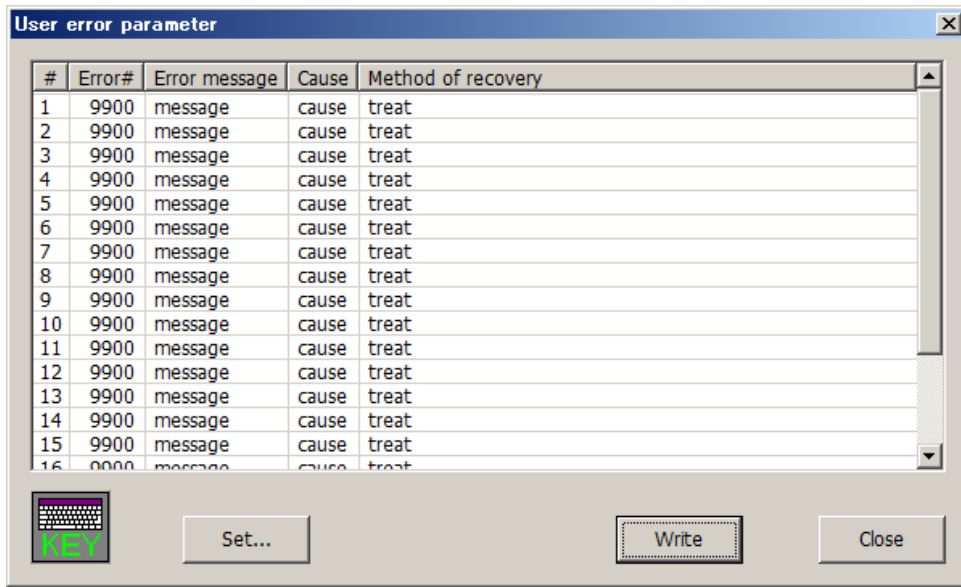

Double tap the error number from the list or tap [Set...] button. The "User Error" edit screen is displayed.

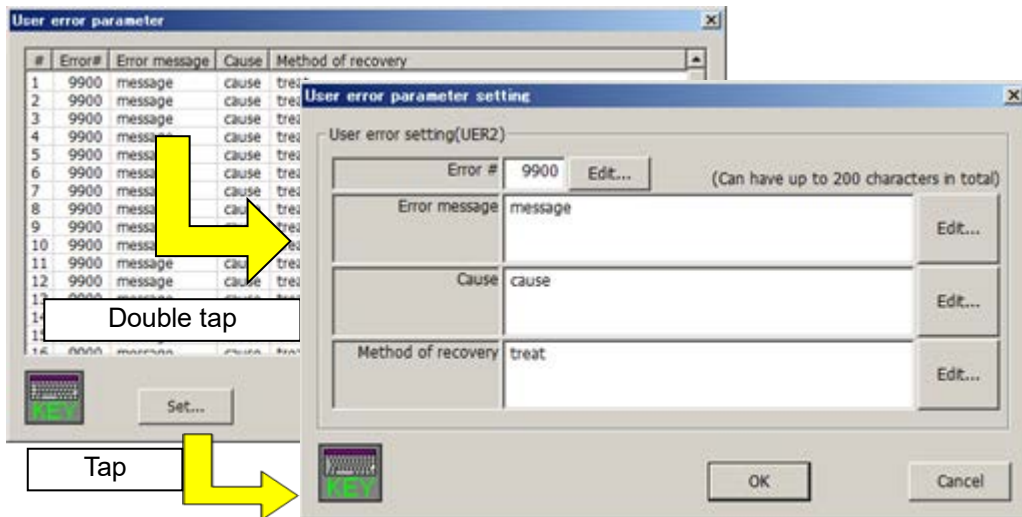

Input the error number, error message, cause, and recovery method, then tap the [OK] button. The user errors input to the list are displayed.

At this time, input an error number from "9000" – "9200".

Please note that the list display is not sorted by error number.

17.4.21. Ethernet

You can set robot controller Ethernet information.

This function can be used with Version 3.2 or later of this software.

Device	Mode	IP address	Port #	Protocol	Exit code
OPT11	1: Server	192.168.0.2	10001	0: No-procedure	0: No-incl
OPT12	1: Server	192.168.0.3	10002	0: No-procedure	0: No-incl
OPT13	1: Server	192.168.0.4	10003	0: No-procedure	0: No-incl
OPT14	1: Server	192.168.0.5	10004	0: No-procedure	0: No-incl
OPT15	1: Server	192.168.0.6	10005	0: No-procedure	0: No-incl
OPT16	1: Server	192.168.0.7	10006	0: No-procedure	0: No-incl
OPT17	1: Server	192.168.0.8	10007	0: No-procedure	0: No-incl
OPT18	1: Server	192.168.0.9	10008	0: No-procedure	0: No-incl
OPT19	1: Server	192.168.0.10	10009	0: No-procedure	0: No-incl

Select the device to edit and double tap. A screen is displayed for setting a variety of device information.

Device:	OPT11
Autoconfiguration:	None
Mode: (NETMODE(1))	1: Server
Port #: (NETPORT(2))	10001
Protocol: (CPRCE11)	0: No-procedure
Exit code: (NETTERM(1))	0: No-included

If you select [MELFA-3D Vision] or [Network Vision Sensor (2D)] at [Auto configuration], the default value corresponding to each device is set to items below [Mode].

CAUTION

Using a CRn-500 series robot controller

When using Ethernet with a CRn-500 series robot controller, the "Ethernet interface" option is required.

17.4.22. Multiple CPU

You can set the parameters related to the Multiple CPU to use the CR800-R/CR800-Q/CR750-Q/CRnQ-700 series robot controller.

These parameters can be set when you are connected to CR800-R/CR800-Q/CR750-Q/CRnQ-700 series robot controller.

This function can be used with Version 3.2 or later of this software.

For details of the multiple CPU setting parameter, refer to the Detailed explanations of functions and operations of the instruction manual.

Multiple CPU parameter

No. of CPU(QMLT CPUN)
No. of CPU:
Please set the number of Multiple CPU.

Multiple CPU synchronous startup setting
 CPU1 CPU3
 CPU2 CPU4

Robot Input Offset(QMLT CPUS)
 Manual Setting
 * 0-14(K word)

Multiple CPU high speed transmission area setting (QMLT CPU1 - QMLT CPU4)

CPU	Send range for each CPU					Automatic Refresh Point
	Point(K)	I/O No.	Point	Start	End	
No.1	1	U3E0	1024	G10000	G11023	0
No.2	1	U3E1	1024	G10000	G11023	0
No.3	0					0
No.4	0					0

Total: Point Advanced setting
The total is up to 14K points.

KEY

Check Write Close

You can check the number of points input and range of total by tapping the [Check] button.

Please refer to the manual of Universal model QCPU (QCPU User's Manual (Multiple CPU System)) for details of Multiple CPU setting.

For iQ-R series, refer to "MULTIPLE CPU SYSTEM FUNCTION" in MELSEC iQ-R CPU Module User's Manual (Application).

17.4.23. CC-Link

Set the information of CC-Link in the robot controller.
This function can be used with Version 3.2 or later of this software.



CAUTION

This function can only be used with a CRn-500 series or CR800-D/CR75n-D/CRnD-700 series robot controller. Also, this function cannot be used with CR800-R/CR800-Q/CR750-Q/CRnQ-700 series robot controller. If you use CR800-R/CR800-Q/CR750-Q/CRnQ-700 series robot controller, please set it with the software of the PLC.

The screenshot shows the 'CC-Link parameter' dialog box with the following settings:

- Register value setting: DIODATA, INPUT: -1, OUTPUT: -1
- CC-Link exchange number setting (CCINFO): Station number: 1, Occupation bureaux: 1, Magnification: 1
- CC-Link transmission speed: CCSPD: 10M
- The status of input when CC-Link data link is abnormal (CCCLR): Clear (selected)
- The exchange number of CC-Link is fixed (CCFIX): Enable (selected)
- CC-Link error is canceled temporarily: CCERR, Err. Cancel
- Adjustment of filter which detects error: CCFIL: 1000, 200

You can reset the error of the CC-Link interface card by tapping the [Err. Cancel] button. After that the same error doesn't occur. It is valid while the power supply of the Robot Controller is ON. When the power supply is turned OFF, the error comes to occur.

17.4.24. PROFIBUS

Set the information of PROFIBUS in the robot controller.
This function can be used with Version 3.2 or later of this software.



CAUTION

This function can only be used with a CRn-500 series or CR800-D/CR75n-D/CRnD-700 series robot controller. Also, this function cannot be used with CR800-R/CR800-Q/CR750-Q/CRnQ-700 series robot controller. If you use CR800-R/CR800-Q/CR750-Q/CRnQ-700 series robot controller, please set it with the software of the PLC.

PROFIBUS parameter

PROFIBUS mode(PBMODE):

Normal

Self check

PROFIBUS master's class(PBMC):


Class1

Class2

Exchange number: (PBNUM)

Error filter: (PBCNT) [msec]

Error is canceled temporarily: (E8500)



You can reset the error of the PROFIBUS interface card by tapping the [Err. Cancel] button. After that the same error doesn't occur. It is valid while the power supply of the Robot Controller is ON. When the power supply is turned OFF, the error comes to occur.

17.4.25. I/O unit

You can set information related to the I/O unit of the PLC.

Set parameters while connected to the robot controller.

This function can be used with Version 3.0 or later of this software. Moreover, the software version of the controller which can use this parameter is as follows.

Controller	S/W Ver. of the controller
CR750-D/CRnD-700/ CR800-D	-
CR750-Q/CRnQ-700	Ver.R3 or later
CR800-R/Q	Can be used with all versions

The screenshot shows the 'IO unit parameter' dialog box. The 'Unit #' dropdown is set to '1'. The 'IO sharing when using Multiple CPUs (QXYREAD)' section has radio buttons for 'Inputs' and 'Outputs', with 'Don't read' selected for both. The 'PC IO unit (QXYUNIT1)' section has dropdowns for 'Base #' (Main), 'Slot #' (0), 'Unit type' (Invalid), and 'Points' (16). The 'Start XY (Hex)' text box contains '0'. The 'IO combined unit' dropdown is set to '10' and 'Response time [msec]' is also set to '10'. There is a 'KEY' icon and 'Write' and 'Close' buttons at the bottom.

When a unit number in [Unit #] is specified, the parameter of the specified unit number is displayed in the PLC I/O unit.


In the [IO sharing when using Multiple CPUs], it is set up whether XY signals read or they don't read

After you change the parameter values, you can rewrite the parameters in the robot controller by tapping the [Write] button.

17.4.26. Work coordinate

Work coordinate parameter defines coordinates used with the WORK jog. 8 work coordinates can be defined. The WORK jog function is available with Ver.2.3 or later of this software. Moreover, the software version of the controller which can use this function is as follows.

Controller	S/W Ver. of the controller
CR750-D/CRnD-700	Ver.P8 or later
CR750-Q/CRnQ-700	Ver.N8 or later
CR800-D/R/Q	Can be used with all versions

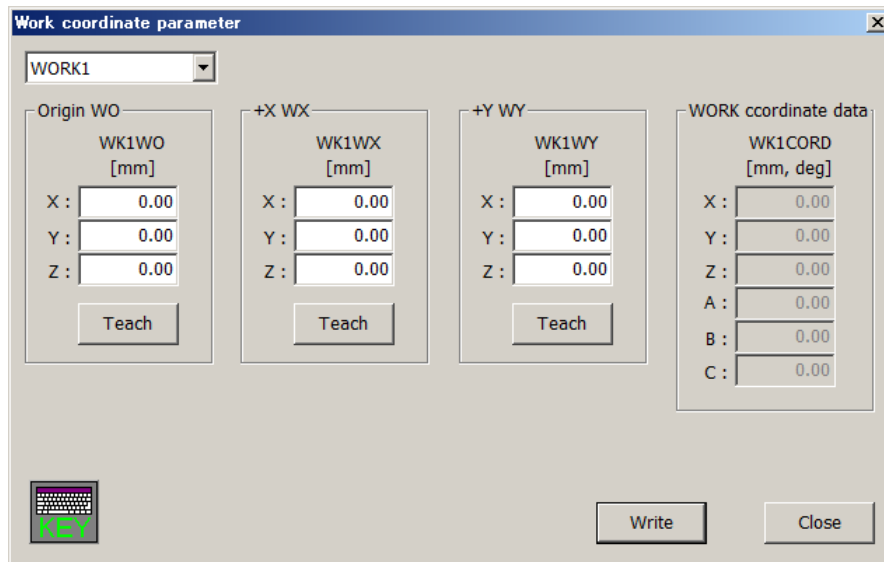

The work coordinate is defined by 3 points; "Origin WO", "+X WX", and "+Y WY".

17.4.27. Force control parameters

You can set parameters of force control in robot controllers.

The force control function can be used with Version 3.0 or later of this software.

For details of these parameters, refer to the user's manual of the force control function.

Controller	S/W Ver. of the controller
CR750-D/CRnD-700	Ver.S3 or later
CR750-Q/CRnQ-700	Ver.R3 or later
CR800-D/R/Q	Can be used with all versions

17.4.27.1. Force sensor

Set the parameters, [Assign sensors], [Sensor coordinates], [Place / Angle], [Filter time constant], [Restriction], and [Tolerance level] which are used by the force control function.

Force sensor parameter

Assign sensor

Robot # (AXMENO)	Axis # (AXJNO)
1: 0	0
2: 0	0
3: 0	0
4: 0	0
5: 0	0
6: 0	0
7: 0	0
8: 0	0

Sensor coordinates

Coordinate systems(FSHAND)

Left-Handed
 Right-Handed

Place / Angle(FSXTL)

[mm]		[deg]	
X: 0.00	A: 0.00		
Y: 0.00	B: 180.00		
Z: 0.00	C: 0.00		

Filter time constant(FSFLCTL)

Sensor data: 1.70 [ms]

Restriction

Max. offset(FSCORMX)

Position: 10.00 [mm]
Angle: 10.00 [deg]

Tolerance level(FSLMTMX)

[N,Nm]	
Fx: 0.00	
Fy: 0.00	
Fz: 0.00	
Mx: 0.00	
My: 0.00	
Mz: 0.00	


KEY

Write Close

After you change the parameter values, you can rewrite the parameters in the robot controller by tapping the [Write] button.

17.4.27.2. Force control mode

Set the parameters, [Coordinate system], [Control mode of axes], [Stiffness coefficients], and [Dumping coefficients] which are used by the control mode of force control function.

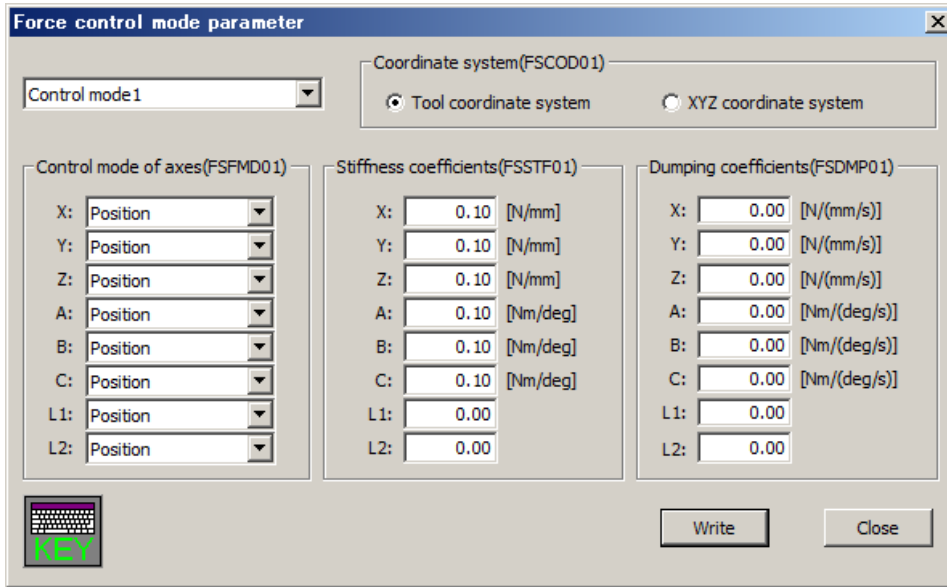

After you change the parameter values, you can rewrite the parameters in the robot controller by tapping the [Write] button.

17.4.27.3. Force control characteristics


Set the parameters, [Gain], [Instruction], and [Detection] which are used by the control feature of force control function.

The “Mode switch judgment/Speed reference” button is displayed in this software 3.1 or later. The controller which can set the parameters [Mode switch judgment] and [Speed reference] is as follows.


Table 17-6 Robot controller which can set the parameters [Mode switch judgment] and [Speed reference]

Controller	S/W Ver. of the controller
CR750-D/CRnD-700	Ver.S3g or later
CR750-Q/CRnQ-700	Ver.R3g or later
CR800-D/R/Q	Can be used with all versions

(1) In the case of using version 3.0 or earlier

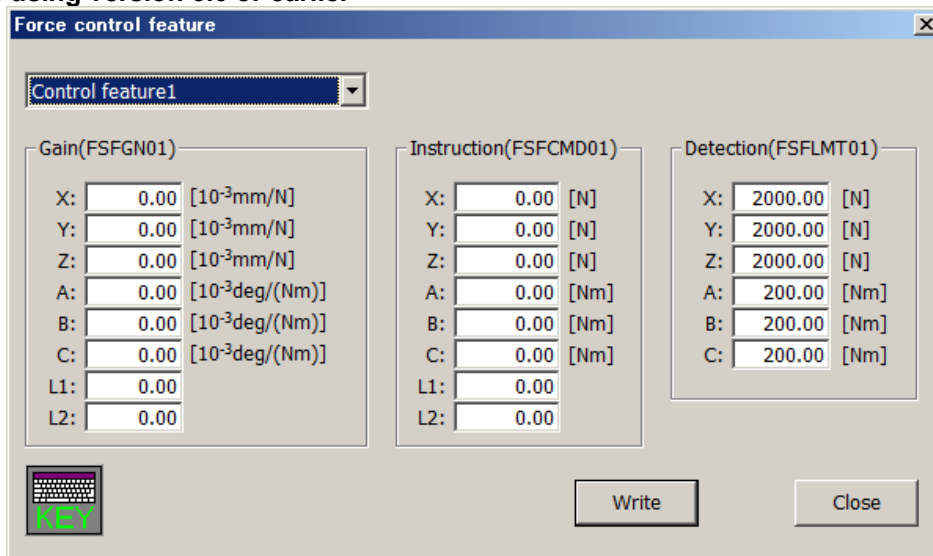


(2) In the case of using version 3.1 or later

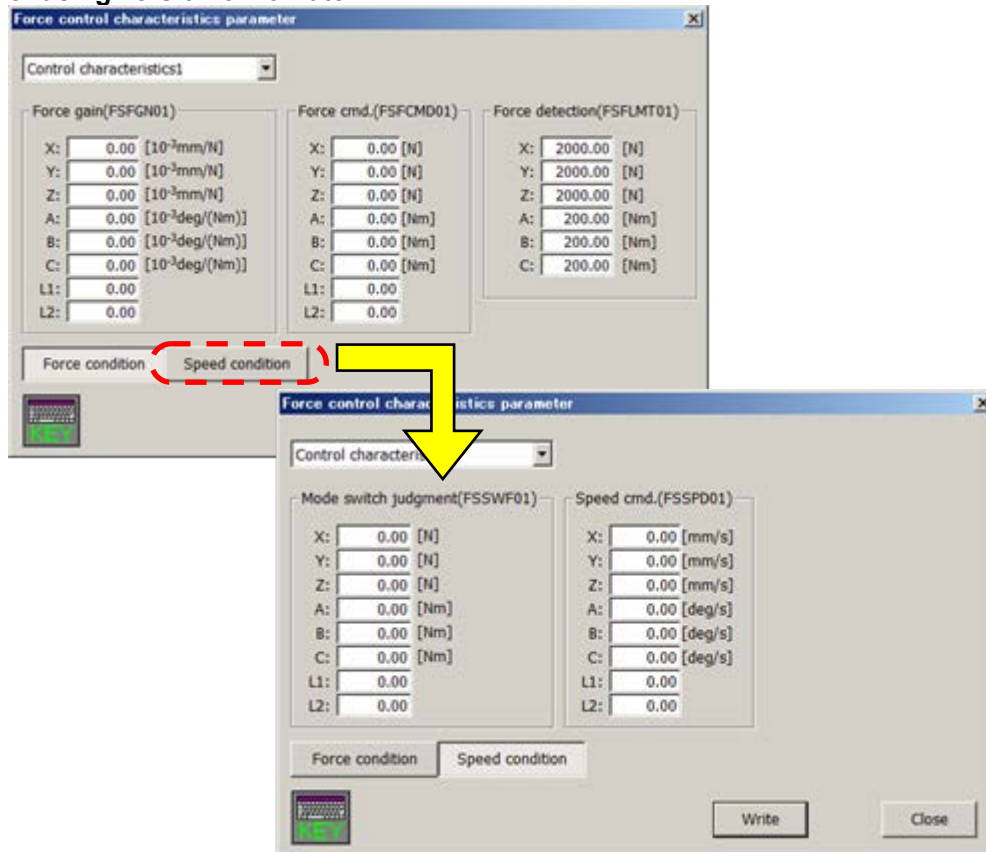

After you change the parameter values, you can rewrite the parameters in the robot controller by tapping the [Write] button.

17.4.27.4. Force log

Set the parameters, [Configuration] and [FTP setting] which are used by the force control function.

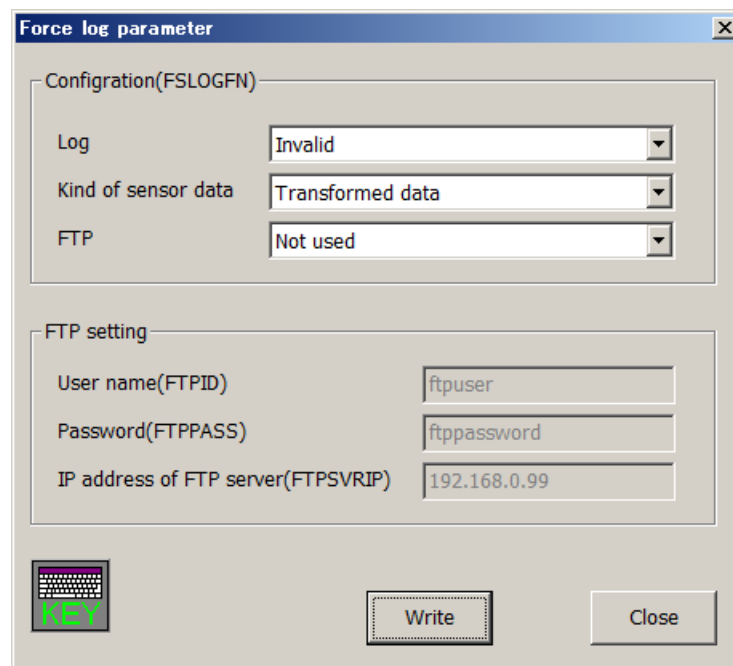

After you change the parameter values, you can rewrite the parameters in the robot controller by tapping the [Write] button.

17.4.28. Real-time external control command


Set the information of the Real-time external control (MXT).
This function can be used with Version 3.2 or later of this software.

The screenshot shows a dialog box titled "Real-time external control command parameter". It contains the following fields and controls:

- Communication destination IP Address #1: (MXTCOM1)
- Communication destination IP Address #2: (MXTCOM2)
- Communication destination IP Address #3: (MXTCOM3)
- Timeout (-1: timeout disabled): (MXTTOUT) 7.11[msec] x
- A keyboard icon with the word "KEY" in green text below it.
- "Write" and "Close" buttons.

17.4.29. User definition parameter

In the “User definition parameter” window, it is possible to edit the parameters, which prepared by the definition files, at the one window.

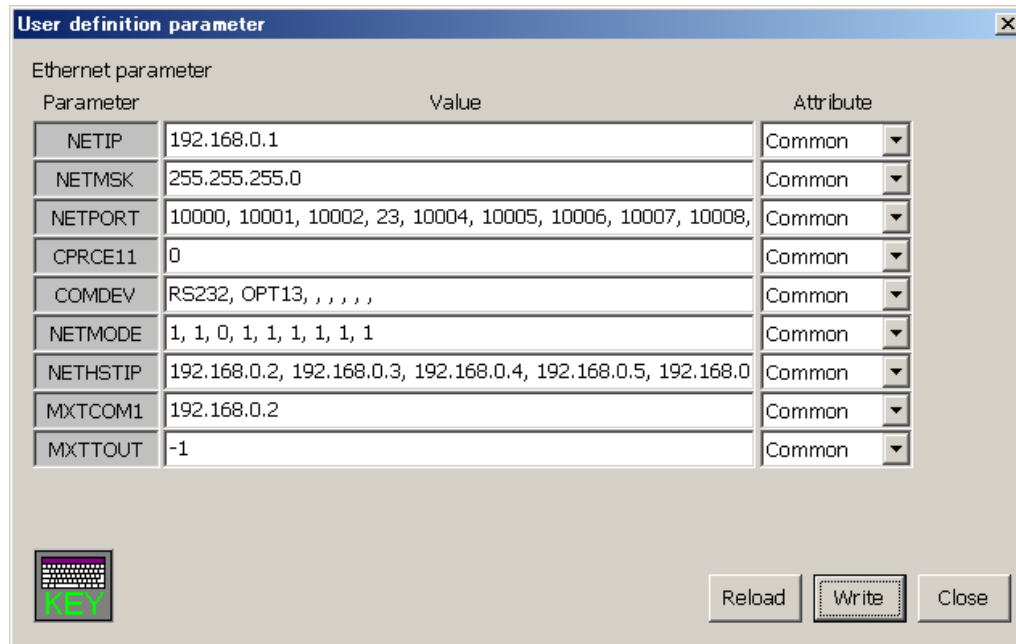

Create the definition files beforehand in PC, and copy the files to T/B.

File name

Paramxx.TXT (xx = 01 to 10)

It is possible to create the different definition files up to 10.

Folder in T/B to copy to

/ IPSM / MELFA / UserDef

Please make the “UserDef” folder by yourself.

Format of the parameter definition

The 1st line : “;” (semicolon) + title string

The 2nd line : parameter name + “;” (semicolon)

One parameter name is written on one line, and these can be arrayed up to 10 line.

(Example)


```
;Ethernet parameter
NETIP;
NETMSK;
NETPORT;
CPRCE11;
COMDEV;
NETMODE;
NETHSTIP;
MXTCOM1;
MXTTOUT;
```

17.5. Find

Strings can be found from the parameter list being displayed.

Tap the [Find word] button, and enter the string you want to find in the find string field, and tap [Search] button. (<a>)

The specified string is found from the current cursor position in the parameter list to the direction specified.

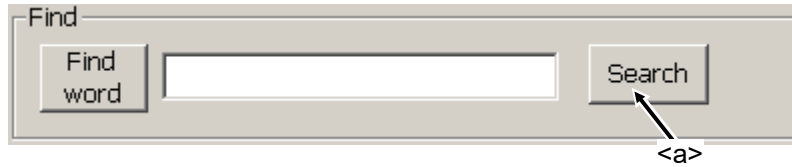


17.6. Power Reset of the Robot Controller

To make modified parameters effective, it is necessary to power on the robot controller again. The power reset of the robot controller can be performed from T/B.

After setting parameters, the power reset confirmation screen appears.

To immediately reset the power, select [Yes]. (<a>)


To set more parameters, set all the necessary parameters first, and then select [Yes]. ()

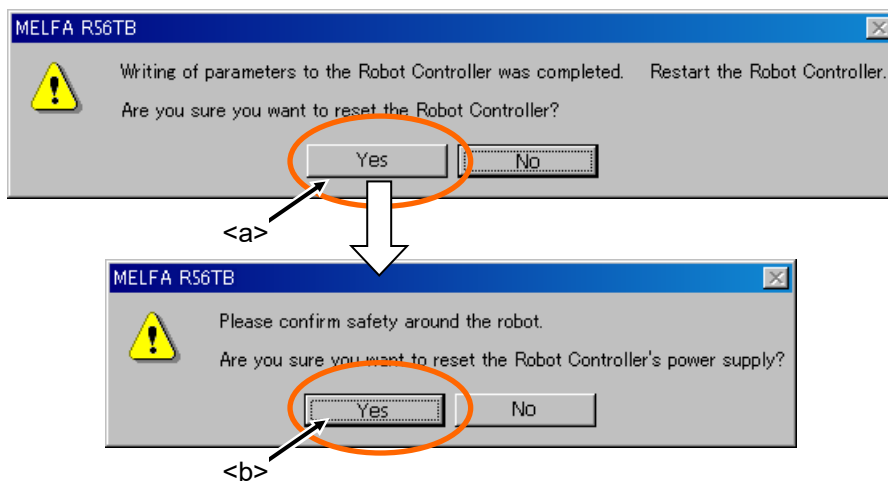


18. System option

“System option” has system property setting functions.
 “System option” is shown by following operation.


Version

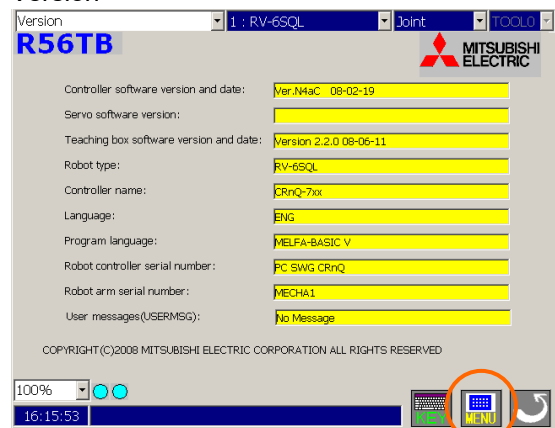

Menu

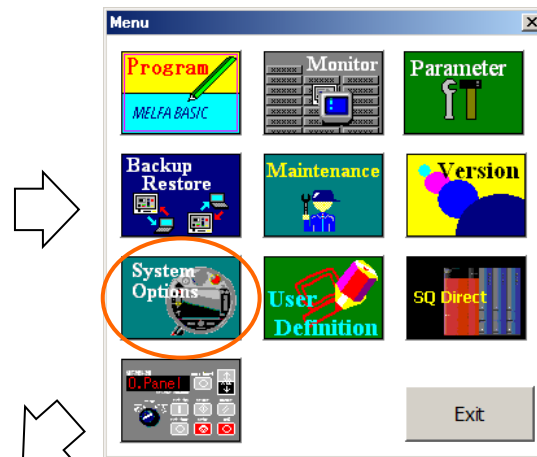


System option

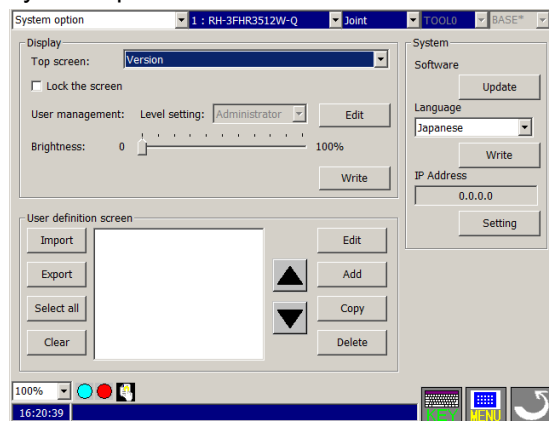

18.1. Display

On “Display”, set the screen name when T/B is started and T/B brightness. The operation is as follows.

- 1) Set the screen name when T/B is started to “Top screen”.
- 2) The screen selecting from 1) is locked by checking [Lock the screen] (<a>). Please set password by [Edit] button (). This function is supported by version 3.4 or later of this software.
- 3) When adding screen usage restrict, it can be set by user management. This function is explained later (**18.2 User management**). This function can be used after the software version Ver.4.1.
- 4) Set T/B brightness to “Brightness”.
- 5) Tap [Write] button. (<c>)

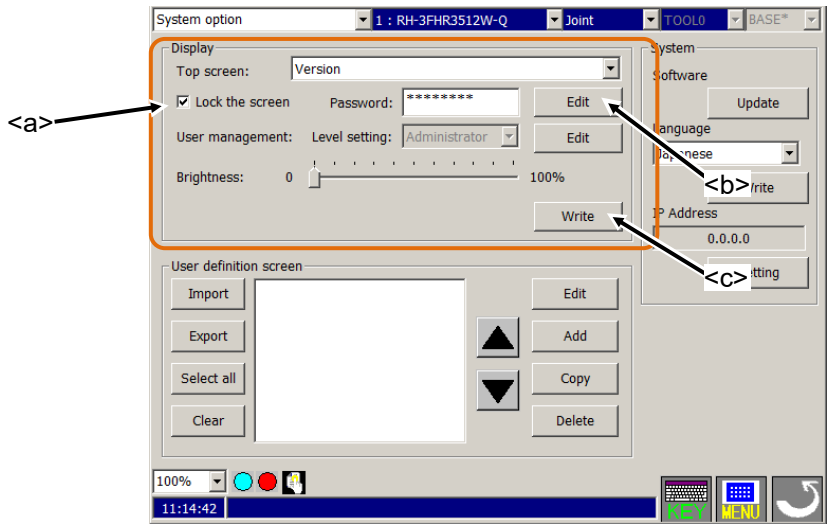

“User definition screen” is supported by version 2.2 or later of this software.



Caution

Please note the management of the password enough.

It becomes impossible to release the lock of screen when the password is forgotten. Please note the management of the password enough.

18.2. User management

It is used to restrict the use of R56 TB screen.


In addition to the administrator, you can set up to 3 levels of users.

Usage authority is set in the order of administrator> level 1> level 2> level 3.

18.2.1. User management edit

When you tap [Edit] button, password entry screen will be displayed. The initial password is "POWER". You can change this password in the user management window that opens next.


In the initial state, the number of user levels is 0 and only the administrator exists.

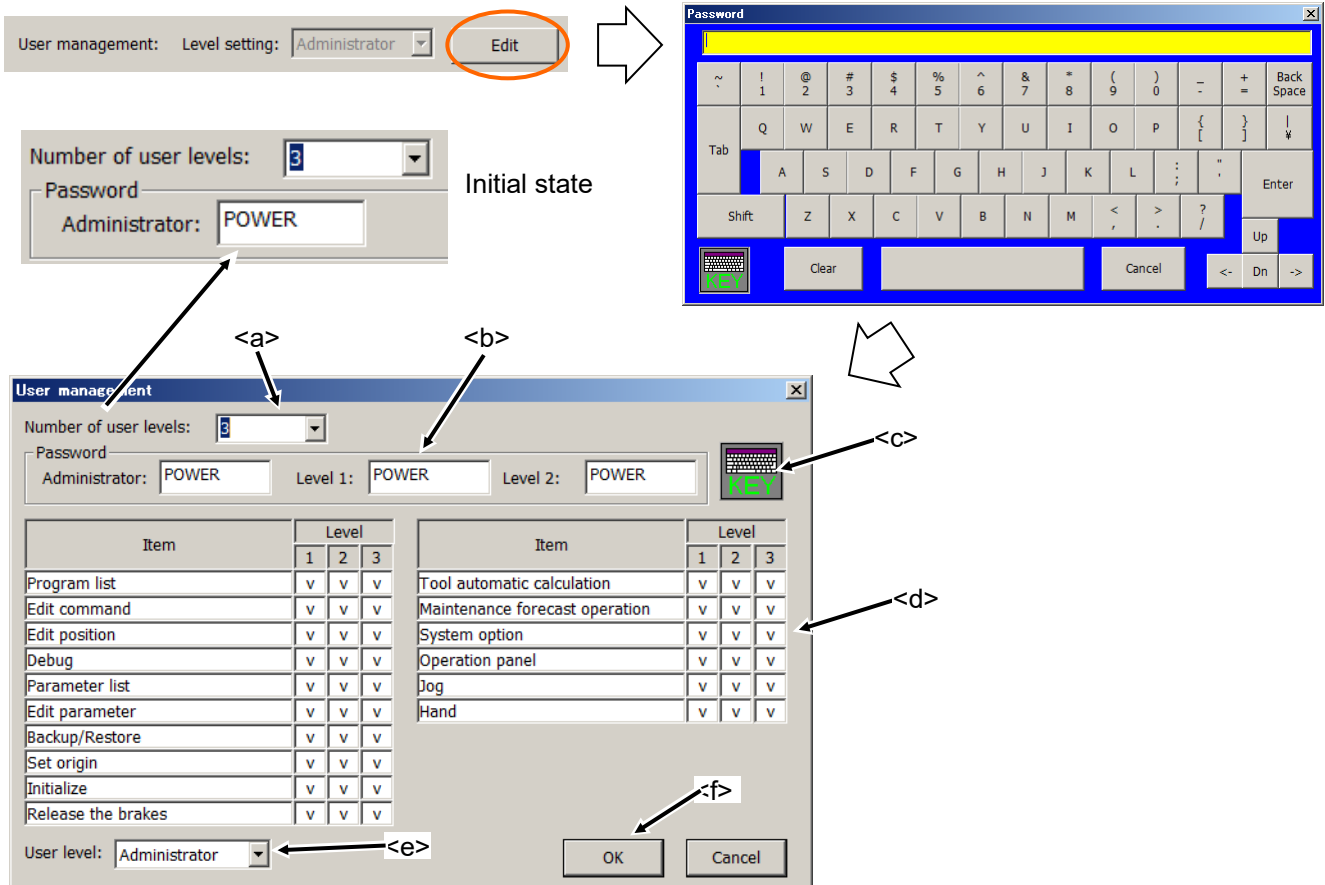

1) Select the number of user levels (0 to 3) with the user level number combo box <a>. To set the user management state (initial state), you can set the number of user levels to 0.

2) Set the password according to the number of administrator and user level.

It cannot set the password of the lowest level user. For example, if the number of user levels is 2, level 2 becomes the lowest user, so you can not set a password.

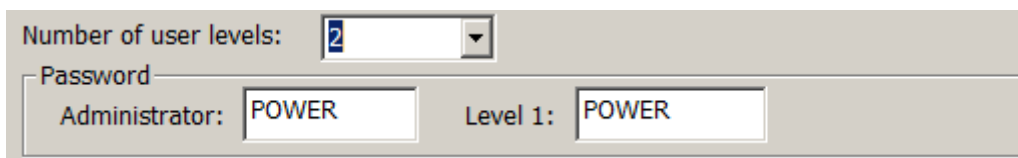

Tap [KEY] button <c> to open the keyboard.

3) Set usage restrictions for each screen by level. <d>

A screen with check (V) indicates that it is usable. Check is switched by tapping the screen. Gray display shows unused levels and cannot be changed.

Item	Level		
	1	2	3
Program list	v		v
Edit command	v		v
Edit position	v		v
Debug	v		v
Parameter list	v		v
Edit parameter	v		v
Backup/Restore	v	v	v

Annotations:
 - Arrow pointing to Level 3 column: Unused level
 - Arrow pointing to Level 2 column: Unusable
 - Arrow pointing to Level 1 column: Usable

- 4) Select the user level when closing the user management screen. <e>
The user level can also be changed on the system option screen.
- 5) Tap [OK] button <f> to activate the setting.



Caution


Please be careful with password management.

If you forget your password, you will not be able to set or switch user level.
Please pay attention to the management of the set password.

18.2.2. Change the user level



Switch user level on the system option screen. When switching to a lower user, no password input is necessary. When switching to a higher-level user, a password entry screen will be displayed. Please enter a higher password.

When usage restriction is set on the screen,  will be displayed and it will be unusable.

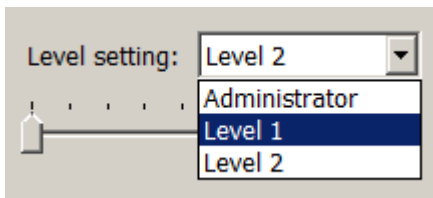

Level2 → Level1

Input level 1 or administrator's password.

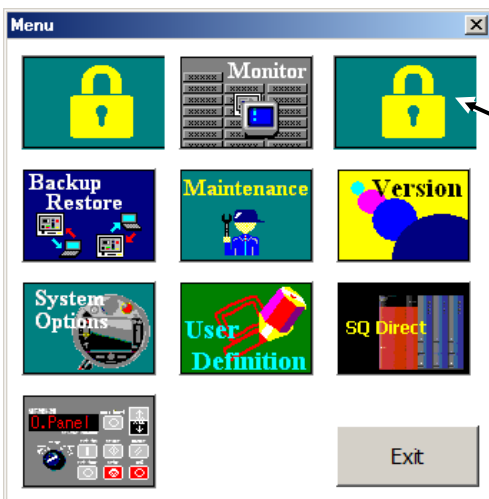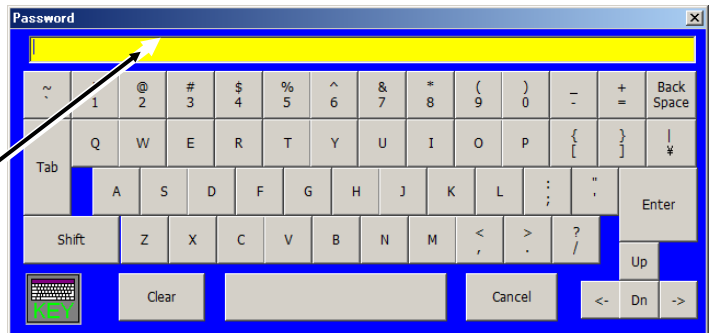


Restricted screen

18.3. Update T/B


Update the T/B software.

This function can be used with Version 3.2 or later of this software.


Prepare the new version of the T/B software and the Update tool. Tap [Update] button. You can update the T/B software.

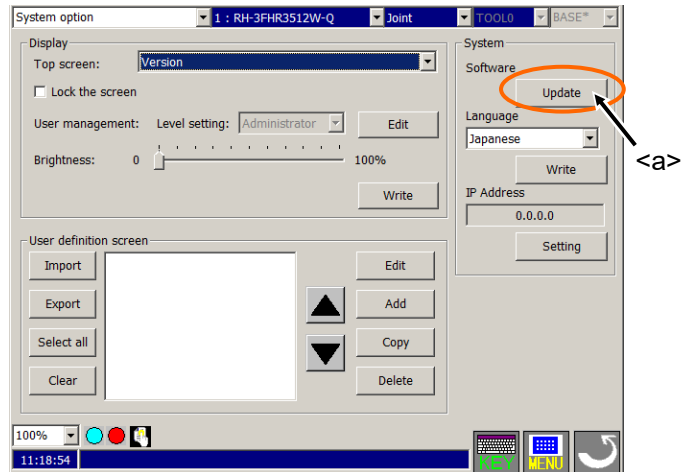


Download the update data (compressed file). Copy the "MELFA_TB_UPDATE" folder in the decompressed data to root folder of the USB memory (ex. If USB memory's drive letter is "D", copy them to "D :/"). Connect the USB memory to the T/B.

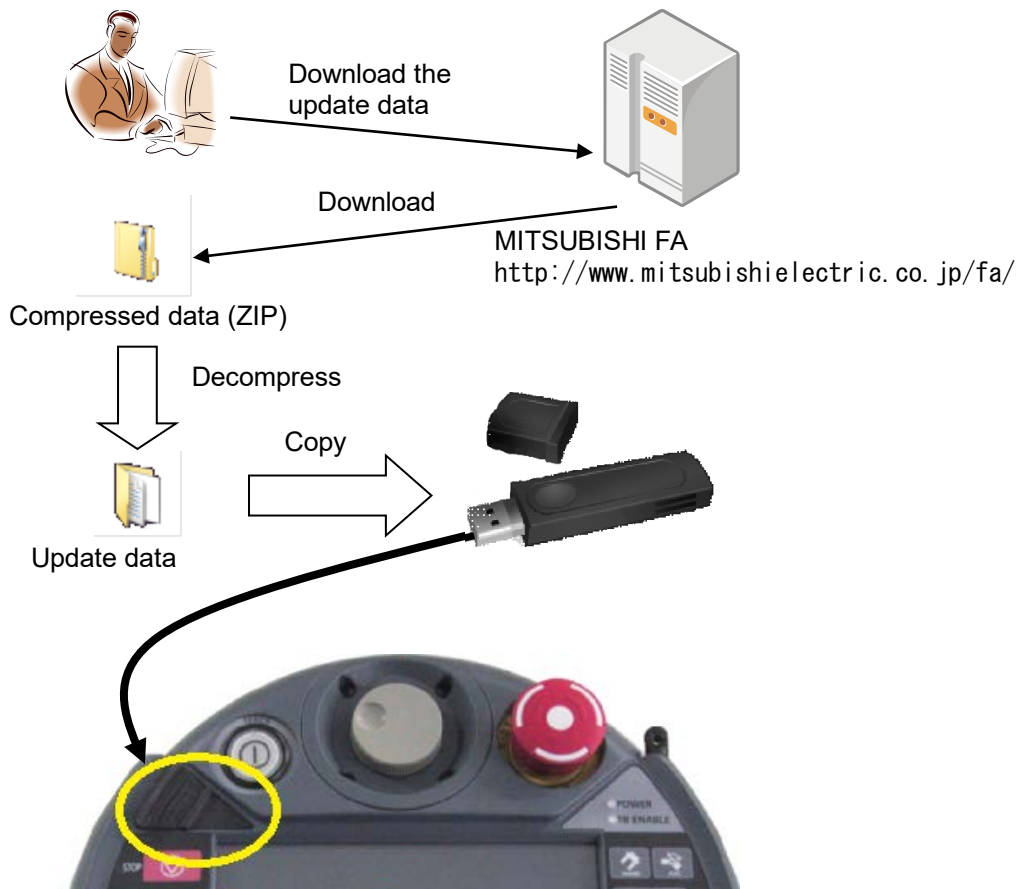

After you tap <a> button, you can see the screen as follows.

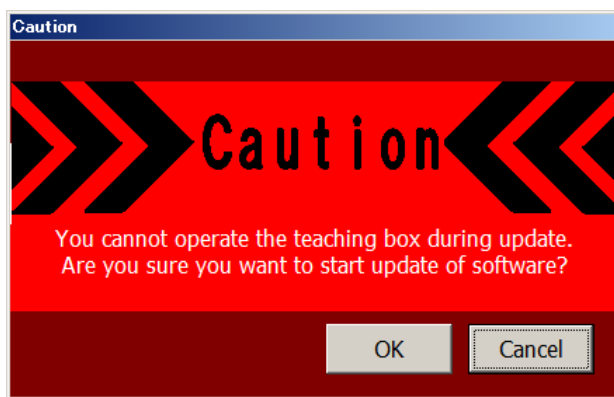


Check the caution, and tap [OK] button, you can see the screen as follows.

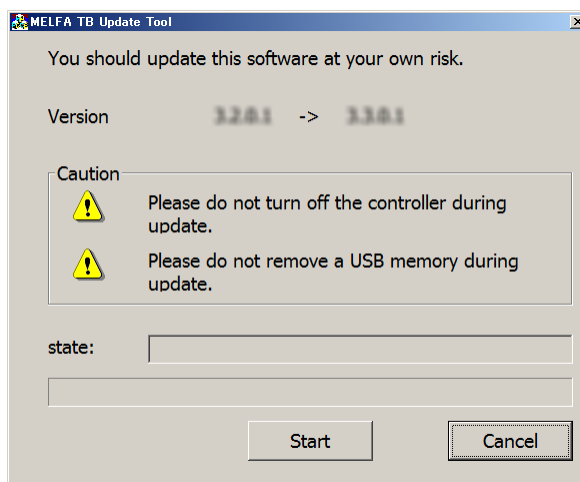

Check the versions before and after update and cautions, and tap [Start] button, start update.

 **CAUTION**


Please do not turn off the controller during update.
If do that, the T/B may be broken.

 **CAUTION**

Please do not remove a USB memory during update.
If do that, the T/B may be broken.


18.4. Language of T/B

You can change the language of the T/B. Select the language (<a>) and tap [Write] button.

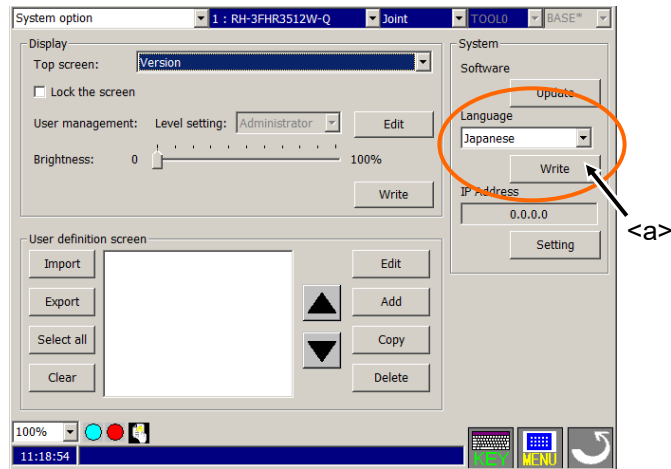

18.5. IP address of T/B

You can set the IP address of the T/B. Tap [Setting] button (<a>). After you tap [Setting] button (<a>), you can see the screen as follows. You can set IP address, Subnet Mask, and Default gateway.

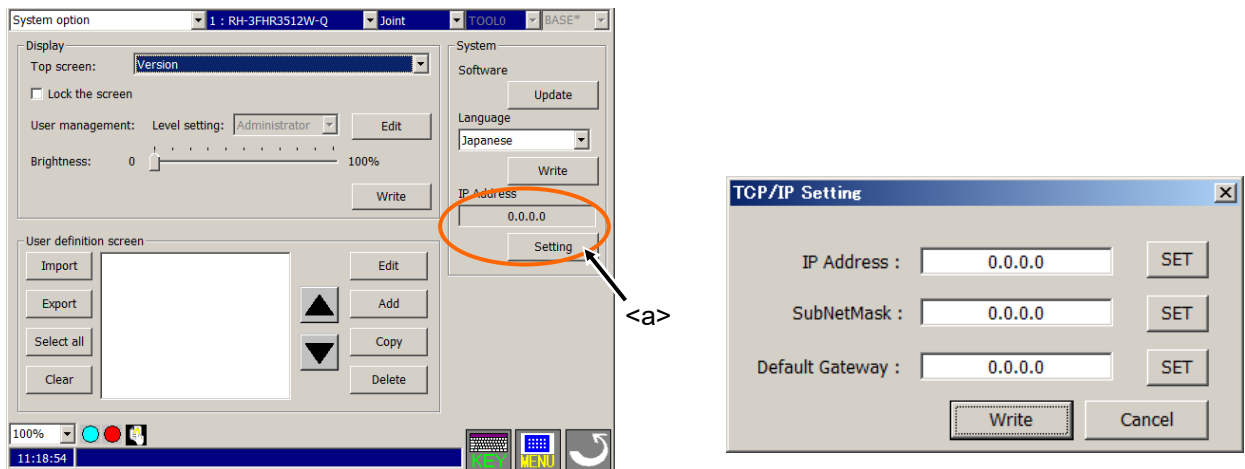

When changing the IP address of the CR7xx-Q controller, please set the IP address as shown in the table below. You can confirm the controller's IP address by Ethernet parameter screen (refer to chapter 0).

CR7xx-Q	CR800-D/Q/R, CR7xx-D
Set an IP address different only for the IP address and host address of the robot controller.	Return to the factory shipment state.
When connecting to other series, type controller, please return to factory shipment state (192.168.100.50).	

19. User definition screen

“User definition screen” is supported by version 2.2 or later of this software.

You can make the customized screen by arranging the parts such as the button and the lamp that synchronize with the I/O signal. You can make two or more pages of definition screens.

This screen can be used by the following usages.

- This screen is used as an operation monitor.
- When the state of T/B is enabling, the peripheral devices such as conveyers is made to work by the button on the screen.

Parts that can be displayed on the user definition screen are as follows.


List 19-1 List of parts

Parts		Explanation	
1	Button	The signal can be output from the robot controller by tapping the button. The signal can be output only in T/B Enabling state.	
2	Lamp	The lamp can be turning on/off by the state of the I/O signal.	
3	Robot information	Variable	The value of the specified variable can be displayed.
		Exe lines	The executing program lines can be displayed.
		Program name	The executing program name can be displayed.
		Exe line num.	The executing line number of the program can be displayed.
		Cur pos	Current positional data of the XYZ coordinate system can be displayed.
	Cur jnt	Current positional data of the joint coordinate system can be displayed.	
4	Label	The character string can be displayed.	
5	Operation Panel Button	You can display operation buttons on the operation panel screen. It can be used with this software version 4.1 or later. RT ToolBox3 can be used with Software Ver.1.00 A or later.	
6	Menu Button	You can display a menu button that transits to the specified screen. It can be used with this software version 4.1 or later. RT ToolBox3 can be edited only with Software Ver.1.40 S or later.	
7	Jog Button	You can display the jog buttons that operate the axis of the robot. It can be used with this software version 4.1 or later. RT ToolBox3 can be edited only with Software Ver.1.40 S or later.	
8	Message	Message can be displayed by the state of the I/O signal.	

19.1. User definition Editor

It is necessary to make the “User definition screen” beforehand to use it.
The “User definition screen” is edited on the system information screen.

- (1) Tap the [MENU] button (<a>) of a T/B screen and display menu panel.
- (2) Tap the [Option] button () in the menu. The System option is displayed.
- (3) You can edit by "User definition screen"(<c>) of "System option" window.

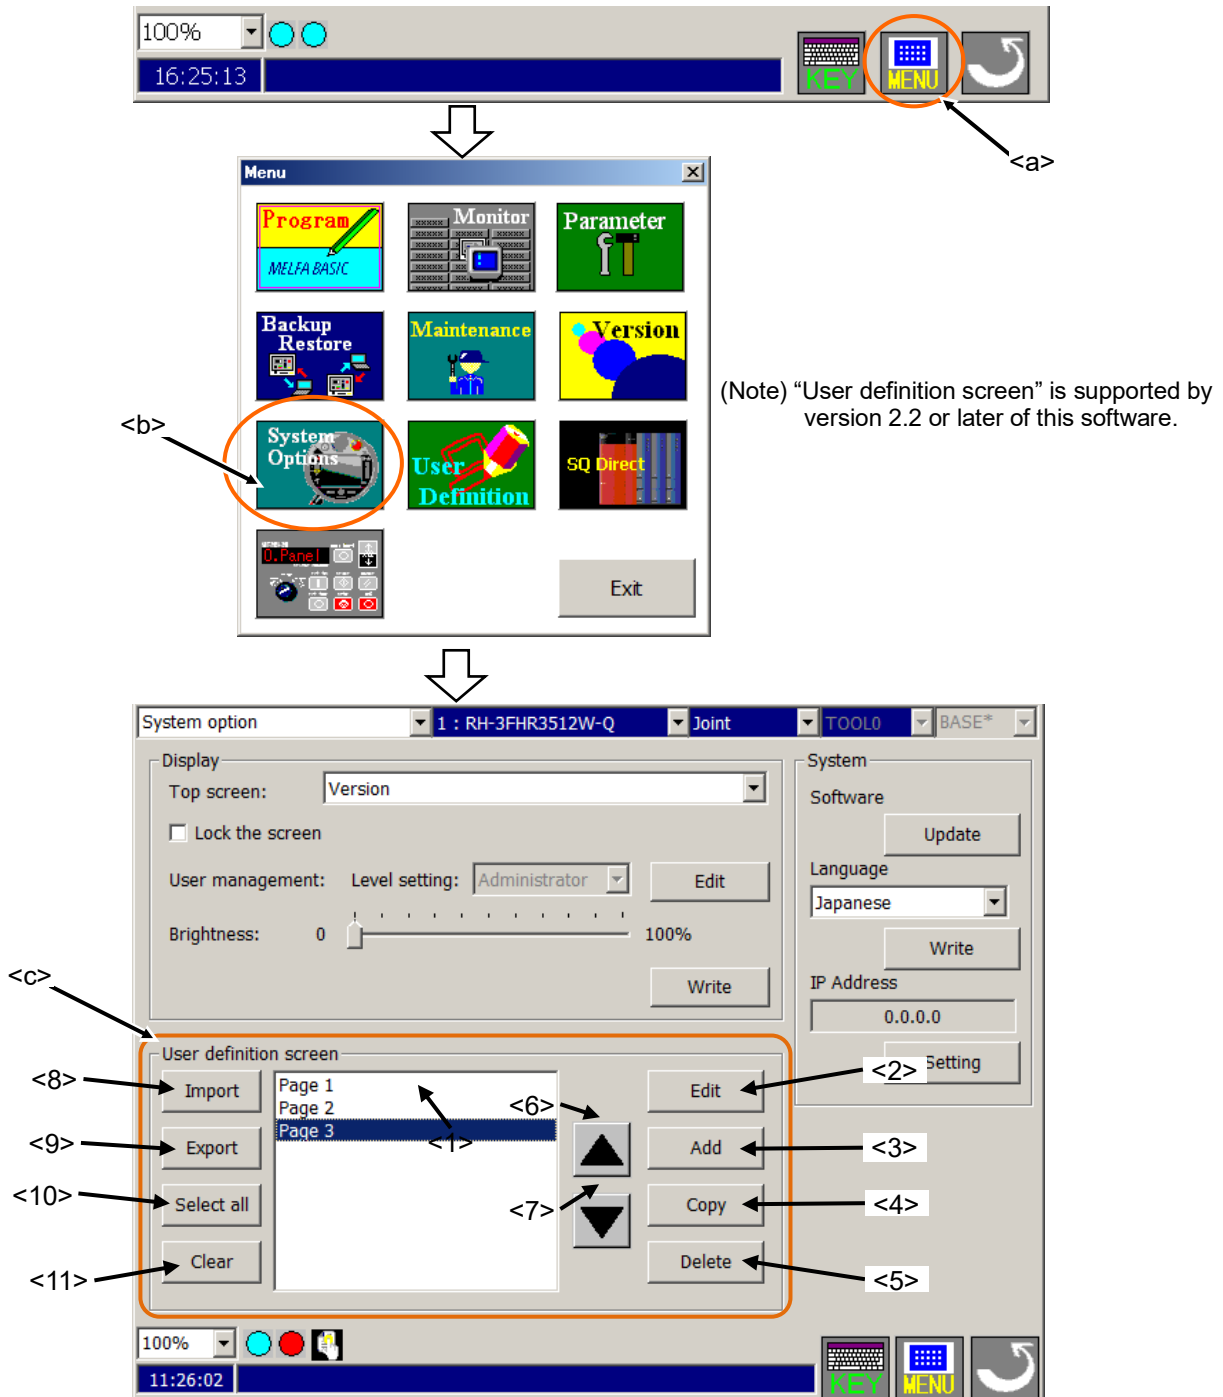


Please refer to “List 19-2 Explanation of user definition screen” for the explanation.

List 19-2 Explanation of user definition screen

	Name	Explanation
<1>	List	The list of registered "User definition screen" is displayed. "User definition screen" is displayed in order as displayed here.
<2>	[Edit]	Existing "User definition screen" is edited.
<3>	[Add]	"User definition screen" is newly added.
<4>	[Copy]	"User definition screen" is copied.
<5>	[Delete]	"User definition screen" is deleted.
<6>	▲	"User definition screen" that has been selected is moved to above.
<7>	▼	"User definition screen" that has been selected is moved to below.
<8>	[Import]	"User definition screen" preserved in USB memory is imported.
<9>	[Export]	Selected "User definition screen" is exported in USB memory.
<10>	[Select all]	"User definition screen" displayed in the list are all selected.
<11>	[Clear]	A present selection is released.

19.1.1. Adding the new page.

To make the new page of "User definition screen", tap [Add] button (<a>).
"User definition screen" window is displayed.


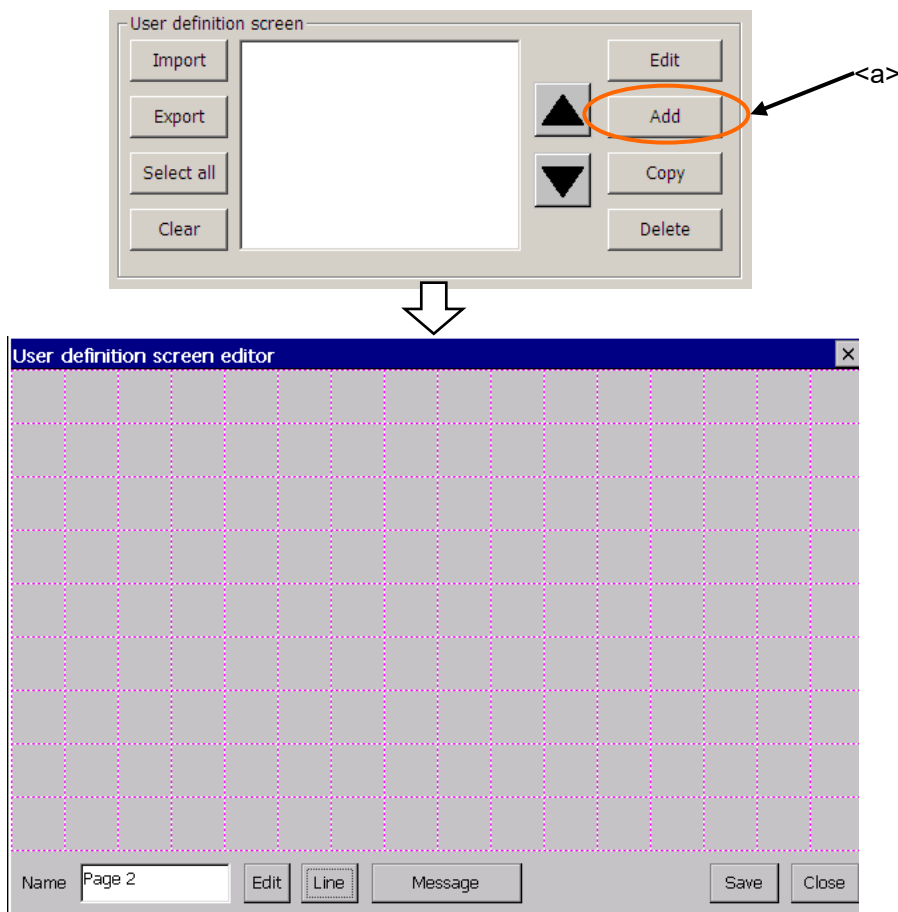


Please refer to "19.1.5 Page edit of "User definition screen"" for the method of editing the page.

19.1.2. Edit of existing page

To edit an existing "User definition screen", tap [Edit] button (<a>) on the window after selecting the user definition screen edited from the list.

The edit display of selected "User definition screen" is displayed.

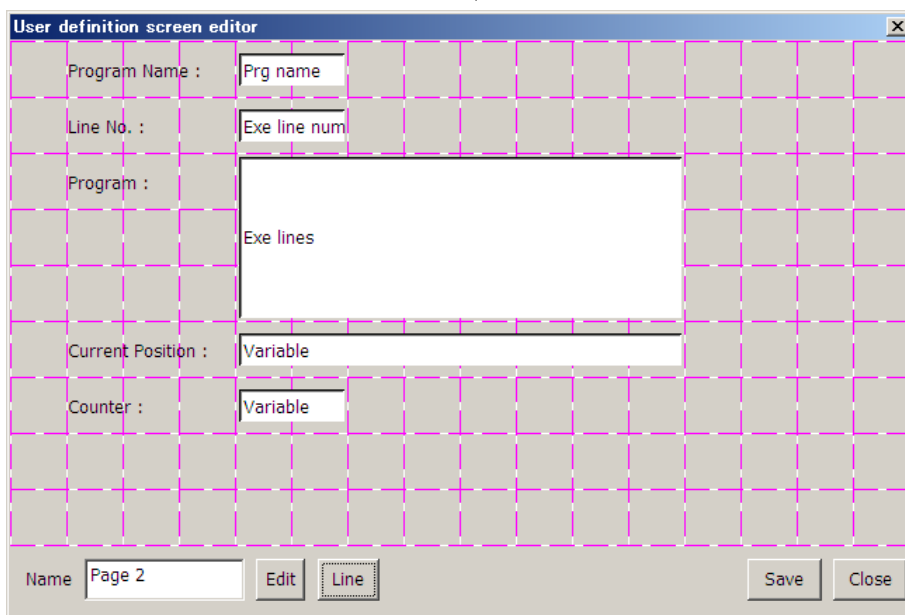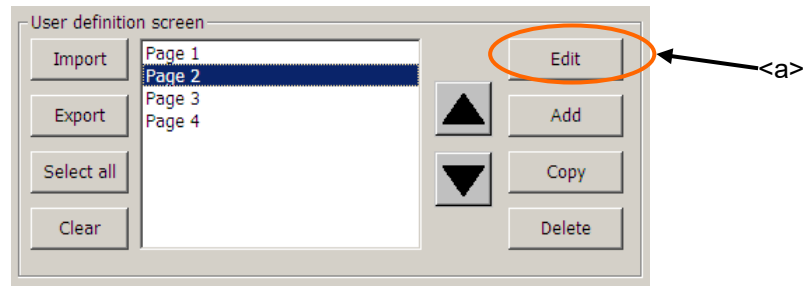


Please refer to "19.1.5 Page edit of "User definition screen"" for the method of editing the page.

19.1.3. Copy of page

You can copy "User definition screen".


To make the copy of existing "User definition screen", tap [Copy] button () after selecting the user definition screen from the list (<a>).

The copy of the selected user definition screen is made (<c>). The name of the copied user definition screen becomes "<Origin Name> copy".

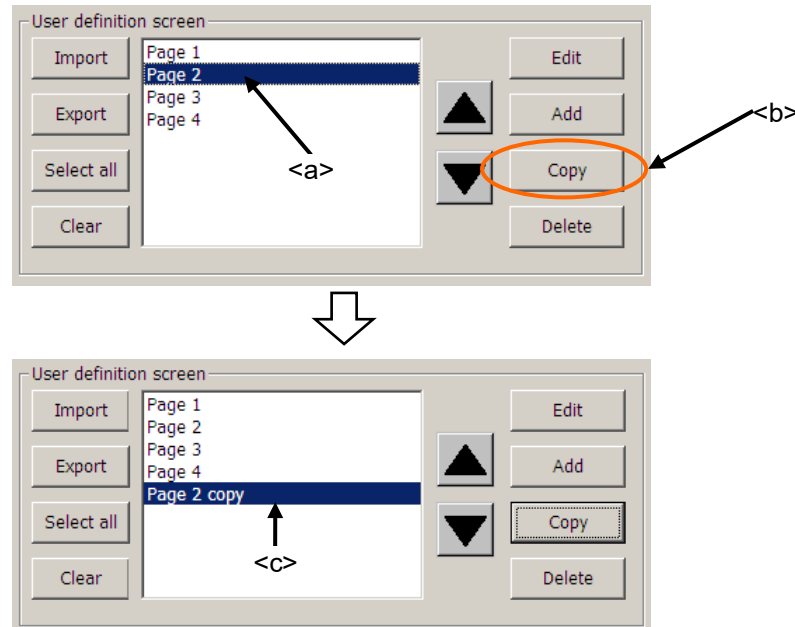

19.1.4. Deletion of page

To delete the existing "User definition screen", tap [Delete] button () after selecting the user definition screen from the list (<a>). After the deletion confirmation message is displayed, tap the [Yes] button.

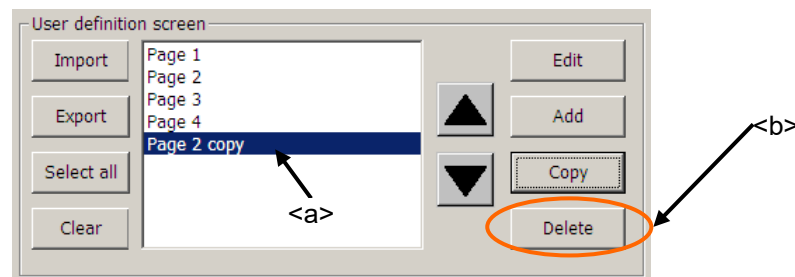


CAUTION

Note that once "User definition screen" are deleted, they cannot be recovered.

19.1.5. Page edit of "User definition screen"



The grid line (<a>) is displayed in the edit display of the user definition screen. Each part can be registered with the block unit () delimited in this grid line.

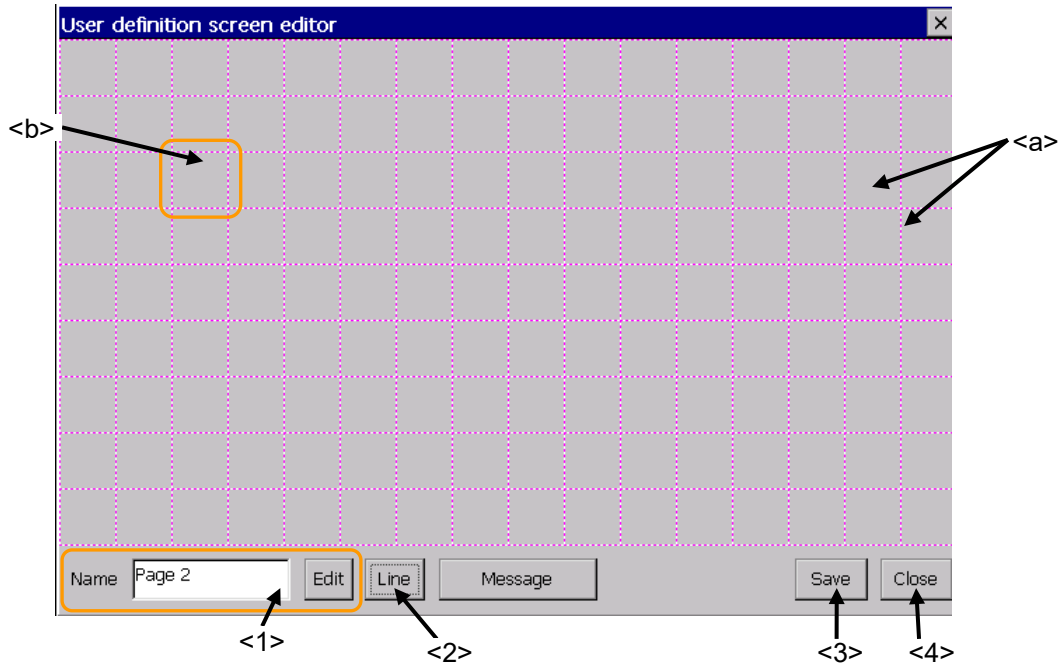

- <1> Name : Page name is set. The name can be input by [Edit] button.
- <2> Line : The ruled line is drawn on "User definition screen".
- <3> Save : The content of the edit is preserved.
- <4> Close : The edit display is closed. When it closes without preserving, the attention message is displayed.

19.1.5.1. Button

- (1) Tap the position (block) in which the button is made (<a>). Left side of the button is arranged in this position.
- (2) After "Select item" window is displayed, tap [Button] button ().
- (3) Set the button name, button size and the kind of button on "Create button" windows.
- (4) The movement of when the button is tapped is set by [Set] button (<c>). The set content is displayed in "Movement setting" (<d>).
- (5) After the setting is completed, tap [OK] button (<e>).

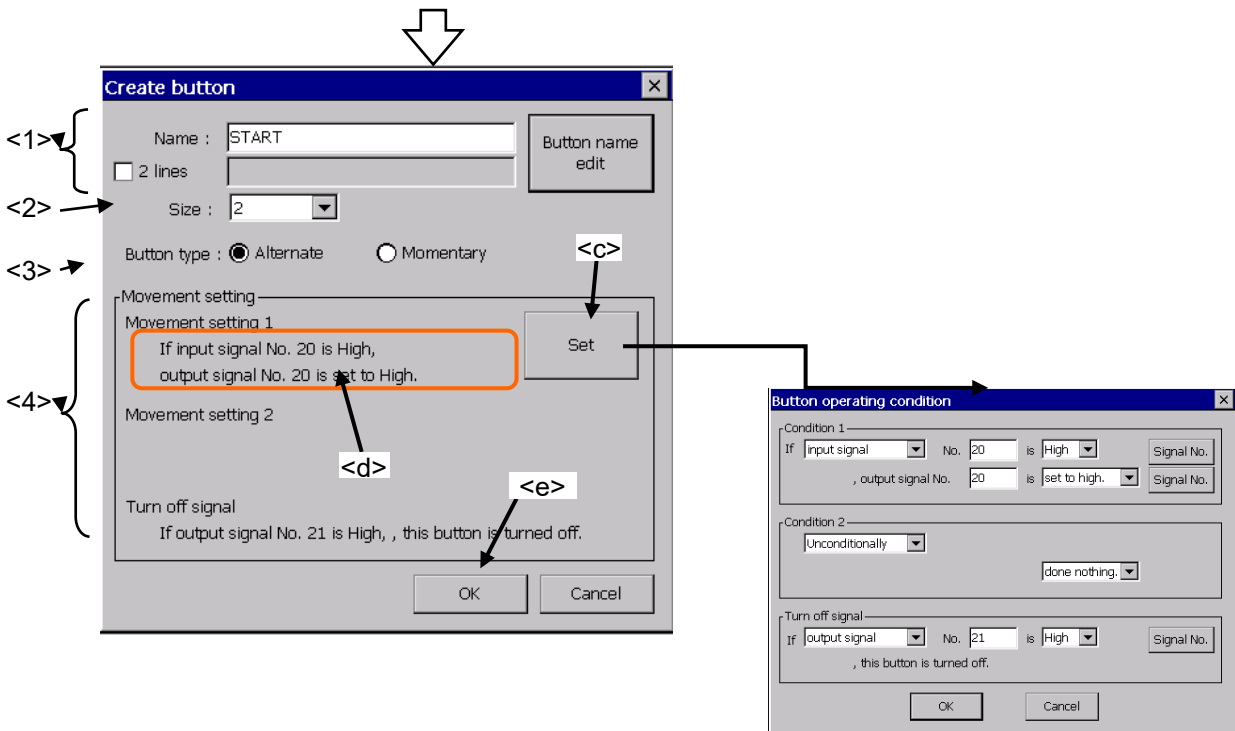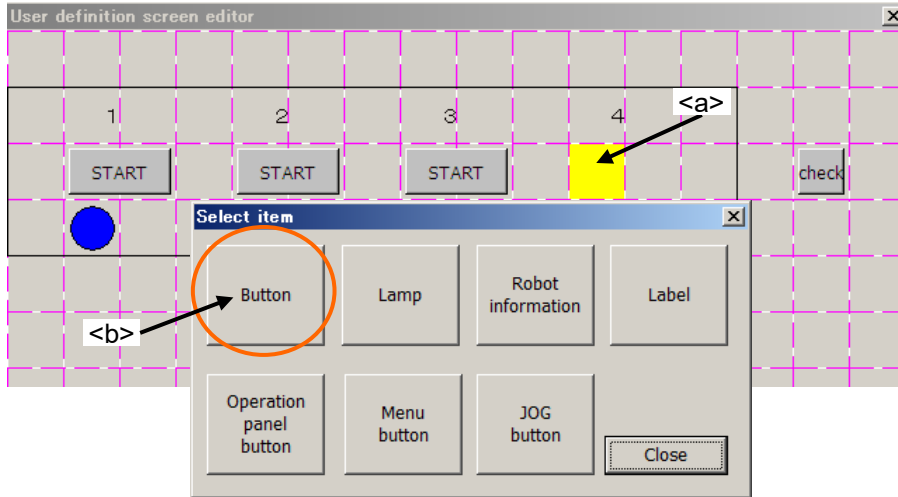

<1> Name : The name of the button is set.
The button name can be input by [Button name edit] button.
The button name can be displayed by two lines by checking "2 lines".

<2> Size : The width of the button can be set.
The width of the button that can be set is 1/2/3.



<3> Button type : The kind of the button can be set.

Alternate	When the button is tapped once, the button keeps ON state. And when the button is tapped again, it returns to OFF state. The signal output is kept too. When the button is state of the specified signal by [Turn off signal], it returns to OFF state.
Momentary	The button keeps ON state while it is being pushed.

<4> Movement setting : The condition and the signal output operation when the button ON can be set. The signal which the button is OFF can be set by [Turn off signal].

<Condition1, Condition2>

The condition can be selected as follows. Please set the signal number etc. when you make the signal state the condition. When the button is ON or OFF, the condition is judged.

- Unconditionally
- State of the specified input signal
- State of the specified output signal

The signal output operation can be selected as follows. Please set the signal number etc. when you output the signal.

- Done nothing
- Output the specified output signal

Operation setting can be set up to two.

Two operation settings operate individually by using each condition.

Moreover, when High and Low are set to output to the same signal, and both conditions become true, the Condition2 is given priority.

If the operation is set signal output, when the button is OFF, the signal is output in the state opposite High/Low state at the time of ON.

<Turn off signal>

Turn off signal can be selected as follows. Please set the kind of turn off signal and the signal number. This function is supported by version 3.4 or later of this software.


- Invalid
- State of the specified input signal
- State of the specified output signal

Example of setting the movement of button

For example:

The alternate button that output signal number 20 to High when input signal number 20 is High and turn off signal when output signal number 21 is High.


(1) A default value of "Button operating condition" window is shown in a right picture.

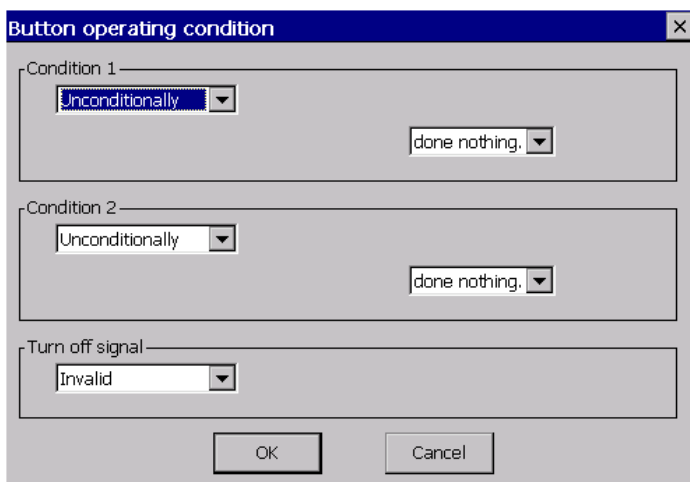

(2) Set the condition of operation.

Tap <d>, and select the signal type. When things except "Unconditionally" are selected, the input area of signal number and the combo box to select the state are displayed.


Now, select "input signal".

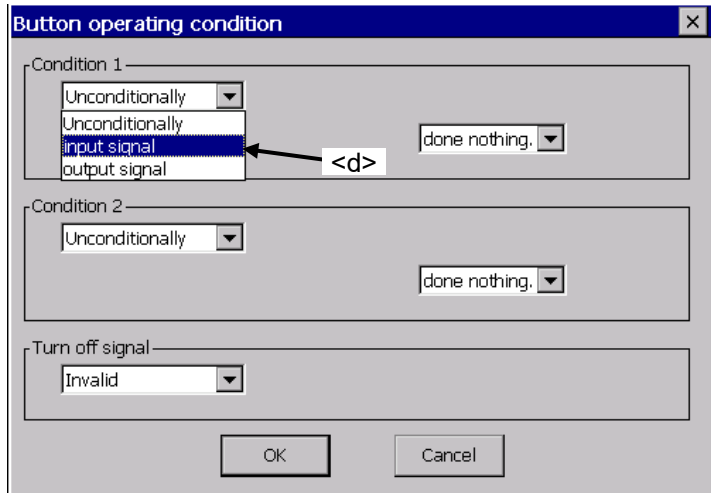


(3) Tap [Signal No.] button (<e>), and input "20" to signal number (<f>).

Tap the state of the signal (<g>), and select "High".


Now, select "Input signal".

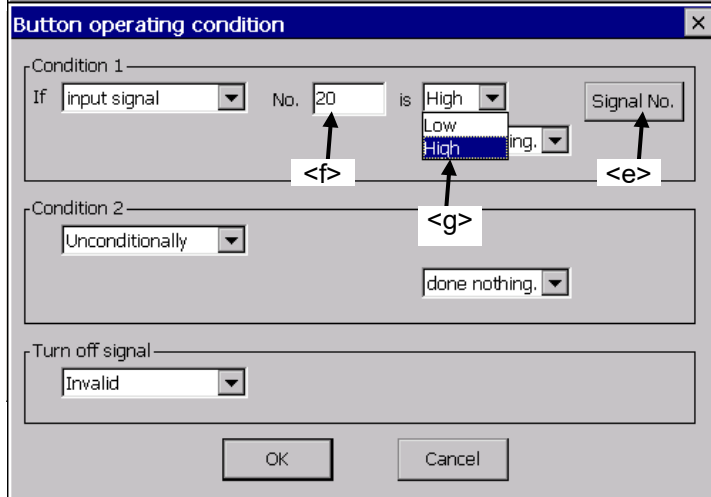


(4) Select "High" as signal operation of when tapping on a button (<h>).

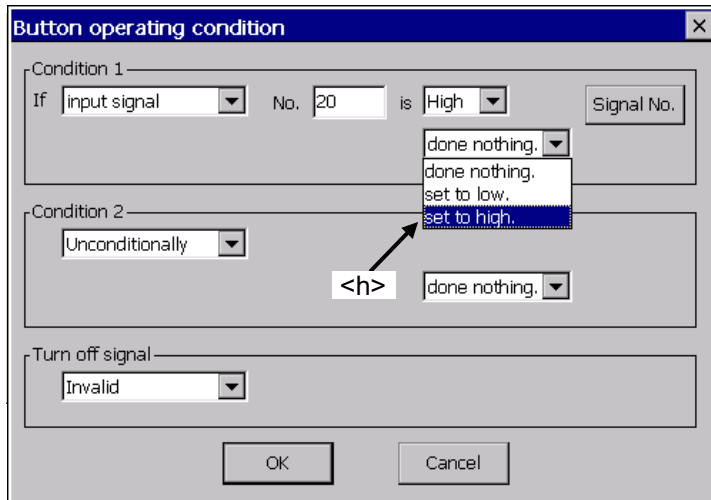


(5) The input area of output signal number is displayed.
 Tap [Signal No.] button (<k>), and input "20" to the signal number (<j>).

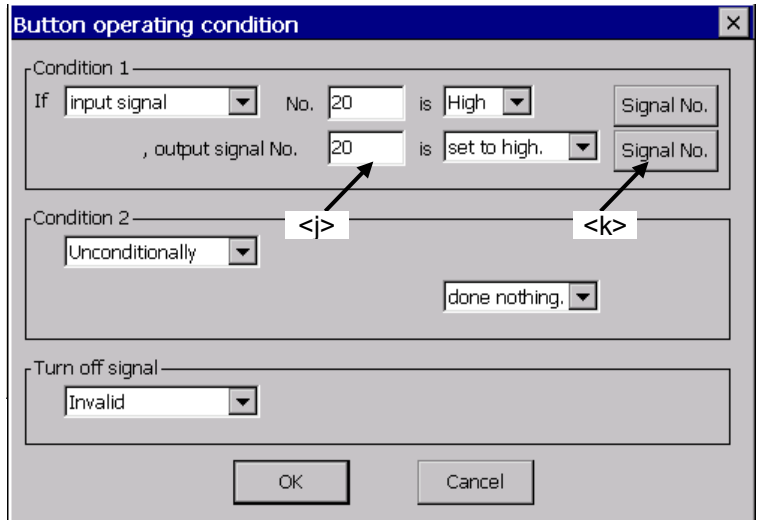

(6) Set the turn off signal.
 Tap <m>, and select the signal type.
 Now, select "output signal".

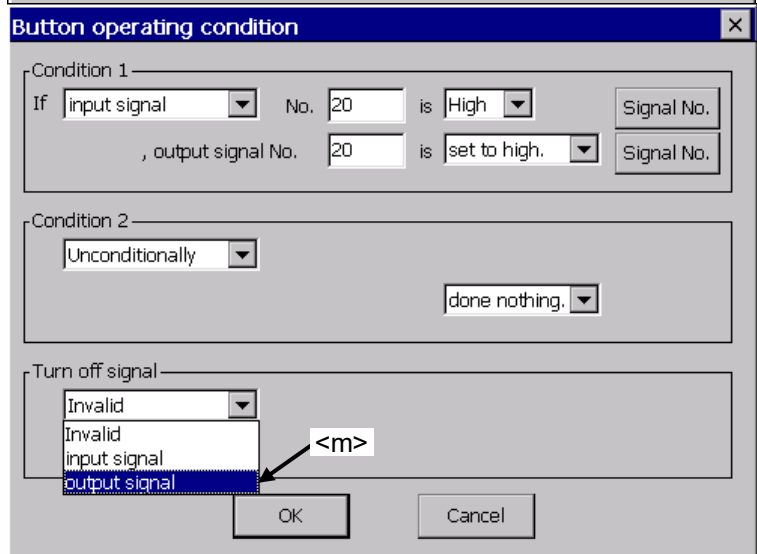


(7) Tap [Signal No.] button (<n>), and input "21" to signal number (<p>).
 Tap the state of the signal (<r>), and select "High".

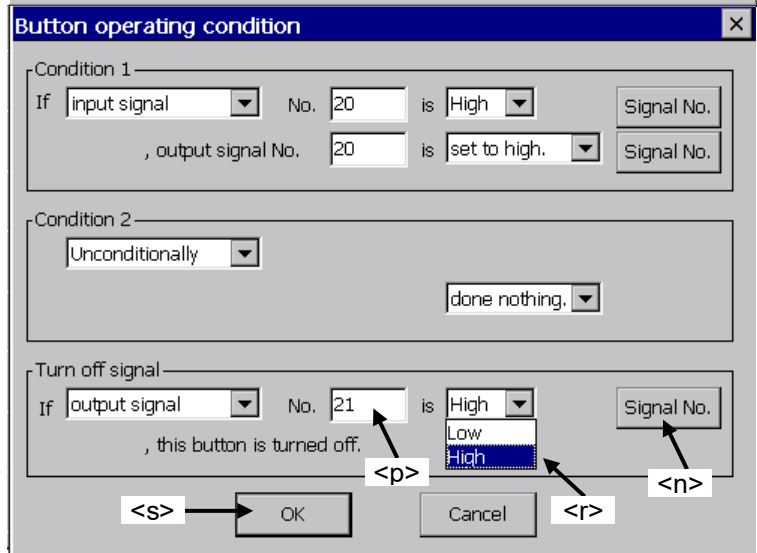

(8) After the setting is completed, tap [OK] button (<s>).

19.1.5.2. Lamp

- (1) Tap the position (block) in which the lamp is made (<a>). The lamp is arranged at this position.
- (2) After "Select item" window is displayed, tap [Lamp] button ().
- (3) Select the lighting color of the lamp on "Create lamp" window.
- (4) Tap [On/Off condition] button (<c>), and set the lighting condition and the turning off condition on "The lamp on/off condition" window.
Signal number can be set by [Signal No.] button (<e>). After setting the lighting condition and the turning off condition, tap [OK] button (<f>). The set content is displayed (<d>) in the right of the [On/Off condition] button.
- (5) After setting the lamp color and lighting condition and the turning off condition, tap [OK] button (<g>).

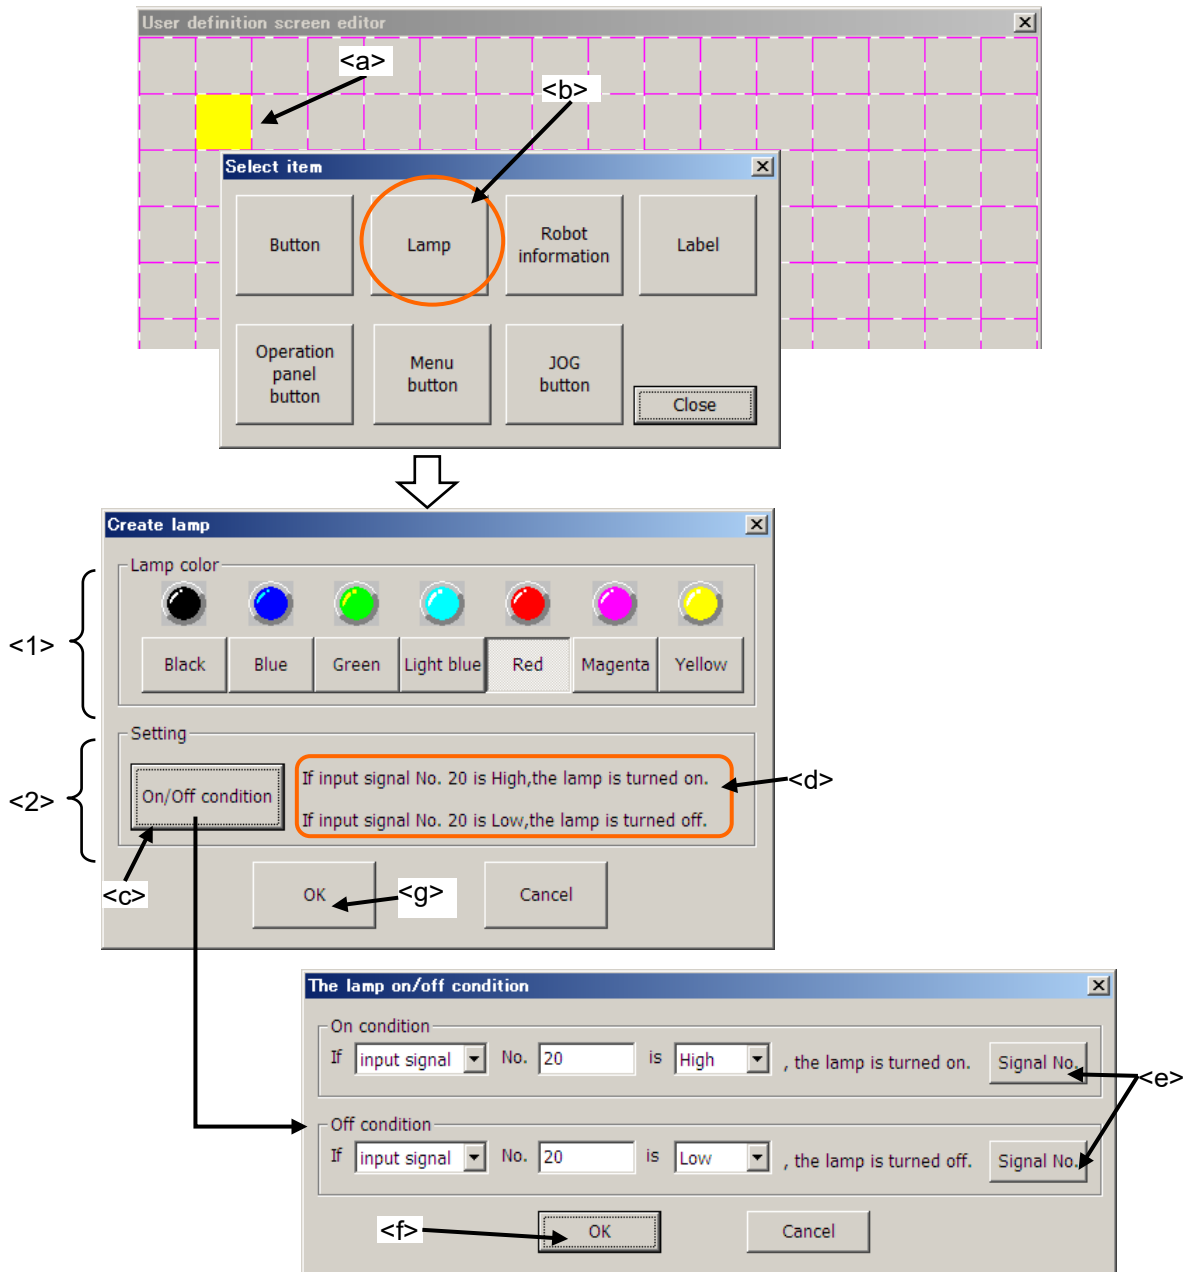


- <1> Lamp color : The lighting color of the lamp can be selected.
- <2> Setting : The condition of turning on / turning off the lamp can be set.
If only one condition is set, the lamp is operated like the other condition is set the opposite High/Low state to the same signal number.
Moreover, when both the ON condition and the OFF condition are true, the ON condition is given priority.

Example of setting lamp ON/OFF


For example:

Lamp that is turned on when the input signal number 20 is High, and is turned off when the input signal number 20 is Low.


(1) A default value of "The Lamp on/off condition" window is shown in a right picture.

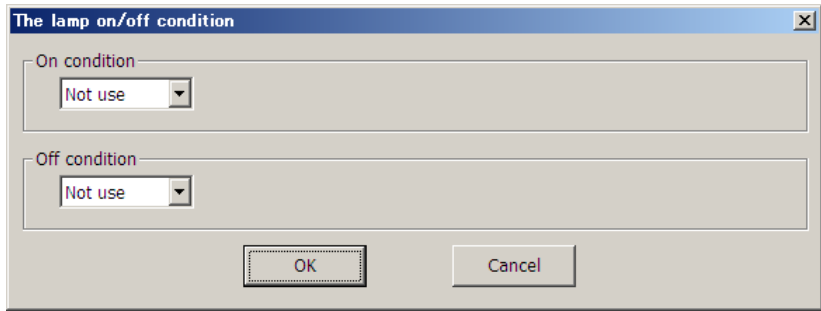


(2) Set "On condition". Tap <h>, and Select the signal type. Now, select "input signal".

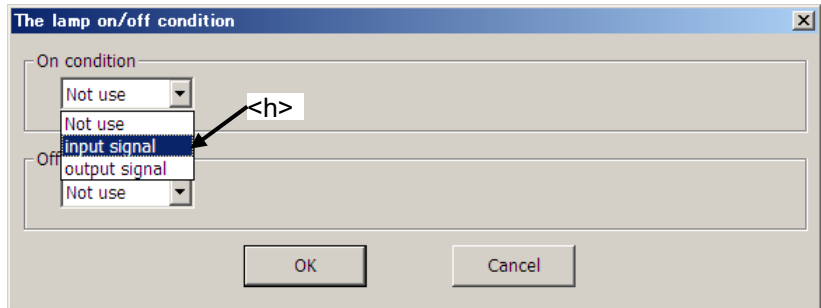


(3) Tap [Signal No.] button (<k>), and set "20" to signal number (<j>).

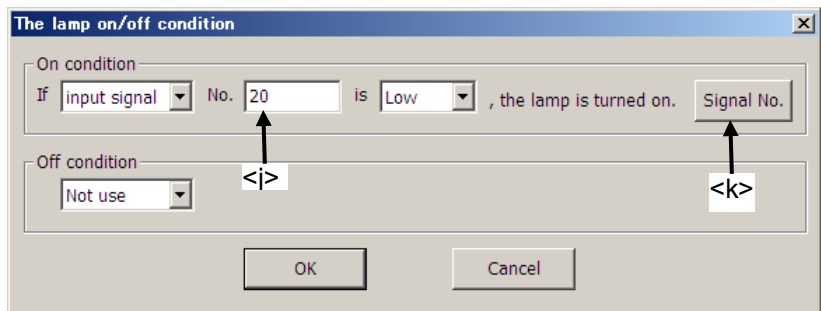

(4) Select "High" (<m>), as a state of signal to light the lamp.

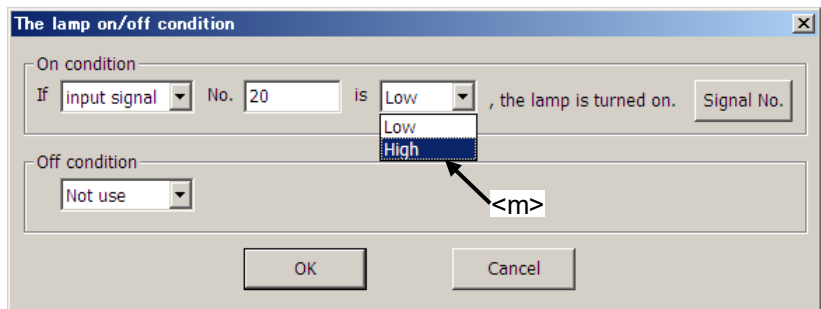




(5) Similarly, set the condition for turning off the lamp, and tap [OK] button (<n>).

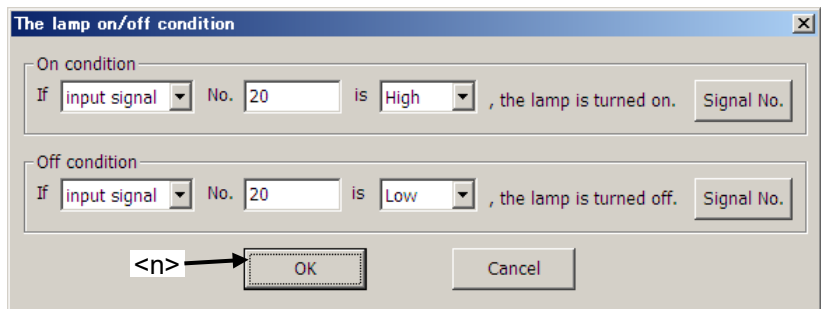

19.1.5.3. Variable

The value of the specified variable is displayed.

- (1) Tap the position (block) in which the variable is displayed (<a>). Left side of the variable is arranged in this position.
- (2) After "Select item" window is displayed, tap [Robot information] button ().
- (3) Select "variable" (<c>) as the type on "Create robot information" window.
- (4) After setting the information of the variable, tap [OK] button (<e>).

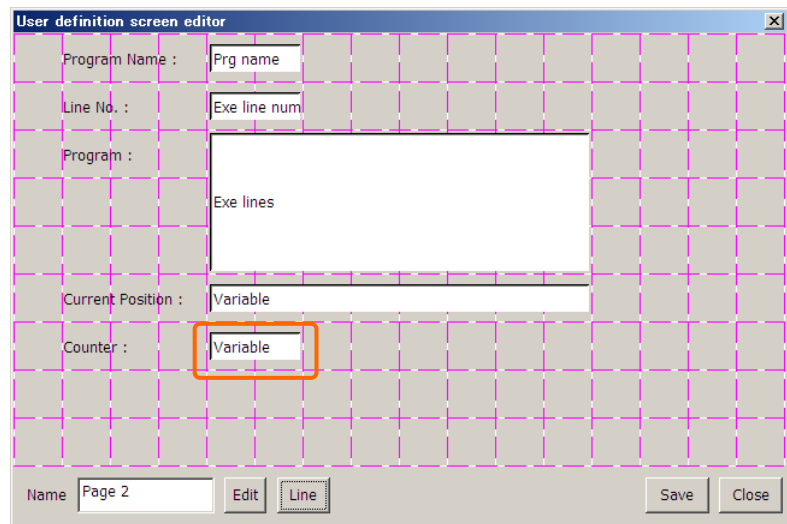
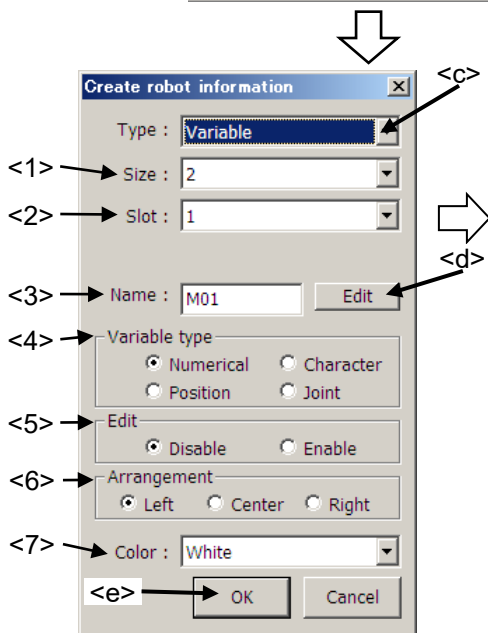
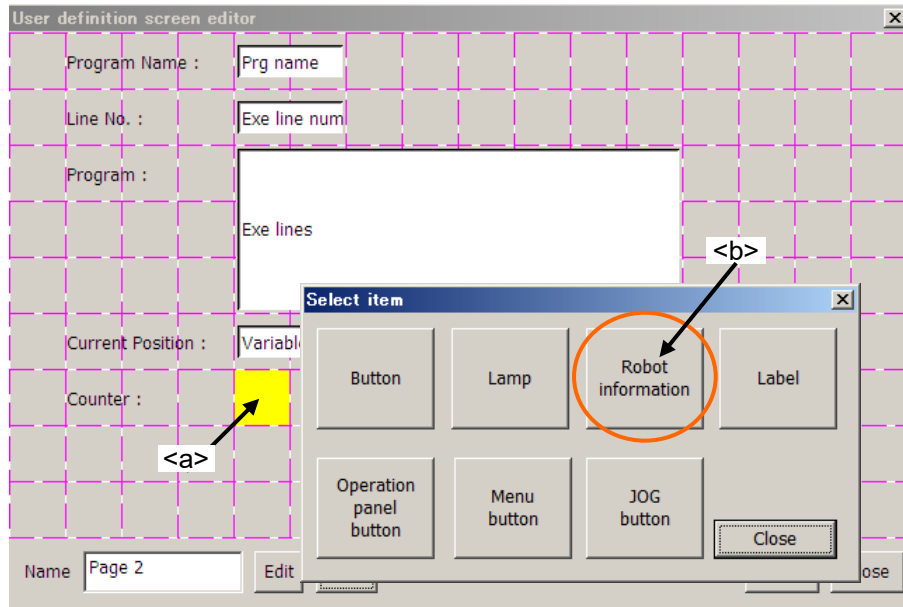


- <1> Size : Set the width of box in which the variable is displayed. The value from 1 to 16 can be set.
- <2> Slot : Select task slot number for which the variable is used.
The range of slot number that can be set is different according to the system that uses it.
- <3> Name : Set the variable name. Robot Status Variable also can be set.
The name is input by [Edit] button (<d>).
- <4> Variable type : Select the variable type.
- <5> Edit : Select the edit permission of the variable.
When set Enable, while displaying this screen, you can change the value of this variable by tapping this parts and displaying the input value screen. (Only at T/B state is enabling.)
- <6> Arrangement : Select the position in which the variable is arranged.
- <7> Color : Select the background color of the area where the variable is displayed.


19.1.5.4. Program execution content

The content of the program being executed is displayed. The amount of 7 lines, the execution line, upper 3 lines and lower 3 lines, are displayed.

- (1) Tap the position (block) in which the content of the program is displayed (<a>). Left side of the content of the program is arranged in this position.
- (2) After "Select item" window is displayed, tap [Robot information] button ().
- (3) Select "Exe line" (<c>) as the type on "Create robot information" window.
- (4) After setting the information on the content of the program, tap [OK] button (<d>).

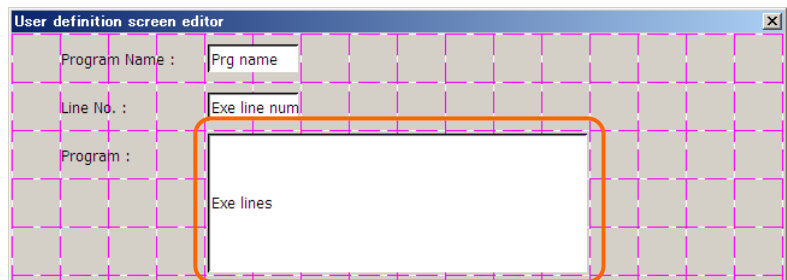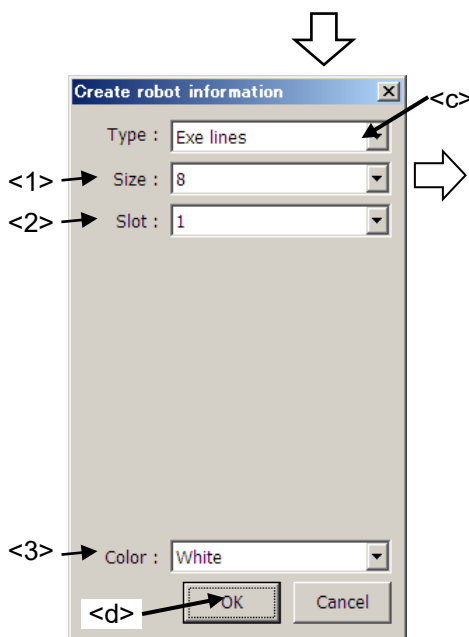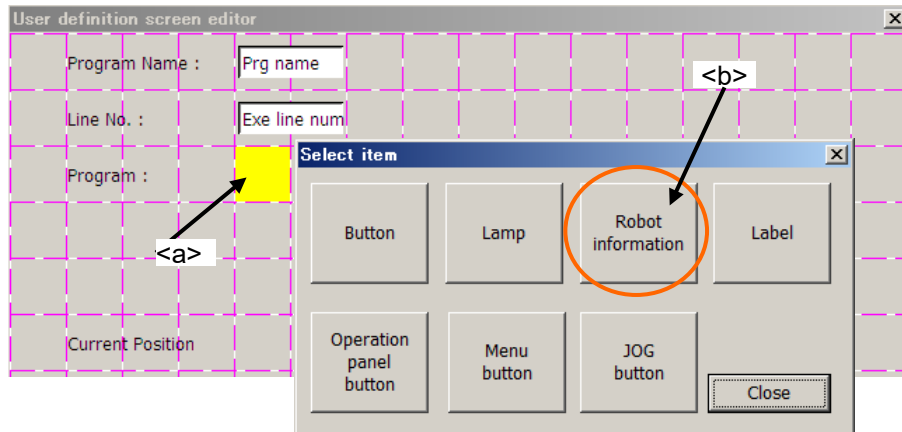

When User definition screen is shown

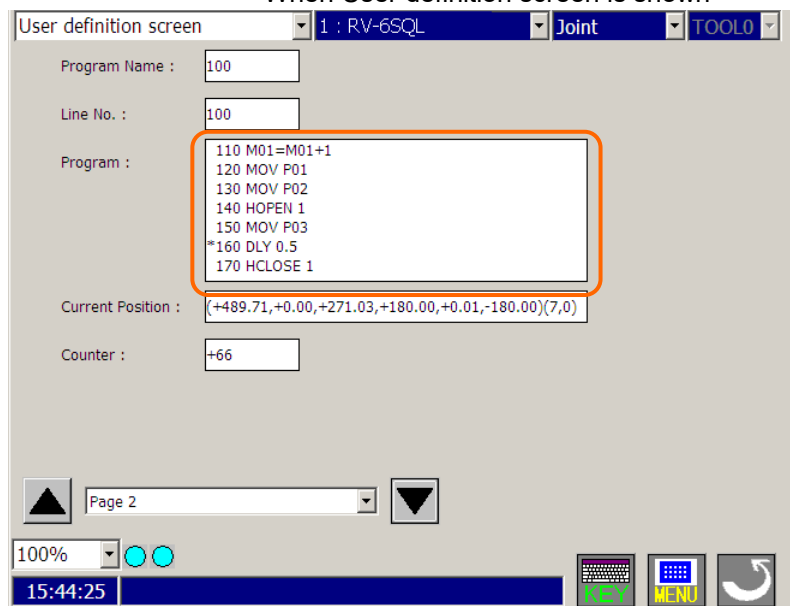


-
- <1> Size : Set the width of box in which the content of program is displayed. The value from 1 to 16 can be set.
 - <2> Slot : Select task slot number for which the program is executed.
The range of slot number that can be set is different according to the system that uses it.
 - <3> Color : Select the background color of the area where the content of program is displayed.

19.1.5.5. Program name

The name of program being executed is displayed.

- (1) Tap the position (block) in which program name is displayed (<a>). Left side of the box is arranged in this position.
- (2) After "Select item" window is displayed, tap [Robot information] button ().
- (3) Select "Program name" (<c>) as the type on "Create robot information" window.
- (4) After setting the information of program name, tap [OK] button (<d>).

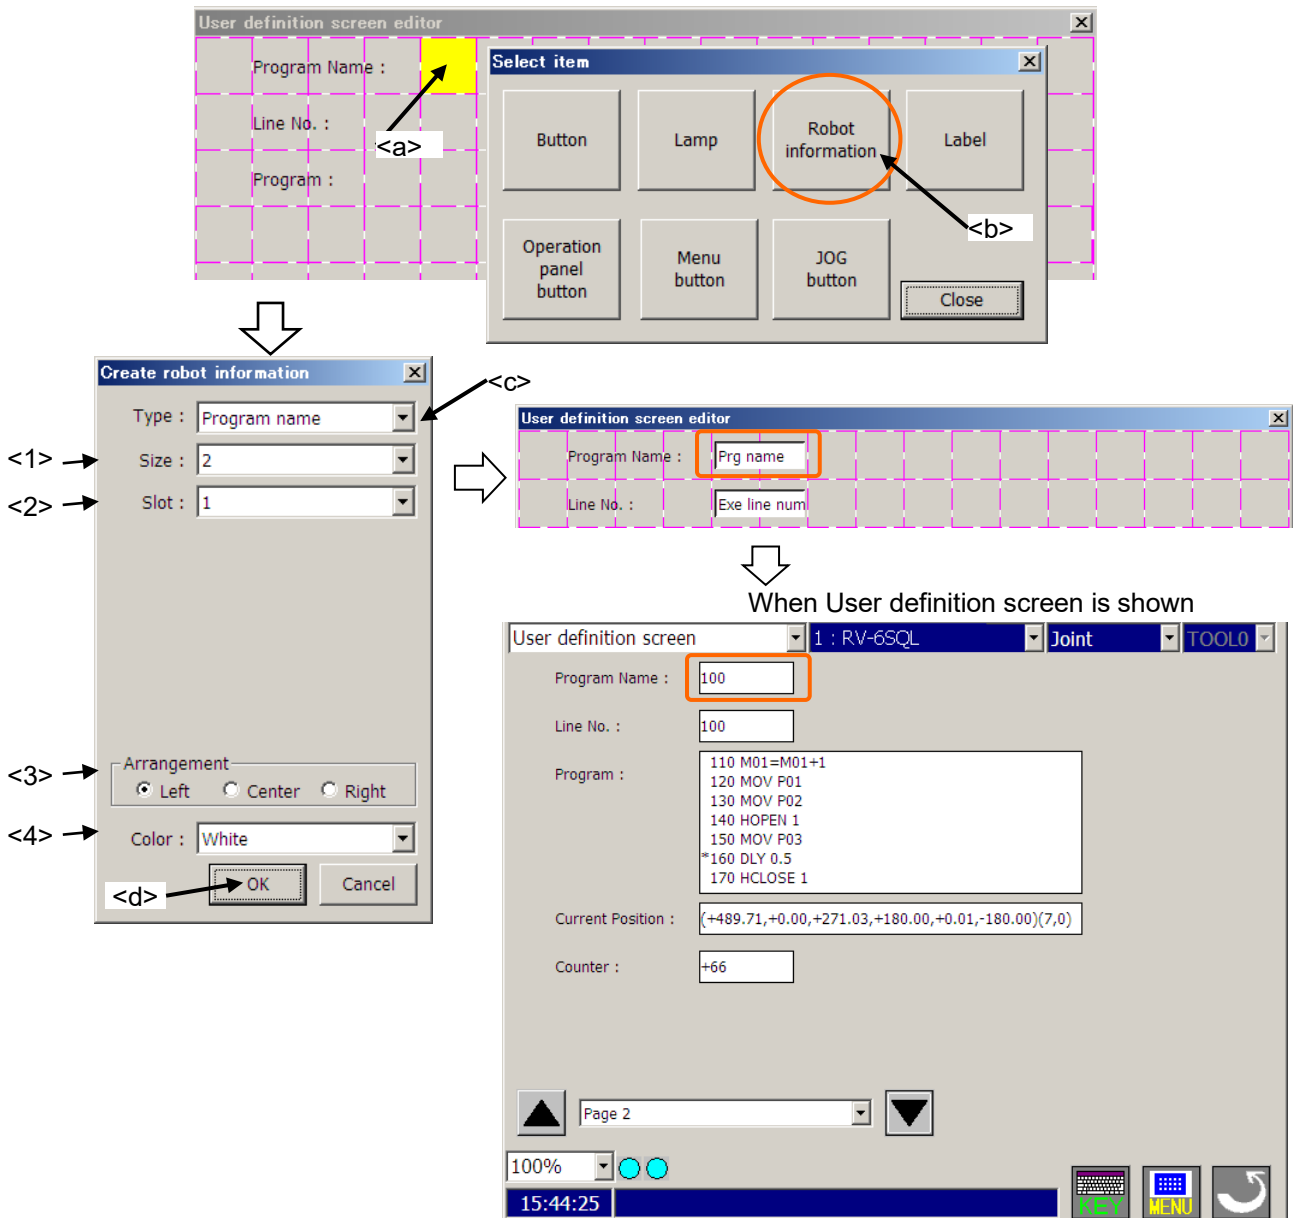


- <1> Size : Set the width of box in which program name is displayed. The value from 1 to 16 can be set.
- <2> Slot : Select task slot number for which the program is executed. The range of slot number that can be set is different according to the system that uses it.
- <3> Arrangement : Select the position in which the program name is arranged.
- <4> Color : Select the background color of the area where the program name is displayed.

19.1.5.6. Execution line number of program

The line number of program being executed is displayed.

- (1) Tap the position (block) in which execution line number is displayed (<a>). Left side of the box is arranged in this position.
- (2) After "Select item" window is displayed, tap [Robot information] button ().
- (3) Select "Exe line num" (<c>) as the type on "Create robot information" window.
- (4) After setting the information of execution line number, tap [OK] button (<d>).

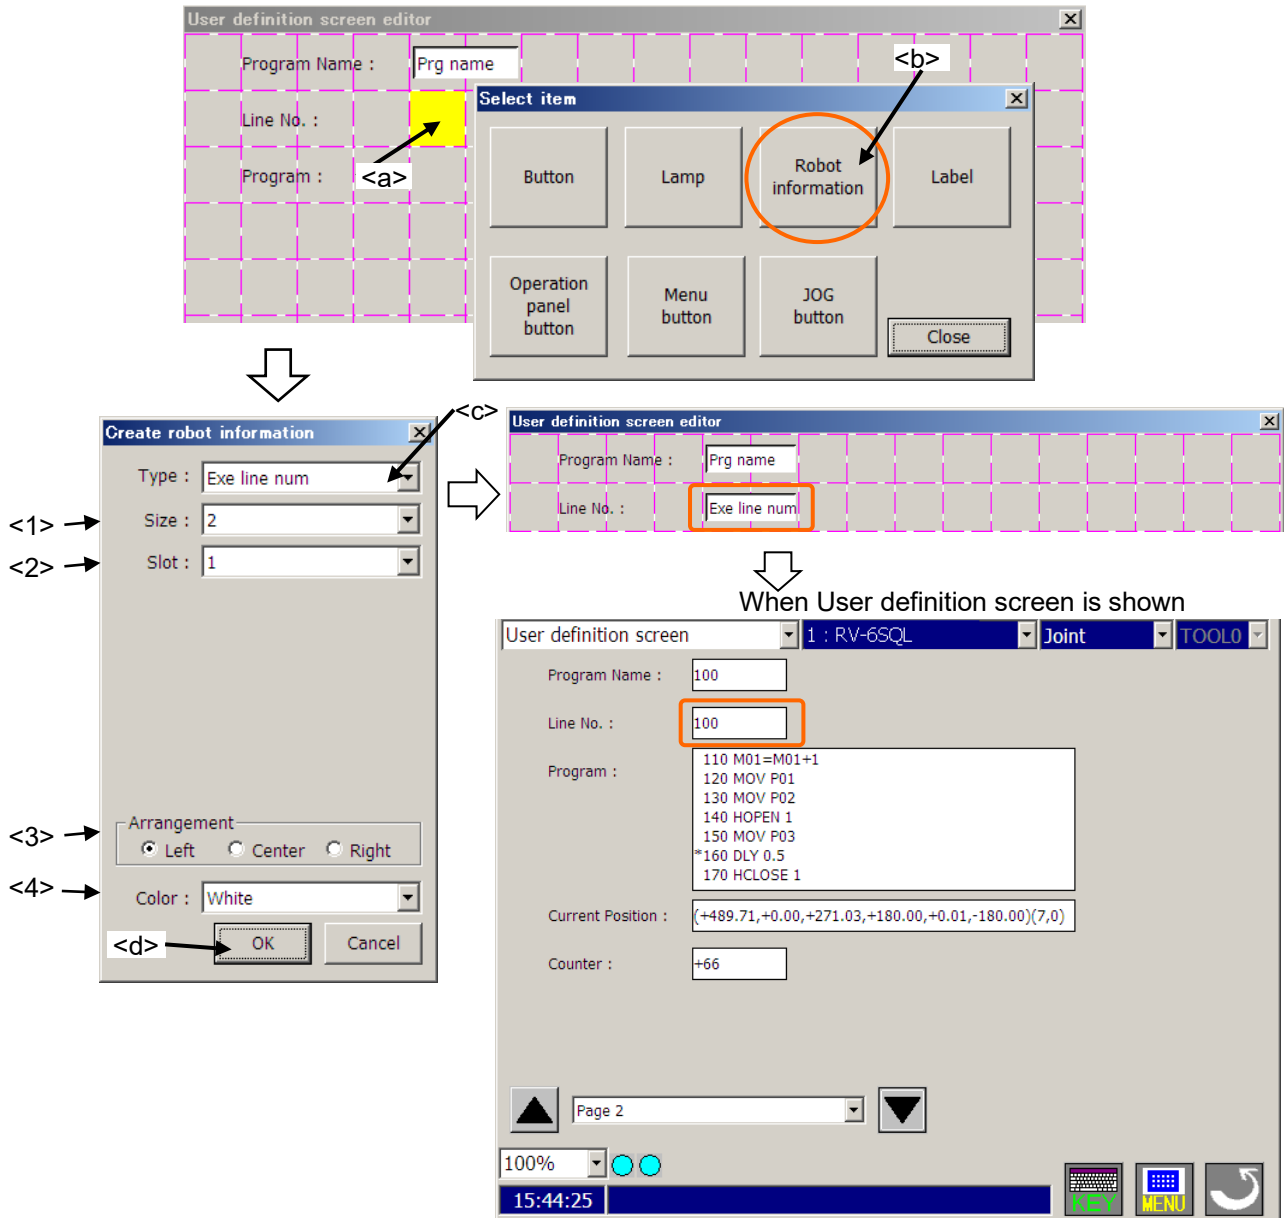


- <1> Size : Set the width of box in which execution line number is displayed. The value from 1 to 16 can be set.
- <2> Slot : Select task slot number for which the program is executed. The range of slot number that can be set is different according to the system that uses it.
- <3> Arrangement : Select the position in which execution line number is arranged.
- <4> Color : Select the background color of the area where execution line number is displayed.

19.1.5.7. Current position data (the XYZ coordinate system)

The current position data of robot is displayed with each XYZ coordinate system type axis.

If you want to display the current position data (the XYZ coordinate system) all together, please use "Variable" type and set the Robot Status Variable "P_CURR". Please refer to "19.1.5.3 Variable" for details.

- (1) Tap the position (block) in which the current position data is displayed (<a>). Left side of the box is arranged in this position.
- (2) After "Select item" window is displayed, tap [Robot information] button ().
- (3) Select "Cur pos" (<c>) as the type on "Create robot information" window.
- (4) After setting the information of the current position data (the XYZ coordinate system), tap [OK] button (<d>).

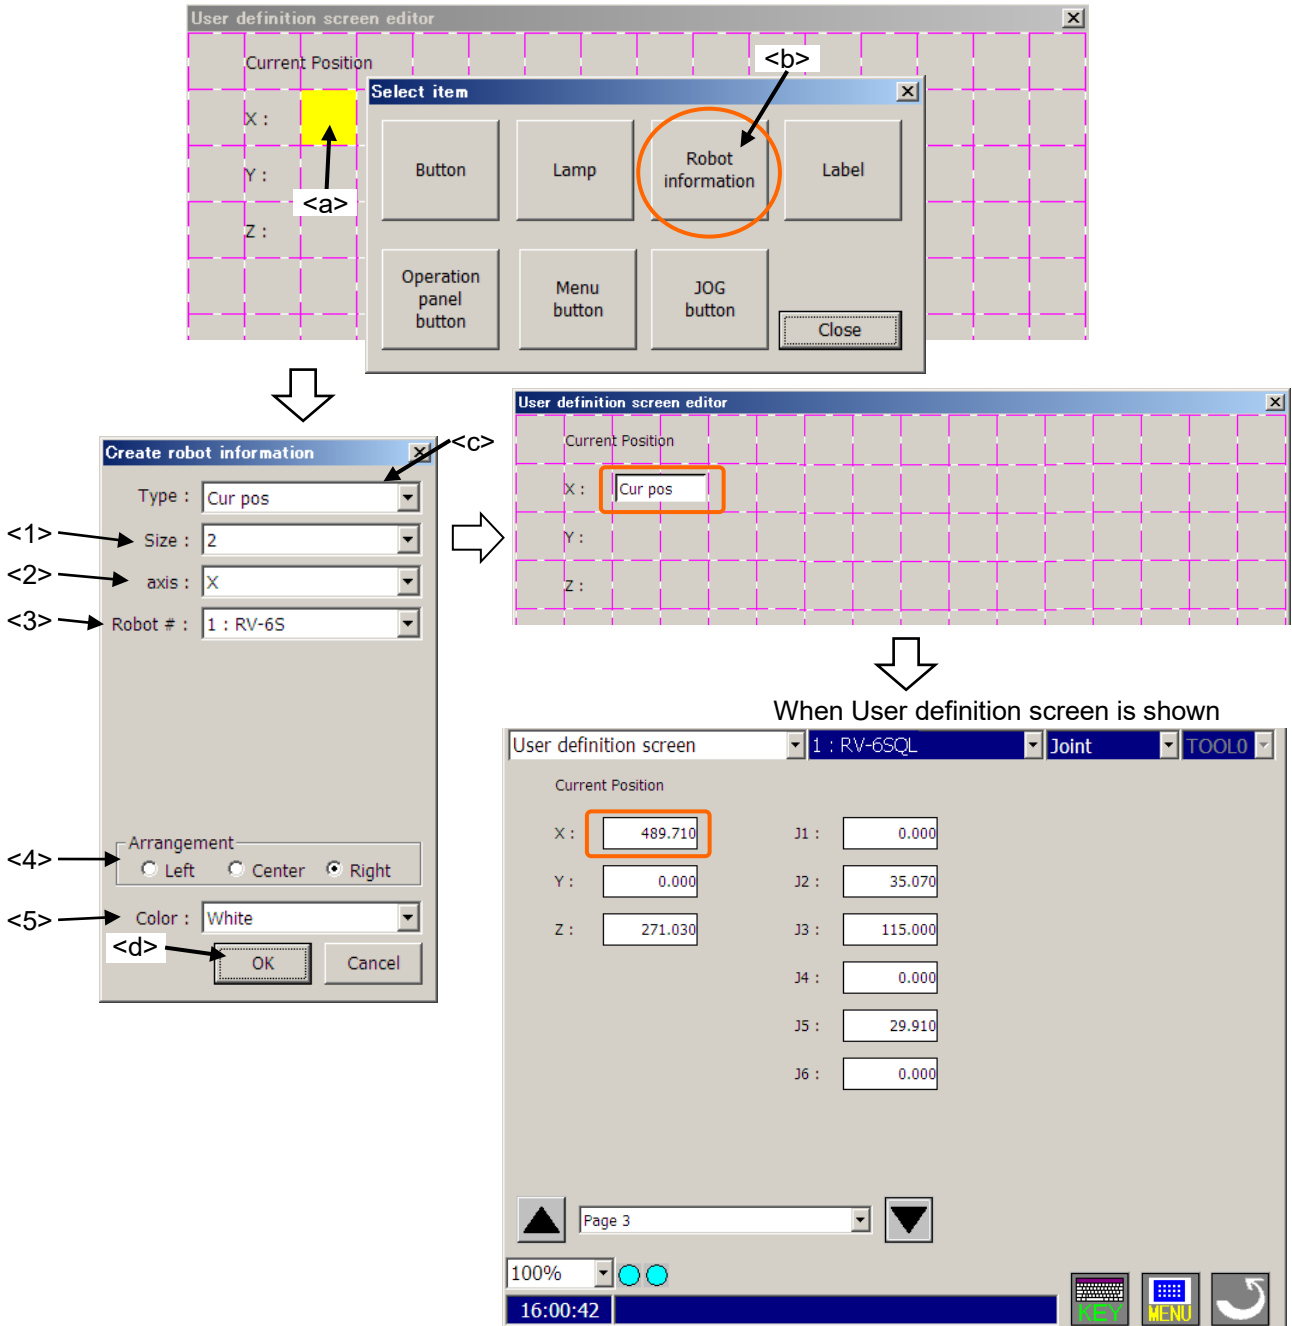




-
- <1> Size : Set the width of box in which the current position data (the XYZ coordinate system) is displayed. The value from 1 to 16 can be set.
 - <2> axis : Select the displayed axis of the current position data (the XYZ coordinate system).
 - <3> Robot # : Select the robot number which displays the current position data.
 - <4> Arrangement : Select the position in which the current position data (the XYZ coordinate system) is arranged.
 - <5> Color : Select the background color of the area where the current position data (the XYZ coordinate system) is displayed.

19.1.5.8. Current position data (the joint coordinate system)


The current position data of robot is displayed with each joint coordinate system axis.

If you want to display the current position data (the joint coordinate system) all together, please use "Variable" type and set the Robot Status Variable "J_CURR". Please refer to "19.1.5.3 Variable" for details.

- (1) Tap the position (block) in which the current position data is displayed (<a>). Left side of the box is arranged in this position.
- (2) After "Select item" window is displayed, tap [Robot information] button ().
- (3) Select "Cur jnt" (<c>) as the type on "Create robot information" window.
- (4) After setting the information of the current position data (the joint coordinate system), tap [OK] button (<d>).

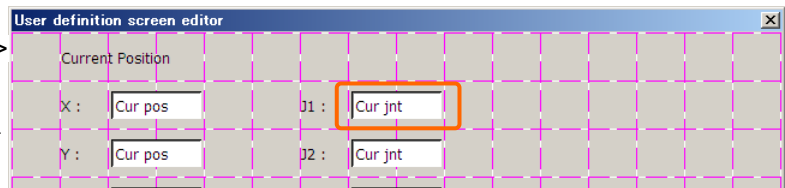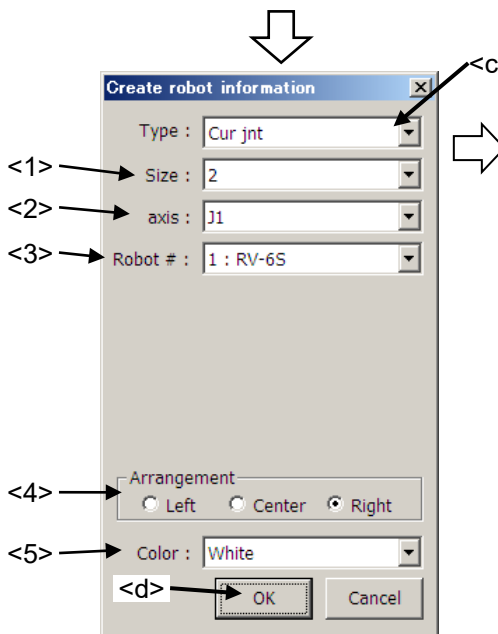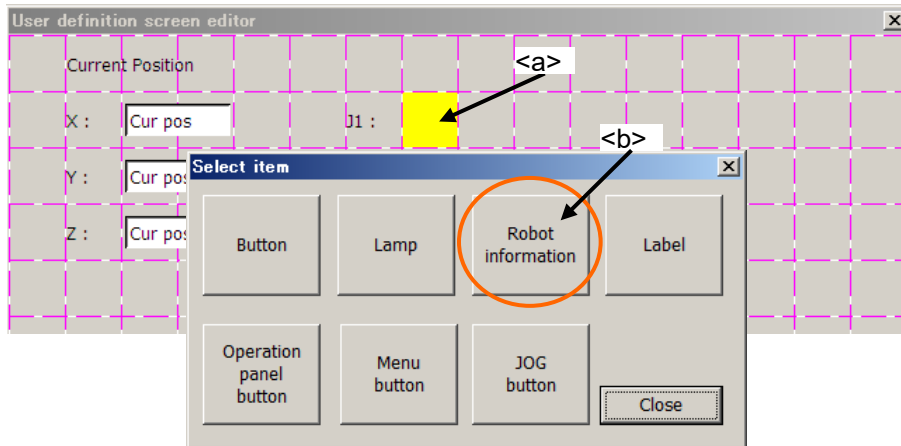

When User definition screen is shown



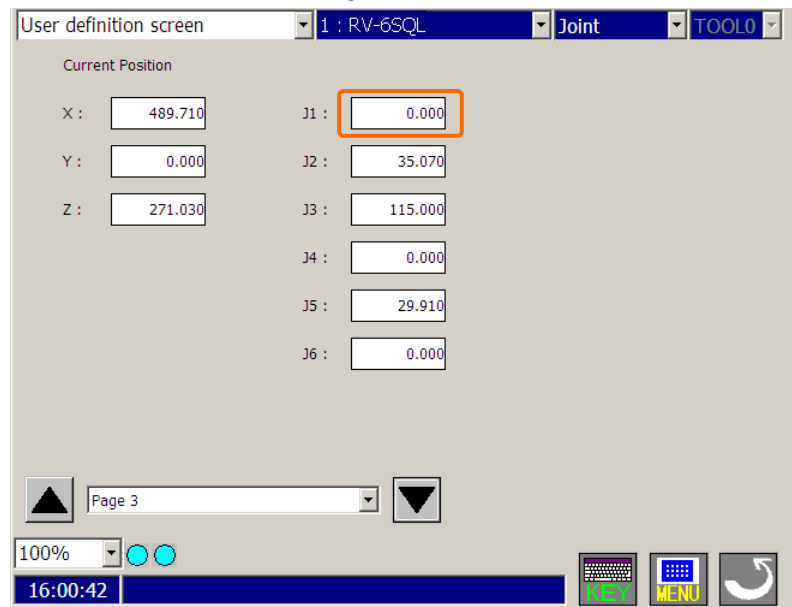


-
- <1> Size : Set the width of box in which the current position data (the joint coordinate system) is displayed. The value from 1 to 16 can be set.
 - <2> axis : Select the displayed axis of the current position data (the joint coordinate system).
 - <3> Robot # : Select the robot number which displays the current position data.
 - <4> Arrangement : Select the position in which the current position data (the joint coordinate system) is arranged.
 - <5> Color : Select the background color of the area where the current position data (the joint coordinate system) is displayed.

19.1.5.9. Message

Set the message when message is displayed by the state of the I/O signal.

- (1) Select [Message] button (<a>). When [Message] button is not displayed there, please tap [Line] button.
 - (2) After "Message list" window is displayed, select [Add] button ().
 - (3) After "Message editor" window is displayed, set [Message] and [Displaying condition], etc. Tap [OK] button (<d>).
- Select [Edit] button (<c>), and message can be edited.

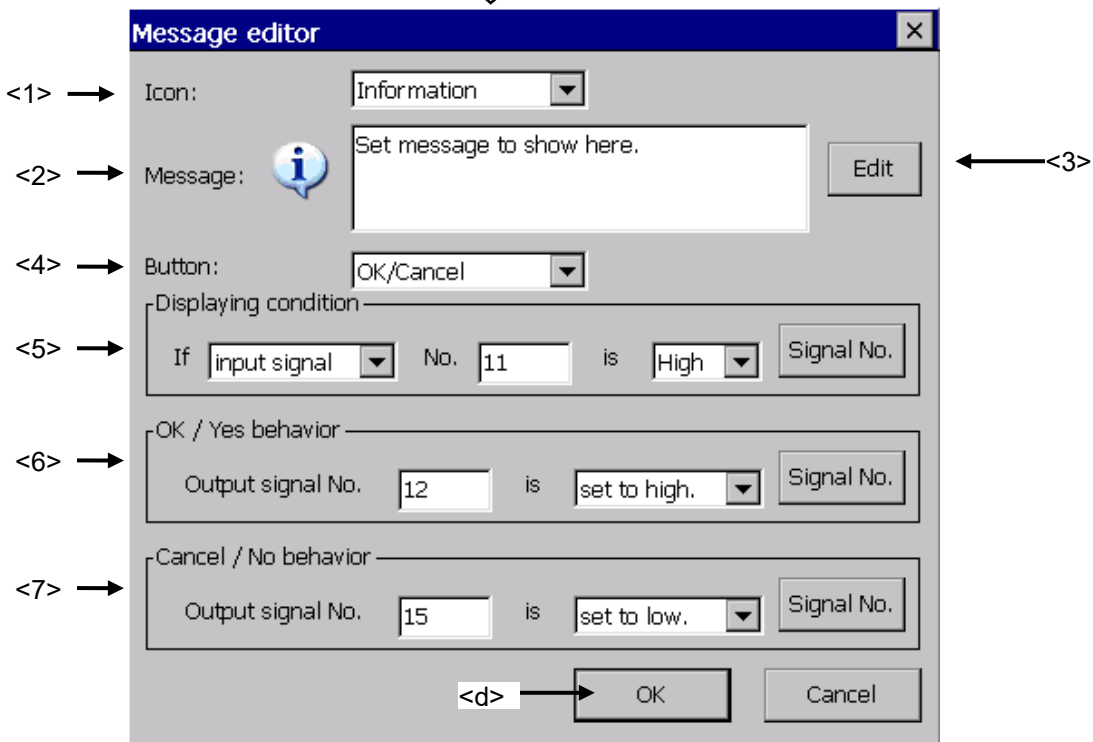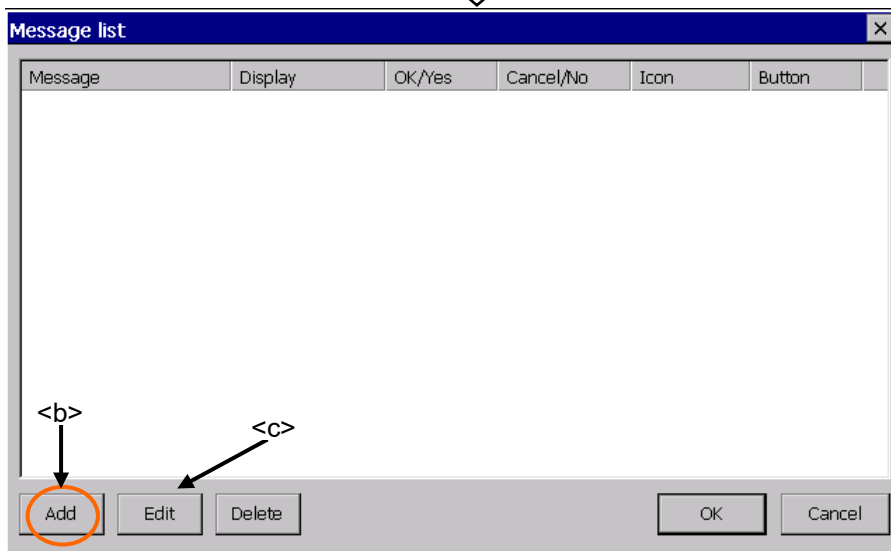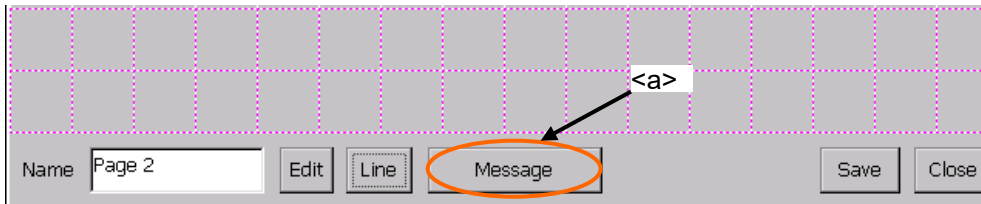


-
- <1> Icon : Set the icon displaying on the left.
 - <2> Message : Message is displayed.
 - <3> Edit : Open the window editing the message.
 - <4> Button : Select the kind of button.
 - <5> Displaying condition : Set displaying condition of message.
 - <6>OK/Yes behavior : Set behavior when you tap [OK] button or [Yes] button.
 - <7>Cancel/No behavior : Set behavior when you tap [Cancel] button or [No] button.

19.1.5.10. Label

The label can be displayed at the specified position.


- (1) Tap the position (block) in which the label is made (<a>). The label is arranged in this position.
- (2) After "Select item" window is displayed, tap [Label] button ().
- (3) After setting the label on "Create label" window, tap [OK] button (<c>). The label name is set by [Label name edit] button (<d>).

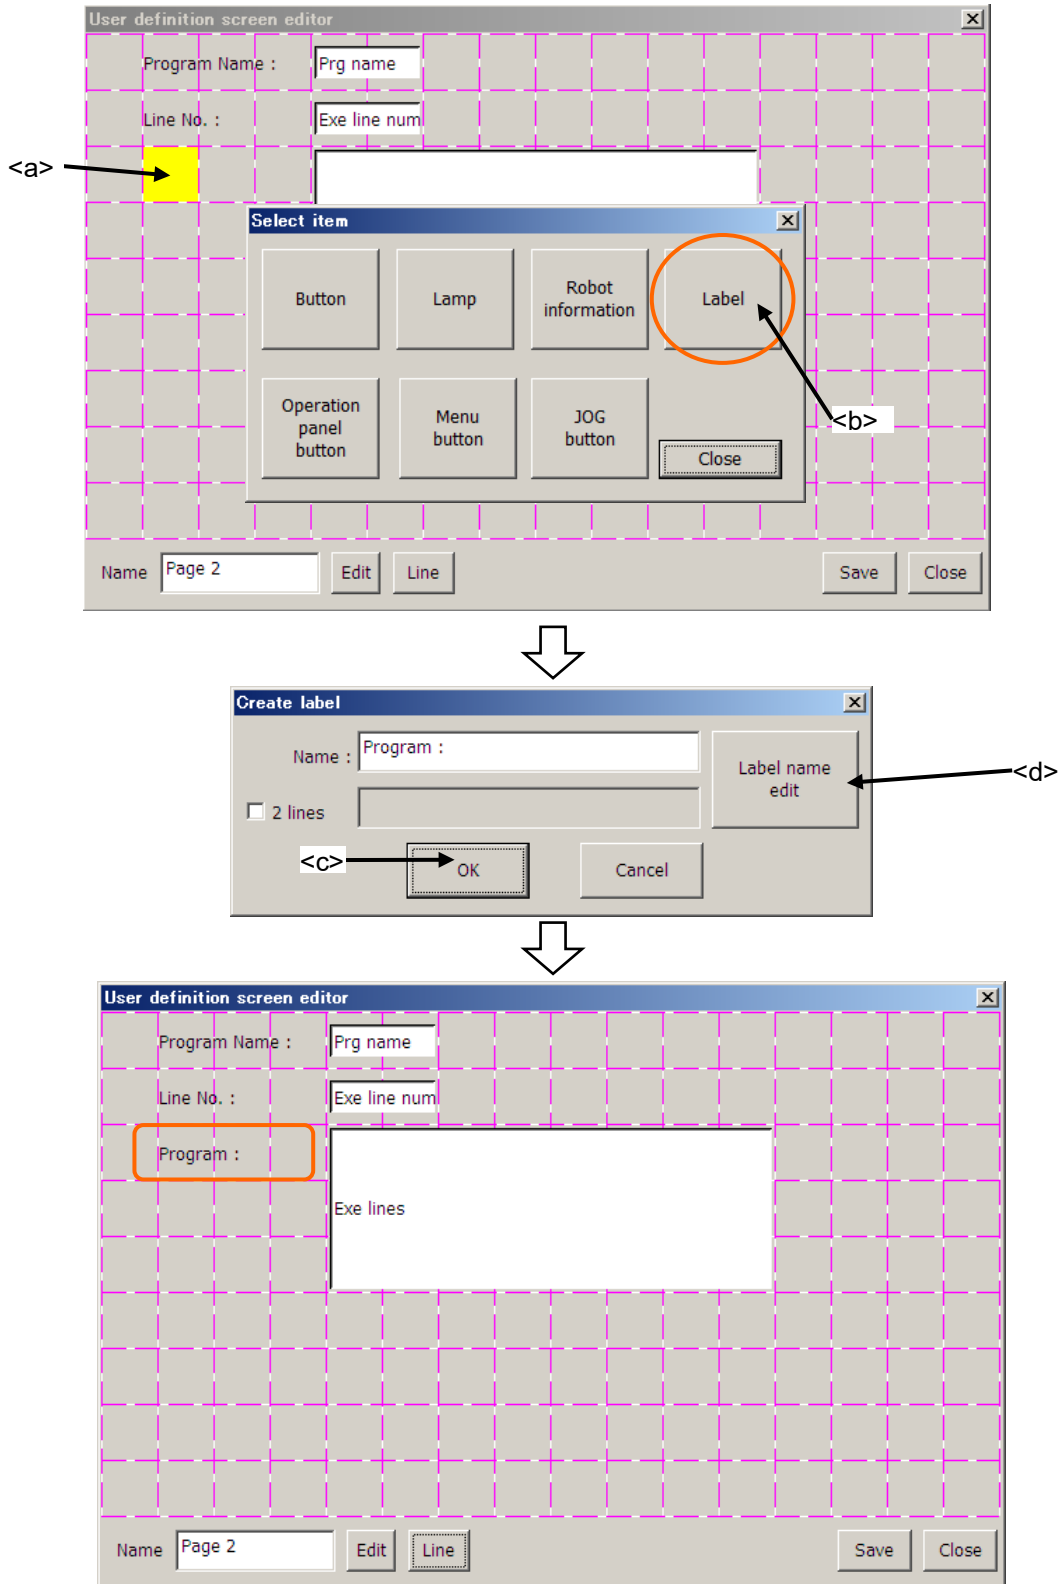





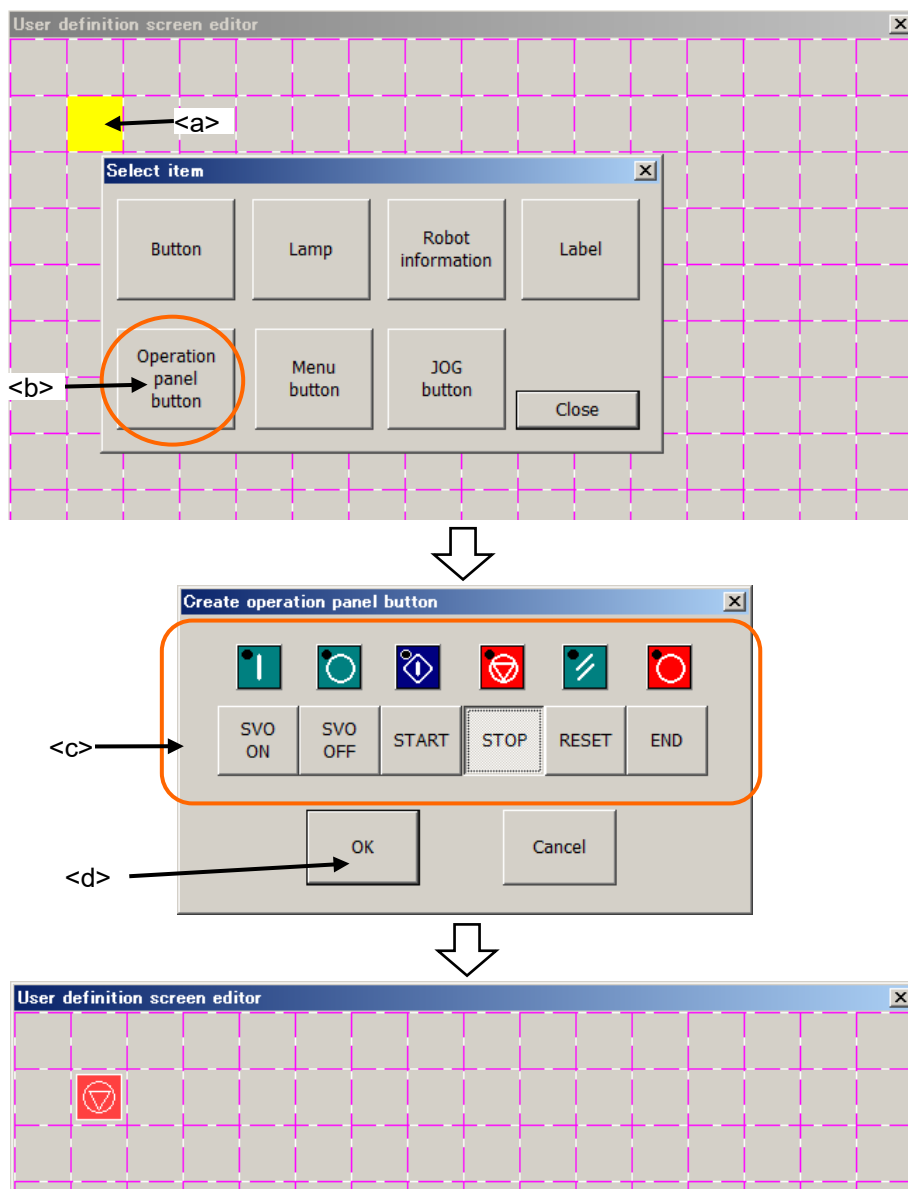

19.1.5.11. Operation panel button

You can place buttons such as [Start] on the operation panel at the specified position. This function can be used with this software Ver. 4.1 or later, Software Ver.1.40S or later of RT Toolbox 3.

- 1) Tap <a> where you want to create the OP button. The OP button will be placed in this position.
- 2) Select the OP button on the [Select Item] screen.
- 3) On the [Create operation panel button] screen, select the OP button <c> to be arranged and tap [OK] <d>.






Button image	Button name	Description
	SVO ON	Turn on the servo.
	SVO OFF	Turn off the servo.
	START	Start the driving.
	STOP	Stop the driving immediately.
	RESET	When an alarm occurs, cancel the controller's alarm. Cancels the suspended state of the program and returns the execution line to the beginning.
	END	In continuous operation, stop in 1 cycle. If the cycle is stopped, it will return to continuous operation.







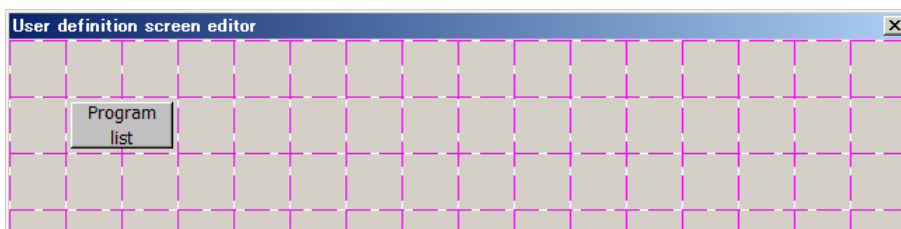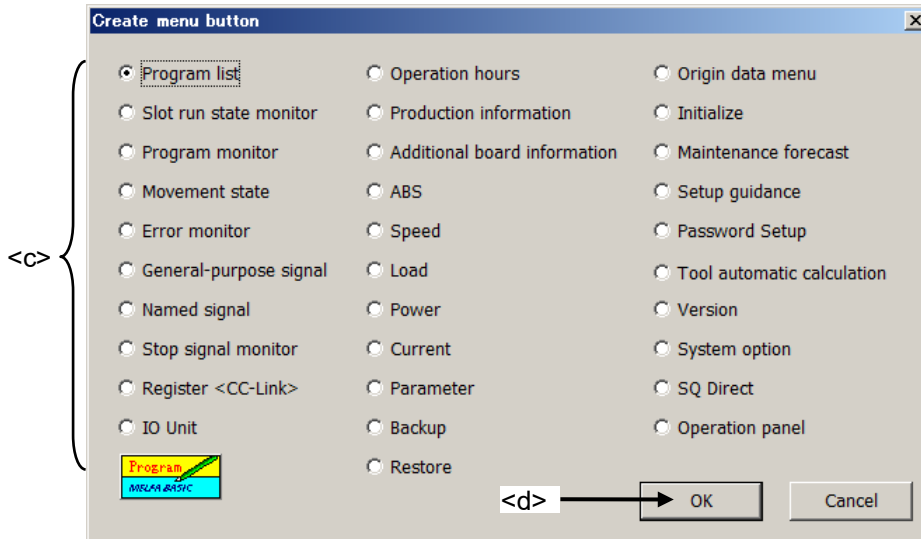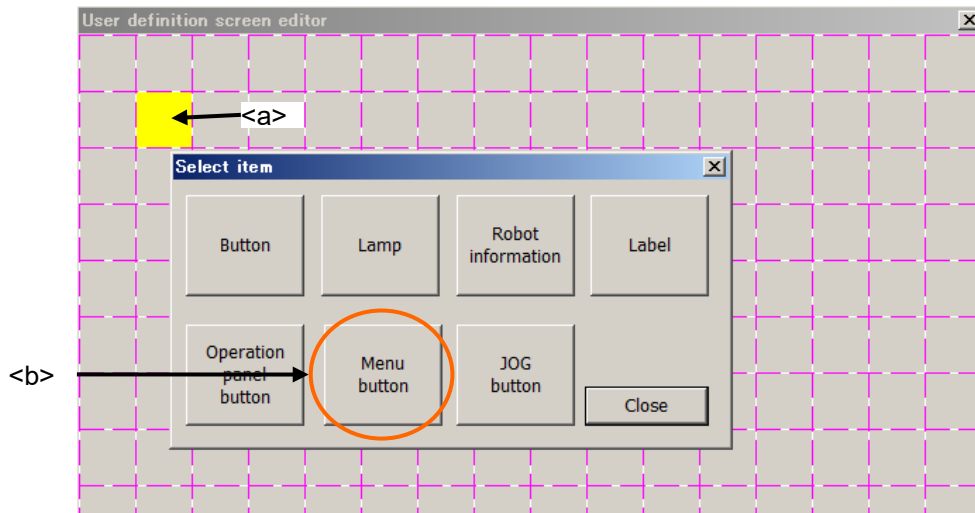

19.1.5.12. Menu button

You can place menu buttons at the specified position. This function can be used with this software Ver. 4.1 or later, Software Ver.1.40S or later of RT Toolbox 3.

- 1) Tap <a> where you want to create the menu button. The menu button uses this position as the left end and uses 2 squares.
- 2) Select the menu button on the [Select Item] screen.
- 3) On the [Create menu button] screen, select the menu button <c> to be arranged.
At this time, the execution button image is displayed at the lower left of the screen.
- 4) Tap the [OK] button. <d>






Runtime button image	Creation button image	Description
		Move to program list screen.
		Move to slot run state monitor screen.
		Move to program monitor screen.
		Move to movement state monitor screen.
		Move to error monitor screen.
		Move to general signal monitor screen.
		Move to named signal monitor screen.
		Move to stop signal monitor screen.
		Move to register<CC-Link> monitor screen.
		Move to IO unit monitor screen.
		Move to operation hours screen.
		Move to production information monitor screen.
		Move to additional board screen.
		Move to position monitor screen.
		Move to speed monitor screen.
		Move to load monitor screen.
		Move to power monitor screen.
		Move to current monitor screen.
		Move to parameter edit screen.
		Move to backup screen.
		Move to restore screen.
		Move to origin data menu screen.
		Move to initialize screen.

	Maintenance forecast	Move to maintenance forecast screen.
	Setup guidance	Move to setup guidance screen.
	Password Setup	Move to password setup screen.
	Tool auto calculation	Move to tool auto calculation screen.
	Version	Move to version screen.
	System option	Move to system option screen.
	SQ Direct	Move to SQ direct position edit screen.
	Operation panel	Move to operation panel screen.


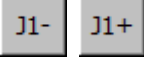

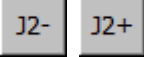

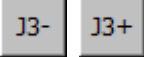

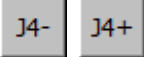

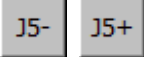

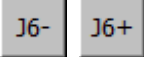

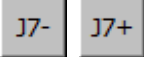

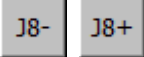

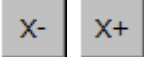





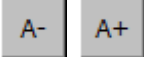


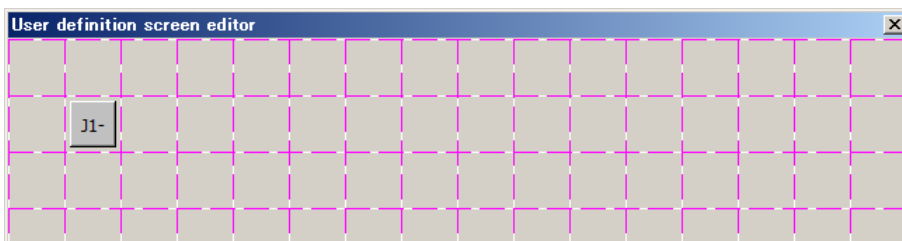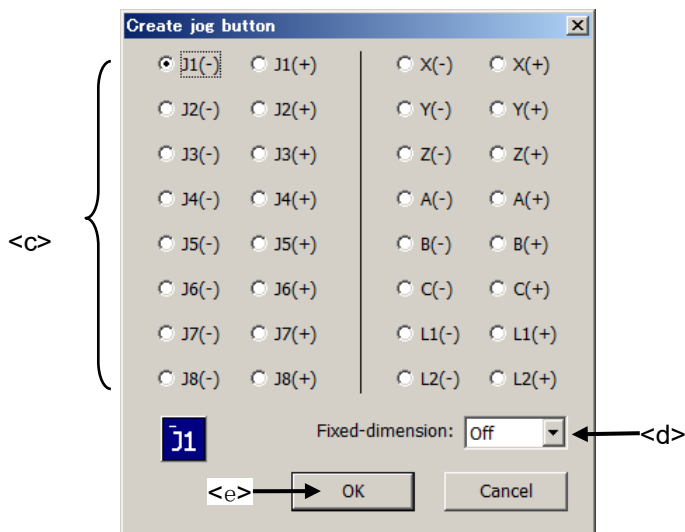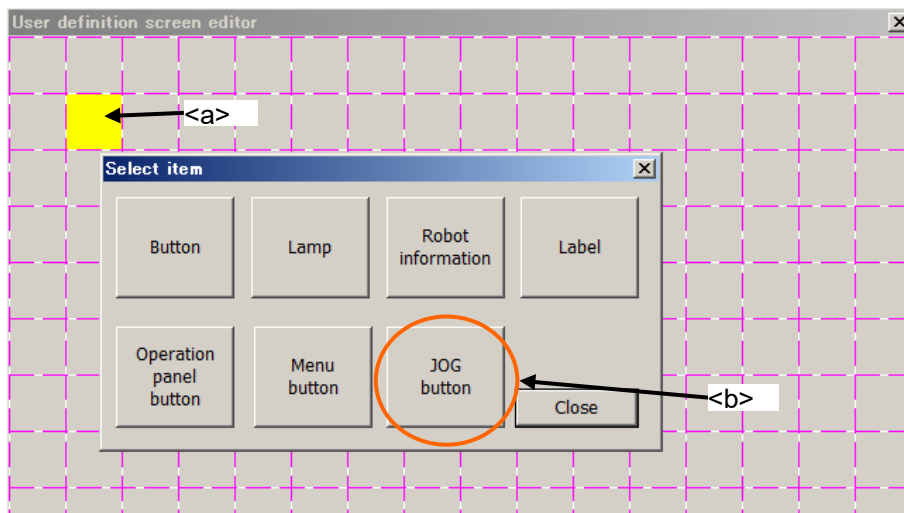
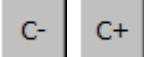



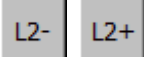
19.1.5.13. JOG button

You can place jog buttons at the specified position. This function can be used with this software Ver. 4.1 or later, Software Ver.1.40S or later of RT Toolbox 3.

- 1) Tap <a> where you want to create the jog button.
- 2) Select the jog button on the [Select Item] screen.
- 3) On the [Create jog button] screen, select the jog button <c> to be arranged.
At this time, the execution button image is displayed at the lower left of the screen.
- 4) Select the Fixed-dimension. <d>
- 5) Tap the [OK] button. <e>




Fixed-dimension	Description
Off	Press the button to move the axis.
High	The axis will move the amount specified by the JOG parameter movement amount H.
Low	The axis will move the amount specified by the JOG parameter movement amount L.

Runtime button image	Creation button image	Description
		Move J1 axis.
		Move J2 axis.
		Move J3 axis.
		Move J4axis.
		Move J5 axis.
		Move J6 axis.
		Move J7 (additional axis) axis.
		Move J8 (additional axis) axis.
		Move in X coordinate direction.
		Move in Y coordinate direction.
		Move in Z coordinate direction.
		Rotate around the X axis.
		Rotate around the Y axis.
		Rotate around the Z axis.
		Move L1 (additional axis) axis.
		Move L2 (additional axis) axis.

Press the T / B [TEACH] switch to activate T / B, then turn the servo power on and press the T / B enable switch to continue using the jog button.

19.1.5.14. Save and end of editing user definition screen



After the editing of user definition screen is completed, tap [Save] button (<a>).
To end the edit, tap [Close] button ().

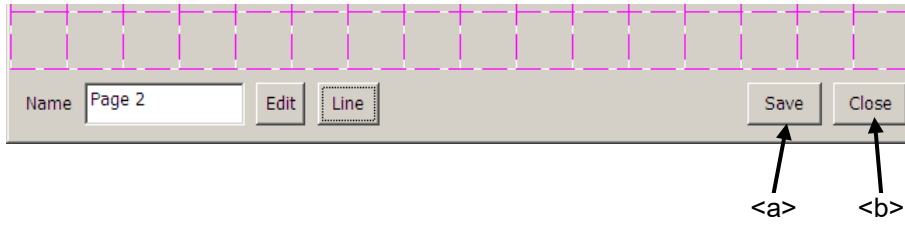

19.1.6. Edit of existing parts

Edit of existing parts is as follows:


- (1) Tap a part which is edited (<a>).
- (2) After "Edit menu" window is displayed, Tap [Edit] button ().
- (3) The edit displays of selected parts are displayed. After changing contents, tap [OK] button (<c>).

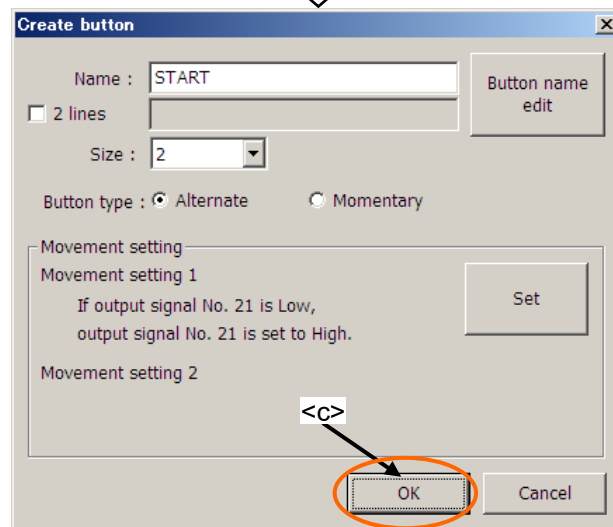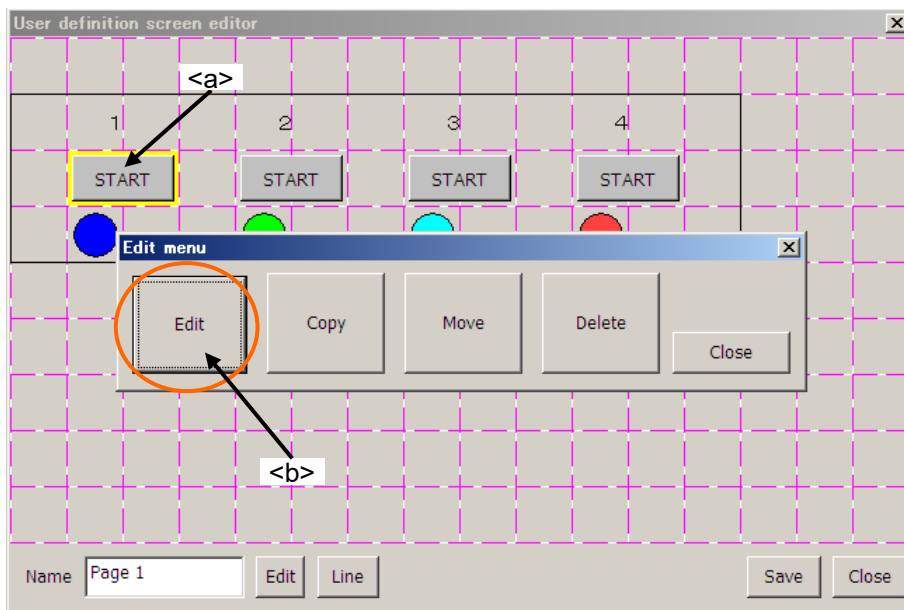

19.1.7. Copy/movement of parts

Parts can be copied or be moved.


- (1) Tap the part to copy, and select it (<a>).
- (2) After "Edit menu" window is displayed, tap [Copy] button (). When parts are moved, tap [Move] button.
- (3) Tap the position(block) where the part is copied onto (moved to).
At this time, the current position(block) of part is red, and the position(block) where the part is copied onto is green. Tap [Yes] button (<d>) on the confirmation message.

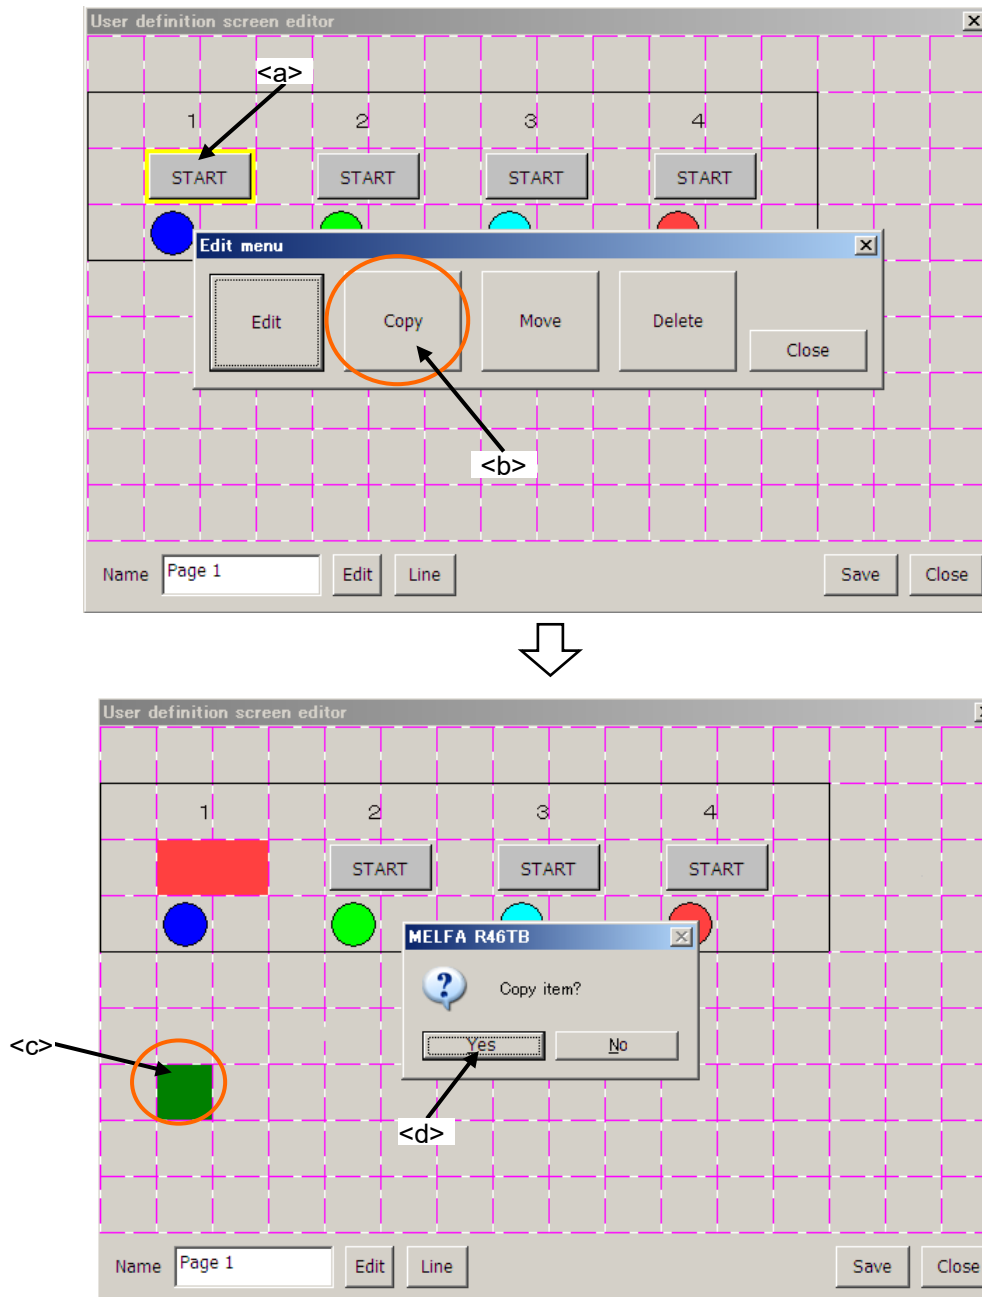

19.1.8. Deletion of parts


Parts can be deleted.

- (1) Tap the part to delete, and select it (<a>).
- (2) After "Edit menu" window is displayed, tap [Delete] button ().
- (3) Tap [Yes] button on the confirmation message.

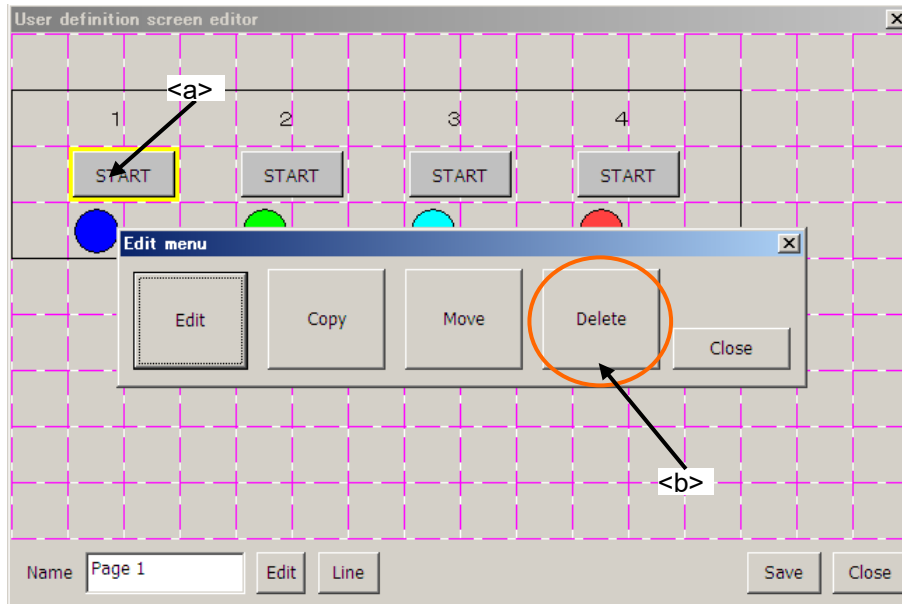

19.1.9. Change of page name

Page name can be changed in [Edit] button (<a>) under the left of the window.

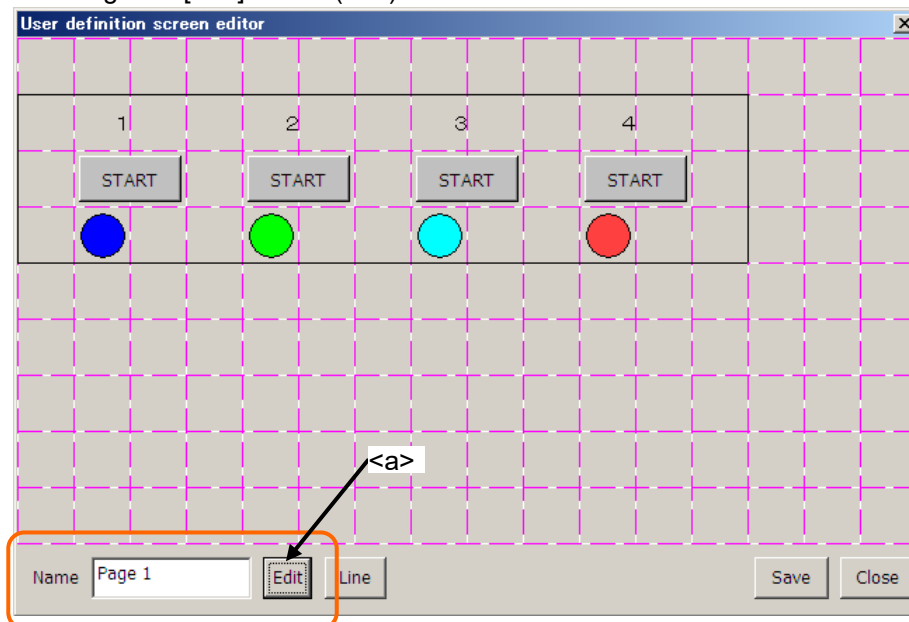

Caution



When page name that has already been registered is input, it becomes an error.

19.1.10. Edit of ruled line


The ruled line can be drawn on the user definition screen.

19.1.10.1. Drawing the ruled line


- (1) Tap [Line] button (<a>) on the window.
- (2) The button (“[Top],[Bottom],[Left],[Right]”) () for the ruled line is displayed in the right of [Line] button. These buttons to draw the ruled line disappear when [Line] button (<c>) is tapped again.

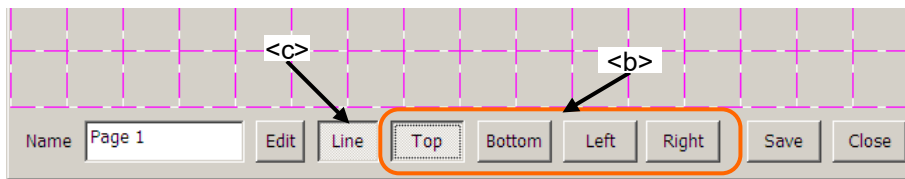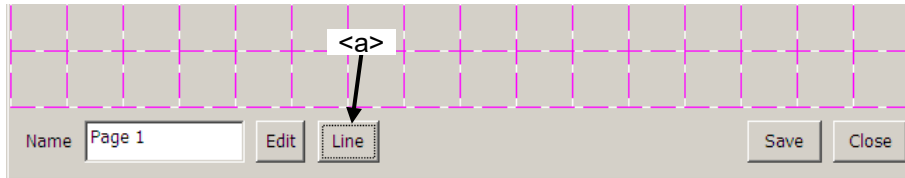

- (3) Select the kind of ruled line (<d>). Only one kind of the ruled line can be selected.

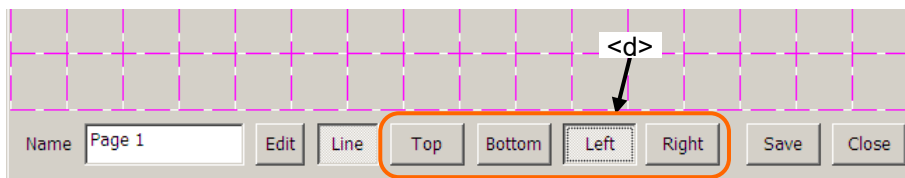


- (4) Tap the block (<e>) where the ruled line is drawn. The ruled line of the specified position on the selected block can be drawn.

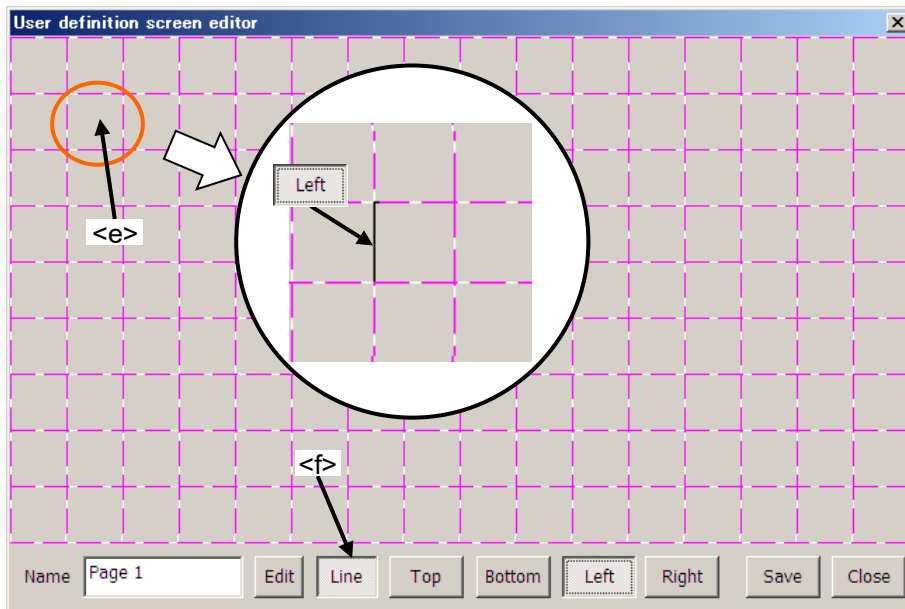


- (5) After editing the ruled line, tap [Line] button (<f>) again.

19.1.10.2. Erasing the ruled line


- (1) Tap [Line] button (<a>) on the window.
- (2) The button (“[Top],[Bottom],[Left],[Right]”) () for the ruled line is displayed in the right of [Line] button. These buttons to draw the ruled line disappear when [Line] button (<c>) is tapped again.

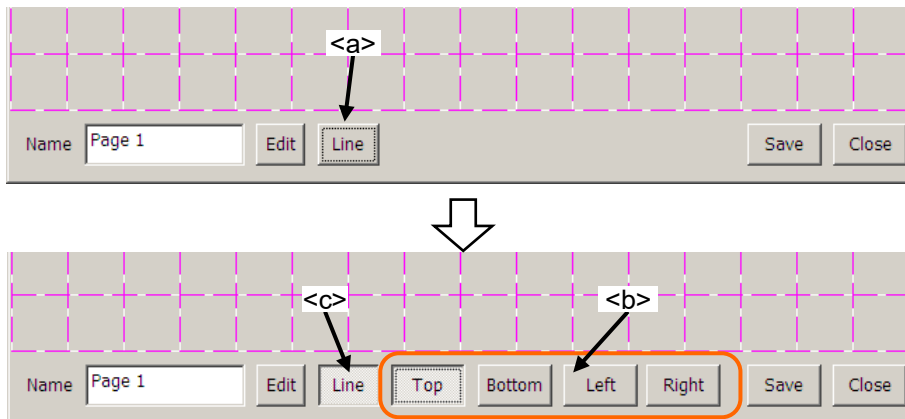

- (3) Select the kind of ruled line (<d>). Only one kind of the ruled line can be selected.

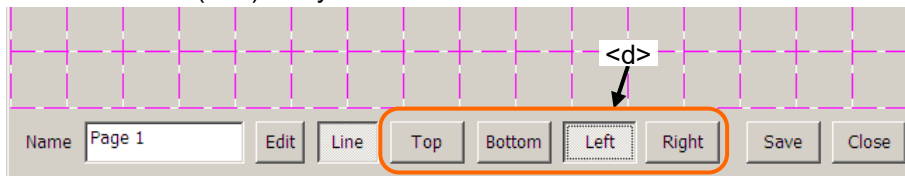

- (4) Tap the block (<e>) where the ruled line is erased. The ruled line of the specified position on the selected block can be erased.

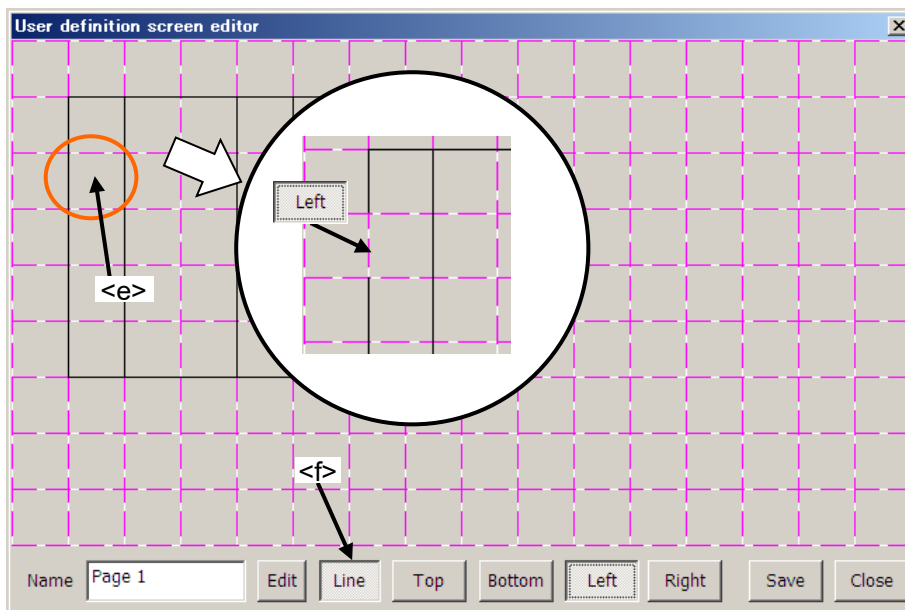

- (5) After editing the ruled line, tap [Line] button (<f>) again.

19.1.11. Import / Export of page


The made user definition screen can be saved in USB memory or can be read from USB memory.

- Import : The user definition screen specified from USB memory is read.
- Export : The specified user definition screen is saved in USB memory.

When [Import] button or [Export] button is tapped with USB memory not installed, the error is displayed.


19.1.11.1. Import of page (Reading from USB memory)

- (1) Install the USB memory.
- (2) Tap [Import] button (<a>).
- (3) Select the import file in USB memory on "Open" window, and tap [open] button.
- (4) The selected user definition screen is added to the list. If the user definition screen of the same name has already been registered in the list, "import" is added to the name of the user definition screen.

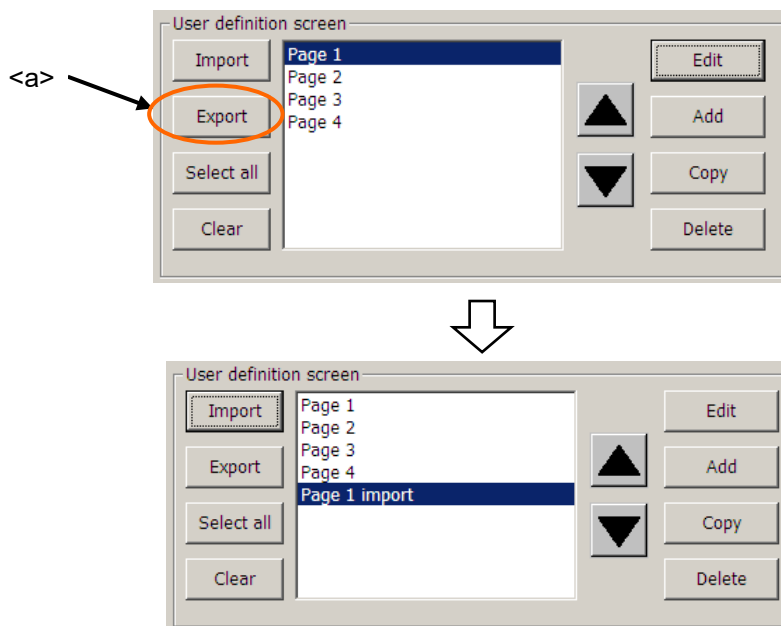

19.1.11.2. Export of page(Save to USB memory)


- (1) Install the USB memory.
- (2) Select the user definition screen to export (<a>). If [Select all] button (<c>) was tapped, all the user definition screens can be selected.
- (3) Tap [Export] button ().
- (4) Save it applying the file name on the screen for saving.

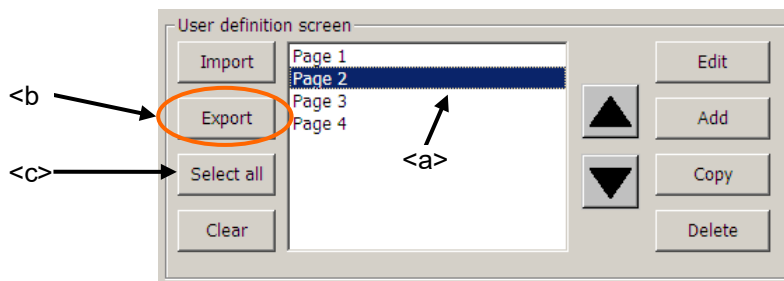

19.2. Operation of user definition screen

The user definition screen can be displayed by the following operations.

- (1) Tap the [MENU] button (<a>) of a T/B screen and display menu panel.
- (2) Tap the [User Definition] button () in the menu.
- (3) The user definition screen is displayed.

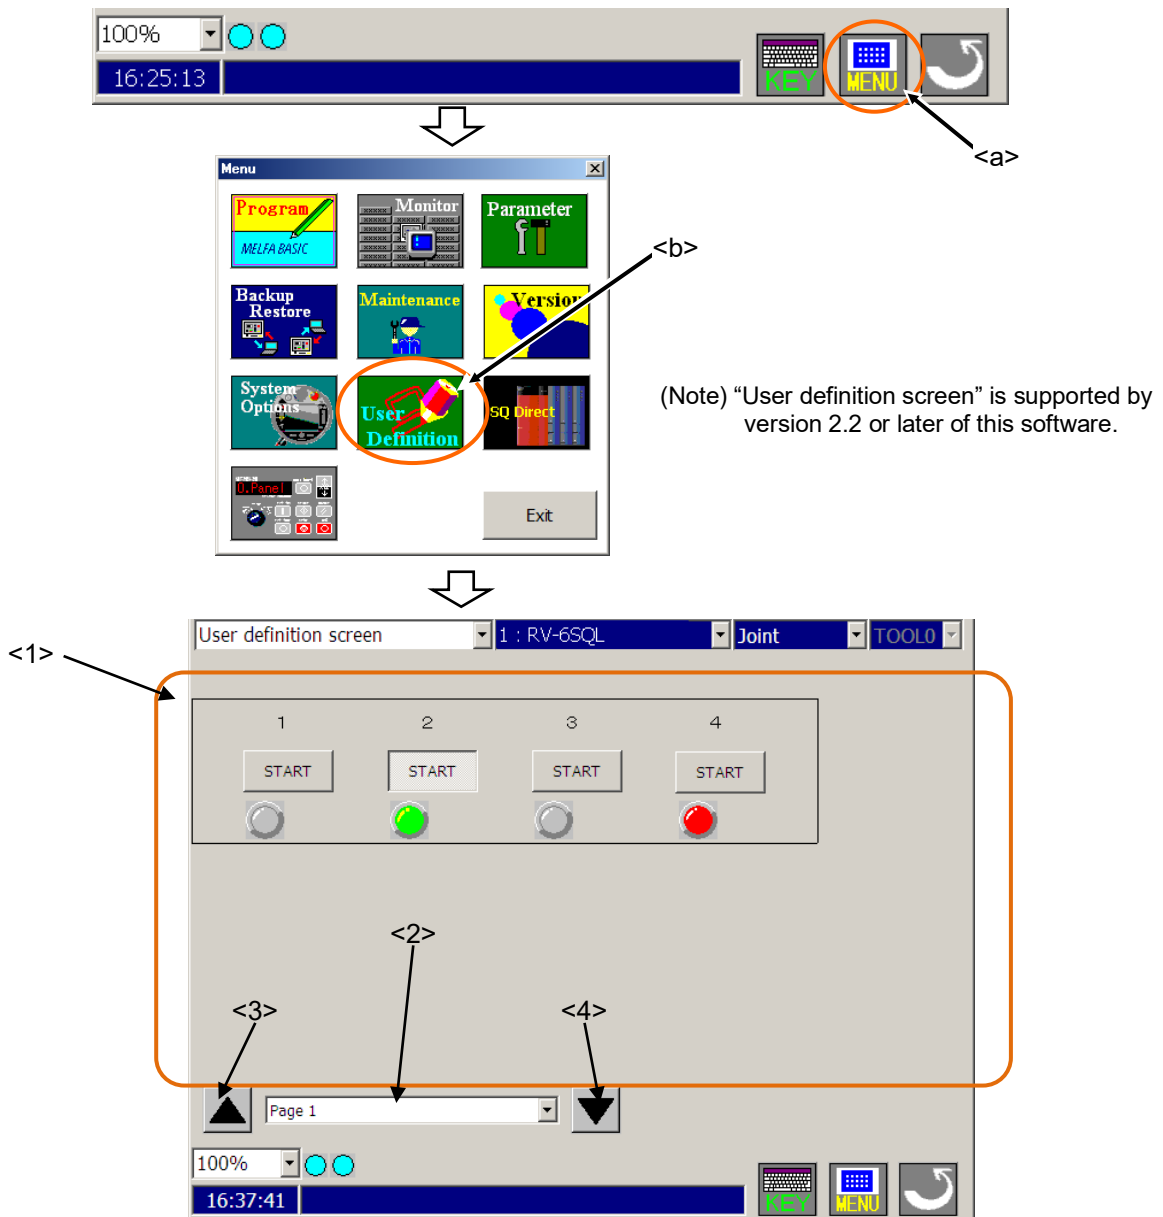

- <1> User definition screen : The registered user definition screen is displayed. On this screen, you can change the value of the variable parts set value edit Enable by tapping this parts and displaying the input value screen. (Only at T/B state is enabling.)
- <2> Page name : The name of the user definition screen is displayed.
- <3> ▲ <4> ▼ : The page is switched.

CAUTION


Output signals in the T/B disabling state

You can output signals by tapping the button in the T/B disabling state, version 3.4 or later. But please note that you cannot output signals by tapping the button in the T/B disabling state, version 3.3 or earlier.

19.2.1. Mechanism of screen update

It takes 0.5 seconds or less to update the state of the lamp and robot information, and the update which cannot have been updated during that time is done after 0.5 seconds.

For example, it becomes the following if there are 15 information items to update, and 10 items can be dealt by every 0.5 seconds.

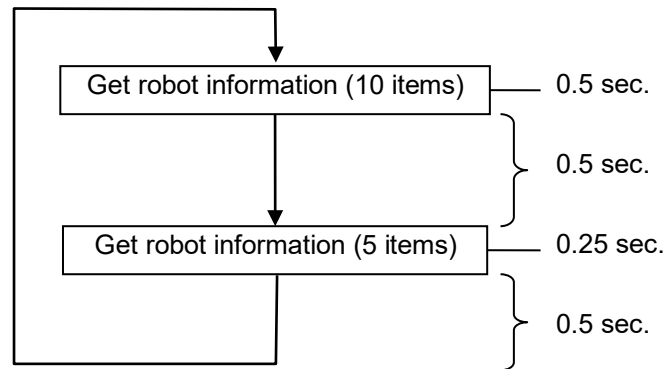

While getting robot information, the signal is not outputted by tap or tap the button.

- (1) The signal output by the button tapped or tapped is delayed 0.5 seconds or less.
- (2) When parts increase, the update interval of the lamp and robot information becomes longer.

20. Operation panel


The Operation panel is a screen prepared for the controller with whom the operation panel is not equipped. This screen has functions equal with controller's operation panel. This screen can be started by selecting the program. This screen is possible to use it even in "AUTOMATIC" and "MANUAL" mode.

Operation panel is not displayed with the software before version 3.0. Moreover, the software version of the controller which can use this function is as follows.

Controller	S/W Ver. of the controller
CR750-D/CRnD-700	Ver.S3 or later
CR750-Q/CRnQ-700	Ver.R3 or later
CR800-D/R/Q	Can be used with all versions

20.1. Starting

- (1) Tap the [MENU] button (<a>) of a T/B screen and display menu panel.
- (2) Tap the [Operation panel] button () in the menu.
- (3) The Operation panel screen is displayed.
- (4) T/B Enable lamp (<c>) blinks at the "AUTOMATIC" mode.

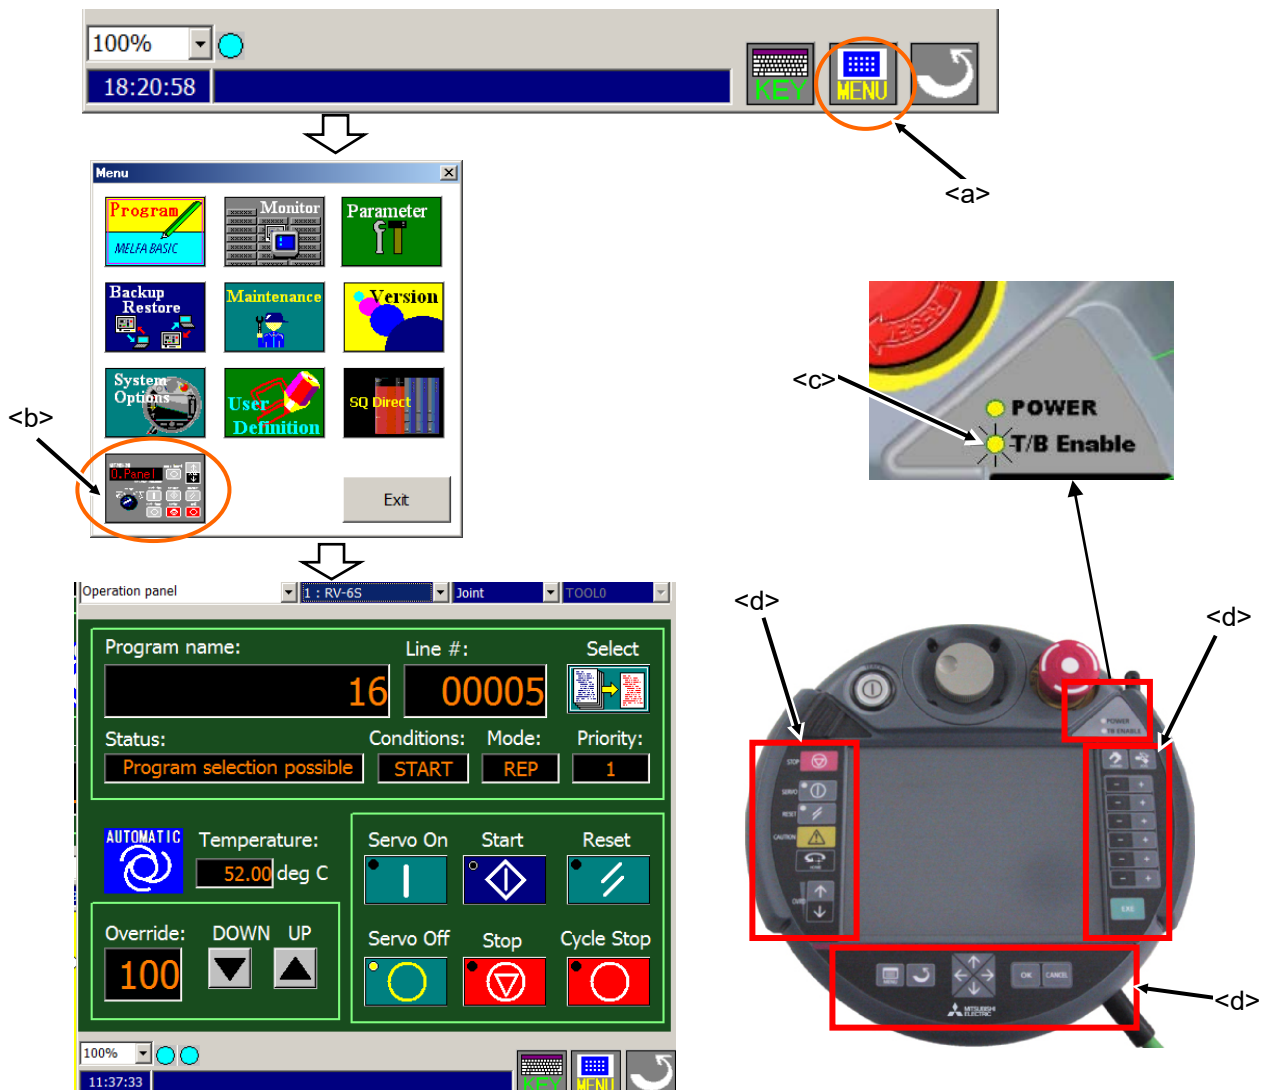


Even if the operation screen is displayed, sheet key (<d>) can be used so far.

CAUTION

When using it in the MANUAL mode

- Push the TEACH button. (Change to the enabling state.)
- Press this switch lightly when carrying out functions with the servo ON.
The servo power cuts if an enable switch of T/B is opened while the robot is working and the robot stops.
- The robot works below the speed limit of JOG.
- The running program is immediately stopped, and the moving robot is decelerated to a stop when the JOG operation or the electric hand operation is done. After it stops, JOG operation and an electric hand can be operated usually.

20.2. Display

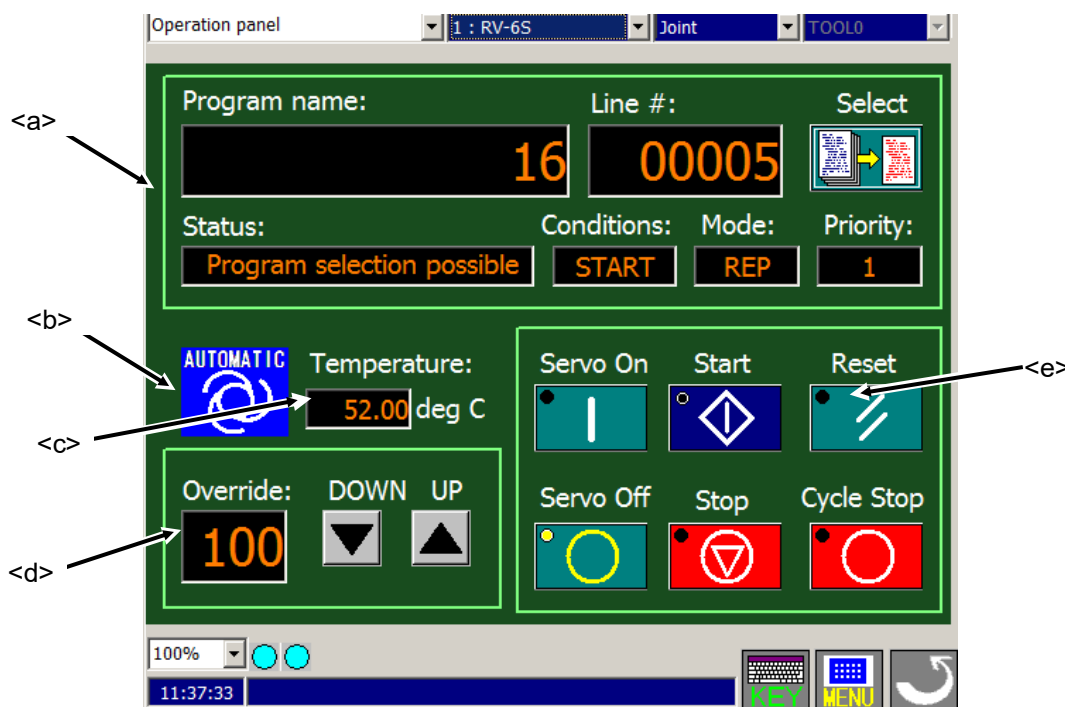

The state of the slot 1(<a>), the controller's operation mode (), the controller's temperature (<c>) and the robot override (<d>) in the robot controller can be monitored.


When lamp (<e>) of the button is lit or has blinked, the following state is shown.

Button name	Lighting	Blinking
Servo On	The servo power on	-
Servo Off	The servo power off	-
Start	The controller is operating	-
Stop	The controller is stopping.	-
Reset	-	The alarm is being generated as a controller.
Cycle Stop	-	The controller is cycle stop.

20.3. Program select

The robot program can be selected at slot 1.

- (1) Tap the [Select] button (<a>).
- (2) [Select] dialog () is displayed.
- (3) Select the program and Tap the [Select] button (<c>)
- (4) Since the confirmation screen is displayed, the [Yes] button (<e>) is tapped.

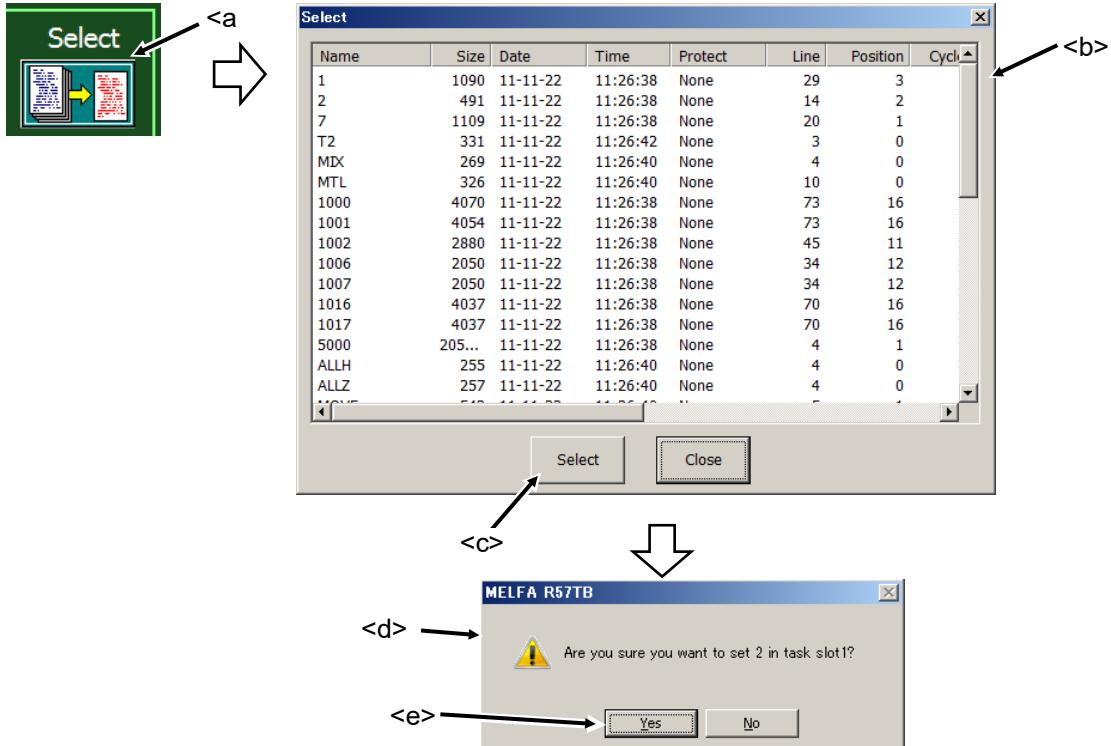


Note) The program selection cannot be done while executing the program.

20.4. Override UP/DOWN


Override is lowered with [DOWN] button (<a>), and it raises it with [UP] button ().

Upper and lower width in the operation panel screen is ten. Please note that upper and lower width is different with [↑] and [↓] of the sheet key of T/B.

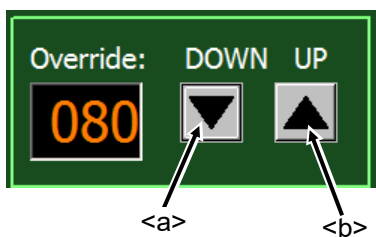


20.5. Servo ON/OFF

Tap the [Servo On] button (<a>), the servo power is turned on. Tap the [Servo Off] button (), the servo power is turned off.

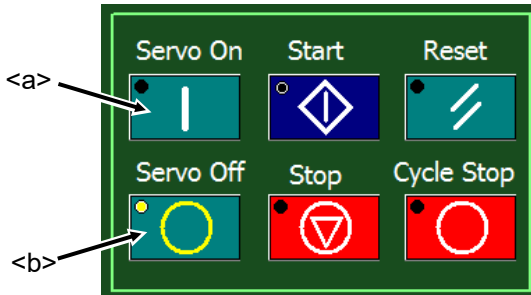

20.6. Start automatic operation

Tap the [Start] button (<a>), the Caution dialog () is displayed. An automatic driving begins when [OK] button (<c>) is tapped after safety is confirmed.

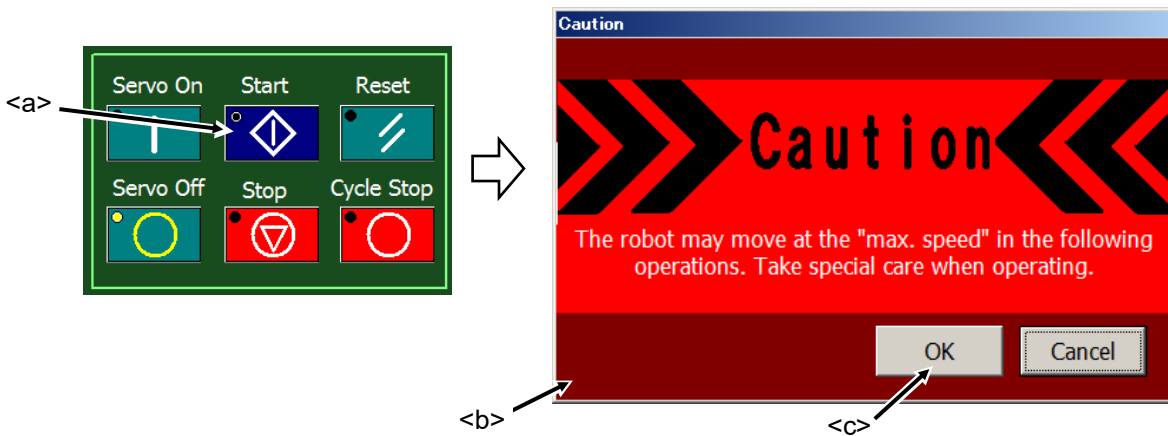


CAUTION

It is necessary to note that the robot works at a usual speed at the "AUTOMATIC" mode.

20.7. Stop

Tap the [Stop] button (<a>), the running program is immediately stopped, and the moving robot is decelerated to a stop. The servo power is hold turning on.

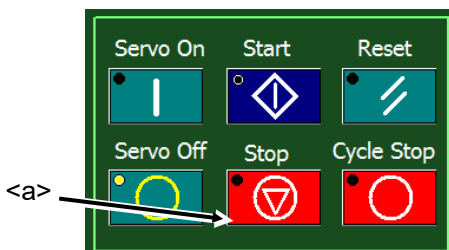


20.8. Reset

The [Reset] button (<a>) can be used to reset the controller's error. This also resets the program's halted state and resets the program.

At program reset


Tap the [Reset] button (<a>), the confirmation message box () is displayed. Tap the [Yes] button (<c>), the program is reset.

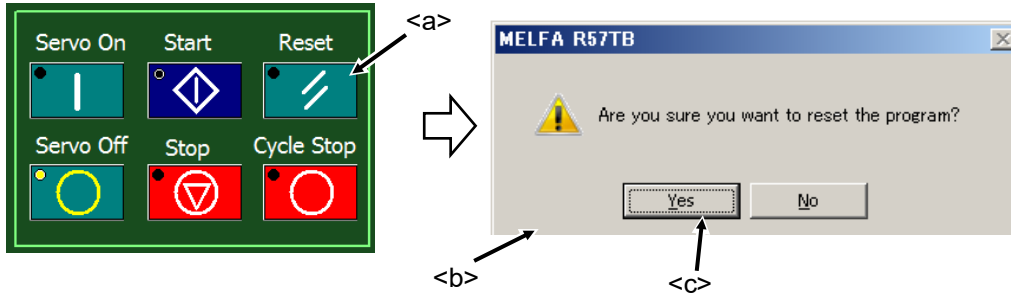

20.9. Cycle stop

If the [Cycle Stop] button (<a>) is tapped during the continuous operation, the program will stop after one cycle. The lamp () blinks during the cycle stop.

It returns to a continuous operation when the [Cycle Stop] button (<a >) is tapped again during cycle stop.

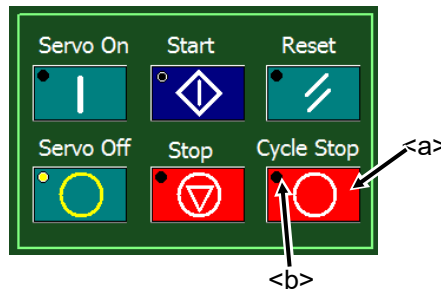

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BUILDING, 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
NAGOYA WORKS: 5-1-14, YADA-MINAMI, HIGASHI-KU NAGOYA 461-8670, JAPAN

Authorised representative:
Mitsubishi Electric Europe B.V, FA - European Business Group
Mitsubishi-Electric-Platz 1, D-40882 Ratingen, Germany
Tel: +49(0)2102-4860