

# HIGH AC CURRENT TRANSMITTER (wide bandwidth)

MODEL

CTS2

## BEFORE USE ....

Thank you for choosing M-System. Before use, check the package you received as below.

If you have any problems or questions with the product, please contact M-System's Sales Office or representatives.

### ■ PACKAGE INCLUDES:

- Signal conditioner (body + base socket) .....(1)
- Current probe .....(1)
- Current probe mounting attachments .....(2)

### ■ MODEL NO.

Check that model No. described on specification label is exactly what you ordered.

### ■ INSTRUCTION MANUAL

This manual describes necessary points of caution when you use this product, installation, connection and basic maintenance procedures.

## POINTS OF CAUTION

### ■ POWER INPUT RATINGS

- Power input ratings are specified by the model number suffix code. Check the power input voltage for the unit on the specification label.

AC power: rating  $\pm 10\%$ , 50/60  $\pm 2$  Hz, approx. 2VA

DC power: rating  $\pm 10\%$ , approx. 2W

(85 – 150V for 110V rating)

### ■ GENERAL

- Before you remove the unit from its base socket or mount it, turn off the power supply and input signal for safety.

### ■ ENVIRONMENT

- When heavy dust or metal particles are present in the air, install the unit inside proper housing and ventilate it.
- Do not install the unit where it is subjected to continuous vibration. Do not apply physical impact to the unit.
- Environmental temperature must be within  $-5$  to  $+60^{\circ}\text{C}$  ( $23$  to  $140^{\circ}\text{F}$ ) for the transmitter and  $-10$  to  $+55^{\circ}\text{C}$  ( $14$  to  $131^{\circ}\text{F}$ ) for the probe, with relative humidity within 15 to 85% RH for the probe, 30 to 90% RH for the transmitter in order to ensure adequate life span and operation.
- Do not cover the ventilation slits with cables, etc.


### ■ WIRING

- Do not install cables (power supply, input and output) close to noise sources (relay drive cable, high frequency line, etc.).
- Do not bind these cables together with those in which noises are present. Do not install them in the same duct.


### ■ AND ....

- The unit is designed to function as soon as power is supplied, however, a warm up for 10 minutes is required for satisfying complete performance described in the data sheet.

## COMPONENT IDENTIFICATION

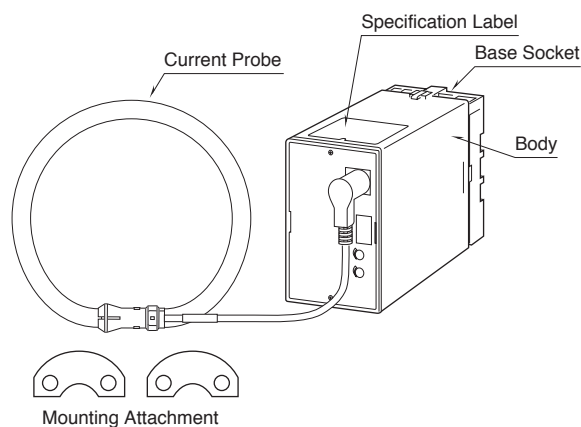

### ■ FRONT PANEL CONFIGURATIONS

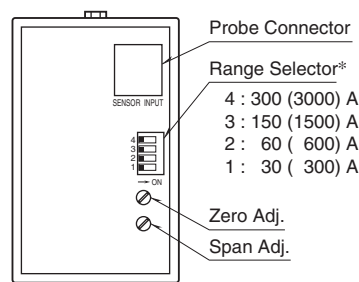

\*( ) for input 3000A type.


## INSTALLATION

Detach the yellow clamps located at the top and bottom of the unit for separating the body from the base socket.

### ■ TRANSMITTER

#### • DIN Rail Mounting

Set the base socket so that its DIN rail adaptor is at the bottom. Position the upper hook at the rear side of base socket on the DIN rail and push in the lower. When removing the socket, push down the DIN rail adaptor utilizing a screwdriver (–) and pull.

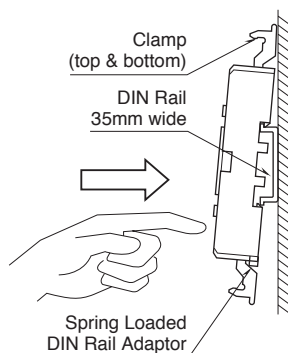

#### • Wall Mounting


Refer to the drawings next.

Shape and size of the base socket are slightly different with various socket types.

### ■ CURRENT PROBE

Mount the sensor so that the conductor passes near the center of the sensor and at right angle to the sensor circle. Otherwise, the position sensitivity may increase. In order to separate the connection, pull out the sensor end from the connector.


Use binding straps for fixing the position of the probe with the attachments.

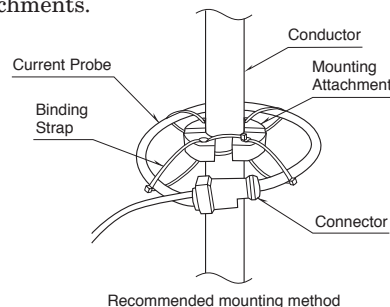


## TERMINAL CONNECTIONS

Connect the unit as in the diagram below or refer to the connection diagram at the front of the unit.


### ■ TRANSMITTER DIMENSIONS mm (inch)

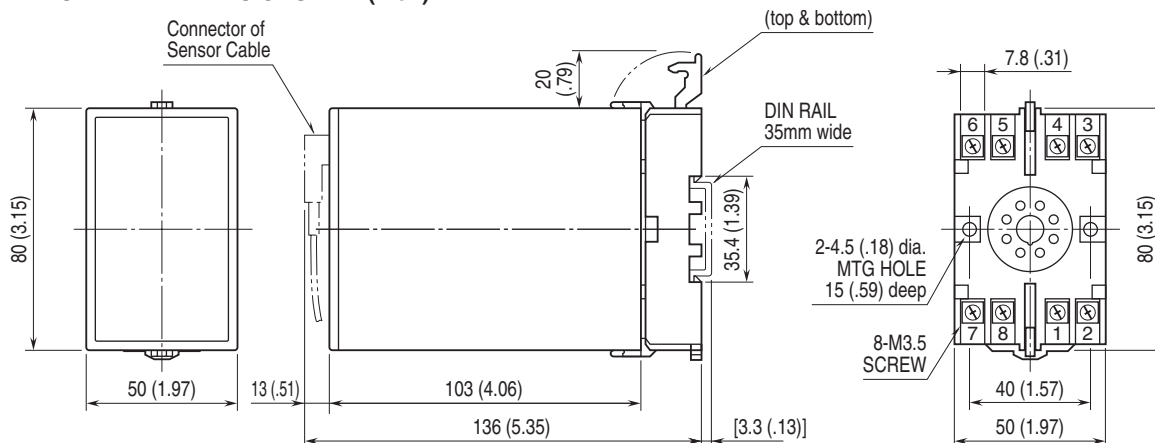

### ■ CURRENT PROBE DIMENSIONS mm (inch)

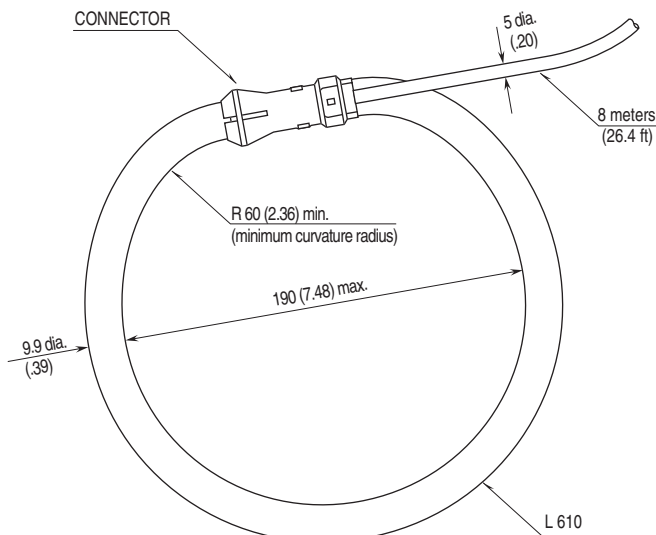

### ■ CONNECTION DIAGRAM

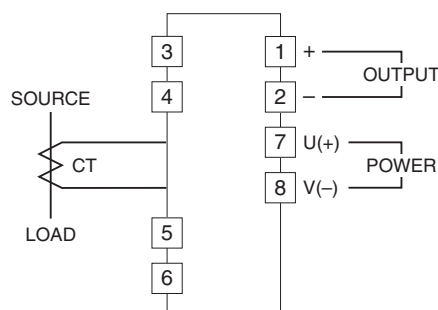

## CHECKING

- 1) Terminal wiring: Check that all cables are correctly connected according to the connection diagram.
- 2) Power input voltage: Check voltage across the terminal 7 – 8 with a multimeter.
- 3) Input: Check that the range selector switch is properly set to match the input range. Check that the input signal is within 0 – 100% of the full-scale.
- 4) Output: Check that the load resistance meets the described specifications.

## ADJUSTMENT PROCEDURE

This unit is calibrated at the factory to meet the ordered specifications, therefore you usually do not need any calibration.

For matching the signal to a receiving instrument or in case of regular calibration, adjust the output as explained in the following.

### ■ HOW TO CALIBRATE THE OUTPUT SIGNAL

Use a signal source and measuring instruments of sufficient accuracy level. Turn the power supply on and warm up for more than 10 minutes.

- 1) ZERO: Apply 0% input and adjust output to 0%.
- 2) SPAN: Apply 100% input and adjust output to 100%.
- 3) Check ZERO adjustment again with 0% input.
- 4) When ZERO value is changed, repeat the above procedure 1) – 3).

## MAINTENANCE

Regular calibration procedure is explained below:

### ■ CALIBRATION

Warm up the unit for at least 10 minutes. Apply 0%, 25%, 50%, 75% and 100% input signal. Check that the output signal for the respective input signal remains within accuracy described in the data sheet. When the output is out of tolerance, recalibrate the unit according to the "ADJUSTMENT PROCEDURE" explained earlier.

### M-SYSTEM WARRANTY

M-System warrants such new M-System product which it manufactures to be free from defects in materials and workmanship during the 36-month period following the date that such product was originally purchased if such product has been used under normal operating conditions and properly maintained, M-System's sole liability, and purchaser's exclusive remedies, under this warranty are, at M-System's option, the repair, replacement or refund of the purchase price of any M-System product which is defective under the terms of this warranty. To submit a claim under this warranty, the purchaser must return, at its expense, the defective M-System product to the below address together with a copy of its original sales invoice.

THIS IS THE ONLY WARRANTY APPLICABLE TO M-SYSTEM PRODUCT AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. M-SYSTEM SHALL HAVE NO LIABILITY FOR CONSEQUENTIAL, INCIDENTAL OR SPECIAL DAMAGES OF ANY KIND WHATSOEVER.

M-System Co., Ltd., 5-2-55, Minamitsumori, Nishinari-ku, Osaka 557-0063 JAPAN, Phone: (06) 6659-8201, Fax: (06) 6659-8510, E-mail: info@m-system.co.jp