

**BEFORE USE ....**

Thank you for choosing M-System. Before use, please check contents of the package you received as outlined below. If you have any problems or questions with the product, please contact M-System's Sales Office or representatives.

**■ PACKAGE INCLUDES:**

DC alarm (body).....(1)

**■ MODEL NO.**

Confirm Model No. marking on the product to be exactly what you ordered.

**■ INSTRUCTION MANUAL**

This manual describes necessary points of caution when you use this product, including installation, connection and detailed operation regarding settings. For detailed explanations, please refer to the Model M1EAXV-2 operating manual (EM-5995-B).

The M1EAXV-2 is programmable using a PC. For detailed information on the PC configuration, refer to the M1EACFG users manual (EM-5994).

The M1EACFG Configurator Software and the operating manual (EM-5995-B) are downloadable at M-System's web site: <http://www.m-system.co.jp>

**POINTS OF CAUTION**

**■ CONFORMITY WITH EU DIRECTIVES**

- This equipment is suitable for Pollution Degree 2, Measurement Category II (output, transient voltage 2500V). Prior to installation, check that the insulation class of this unit satisfies the system requirements. Insulation class of this unit is as follows.

**Output code: 2, 3**

Input or output to power	Reinforced insulation (300V)
Input to output	Basic insulation (300V)
1L1 or 1L2 alarm output to 1L3 or 1L4 alarm output to 2L1 or 2L2 alarm output to 2L3 or 2L4 alarm output	Basic insulation (300V)

**Output code: 5**

Input or output to power	Reinforced insulation (300V)
Input to output	Basic insulation (300V)
1L1 alarm output to 1L2 alarm output to 2L1 alarm output to 2L2 alarm output	Basic insulation (300V)

- Altitude up to 2000 meters.
- The equipment must be mounted inside a panel.
- The equipment must be installed such that appropriate clearance and creepage distances are maintained to conform to CE requirements. Failure to observe these requirements may invalidate the CE conformance.

- The actual installation environments such as panel configurations, connected devices, connected wires, may affect the protection level of this unit when it is integrated in a panel system. The user may have to review the CE requirements in regard to the whole system and employ additional protective measures to ensure the CE conformity.
- Install lightning surge protectors for those wires connected to remote locations.

**■ POWER INPUT RATING & OPERATIONAL RANGE**

- Locate the power input rating marked on the product and confirm its operational range as indicated below:  
24V DC rating: 24V ±10%, ≤ 6W

**■ GENERAL PRECAUTIONS**

- Before you remove the unit from its base socket or mount it, turn off the power supply and input signal for safety.

**■ ENVIRONMENT**

- Indoor use.
- When heavy dust or metal particles are present in the air, install the unit inside proper housing with sufficient ventilation.
- Do not install the unit where it is subjected to continuous vibration. Do not subject the unit to physical impact.
- Environmental temperature must be within -5 to +55°C (23 to 131°F) with relative humidity within 10 to 85% RH in order to ensure adequate life span and operation.
- Be sure that the ventilation slits are not covered with cables, etc.


**■ WIRING**

- Do not install cables close to noise sources (relay drive cable, high frequency line, etc.).
- Do not bind these cables together with those in which noises are present. Do not install them in the same duct.

**■ AND ....**

- The unit is designed to function as soon as power is supplied, however, a warm up for 10 minutes is required for satisfying complete performance described in the data sheet.

## COMPONENT IDENTIFICATION

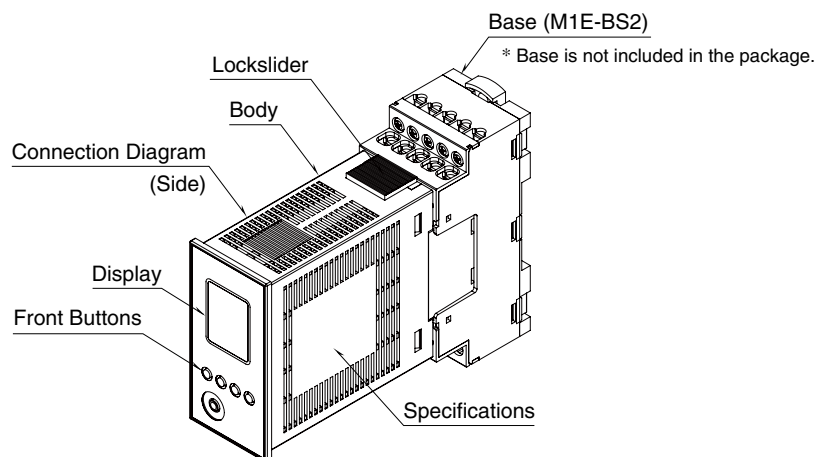

### ■ TERMINAL ASSIGNMENTS

1	2	3	4	5
6	7	8	9	10
11	12	13	14	15
16	17	18	19	20

#### • Output Code: 2, 3

No.	FUNCTION	No.	FUNCTION
1	COM4 (2L3, 2L4)	11	2L1 Alarm output
2	2L3 Alarm output	12	2L2 Alarm output
3	Ch1 Input Voltage +	13	COM1 (1L1, 1L2)
4	Ch1 Input Current +	14	1L1 Alarm output
5	Ch1 Input -	15	1L2 Alarm output
6	COM3 (2L1, 2L2)	16	COM2 (1L3, 1L4)
7	2L4 Alarm output	17	1L3 Alarm output
8	Ch2 Input Voltage +	18	1L4 Alarm output
9	Ch2 Input Current +	19	Power +
10	Ch2 Input -	20	Power -

#### • Output Code: 5

No.	FUNCTION	No.	FUNCTION
1	COM4 (2L2)	11	NO (2L1)
2	NO (2L2)	12	NC (2L1)
3	Ch1 Input Voltage +	13	COM1 (1L1)
4	Ch1 Input Current +	14	NO (1L1)
5	Ch1 Input -	15	NC (1L1)
6	COM3 (2L1)	16	COM2 (1L2)
7	NC (2L2)	17	NO (1L2)
8	Ch2 Input Voltage +	18	NC (1L2)
9	Ch2 Input Current +	19	Power +
10	Ch2 Input -	20	Power -


## INSTALLATION

Pulling out the base while pushing the lockslider on the top of the unit enables to remove the base from the unit (base is not included in the package).

### ■ DIN RAIL MOUNTING (SIDE)


#### • Mounting the unit

- A) Hang the upper hook at the rear side of unit on the DIN rail.
- B) Push the lower part of the unit in the direction of the arrow until the unit is firmly fixed to the DIN rail.

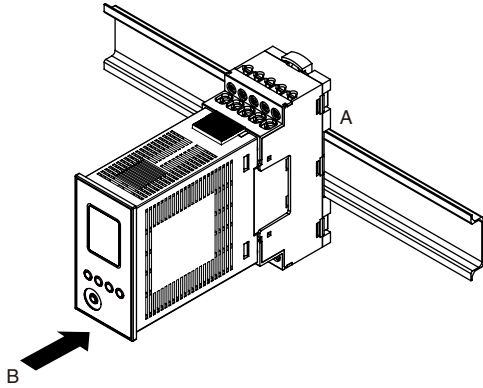

#### • Removing the unit

- A) Push down the DIN rail adaptor using a minus screwdriver.
- B) Pull out the lower part of the unit.
- C) Remove the upper part from the DIN rail.

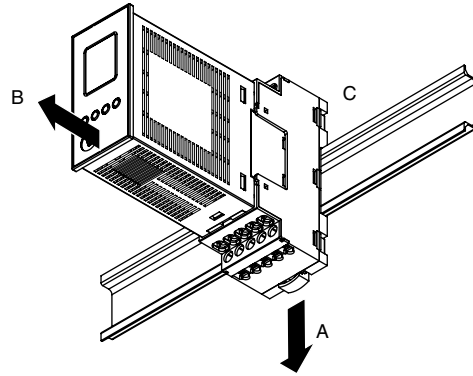


### ■ WALL MOUNTING

Referring to “MOUNTING REQUIREMENTS unit: mm (inch)” on page 4, pull out the upper and lower sliders of the unit and fix them with M4 screws (Torque: 1.4 N·m).


## TERMINAL CONNECTIONS

Connect the unit as in the diagram below or refer to the connection diagram on the side of the unit.

### ■ EXTERNAL DIMENSIONS unit: mm (inch)

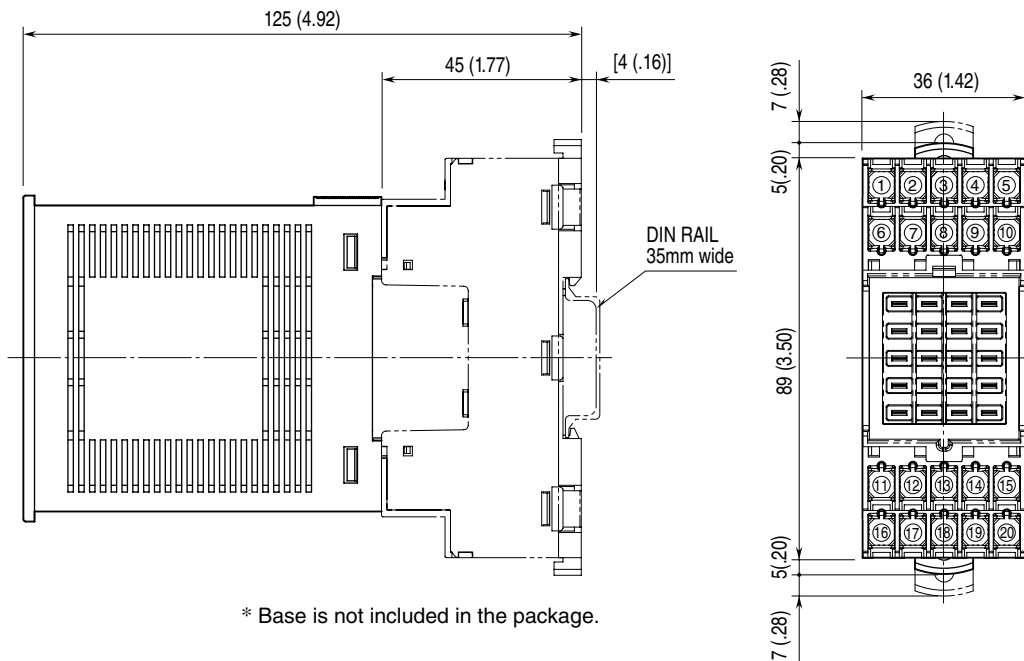

■ MOUNTING REQUIREMENTS unit: mm (inch)

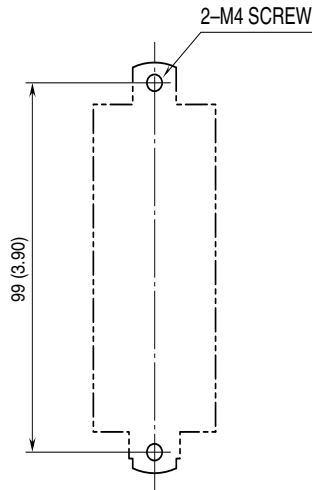


Note: Mounting requirements for base.

■ CONNECTION DIAGRAM


• OUTPUT CODE 2: N.O. Relay

• OUTPUT CODE 3: N.C. Relay

• OUTPUT CODE 5: SPDT Relay

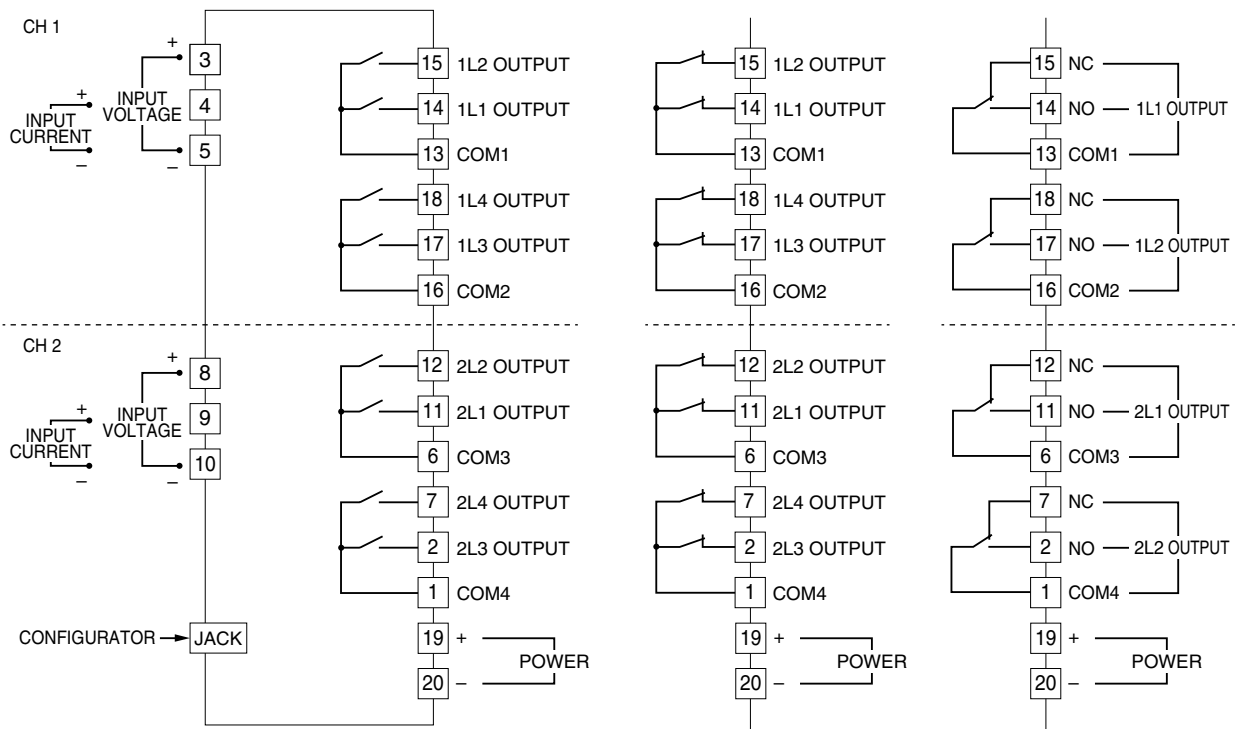

## EXTERNAL VIEWS

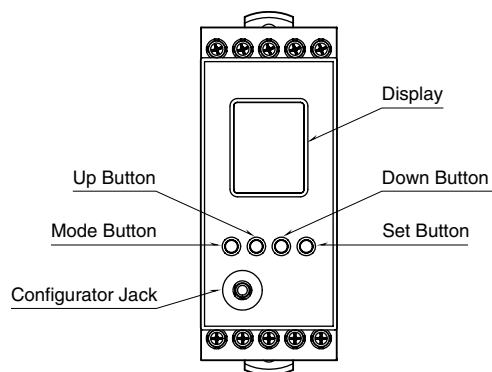

COMPONENT	FUNCTION
Display	Indicates present values, setting values and abnormal information. Two types of present values at upper and lower are displayed by setting.
Mode button	Used to shift from measuring mode to each setting mode. The destination changes depending on how long the button is held down. Used to return from each setting mode to measuring mode (press and hold for 2 sec. or more).
Up button	Used to shift through setting parameters and to increase or select setting value. Used to release Ch1's latching alarm in measuring mode (press and hold for 2 sec. or more).
Down button	Used to shift through setting parameters and to decrease or select setting value. Used to release Ch2's latching alarm in measuring mode (press and hold for 2 sec. or more).
Set button	Used to change setting value of setting parameter. When at setting changeable state, used to enter (save) the setting value. Used to move through the digits of setting value at setting changeable state. Used to release Ch1's and Ch2's latching alarm in measuring mode (press and hold for 2 sec. or more).
Configurator Jack	Used to configure with M1EA configurator software (model: M1EACFG). At the same time, set the lockout setting of the unit to 'lock'.

## WIRING INSTRUCTIONS FOR BASE

### ■ SCREW TERMINAL


Torque: 0.5 N·m

### ■ SOLDERLESS TERMINAL

Refer to the drawing below for recommended ring tongue terminal size. Spade tongue type is also applicable.

Recommended manufacturer: Japan Solderless Terminal MFG.Co.Ltd, Nichifu Co.,ltd (Solderless terminals with insulation sleeve do not fit)

Applicable wire size: 0.25 to 1.65 mm<sup>2</sup>

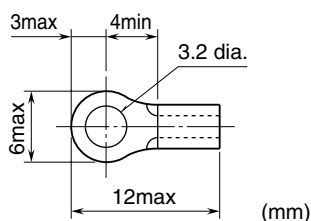


## CHECKING

- 1) Terminal wiring: Check that all cables are correctly connected according to the connection diagram.
- 2) Power input voltage: Check voltage across the terminal 19 – 20 with a multimeter.
- 3) Input: Check that the input signal is within 0 – 100% of full-scale.
- 4) Alarm operations: Check the alarm operations referring to the figure below.
- 5) Output load: Check that the output load is 250 V AC/ 120 VA or 125 V DC/30 W at the maximum.  
For maximum relay life with inductive load, external protection is recommended.

### Alarm Trip Operation

- Example Quad N.O. contacts (LL, L, H, HH)

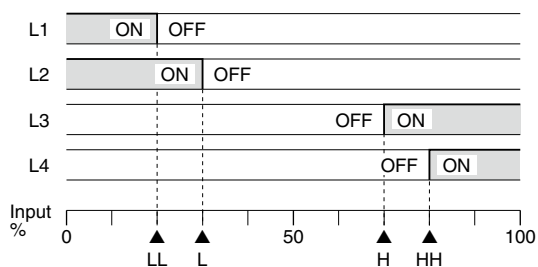

Trip operation in power failure

Output code 2: All relays turn OFF.

Output code 3: All relays turn ON.

Output code 5: Terminals 13 – 15, 16 – 18, 16 – 12, 1 – 7 turn ON.

## MAINTENANCE

Regular calibration procedure is explained below:

### ■ CALIBRATION

Warm up the unit for at least 10 minutes.

#### • H (HH) Setpoint

Increase the input signal from a value lower than the setpoint and check that the relay trips at the setting value.

#### • L (LL) Setpoint

Decrease the input signal from a value higher than the setpoint and check that the relay trips at the setting value.

#### • Input Value

Apply 0%, 25%, 50%, 75% and 100% input signal. Perform input fine adjustment when input value is out of accuracy on the display.

Refer to the operating manual (EM-5995-B), when adjusting with front buttons. Refer to the M1EACFG users manual (EM-5994), when adjusting with M1EA Configurator Software (model: M1EACFG). And then follow the procedure shown below.

#### • INPUT FINE ADJUSTMENT

- 1) Set the input signal to 0 %, and adjust the input display to 0 % by [80]/[180] Input Zero fine adjust.
- 2) Set the input signal to 100 %, and adjust the input display to 100 % by [81]/[181] Input Span fine adjust.
- 3) Again set the simulated input to 0 %, confirm the input display.
- 4) If input display is shifted, repeat the procedure from 1) to 3).

## LIGHTNING SURGE PROTECTION

M-System offers a series of lightning surge protector for protection against induced lightning surges. Please contact M-System to choose appropriate models.