

**HIGH SPEED DC VOLTAGE INPUT MODULE  
(MECHATROLINK-I/II, 8 points, non-isolated)****MODEL R7G4HML-6-SVF8N****BEFORE USE ....**

Thank you for choosing M-System. Before use, please check contents of the package you received as outlined below. If you have any problems or questions with the product, please contact M-System's Sales Office or representatives.

**■ PACKAGE INCLUDES:**

High speed DC voltage input module .....(1)  
Mouser slider.....(2)

**■ MODEL NO.**

Confirm Model No. marking on the product to be exactly what you ordered.

**■ INSTRUCTION MANUAL**

This manual describes necessary points of caution when you use this product, including installation, connection and basic maintenance procedures.

**POINTS OF CAUTION****■ CONFORMITY WITH EU DIRECTIVE**

- The equipment must be mounted inside the instrument panel of a metal enclosure.
- The actual installation environments such as panel configurations, connected devices, connected wires, may affect the protection level of this unit when it is integrated in a panel system. The user may have to review the CE requirements in regard to the whole system and employ additional protective measures to ensure the CE conformity.

**■ POWER INPUT RATING & OPERATIONAL RANGE**

- Locate the power input rating marked on the product and confirm its operational range as indicated below:  
24V DC rating: 24V  $\pm$ 10%, approx. 40mA

**■ GENERAL PRECAUTIONS**

- Before you remove the unit or mount it, turn off the power supply and input signal for safety.
- Before you remove the terminal block or mount it, make sure to turn off the power supply for safety.
- DO NOT operate the switches on the unit while the power is supplied. Be sure to turn off the power supply when performing configuration using the switches.

**■ ENVIRONMENT**

- Indoor use.
- When heavy dust or metal particles are present in the air, install the unit inside proper housing with sufficient ventilation.
- Do not install the unit where it is subjected to continuous vibration. Do not subject the unit to physical impact.
- Environmental temperature must be within -0 to +55°C (32 to 131°F) with relative humidity within 30 to 90% RH in order to ensure adequate life span and operation.

**■ WIRING**


- Do not install cables close to noise sources (relay drive cable, high frequency line, etc.).
- Do not bind these cables together with those in which noises are present. Do not install them in the same duct.
- Be sure to close the terminal cover to prevent electric shock.

**■ AND ....**


- The unit is designed to function as soon as power is supplied, however, a warm up for 10 minutes is required for satisfying complete performance described in the data sheet.

# COMPONENT IDENTIFICATION

## ■ TOP VIEW

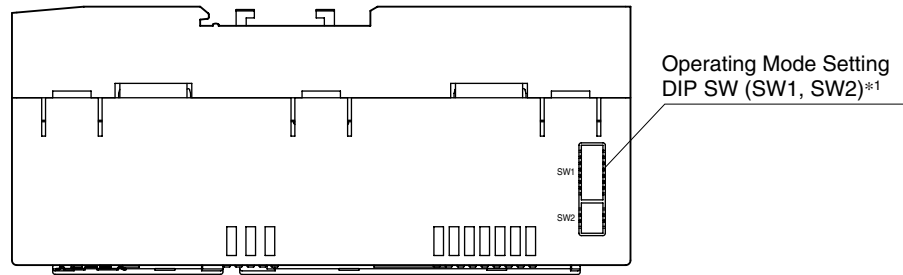

## ■ FRONT VIEW

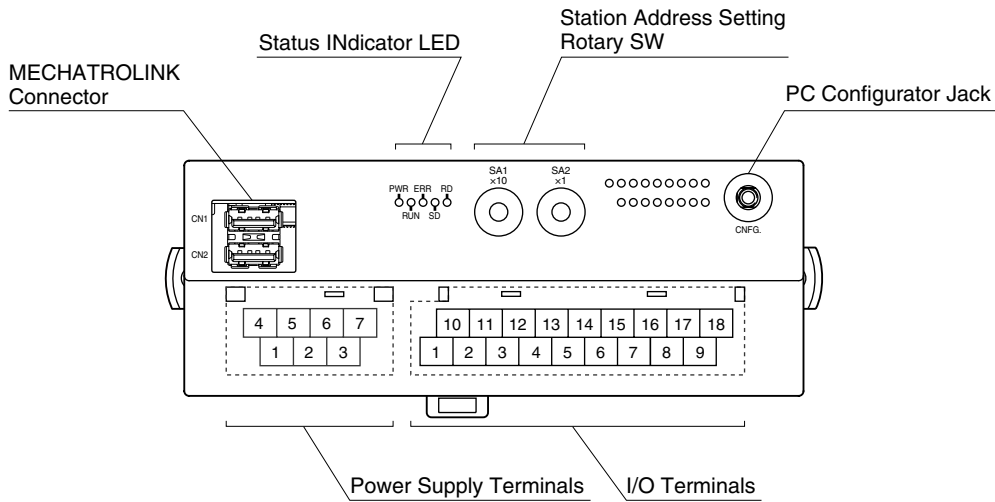

### ■ STATUS INDICATOR LED


ID	COLOR	FUNCTION
PWR	Green	Turns on when the internal 5V is supplied normally.
RUN	Green	Turns on in normal communications conditions.
ERR	Red	blinking in setting error. Turns on in no communication.
SD	Green	Turns on when the module is transmitting.
RD	Green	Turns on when the module is receiving.

### ■ STATION ADDRESS

Station Address is selected between 60H and 7FH (Intel-  
ligent I/O) in hexadecimal.  
The left switch and the right switch determine the MSD  
and the LSD of the address, respectively.  
(Factory setting: 61H)

Certain numbers may not be selectable depending on the  
master types.

Refer to the instruction manual of the master unit for  
detail.

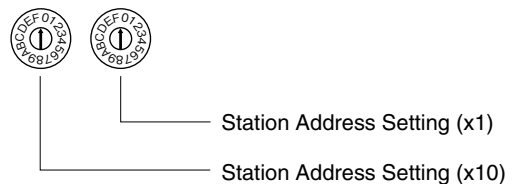

## ■ OPERATING MODE

(\*) Factory setting

### • MECHATROLINK SETTING (SW1-1, 1-2)

SW1-1	SW1-2	MECHATROLINK MODE
OFF	OFF	MECHATROLINK-II (17 byte mode) (*)
ON	OFF	MECHATROLINK-II (32 byte mode)
OFF	ON	MECHATROLINK-I (17 byte mode)

### • INPUT RANGE SETTING (SW1-5 to 1-8)

SW1-5	SW1-6	SW1-7	SW1-8	Input range
OFF	OFF	OFF	OFF	-10 – +10V DC (*)
ON	OFF	OFF	OFF	-5 – +5V DC
ON	ON	OFF	OFF	0 – 10V DC
OFF	OFF	ON	OFF	0 – 5V DC
ON	OFF	ON	OFF	1 – 5V DC
ON	ON	ON	ON	Configurable via R7CFG

Note: Be sure to set unused SW1-3 and 1-4 to OFF.

## ■ POWER SUPPLY TERMINAL ASSIGNMENT

4 NC	5 NC	6 +24V	7 0V
1 NC	2 NC	3 FE	

- |         |                       |
|---------|-----------------------|
| 1. NC   | –                     |
| 2. NC   | –                     |
| 3. FE   | Functional earth      |
| 4. NC   | –                     |
| 5. NC   | –                     |
| 6. +24V | Power supply (24V DC) |
| 7. 0V   | Power supply (0V)     |

## ■ INPUT TERMINAL ASSIGNMENT

10 V0	11 V1	12 V2	13 V3	14 NC	15 V4	16 V5	17 V6	18 V7
1 COM0	2 COM1	3 COM2	4 COM3	5 NC	6 COM4	7 COM5	8 COM6	9 COM7

NO.	ID	FUNCTION	NO.	ID	FUNCTION
1	COM0	Common 0	10	V0	Voltage Input 0
2	COM1	Common 1	11	V1	Voltage Input 1
3	COM2	Common 2	12	V2	Voltage Input 2
4	COM3	Common 3	13	V3	Voltage Input 3
5	NC	No connection	14	NC	No connection
6	COM4	Common 4	15	V4	Voltage Input 4
7	COM5	Common 5	16	V5	Voltage Input 5
8	COM6	Common 6	17	V6	Voltage Input 6
9	COM7	Common 7	18	V7	Voltage Input 7

## PC CONFIGURATOR

The following parameter items can be configured with the PC configurator software (model: R7CFG).

Refer to the users manual of the software for detailed operations.

### ■ CHANNEL INDIVIDUAL SETTING

PARAMETER	SETTING RANGE	FACTORY SETTING
Validating / Invalidating	Valid Invalid	Valid
Input range	-10 to +10 V DC -5 to +5 V DC 0 to 10 V DC 0 to 5 V DC 1 to 5 V DC	-10 to +10 V DC
Bias	-320.00 to +320.00 (%)	0.00 (%)
Gain	-3.2000 to +3.2000	1.0000
Zero scale	-32 000 to +32 000*	0
Full scale	-32 000 to +32 000*	255

\* Set within the range of 0 - 255 for use in MECHATROLINK-I or MECHATROLINK-II in the 17-byte mode.

### ■ SETTINGS FOR ALL CHANNELS


PARAMETER	AVAILABLE RANGE	FACTORY SETTING
Averaging	1, 2, 4, 8, 16, 32, 64, 128	1

## MOUNTING INSTRUCTIONS

### ■ DIN RAIL MOUNTING (PARALLEL)


#### • Mounting

- 1) Hook the upper hook at the rear side of the unit onto the DIN rail.
- 2) Push in the lower part of the unit in the direction of the arrow until the unit is firmly fixed to the DIN rail.

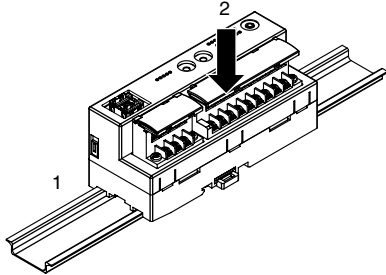


#### • Dismounting

- 1) Push down the slider using a minus screwdriver.
- 2) Pull out the lower part of the unit.
- 3) Remove the upper part of the unit from the DIN rail.

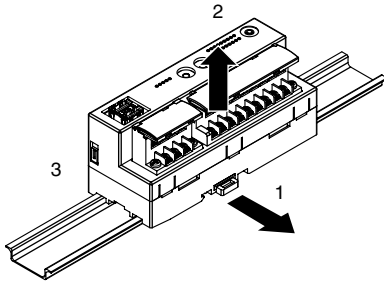


### ■ SURFACE MOUNTING

- 1) Insert the two mounter sliders along the rail on the back of the unit until it clicks once, as shown below.




- 2) Mount the unit with M4 screws referring to "MOUNTING REQUIREMENTS unit: mm (inch)" on page 5. (Torque: 1.4 N·m)

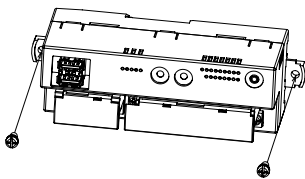


### ■ DIN RAIL MOUNTING (RIGHT ANGLE)

#### • Mounting

- 1) Insert the longer mounter slider along the rail on the back of the unit until it clicks twice, as shown below.

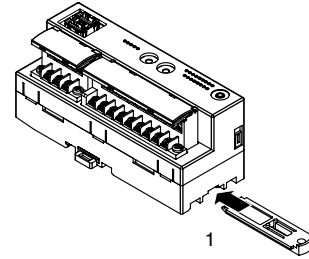


- 2) Hook the upper hook at the rear side of the unit onto the DIN rail.
- 3) Push in the lower part of the unit in the direction of the arrow until the unit is firmly fixed to the DIN rail.

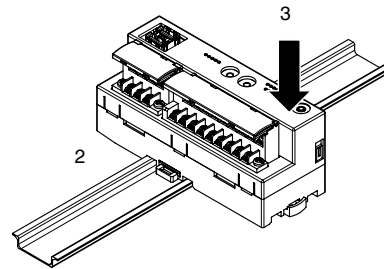

#### • Dismounting


- 1) Push down the slider using a minus screwdriver.
- 2) Pull out the lower part of the unit.
- 3) Remove the upper part of the unit from the DIN rail.

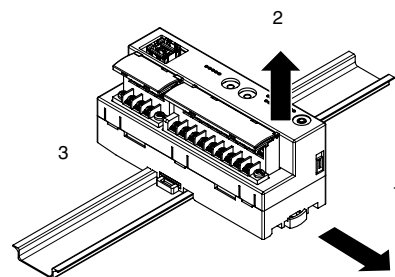

# TERMINAL CONNECTIONS


Connect the unit as in the diagram below.

■ **EXTERNAL DIMENSIONS** unit: mm (inch)

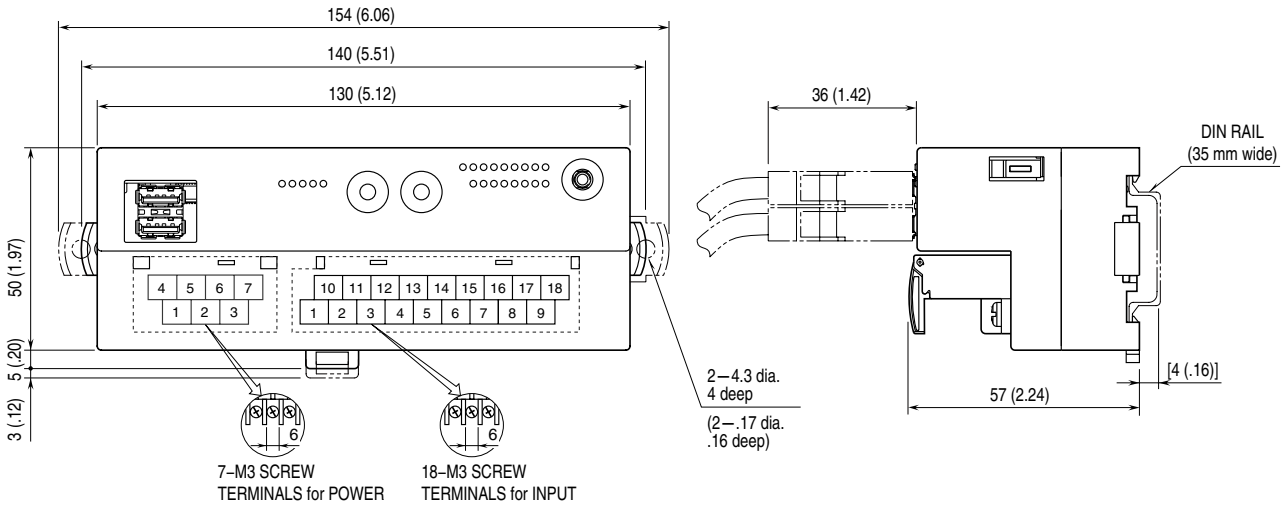


# CONNECTION DIAGRAM

In order to improve EMC performance, bond the FE terminal to ground.  
 Caution: FE terminal is NOT a protective conductor terminal.

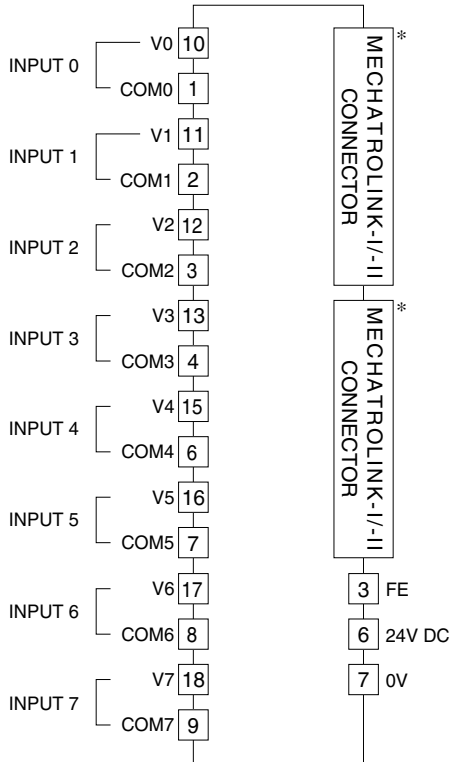

\* MECHATROLINK connectors are internally connected. The network cable can be connected to either one.

# MOUNTING REQUIREMENTS

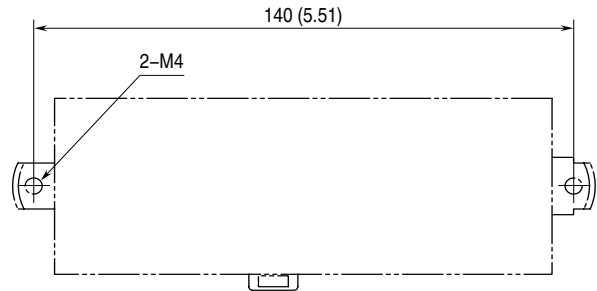 unit: mm (inch)


# WIRING INSTRUCTIONS


■ **SCREW TERMINAL**

Torque: 0.5 N·m

■ **SOLDERLESS TERMINAL** mm (inch)

Refer to the drawing below for recommended ring tongue terminal size. Spade tongue type is also applicable. Solderless terminal:

Applicable wire size: 0.25 to 1.65 mm<sup>2</sup> (AWG 22 to 16)  
 Recommended manufacturer: Japan Solderless Terminal MFG. Co., Ltd, Nichifu Co., Ltd

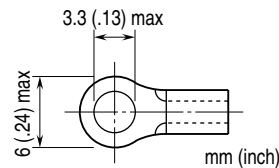

## MECHATROLINK COMMUNICATION

### ■ MECHATROLINK-I

**Baud rate:** 4 Mbps

**Transmission distance:** 50 m max.

**Distance between stations:** 30 cm min.

**Transmission media:** MECHATROLINK cable (Model JEPMC-W6003-x-E, Yaskawa Controls Co., Ltd.)

**Max. number of slaves:** 15 (The maximum number of slaves might change depending on the master unit. Refer to the manual of the master unit)

**Transmission cycle:** 2 msec. (fixed)

**Data length:** 17 byte

### ■ MECHATROLINK-II

**Baud rate:** 10 Mbps

**Transmission distance:** 50 m max.

**Distance between stations:** 50 cm min.

**Transmission media:** MECHATROLINK cable (Model JEPMC-W6003-x-E, Yaskawa Controls Co., Ltd.)

**Max. number of slaves:** 30 (The maximum number of slaves might change depending on the master unit. Refer to the manual of the master unit)

**Transmission cycle:** 0.5 msec., 1 msec., 1.5 msec., 2 msec., 4 msec., 8 msec.

**Data length:** 17 bytes / 32 bytes selectable (Must choose identical data size for all stations on the same network)

## MECHATROLINK RELATED COMMANDS

### ■ MECHATROLINK DATA LINK LAYER COMMAND DESCRIPTIONS

The R7G4HML (Intelligent I/O) performs the connection-type communications according to MECHATROLINK protocol. The following tables explain Data Link Layer Commands supported by the R7G4HML.

#### • MDS Command (04H) Data Format

Byte	COMMAND	RESPONSE	REMARKS
0	MDS (04H)	S (0) (90H)	Message Data Search (MDS) Command: Read the ID from the slave station S (0): Response to MDS
1	0	ID1 (00H)	
2	0	ID2 (80H)	Intelligent I/O specified
3	0	0	
4	0	0	
5	0	0	
6	0	0	
7	0	0	
8	0	0	
9	0	0	
10	0	0	
11	0	0	
12	0	0	
13	0	0	
14	0	0	
15	0	0	
16	0	0	
17	0	0	Byte 17 through 31 are always 0 in the 32-byte mode.
:	:	:	These bytes are unavailable for MECHATROLINK-I, or MECHATROLINK-II in the
31	0	0	17-byte mode.

• CDRW Command (03H) Data Format

Byte	COMMAND	RESPONSE	REMARKS
0	CDRW (03H)	ACK (01H)	Cyclic Data Read/Write (CDRW) Command: Link transmission Acknowledge (ACK): Positive response to CDRW
1	CMD	RCMD	CMD: Application Layer Command RCMD: Response to Application Layer Command
2 : 16			Byte 2 through 16 depend upon the Application Layer Command type.
17 : 31			Byte 17 through 31 depend upon the Application Layer Command type. These bytes are unavailable for MECHATROLINK-I, or MECHATROLINK- II in the 17-byte mode.

■ MECHATROLINK APPLICATION LAYER COMMAND DESCRIPTIONS

The following tables explain Application Layer Commands supported by the R7G4HML (Intelligent I/O).

• NOP Command (00H) Data Format

Byte	COMMAND	RESPONSE	REMARKS
0	CDRW (03H)	ACK (01H)	Cyclic Data Read/Write (CDRW) Command: Link transmission Acknowledge (ACK): Positive response to CDRW
1	NOP (00H)	NOP (00H)	No Operation (NOP) Command: Nothing is performed.
2	0	ALARM	Error code: See “MECHATROLINK APPLICATION LAYER DATA DESCRIPTIONS”
3	0	STATUS1	Status code: See “MECHATROLINK APPLICATION LAYER DATA DESCRIPTIONS”
4	0	STATUS2	Status code: See “MECHATROLINK APPLICATION LAYER DATA DESCRIPTIONS”
5	0	0	
6	0	0	
7	0	0	
8	0	0	
9	0	0	
10	0	0	
11	0	0	
12	0	0	
13	0	0	
14	0	0	
15	0	0	
16	0	0	
17 : 31	0 : 0	0 : 0	Byte 17 through 31 are always 0 in the 32-byte mode. These bytes are unavailable for MECHATROLINK-I, or MECHATROLINK-II in the 17-byte mode.

## • ID\_RD Command (03H) Ddata Format

Byte	COMMAND	RESPONSE	REMARKS
0	CDRW (03H)	ACK (01H)	Cyclic Data Read/Write (CDRW) Command: Link transmission Acknowledge (ACK): Positive response to CDRW
1	ID_RD (03H)	ID_RD (03H)	Read ID (ID_RD) Command: Read out the device ID
2	0	ALARM	Error code: See "MECHATROLINK APPLICATION LAYER DATA DESCRIPTIONS"
3	0	STATUS1	Status code: See "MECHATROLINK APPLICATION LAYER DATA DESCRIPTIONS"
4	0	STATUS2	Status code: See "MECHATROLINK APPLICATION LAYER DATA DESCRIPTIONS"
5	DEVICE_CODE	DEVICE_CODE	Specifies the device code 00H: Product's model number 0FH: Vendor code
6	OFFSET	OFFSET	Indicates where to start reading in the specified device ID
7	SIZE	SIZE	Number of byte counts to read
8	0	ID1	ASCII or binary data
9	0	ID2	ASCII or binary data
10	0	ID3	ASCII or binary data
11	0	ID4	ASCII or binary data
12	0	ID5	ASCII or binary data
13	0	ID6	ASCII or binary data
14	0	ID7	ASCII or binary data
15	0	ID8	ASCII or binary data
16	0	0	
17	0	0	Byte 17 through 31 are always 0 in the 32-byte mode.
:	:	:	These bytes are unavailable for MECHATROLINK-I, or MECHATROLINK-II in the
31	0	0	17-byte mode.

## • CONNECT Command (0EH) Data Format

Byte	COMMAND	RESPONSE	REMARKS
0	CDRW (03H)	ACK (01H)	Cyclic Data Read/Write (CDRW) Command: Link transmission Acknowledge (ACK): Positive response to CDRW
1	CONNECT (0EH)	CONNECT (0EH)	Establish Connection (CONNECT) Command: Requests to establish connection to MECHATROLINK
2	0	ALARM	Error code: See "MECHATROLINK APPLICATION LAYER DATA DESCRIPTIONS"
3	0	STATUS1	Status code: See "MECHATROLINK APPLICATION LAYER DATA DESCRIPTIONS"
4	0	STATUS2	Status code: See "MECHATROLINK APPLICATION LAYER DATA DESCRIPTIONS"
5	VER	VER	Application Layer version number 10H: MECHATROLINK-I 21H: MECHATROLINK-II
6	COM_MODE	COM_MODE	Communication mode 00H: 17-byte mode 80H: 32-byte mode
7	COM_TIME	COM_TIME	Communication cycle (milliseconds) MECHATROLINK-I: Multiples of two (2) MECHATROLINK-II: Integral multiples of the transmission cycle
8	0	0	
9	0	0	
10	0	0	
11	0	0	
12	0	0	
13	0	0	
14	0	0	
15	0	0	
16	0	0	
17	0	0	Byte 17 through 31 are always 0 in the 32-byte mode.
:	:	:	These bytes are unavailable for MECHATROLINK-I, or MECHATROLINK-II in the
31	0	0	17-byte mode.



• **DISCONNECT Command (0FH) Data Format**

Byte	COMMAND	RESPONSE	REMARKS
0	CDRW (03H)	ACK (01H)	Cyclic Data Read/Write (CDRW) Command: Link transmission Acknowledge (ACK): Positive response to CDRW
1	DISCONNECT (0FH)	DISCONNECT (0FH)	Release Connection (DISCONNECT) Command: Requests to release connection to MECHATROLINK
2	0	ALARM	Error code: See "MECHATROLINK APPLICATION LAYER DATA DESCRIPTIONS"
3	0	STATUS1	Status code: See "MECHATROLINK APPLICATION LAYER DATA DESCRIPTIONS"
4	0	STATUS2	Status code: See "MECHATROLINK APPLICATION LAYER DATA DESCRIPTIONS"
5	0	0	
6	0	0	
7	0	0	
8	0	0	
9	0	0	
10	0	0	
11	0	0	
12	0	0	
13	0	0	
14	0	0	
15	0	0	
16	0	0	
17	0	0	Byte 17 through 31 are always 0 in the 32-byte mode.
:	:	:	These bytes are unavailable for MECHATROLINK-I, or MECHATROLINK-II in the
31	0	0	17-byte mode.

• **DATA\_RWA Command (50H) Data Format (MECHATROLINK-I, MECHATROLINK-II in the 17-byte mode)**

Byte	COMMAND	RESPONSE	REMARKS
0	CDRW (03H)	ACK (01H)	Cyclic Data Read/Write (CDRW) Command: Link transmission Acknowledge (ACK): Positive response to CDRW
1	DATA_RWA (50H)	DATA_RWA (50H)	Data Read/Write_A (DATA_RWA) Command: Refreshes I/O data
2	0	ALARM	Error code: See "MECHATROLINK APPLICATION LAYER DATA DESCRIPTIONS"
3	0	STATUS1	Status code: See "MECHATROLINK APPLICATION LAYER DATA DESCRIPTIONS"
4	0	STATUS2	Status code: See "MECHATROLINK APPLICATION LAYER DATA DESCRIPTIONS"
5	0	CH0 IN	CH0 data; 8 byte
6	0	CH1 IN	CH1 data; 8 byte
7	0	CH2 IN	CH2 data; 8 byte
8	0	CH3 IN	CH3 data; 8 byte
9	0	CH4 IN	CH4 data; 8 byte
10	0	CH5 IN	CH5 data; 8 byte
11	0	CH6 IN	CH6 data; 8 byte
12	0	CH7 IN	CH7 data; 8 byte
13	0	0	Unused
14	0	0	
15	0	STATUS LO	R7G4HML status: See "MECHATROLINK APPLICATION LAYER DATA DESCRIPTIONS"
16	0	STATUS HI	

• **DATA\_RWA Command (50H) Data Format (MECHATROLINK-II in the 32-byte mode)**

Byte	COMMAND	RESPONSE	REMARKS
0	CDRW (03H)	ACK (01H)	Cyclic Data Read/Write (CDRW) Command: Link transmission Acknowledge (ACK): Positive response to CDRW
1	DATA_RWA (50H)	DATA_RWA (50H)	Data Read/Write_A (DATA_RWA) Command: Refreshes I/O data
2	0	ALARM	Error code: See “MECHATROLINK APPLICATION LAYER DATA DESCRIPTIONS”
3	0	STATUS1	Status code: See “MECHATROLINK APPLICATION LAYER DATA DESCRIPTIONS”
4	0	STATUS2	Status code: See “MECHATROLINK APPLICATION LAYER DATA DESCRIPTIONS”
5	0	CH0 IN LO	CH0 data; Lower 8 bits
6	0	CH0 IN HI	CH0 data; Upper 8 bits
7	0	CH1 IN LO	CH1 data; Lower 8 bits
8	0	CH1 IN HI	CH1 data; Upper 8 bits
9	0	CH2 IN LO	CH2 data; Lower 8 bits
10	0	CH2 IN HI	CH2 data; Upper 8 bits
11	0	CH3 IN LO	CH3 data; Lower 8 bits
12	0	CH3 IN HI	CH3 data; Upper 8 bits
13	0	CH4 IN LO	CH4 data; Lower 8 bits
14	0	CH4 IN HI	CH4 data; Upper 8 bits
15	0	CH5 IN LO	CH5 data; Lower 8 bits
16	0	CH5 IN HI	CH5 data; Upper 8 bits
17	0	CH6 IN LO	CH6 data; Lower 8 bits
18	0	CH6 IN HI	CH6 data; Upper 8 bits
19	0	CH7 IN LO	CH7 data; Lower 8 bits
20	0	CH7 IN HI	CH7 data; Upper 8 bits
21	0	STATUS1	STATUS: R7G4HML status
22	0	STATUS2	See “MECHATROLINK APPLICATION LAYER DATA DESCRIPTIONS”
23	0	0	Byte 23 through 31 are always 0 in the 32-byte mode.
:	:	:	
31	0	0	

■ **MECHATROLINK APPLICATION LAYER DATA DESCRIPTIONS**

• **Alarm Error Codes**

Errors detected at the slave are set at ALARM in the response and sent to the master.

ERROR CODE	DESCRIPTION	ALARM LEVEL
00H	Normal status	----
01H	Invalid Command: Command is not supported.	Warning
02H	Command Not Allowed: Command execution conditions are not met.	Warning
03H	Invalid Data: Data in the command is not correct.	Warning
04H	Synchronization Error	Alarm

• **STATUS1**

Alarm/Warning classification and status information are set at STATUS1 according to the alarm level and sent to the master.

Bit	DEFINITION	DESCRIPTION
0	Alarm Bit	0 : Normal, 1 : Alarm
1	Warning Bit	0 : Normal, 1 : Warning
2	Command Ready Bit	0 : Command cannot be accepted (busy), 1 : Command can be accepted (ready)
3...7	Unused	----

• **STATUS2**

Reserved for future use.

• **STATUS**

R7G4HML status to be sent to the master.

See ‘Status (Input Area Object) in the section “I/O DATA DESCRIPTION” on page 11.

## I/O DATA DESCRIPTION

### ■ Analog Input Module




16 bit binary data

Negative values are represented by 2's complements.

Note: 8-bit unsigned binary data for use in MECHATROLINK-I or MECHATROLINK-II in the 17-byte mode.

### ■ Status

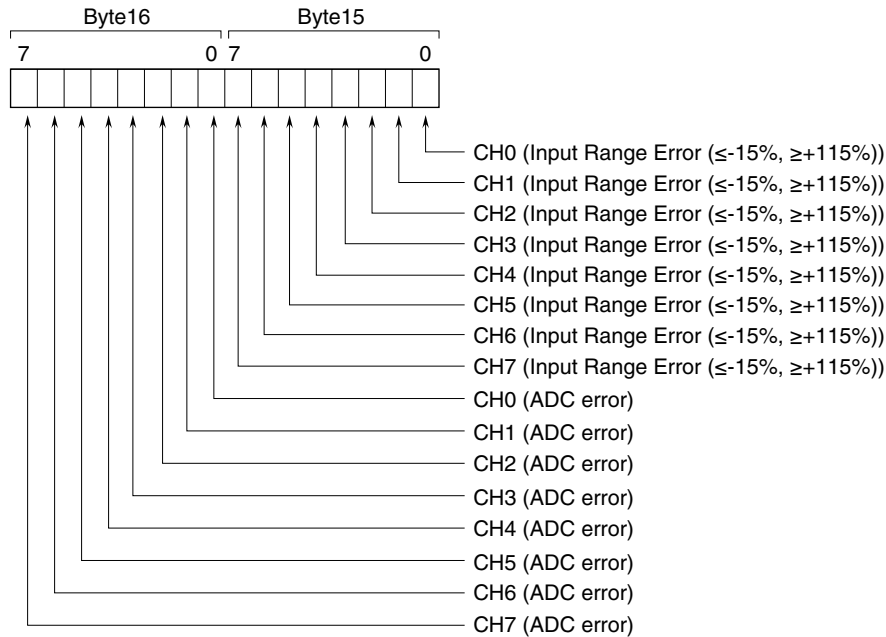

Input Range Error

0 : Normal 1 : Error

ADC error (no response from ADC)

0 : Normal 1 : Error

Note: For use in MECHATROLINK-I or MECHATROLINK-II in the 17-byte mode,  
Input Range Error is set when 0 or 255 is input.