NPN DISCRETE INPUT MODULE, 16 points | MODEL R80DAT16A2

(Tension clamp terminal block)

BEFORE USE

Thank you for choosing M-System. Before use, please check contents of the package you received as outlined below. If you have any problems or questions with the product, please contact M-System's Sales Office or representatives.

■ PACKAGE INCLUDES:

NPN discrete input module.....(1)

■ MODEL NO.

Confirm Model No. marking on the product to be exactly what you ordered.

■INSTRUCTION MANUAL

This manual describes necessary points of caution when you use this product, including installation, connection and basic maintenance procedures.

POINTS OF CAUTION

■ CONFORMITY WITH EU DIRECTIVES

- The equipment must be mounted inside a panel.
- The actual installation environments such as panel configurations, connected devices, connected wires, may affect the protection level of this unit when it is integrated in a panel system. The user may have to review the CE requirements in regard to the whole system and employ additional protective measures to ensure the CE conformity.

■ GENERAL PRECAUTIONS

- Before you remove or mount the unit, turn off the power supply and input signal for safety.
- · Switches on the side of the module can be set for maintenance only while the power supply is off. Do not access them while the power is supplied.

■ ENVIRONMENT

- Indoor use.
- When heavy dust or metal particles are present in the air, install the unit inside proper housing with sufficient
- Do not install the unit where it is subjected to continuous vibration. Do not subject the unit to physical impact.
- Environmental temperature must be within -10 to +55°C (14 to 131°F) with relative humidity within 30 to 90% RH in order to ensure adequate life span and operation.

■ WIRING

- Do not install cables close to noise sources (relay drive cable, high frequency line, etc.).
- Do not bind these cables together with those in which noises are present. Do not install them in the same duct.

■ EXCITATION SUPPLY

• Input connector: Rated current 3 A DC (rated current 3 A for internal fuse (slow blow fuse i^2t (A²sec) max. 5.04).


■ AND

• The unit is designed to function as soon as power is supplied, however, a warm up for 10 minutes is required for satisfying complete performance described in the data


INSTALLATION

■ HOW TO MOUNT THE MODULE ON DIN RAIL


• I/O Module

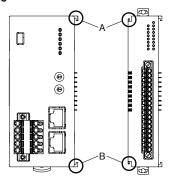


Confirm that the locking clamps of the I/O module are set. Insert the module in parallel to the next one while aligning the grooves of both modules (A & B in the above figure). Maintain it perpendicularly to the rail.

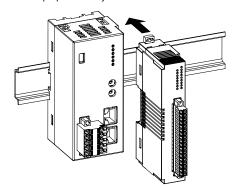

More I/O modules can be added in the same manner.

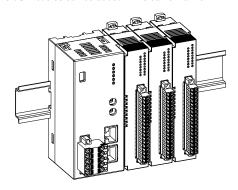


• Protective Cover

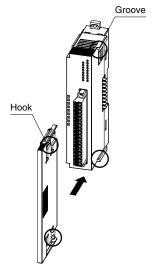


The protective cover is to be attached over the connected I/O module at the right end.

Align the hooks on the cover with the grooves of the module and slide it straight until the hooks are latched.

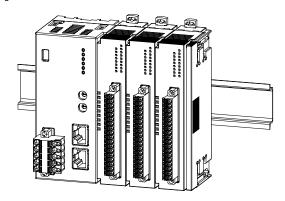



When removing the cover, pull it out while squeezing the hooks inward.

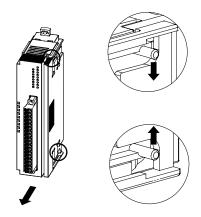


■ HOW TO UNMOUNT THE MODULE FROM DIN RAIL

• Release the locking clamps and pull out straight the module.

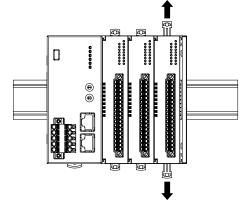

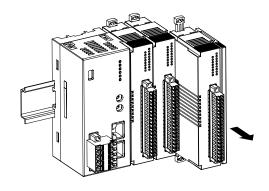

• Removing an intermediate module

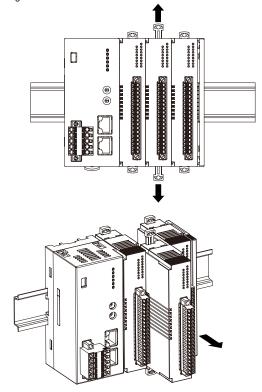


- Note 1: Be careful not to hurt your hand by pointed edges of the internal bus connector.
- Note 2: I/O modules cannot hold tightly on the DIN rail by themselves without power/network module.

Secure them to the position if necessary by using DIN rail end plates.



COMPONENT IDENTIFICATION

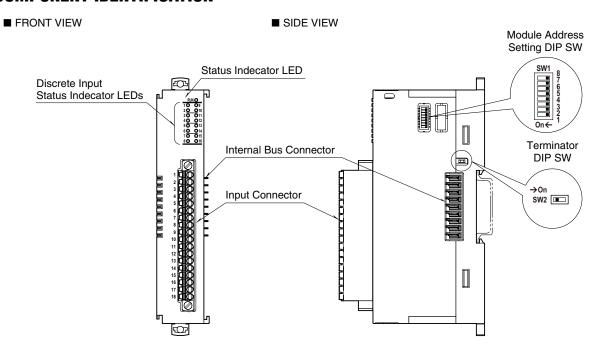

■ INDICATOR LED

LED	OPERATION	FUNCTION	
Status	OFF	Upper communication: Stopping	
		or abnormal	
		Internal communication: Normal	
	Red ON	Upper communication: Stopping or	
		abnormal	
		Internal communication: Abnormal	
	Green ON	Upper communication: Normal	
		Internal communication: Normal	
	Orange ON	Upper communication: Normal	
		Internal communication: Abnormal	
	Orange Blinking	Circuit abnormality	
		(blinking in 400 msec. cycle)	
Input	OFF	Discrete input is OFF.	
Status	Green ON	Discrete input is ON.	

■ INPUT CONNECTOR ASSIGNMENT



ID	FUNCTION	
Di1	Input 1	
Di2	Input 2	
Di3	Input 3	
Di4	Input 4	
Di5	Input 5	
Di6	Input 6	
Di7	Input 7	
Di8	Input 8	
Di9	Input 9	
Di10	Input 10	
Di11	Input 11	
Di12	Input 12	
Di13	Input 13	
Di14	Input 14	
Di15	Input 15	
Di16	Input 16	
0V	Exc. supply 0V	
24V	Exc. supply 24V	
	Di2 Di3 Di4 Di5 Di6 Di7 Di8 Di9 Di10 Di11 Di12 Di13 Di14 Di15 Di16 OV	

■ OPERATING MODE SETTING

(*) Factory setting

Note) Be sure to set unused SW 1-5 through 1-8 to OFF.

• MODULE ADDRESS

Selectable between 0 and 15, with DIP switch 1-1 to 4. Set the module addresses consecutively starting at 0 such that there is no duplicate or vacant address.

MODULE ADDRESS	SW1			
MODULE ADDRESS	1	2	3	4
0	OFF	OFF	OFF	OFF
1	ON	OFF	OFF	OFF
2	OFF	ON	OFF	OFF
3	ON	ON	OFF	OFF
4	OFF	OFF	ON	OFF
5	ON	OFF	ON	OFF
6	OFF	ON	ON	OFF
7	ON	ON	ON	OFF
8	OFF	OFF	OFF	ON
9	ON	OFF	OFF	ON
10	OFF	ON	OFF	ON
11	ON	ON	OFF	ON
12	OFF	OFF	ON	ON
13	ON	OFF	ON	ON
14	OFF	ON	ON	ON
15	ON	ON	ON	ON

■ TERMINATOR DIP SW

TERMINATOR	SW2
Without (*)	OFF
With	ON



PC CONFIGURATOR

The following parameters can be set using PC Configurator Software (model: R80CFG) Refer to the users manual for the R80CFG for detailed operation of the software program.


ITEM	SETTING RANGE	DEFAULT VALUE
Sampling cycle	100 μs, 200 μs, 400 μs, 800 μs, 4 ms, 8 ms, 16 ms, 40 ms	100 μs


Note) Settings are programmed by the PC Configurator via the Power/Network Module.

TERMINAL CONNECTIONS


Connect the unit as in the diagram below.

■ EXTERNAL DIMENSIONS unit: mm [inch]

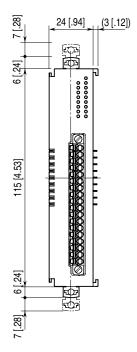

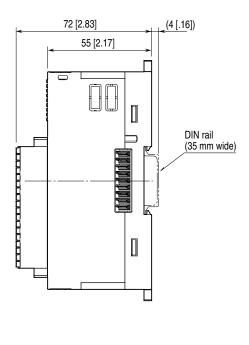

■ CONNECTION DIAGRAM

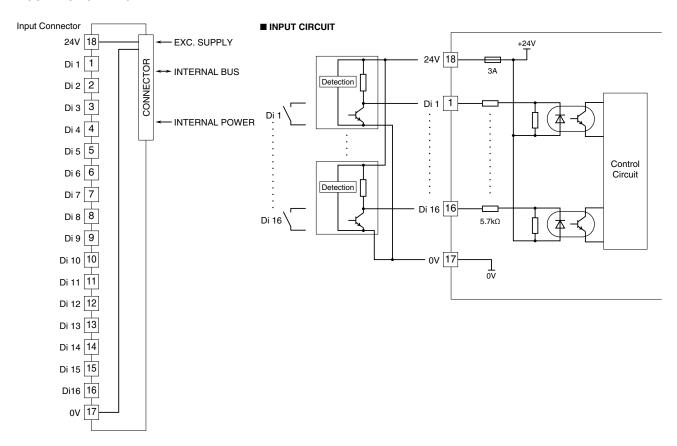

WIRING INSTRUCTIONS

■ • INPUT CONNECTOR

 $\label{lem:contact} \begin{array}{ll} \textbf{Unit side connector:} \ MC1,5/18\text{-}GF\text{-}3,5 \ (Phoenix\ Contact) \\ \textbf{Cable side connector:} \ FMC1,5/18\text{-}STF\text{-}3,5 \ (Phoenix\ Contact) \\ \end{array}$

(included in the package)

Applicable wire size: $0.2 - 1.5 \text{ mm}^2$

Stripped length: 10 mm

Recommended solderless terminal

AI0,25-10YE 0.25 mm² (Phoenix Contact)
 AI0,34-10TQ 0.34 mm² (Phoenix Contact)
 AI0,5-10WH 0.5 mm² (Phoenix Contact)
 AI0,75-10GY 0.75 mm² (Phoenix Contact)
 A1-10 1.0 mm² (Phoenix Contact)
 A1,5-10 1.5 mm² (Phoenix Contact)

